Operator LaRue & Muncy
Well Travis Fed. #2
Unit B Section 13 Twnship 18 Range 28
API # 30-015-01852

TOPS

Salado	~	550'
Base Salt	~	750'
Yates	~	900'
7 Rivers	~	1150'
Bowers	~	1650'
Queen	~	1900'

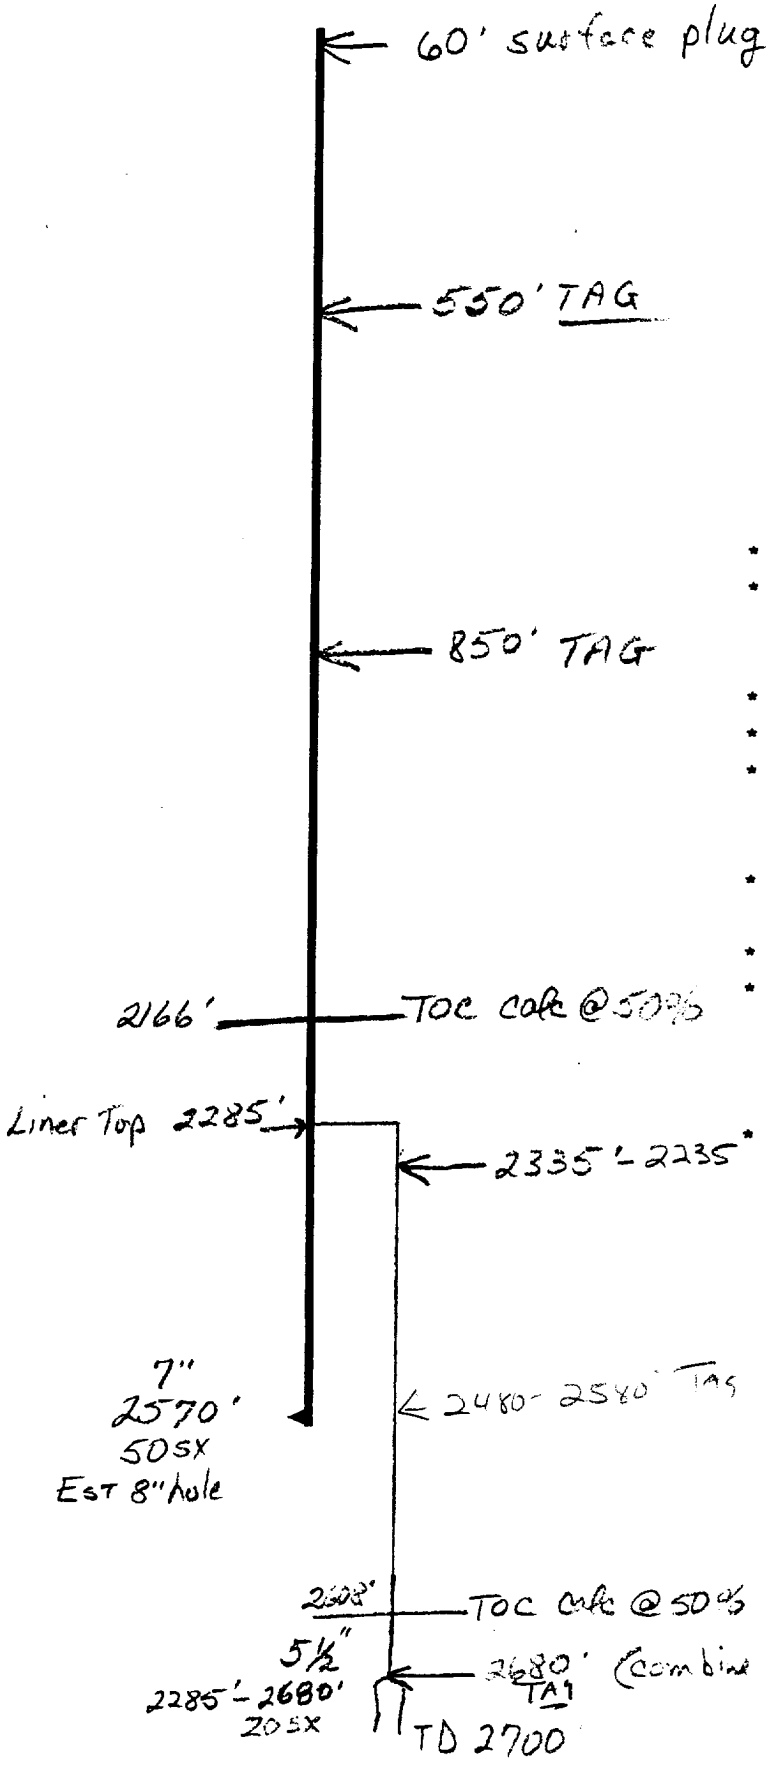

* Contact OCD 24 hrs. prior to any work done.
* Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
* Install dry hole marker as per Rule 202.B.2
* Plugs are to be set from point indicated up.
* Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
* Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
* Surface plug will be from 0' - 60'
* Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
* Plugs to be tagged will be indicated.

MLB