

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
Artesia, NM 88210

SUBMIT IN TRIP
(Other instructions
reverse side)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

215F

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ - Water Injection Well

2. NAME OF OPERATOR
Anadarko Petroleum Corporation

3. ADDRESS OF OPERATOR
P. O. Drawer 130, Artesia, New Mexico 88210

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

1650' FNL & 750' FWL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3562' GL

5. LEASE DESIGNATION AND SERIAL NO.

LC 028936-D

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Federal L

9. WELL NO.

6

10. FIELD AND POOL, OR WILDCAT

Loco Hills-Queen-Gray.-S.A.

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

31 - 17S - 30E

12. COUNTY OR PARISH

Eddy

13. STATE

New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☐
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other) X-Complete lower Grayburg as producing well

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐
☐
☐

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

☐
☐
☐
☐
☐


(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

NOTE: This water injection well is Temporarily Abandoned in the Loco Hills pay of the Grayburg Formation. There is a known hole in casing at 100'.

1. Rig up pulling unit.
2. Trip out of hole with tubing and packer.
3. Get in hole with packer and plug and cement squeeze all holes in casing.
4. Drill out cement and clean out to TD.
5. Perforate Premier pay zone of Grayburg Formation.
6. Acidize and Frac.
7. Install production equipment and place on pump.

(Well diagram attached)

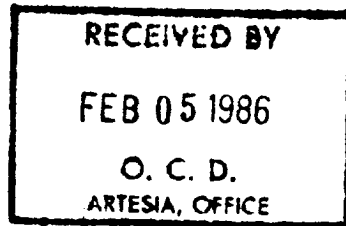

18. I hereby certify that the foregoing is true and correct

SIGNED

Mike Brumfield

TITLE Field Foreman

DATE January 23, 1986

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

2.3.86

CONDITIONS OF APPROVAL, IF ANY:

Subject to
Like Approval
by State

*See Instructions on Reverse Side


PROJECT COMPUTATIONS

NO. 2 OF 2 SHEETS

DATE 9/20/83 PROJECT Federal L #6 JOB NO. _____

BY MJB CHK.: _____ SUBJECT Deepen & Frac Premier

Elevation 3562'

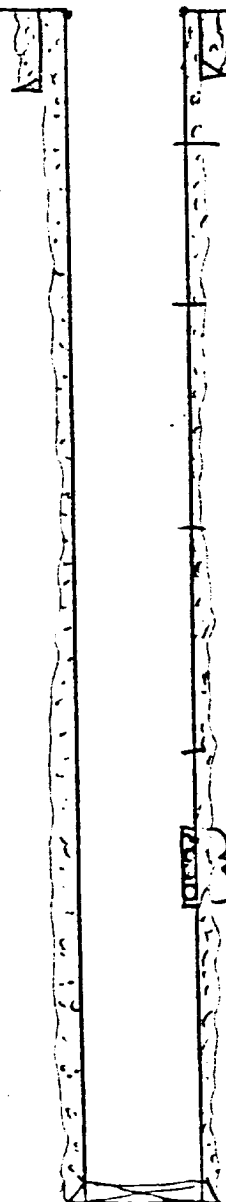

10 3/4" casing @ 48' (cement circled),

Hole in casing @ 100'

Top of Salt Section @ 530 #

Bottom of Salt Section @ 1045 #

Top of Grayburg @ 2640'

Perfs in Loco Hills From 2752' to 2762' @ 2 SPK, 20 hole

97 Jts 5 1/2" 14 # J-55 casing to 3035'
Cemented with GCSx to surface