

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

14-20-0603-16-9

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

Allotment 11-
Piz-ele-pah

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Navajo Lands

9. WELL NO.

10. FIELD AND POOL, OR WILDCAT

Wildcat
11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sect. 25-T22N-R9W

12. COUNTY OR PARISH 13. STATE

San Juan New Mexico

1. OIL ☐ GAS ☐ OTHER ☒ Dry Hole
WELL WELL

2. NAME OF OPERATOR

Sun Oil Co.

3. ADDRESS OF OPERATOR

P. O. Box 1861, Midland, Texas 79701

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

2260' FWL & 2035' FNL of Section 25, T22N-R9W

14. PERMIT NO.

Approved 1-5-71

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

6531.0' Gd 3548.0' KB

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*


(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Present conditions: Original TD 10,897, PBTD 4710.
13-3/8" OD casing set at 368'. Cement circulated.
8-5/8" OD casing set at 4893'. Cemented with 470 sacks.
Circulated top cmt. - 3573.

Proposed Plugging Procedure:

1. Perforate 8-5/8" casing with 4 holes at approximately 850 ft.
2. Establish circulation & cement down 8-5/8" csg with approximately 225 sacks cement. Leave minimum 100' cement inside 8-5/8" csg (750'-850') & use sufficient volume to over-lap 13-3/8" OD casing.
3. Cut casing off below ground level & cement inside & outside top of 8-5/8" casing with approx. 15 sacks cement.
4. Install permanent marker.

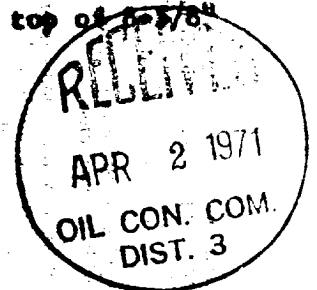

18. I hereby certify that the foregoing is true and correct

SIGNED

W. E. Vestbrook, Jr.
(This space for Federal or State office use)

TITLE Dist. Drlg. Engineer

DATE 3-30-71

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.