

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NOO-C-14-20-5432

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Navajo Tribe "BU"

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Tocito Dome

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 34 T26N R18W

12. COUNTY OR PARISH

San Juan

13. STATE

N. Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

TEXACO, Inc.

3. ADDRESS OF OPERATOR

P.O. Box EE, Cortez, Colo. 81321

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)

At surface

NE $\frac{1}{4}$ NE $\frac{1}{4}$

510' from North line and 810' from East line

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5605' GR

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☒

CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Plan to abandon this well because of marginal productivity
and collapsed casing:

Procedure:

1. MIRUSU run tubing and packer and set above collapse.
2. Establish pumping rate into perforations.
3. Displace 50 sx. cement across perforations.
4. Cutoff casing above collapse point and salvage.
5. Spot 50 sx. cement in and around casing stub.
6. Fill hole with mud to ten feet below surface pipe.
7. Place 50 sx. cement at base of surface pipe - 1606' or 1616'
8. Fill hole with mud.
9. Place 10 sx. cement surface plug, set proper marker.
salvage all remaining wellhead equipment and clean location.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

Field Foreman

DATE

(This space for Federal or State office use)

APPROVED BY


TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

NMOCC(3) USGS(2) GLE-ARM-JHP

*See Instructions on Reverse Side

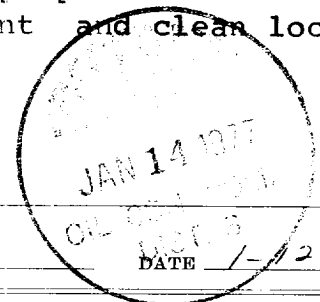

JAN 13 1977

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.