

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

SF-079114-A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Campbell Federal

9. WELL NO.

3

10. FIELD AND POOL, OR WILDCAT

Basin Dakota

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

26-27N-12W

NMPM

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)1. OIL ☐ GAS ☒ OTHER
WELL WELL

2. NAME OF OPERATOR

Beta Development Co.

3. ADDRESS OF OPERATOR

125 Petroleum Plaza Farmington, N.M. 87401

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

Unit "J" West 320 acres

1650' FSL 1650' FWL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5902 GR.

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐PULL OR ALTER CASING ☐FRACTURE TREAT ☐MULTIPLE COMPLETE ☐SHOOT OR ACIDIZE ☐ABANDON* ☒REPAIR WELL ☐CHANGE PLANS ☐(Other) *Corrected*


SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐REPAIRING WELL ☐FRACTURE TREATMENT ☐ALTERING CASING ☐SHOOTING OR ACIDIZING ☐ABANDONMENT* ☐(Other) ☐(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any
proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones perti-
nent to this work.)*

Casing failure May, 1975 no production since this date.

Propose to plug and abandon the above well as follows

Rig up, pull 188 jts. 2 3/8" tubing, check for holes, rerun tubing to 5971' squeeze Dakota perforation 5896-5914, 5931-37, 5948-76 with 50 sacks, spot 25 sacks on top of casing perforations, pull tubing, find free point of 5 1/2" casing, shoot and recover all available pipe, go back in hole with tubing, spot 60 sacks cement 50' in and 150' out of 5 1/2" casing stub, spot 60 sacks cement plug at base of Picture Cliffs, at 1390' spot 60 sacks cement plug 150' below base of Ojo Alamo at 510', spot 15 sacks cement in top of surface pipe, cut all pipe connections and surface pipe 4' below ground level, no dry hole marker required. (Agriculture area).
270 sacks of neat cement to be used.

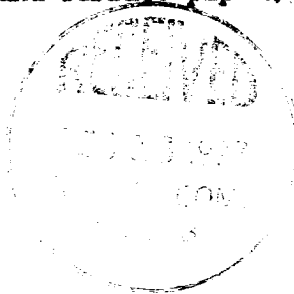

FEB 15 1977

U.S. GEOLOGICAL SURVEY

18. I hereby certify that the foregoing is true and correct

SIGNED

D. E. Bay Jr.

TITLE

Superintendent

DATE

February 15, 1977

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

Okal

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.