
/			
Submit 3 Copies To Appropriate District	State of N	ew Mexico	Forms C 102
Office District I		d Natural Resources	Form C-103 Revised March 25, 1999
1025 N. French Dr., Hobbs, NM 88240	and radial resources		WELL API NO.
<u>District II</u> 811 South First, Artesia, NM 88210	OIL CONSERVATION DIVISION		30-045-23573
District III	1220 South St. Francis Dr.		5. Indicate Type of Lease
1000 Rio Brazos Rd., Aztec, NM 87410 District IV		NM 87505	STATE FEE X
1220 S. St. Francis Dr., Santa Fe, NM 87505	,		6. State Oil & Gas Lease No.
	ICES AND REPORTS ON V	WELLS	7. Lease Name or Unit Agreement Name:
(DO NOT USE THIS FORM FOR PROPO	DSALS TO DRILL OR TO DEEPER	NOR PLATE BACK TO A	7. Lease Name of Onli Agreement Name:
DIFFERENT RESERVOIR. USE "APPLE PROPOSALS.)	CATION FOR PERMIT" (FORM (C-10 IV FOR SUCH	Hutchin LS
1. Type of Well:		€ c55 5005	
Oil Well Gas Well	X Other	(0)	124
2. Name of Operator BP America Production Company	Attn: Mary Corley		8 Well No.
3. Address of Operator	Attri. Mary Correy		9. Pool name or Wildcat
P.O. Box 3092 Houston, TX 77253			Blanco Pictured Cliffs
4. Well Location		C Parmer 2	
Unit Letter G	_ 1500 feet from the No	oth line and 4540	66
	1500 feet from the No	ine and 1540	feet from the <u>East</u> line
Section 07		nge 10W N	MPM San Juan County
	10. Elevation (Show whe		'c.)
11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data			
NOTICE OF IN	TENTION TO:		Report or Other Data SSEQUENT REPORT OF:
PERFORM REMEDIAL WORK			
TEMPORARILY ABANDON	CHANGE PLANS		
	. OHANGE PEANS E	- COMMENCE DR	RILLING OPNS. PLUG AND ABANDONMENT
PULL OR ALTER CASING		☐ CASING TEST A	ND
	COMPLETION	CEMENT JOB	
OTHER:		OTHER:	
12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date			
of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompilation.			
BP America request permission to plug and abandon the subject well as per the following procedure:			
Check anchors. MIRU workover rig.			
Check and record tubing, casing, and bradenhead pressures.			
Blow down wellhead. Kill with water if necessary. Nipple down WH. NU BOPs. RU WL unit.			
RIH with 2-7/8" CIBP. Set CI			
PU 1-1/4" workstring.			
TIH with 1-1/4" workstring. Spot 500' cement plug (16.5 cu ft) above CIBP from 2050'-2550' to cover Picture Cliffs and			
Fruitland intervals. TOH. RU WL unit. RIH and perforate squeeze holes at 1275'.			
RIH and set 2-7/8" cement ref	tainer at 1250'. TIH and sting	into retainer Squeeze Oio	Alamo with 85 cu ft cement. PU
and spot 250' cement plug at	oove cement retainer from 100	0' – 1250'.	
TOH to 275'. Spot cement surface plug (9 cu ft) from 0' – 275'. TOH and LD workstring. ND BOP's. Cut off wellhead and install P&A marker.			
ND BOP's. Cut off wellhead a	and install P&A marker.		
I hereby certify that the information above is true and complete to the best of my knowledge and belief.			
SIGNATURE Maria Carlos			
SIGNATURE May (out	71	E Sr. Regulatory Analys	t DATE <u>09/10/2001</u>
Type or print name Mary Corle	Ψ		Telephone No. 281-366-4491
(This space for State use)	SPA m	DAPUTY ME & GAS INST	TO BE AND IN CO.
APPPROVED BY	D BY CHARLE I. PERFENTI	TLE	
Conditions of approval, if any:	11		DATE DATE

Hutchin LS#2

Sec 7, T31N, R10W API: 30:045-23573

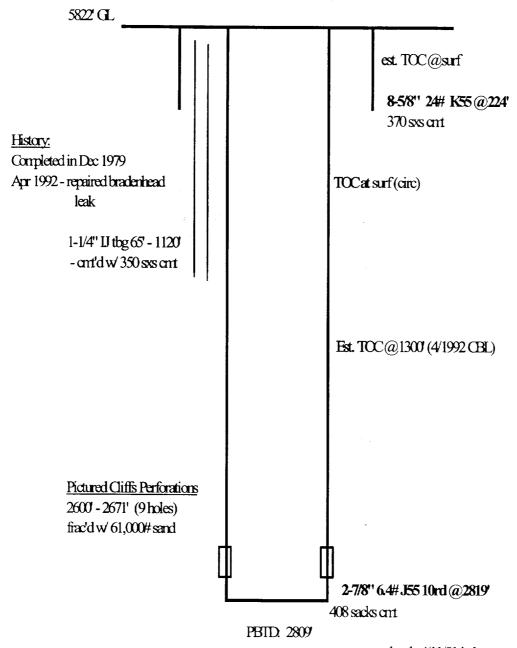

updated: 4/11/01 jad

NOTES:

1. Tubingless completion