

Submit 1 Copy To Appropriate District Office	State of New Mexico		Form C-103
District 1 – (575) 393-6161 Energy, Minerals and Natural Resources		Revised July 18, 2013	
1625 N. French Dr., Hobbs, NM 88240 District II – (575) 748-1283		WELL API NO. 30-025-34767	
811 S. First St., Artesia, NM 88210 OIL CONSERVATION DIVISION			5. Indicate Type of Lease
District III - (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 87410 1000 Rio Brazos Rd., Aztec, NM 87410		STATE 🛛 FEE 🗌	
<u>District IV</u> – (505) 476-3460 Santa Fe, NM 8/505		6. State Oil & Gas Lease No.	
1220 S. St. Francis Dr., Santa Fe, NM _87505			
SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A			7. Lease Name or Unit Agreement Name
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH			THISTLE UNIT
PROPOSALS.) 1. Type of Well: Oil Well Gas Well Other HOBE			8. Well Number
			6
2. Name of Operator			9. OGRID Number
Devon Energy Production Compared 3. Address of Operator	ny, LP U	I 8 200	10. Pool name or Wildcat
333 W. Sheridan Avenue, Oklahoma City, OK 73102			TRIPLE X; BONE SPRING (59900)
PROPOSALS.) 1. Type of Well: Oil Well Gas Well Other HOBBS HOBBS 8. Well Number 1. Type of Well: Oil Well Gas Well Other HOBBS HOBBS 9. OGRID Number 2. Name of Operator JUN 182020 9. OGRID Number 3. Address of Operator JUN 182020 10. Pool name or Wildcat 333 W. Sheridan Avenue, Oklahoma City, OK 73102 RECEIVED 10. Pool name or Wildcat TRIPLE X; BONE SPRING (59900) 4. Well Location Internet from the _South Ine			
Unit Letter O :660 feet from the South line and 1560 ED feet from the East line			
Section 34 Township 23S Range 33E NMPM Lea County, NM			
	11. Elevation (Show whether L		
	3648' GL		
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data			
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:			
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRI			— — —
PULL OR ALTER CASING	MULTIPLE COMPL	CASING/CEMENT	ГЈОВ 🔲
CLOSED-LOOP SYSTEM	·	OTHER:	
13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date			
of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of			
proposed completion or recompletion.			
1 AURIL DR A Linit Potniava BPD from 7000'			
 MIRU P&A Unit. Retrieve RBP from 7900'. Set CIBP @ 9450'. Tag. Circ 10# salt gel. Spot 25 sx CI H from 9450'-9330'. (Open perfs at @ 9500') 			
3. Spot 25 sx Cl H from 9175'-9055'. (T. Bone Spring @ 9115')			
4. Spot 25 sx Cl C from 7450'-7300'. (Spacer)			
 Perf @ 5270'. Sqz 95 sx Cl C from 5270'-4900'. WOC & tag. (T. Delaware @ 5219'; Shoe @ 5053'; B. Salt @ 4950') Perf @ 1880'. Sqz 40 sx Cl C from 1900'-1780'. WOC & tag. (T. Salt @ 1830') 			
7. Perf @ 635'. Sqz 35 sx Cl C from 635'-525'. WOC & tag. (<i>Shoe @ 585'</i>)			
8. Perf @ 140'. Pump Cl C from 140' to surface.			
9. Cut wellhead off 3' BGL, set d	ry hole marker.		See
Spud Date:		(Condu Attack
			inditione and
			is of App
 8. Perf @ 140'. Pump Cl C from 140' to surface. 9. Cut wellhead off 3' BGL, set dry hole marker. Spud Date:			
SIGNATURE Comme Raffer TITLE Production Engineer DATE 3/23/2020			
SIGNATURE Cauffer TITLE Production Engineer DATE 3/23/2020			
Type or print name Armon Radfar E-mail address: armon.radfar@dvn.com PHONE: 405-552-5014			
APPROVED BY: <u>Result</u> <u>Factor</u> TITLE <u>C</u> <u>A</u> <u>DATE</u> <u>6-18-20</u> Conditions of Approval (if any)			
APPROVED BY: <u>The TITLE</u> <u>TITLE</u> <u>TITLE</u> <u>TITLE</u>			
Conditions of Approval (if any)	`		

Devon - Internal

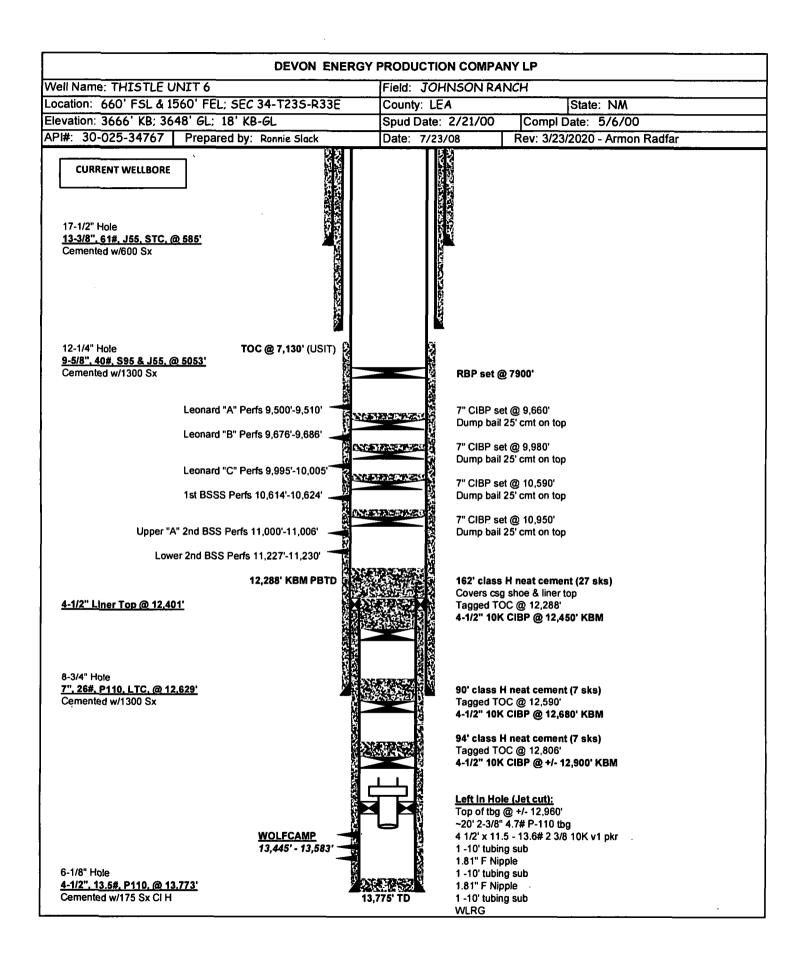

Devon - Internal

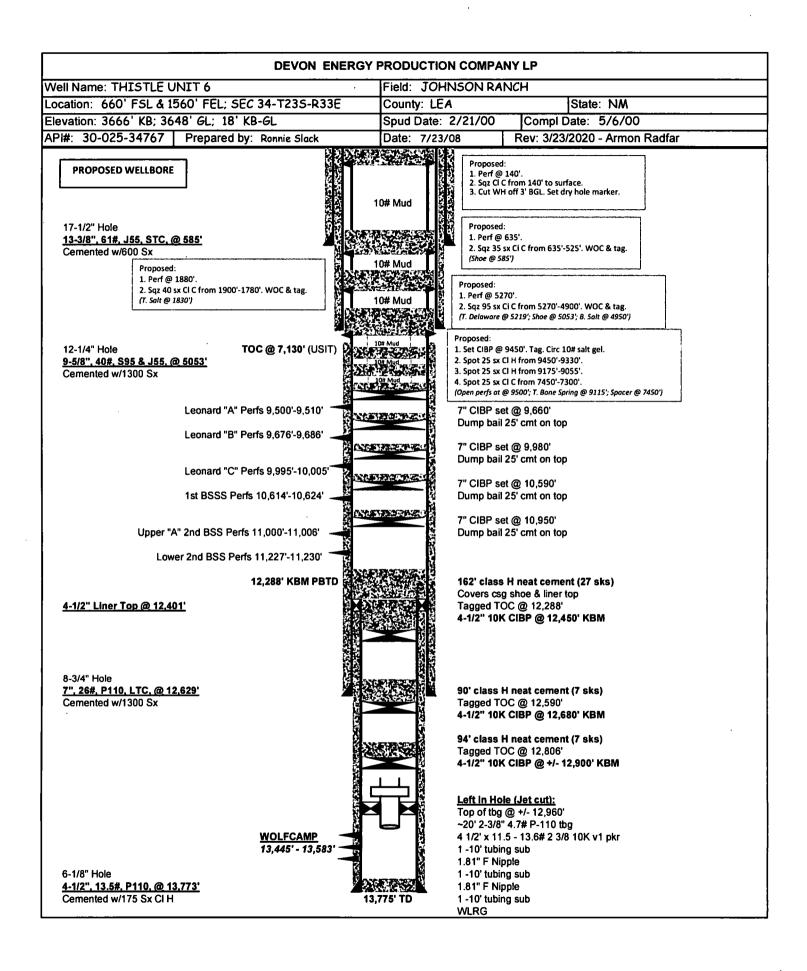

Devon - Internat

CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

Company representative will be on location during plugging procedures.

1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.

2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.

3. Trucking companies being used to haul oilfield waste fluids to a disposal - commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.

4. Filing a subsequent C-103 will serve as notification that the well has been plugged.

5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.

6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.

7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.

8. Produced water will not be used during any part of the plugging operation.

9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.

10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.

11. Class 'C' cement will be used above 7500 feet.

12. Class 'H' cement will be used below 7500 feet.

13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged

14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set

17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.

18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.

20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops

- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.

K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be SO' below the bottom and 50' above the top of the Formation.

21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, woe and tagged. These plugs will be set SO' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least¹/₄" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

SPECIAL CASES -----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION