Office	AM State of New Me		Form C ^P	
<u>District I</u> – (575) 393-6161 1625 N. French Dr., Hobbs, NM 88240	Energy, Minerals and Natur	ral Resources	Revised July 18, 2	2013
<u>District II</u> – (575) 748-1283 811 S. First St., Artesia, NM 88210	OIL CONSERVATION	DIVISION	30-015-28400	
<u>District III</u> – (505) 334-6178	1220 South St. Francis Dr.		5. Indicate Type of Lease	
1000 Rio Brazos Rd., Aztec, NM 87410	Santa Fe, NM 87		STATE X FEE 6. State Oil & Gas Lease No.	
District IV – (505) 476-3460 Salita FC, INIVI 87505 220 S. St. Francis Dr., Santa Fe, NM 7505			0. State Off & Gas Lease No.	
SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.) 1. Type of Well: Oil Well Gas Well Other			7. Lease Name or Unit Agreement Nan	ne
			Remuda Basin State	
			8. Well Number $#2$	
2. Name of Operator XTO Energy, Inc.			9. OGRID Number 005380	
3. Address of Operator			10. Pool name or Wildcat	
64001 Holiday Hill rd BLDG #5, Midland TX 79707			Nash Draw; Delaware/BS Avalon Sand	
4. Well Location Unit Letter K :	1980 feet from the South	line and	1980 feet from the West li	ine
Section 19		nge _{30E}	NMPM County _{Eddy}	inc
17	11. Elevation (Show whether DR,		·	
12 Check A	ppropriate Box to Indicate Na	ature of Notice	Report or Other Data	
			· •	
NOTICE OF INT			BSEQUENT REPORT OF:	_
		REMEDIAL WO		_
	CHANGE PLANS	COMMENCE DF		
PULL OR ALTER CASING				
CLOSED-LOOP SYSTEM			Notify OCD 24 hrs. prior to any work	
OTHER:		OTHER:	lone	
13. Describe proposed or comple				1 date
of starting any proposed wor	k). SEE RULE 19.15.7.14 NMAC		nd give pertinent dates, including estimated ompletions: Attach wellbore diagram of	d date
	k). SEE RULE 19.15.7.14 NMAC mpletion.	C. For Multiple Co		l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI t	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 	C. For Multiple Co	ompletions: Attach wellbore diagram of	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI t 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and 1	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 1 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TH 2 	2. For Multiple Co rre. R-1 2-3/8" tbg and tag PBJ	ompletions: Attach wellbore diagram of 11-P Area FD at 7,354'. POOH 2-3/8" tbg and notify BLM.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI t 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and 1 3) MIRU WL, RIH WL w/ 5-1/2" of	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu I 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). THE 2 CIBP to 6,900'. Set CIBP and spot 25 sxs C 	2. For Multiple Co Ire. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b	ompletions: Attach wellbore diagram of 11-P Area FD at 7,354'. POOH 2-3/8" tbg and notify BLM.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI t 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and 1 3) MIRU WL, RIH WL w/ 5-1/2" 4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5-	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 13K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class 1/2" csg at 5,050' and squeeze 25 sxs Class 1/2" csg at 3,255' and squeeze 75 sxs Class 	C. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Cass C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Tag of	TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI to 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/tbg. RU WL, and RIH	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). THE 2CIBP to 6,900'. Set CIBP and spot 25 sxs C I/2" csg at 5,050' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU 	2. For Multiple Co ure. R-1 2-3/8" tbg and tag PBT 2lass C cmt on top of b C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a	TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI t 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/tbg. RU WL, and RIH	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). THE 2CIBP to 6,900'. Set CIBP and spot 25 sxs C I/2" csg at 5,050' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU 	2. For Multiple Co ure. R-1 2-3/8" tbg and tag PBT 2lass C cmt on top of b C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a	TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI to 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5	 k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). THE 2CIBP to 6,900'. Set CIBP and spot 25 sxs C I/2" csg at 5,050' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU 	C. For Multiple Co ure. $R-1$ 2-3/8" tbg and tag PBT 2lass C cmt on top of b C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a Spot 25 sx Cmt (c	TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'.	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI to 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 73K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs C CIBP to 6,900'. Set CIBP t	C. For Multiple Co ure. $R-1$ 2-3/8" tbg and tag PBT 2lass C cmt on top of b C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a Spot 25 sx Cmt (c	Ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t least 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) D 5486' - 5286'. T of Strawn	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI to 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker.	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 73K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs C CIBP to 6,900'. Set CIBP t	C. For Multiple Co ure. $R-1$ 2-3/8" tbg and tag PBT 2lass C cmt on top of b C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a Spot 25 sx Cmt (c	Ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t least 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) D 5486' - 5286'. T of Strawn	d date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI f 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and I 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt (k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs C 1/2" csg at 5,050' and squeeze 25 sxs Class 1/2" csg at 3,255' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU.	C. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt)	Ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t least 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) D 5486' - 5286'. T of Strawn	l date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI to 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and T 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker.	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 73K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs C ISP to 6,900'. Set CIBP and spot 25 sxs C CIBP to 6,900'. Set CIBP and spot 25 sxs C ISP to 6,900'. Set CIBP to 6,900'. Se	C. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. (DV Tool) C cmt. W <u>OC & Togo</u> lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt)	Ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t least 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) D 5486' - 5286'. T of Strawn	d date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI f 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and I 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt (k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu (3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). THE CIBP to 6,900'. Set CIBP and spot 25 sxs Class /2" csg at 5,050' and squeeze 25 sxs Class /2" csg at 3,255' and squeeze 75 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU.	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Cass C cmt on top of b C cmt. (DV Tool) C cmt.	Ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t least 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) D 5486' - 5286'. T of Strawn	d date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI (1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and I 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RIH WL. perf 5- 8) Set P&A marker. Solid cement plug from B/salt (pud Date:	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu (3K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class (2" csg at 5,050' and squeeze 25 sxs Class (2" csg at 3,255' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C 'below surface. RDMO PU.	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT lass C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Togo lass C cmt until TOC : Spot 25 sx Cmt (Spot 25 sx Cmt te: Must be plugg	ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t loost 150'. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) 5486' - 5286'. T of Strawn t @ 4150' - 3950'. T of Canyon	d date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NO1 (1 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and 1 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt (2) pud Date: ****SEE ATTACHED CC hereby certify that the information a	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 13K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class 1/2" csg at 5,050' and squeeze 25 sxs Class 1/2" csg at 3,255' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU.	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Togo lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt te: Must be plugg est of my knowled	ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. closet 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) 2 5486' - 5286'. T of Strawn t @ 4150' - 3950'. T of Canyon ged by 9/24/2022 ge and belief.	d date
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI f 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and I 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt (w***SEE ATTACHED CC hereby certify that the information a IGNATURE COCC	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 13K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class 1/2" csg at 5,050' and squeeze 25 sxs Class 1/2" csg at 3,255' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU. 3385' - T/salt @ 360' Rig Release Da A's**** bove is true and complete to the be	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Togo lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt te: Must be plugg est of my knowled gulatory Analyst	In part of the second state of the	
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NO1 (1 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and 1 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt (2) pud Date: ****SEE ATTACHED CC hereby certify that the information a	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 13K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class 1/2" csg at 5,050' and squeeze 25 sxs Class 1/2" csg at 3,255' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C below surface. RDMO PU. 3385' - T/salt @ 360' Rig Release Da A's**** bove is true and complete to the be	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Togo lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt te: Must be plugg est of my knowled gulatory Analyst	ompletions: Attach wellbore diagram of 11-P Area TD at 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. closet 150 '. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) 2 5486' - 5286'. T of Strawn t @ 4150' - 3950'. T of Canyon ged by 9/24/2022 ge and belief.	
of starting any proposed wor proposed completion or reco XTO Energy, Inc Respectfully submits NOI ft 1) POOH w/ rods. ND WH and NU 2) Release 2-7/8" x 5.5" TAC and J 3) MIRU WL, RIH WL w/ 5-1/2" (4) POOH w/ tbg. RIH WL. Perf 5- 5) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RIH WL. Perf 5- 6) POOH w/ tbg. RU WL, and RIH 7) ND BOP and cut off wellhead 5 8) Set P&A marker. Solid cement plug from B/salt @ pud Date: ****SEE ATTACHED CC hereby certify that the information a IGNATURE Cassie Evans	k). SEE RULE 19.15.7.14 NMAC mpletion. o PA the well above with he below procedu 13K manual BOP. Function test BOP. POOH w/ 2-7/8" tbg (EOT @7,167'). TIH 2 CIBP to 6,900'. Set CIBP and spot 25 sxs Class 1/2" csg at 5,050' and squeeze 25 sxs Class WL. Perf 5-1/2" csg at 475' and squeeze C 'below surface. RDMO PU.	2. For Multiple Co are. R-1 2-3/8" tbg and tag PBT Class C cmt on top of b C cmt. (DV Tool) C cmt. WOC & Togo lass C cmt until TOC a Spot 25 sx Cmt (Spot 25 sx Cmt te: Must be plugg est of my knowled gulatory Analyst	and belief. Dat 7,354'. POOH 2-3/8" tbg and notify BLM. ridge plug. WOC and Tag at least 6,653'. t loost 150'. (8-5/8" csg shoe, B' Salt, T' Delaware) at Surface. (Surface Plug) 5486' - 5286'. T of Strawn t @ 4150' - 3950'. T of Canyon ged by 9/24/2022 ge and belief. DATE09/16/21 exxonmobil.com PHONE:432.218.3671	

•

Released to Imaging: 9/24/2021 12:53:41 PM

CONDITIONS FOR PLUGGING AND ABANDONMENT

OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down. Company representative will be on location during plugging procedures.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
 - A) Fusselman
 - B) Devonian
 - C) Morrow
 - D) Wolfcamp
 - E)Bone Springs
 - F) Delaware
 - G) Any salt sections
 - H) Abo
 - I) Glorieta
 - J) Yates.
 - K)Potash---(In the R-111-P Area (Page 3 & 4), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQUIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name2. Lease and Well Number3. API Number4. Unit Letter5. QuarterSection (feet from the North, South, East or West)6. Section, Township and Range7. Plugging Date8. County(SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

R-111-P Area

T 18S – R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

T 19S – R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23. Sec 24. Sec 25 Unit D. Sec 26 Unit A- F. Sec 27 Unit A,B,C,F,G,H.

T 19S – R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec 10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec 24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 32 Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

T 19S – R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

T 20S – R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec 23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit A-H. Sec 36 Unit B-G.

T 20S – R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P. Sec 19 Unit A,B,G,H,I,J,O,P. Sec 20 – 29. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

T 20S – R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P. Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

T 21S – R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec 23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

T 21S – R 30E

Sec 1 – Sec 36

T 21S – R 31E

Sec 1 – Sec 36

T 22S – R 28E

Sec 36 Unit A,H,I,P.

T 22S – R 29E

Sec 1. Sec2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

T 22S – R 30E

Sec 1 – Sec 36

T 22S – R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25 Unit A,B,C,D. Sec 26 Unit A,B,C,D,G,H. Sec 27 – Sec 34.

T 23S – R 28E

Sec 1 Unit A

T 23S – R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33 Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

T 23S – R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec 33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

T 23S – R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P. Sec 16 Unit I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec 34. Sec 35 Unit C,D,E.

T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

T 24S – R 30E


Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11. Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

T 24S – R 31E

Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O,P. Sec 10 Unit B – G, K – N. Sec 35 Unit E – P. Sec 36 Unit E,K,L,M,N.

T 25S – R 31E

Sec 1 Unit C,D,E,F. Sec 2 Unit A – H.

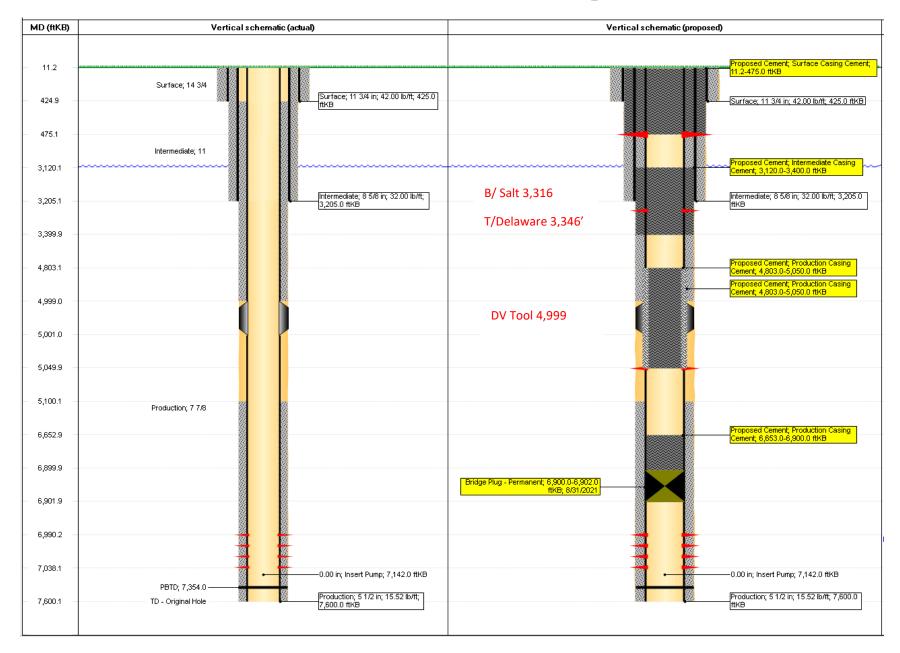

Remuda Basin State 2 - Current and Proposed WBD's

District I 1625 N. French Dr., Hobbs, NM 88240 Phone:(575) 393-6161 Fax:(575) 393-0720 District II

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

District IV 1220 S. St Francis Dr., Santa Fe, NM 87505 Phone: (505) 476-3470 Fax: (505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. Santa Fe, NM 87505

CONDITIONS

Operator:	OGRID:
XTO ENERGY, INC	5380
6401 Holiday Hill Road	Action Number:
Midland, TX 79707	49403
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

CONDITIONS

Created By	Condition	Condition Date
gcordero	None	9/24/2021

CONDITIONS

Page 7 of 7

.

Action 49403