Received by OCD: 2/17/2023 3:03:48 PM Submit 1 Copy To Appropriate District State of New Mexico	Form C-103	
Office Engage Minarals and Natural Recourses	Revised July 18, 2013	
1625 N. French Dr., Hobbs, NM 88240	WELL API NO.	
District II - (575) 748-1283 811 S. First St., Artesia, NM 88210 OIL CONSERVATION DIVISION	30-005-60360 5. Indicate Type of Lease	
<u>District III</u> – (505) 334-6178 1220 South St. Francis Dr.	STATE X FEE	
1000 Rio Brazos Rd., Aztec, NM 87410 <u>District IV</u> – (505) 476-3460 Santa Fe, NM 87505	6. State Oil & Gas Lease No.	
1220 S. St. Francis Dr., Santa Fe, NM 87505	NMNM 71036X	
SUNDRY NOTICES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name	
(DO NOT USE THIS FORM-FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH	Cough Lunder Lake Oueen Unit	
PROPOSALS.)	South Lucky Lake Queen Unit 8. Well Number, 001	
1. Type of Well: Oil Well X Gas Well	9. OGRID Number	
Name of Operator State of New Mexico formerly Bar V Barb, LLC	269864	
3. Address of Operator	10. Pool name or Wildcat	
1625 N. French Drive, Hobbs, N 88240	South Luck Lake Queen	
4. Well Location	Cost from the E line	
Unit Letter P : 330 feet from the S line and 990) feet from the E line NMPM Chaves County	
Section 16 Township 15S Range 29E 11. Elevation (Show whether DR, RKB, RT, GR, etc.		
GL: 3841 DF; 3842		
Check Appropriate Box to Indicate Nature of Notice	e, Report or Other Data	
NOTICE OF INTENTION TO: SU	BSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☐X REMEDIAL WO		
TEMPORARILY ABANDON	RILLING OPNS. P AND A	
PULL OR ALTER CASING MULTIPLE COMPL CASING/CEME		
DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM	Notify OCD 24 hrs. prior to any work done	
	done	
OTHER: OTHER:		
13. Describe proposed or completed operations. (Clearly state all pertinent details, a	and give pertinent dates, including estimated date	
 Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C 	and give pertinent dates, including estimated date completions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a	and give pertinent dates, including estimated date completions: Attach wellbore diagram of	
 Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C 	and give pertinent dates, including estimated date completions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations.	ompletions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200')	ompletions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi	ompletions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results.	ompletions: Attach wellbore diagram of	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag.	ompletions: Attach wellbore diagram of alt per sx, did not circulated, TOC Estimated @	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G.	ompletions: Attach wellbore diagram of alt per sx, did not circulated, TOC Estimated @	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G, tag.	ompletions: Attach wellbore diagram of alt per sx, did not circulated, TOC Estimated @	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G.	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G, tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Alxive Grade P&A marker. Top off as remarker BGL	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall A ve Grade P&A marker. Top off as re Marker BGL Note: Brine Gel will be placed between all cement plugs.	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G, tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Above Grade P&A marker. Top off as r. Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer. All plugs must be 25 sx or 100' w	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G. tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Alove Grade P&A marker. Top off as a Note: Brine Gel will be placed between all cement plugs. Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. secessary. Record Long/Lat hichever is greater SEE ATTACHED COA's****	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G, tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Above Grade P&A marker. Top off as r. Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer. All plugs must be 25 sx or 100' w	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. secessary. Record Long/Lat hichever is greater SEE ATTACHED COA's****	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Al xee Grade P&A marker. Top off as note: 100' or 25 sxs cement n Xnin Xm. Marker BGL Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer ******* Thereby certify that the information above is true and complete to the best of my knowled.	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater SEE ATTACHED COA's**** dge and belief.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Axve Grade P&A marker. Top off as note: Brine Gel will be placed between all cement plugs. Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer ******* I hereby certify that the information above is true and complete to the best of my knowled.	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater SEE ATTACHED COA's**** dge and belief.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Al xee Grade P&A marker. Top off as note: 100' or 25 sxs cement n Xnin Xm. Marker BGL Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer ******* Thereby certify that the information above is true and complete to the best of my knowled.	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater SEE ATTACHED COA's**** dge and belief.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G. tag. TOH. Perforate @ 330'. Pump cement down 330'; circulate Class G Cement to Cut off WH. Install X' diameter X' tall Alove Grade P&A marker. Top off as a Note: Brine Gel will be placed between all cement plugs. Note: Brine Gel will be placed between all cement plugs. Note: CBL will be run from existing packer	alt per sx, did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater SEE ATTACHED COA's**** dge and belief.	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G tag. TOH. Perforate @ 330'. Pump cement down 330': circulate Class G Cement to Cut off WH. Install injection rate. Cement with 129 sxs Class G. Toh. Perforate @ 330'. Pump cement down 330': circulate Class G Cement to Cut off WH. Install injection rate. Cement with 129 sxs Class G. Toh. Perforate @ 330'. Pump cement down 330': circulate Class G Cement to Cut off WH. Install injection rate. Cement with 129 sxs Class G. Marker BGL. Note: Brine Gel will be placed between all cement plugs. Marker BGL. Note: 100' or 25 sxs cement minimix. All plugs must be 25 sx or 100' w. Note: CBL will be run from existing packer. Title Ith Constituent TITLE Ith Constituent E-mail address: Pell ap lust. For State Use Only	alt per sx. did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater BEE ATTACHED COA's*** dige and belief. DATE 2/20/23 PHONE: 505 4866958	
13. Describe proposed or completed operations. (Clearly state all pertinent details, a of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple C proposed completion or recompletion. LPCH Area Intent to P&A this well. Notify NMOCD to witness plugging operations. MIRU, NU BOP, POH with tbg (4.5" casing @ 1825' w/100 sxs cement w/ 8# s 1200') Set CR or CIBP @ 1711'. Run CBL. Test csg 500psi Note: Plugs may change based on CBL results. Spot 25 sxs Class G Cement above CIBP/CR @ 1711'. WOC and tag. Spot 25 sxs Class G Cement from 1295' – 1195'. WOC and tag. TOH. Perforate @ 1080'. Establish injection rate. Cement with 129 sxs Class G. tag. TOH. Perforate @ 330'. Pump cement down 330': circulate Class G Cement to Cut off WH. Install X' diameter X' tall Alogove Grade P&A marker. Top off as more complete to the best of my knowled to the central plugs. Note: Brine Gel will be placed between all cement plugs. Note: 100' or 25 sxs cement minimum. All plugs must be 25 sx or 100' we Note: CBL will be run from existing packer Type or print name All Lindungum. TITLE PHR Guspinser Type or print name Rel Lindunguer E-mail address: pell @ ap last	alt per sx. did not circulated, TOC Estimated @ 104 sxs outside and 25 sxs inside. WOC and surface out annuli. eccessary. Record Long/Lat hichever is greater BEE ATTACHED COA's*** dige and belief. DATE 2/20/23 PHONE: 505 4866958	

CONDITIONS FOR PLUGGING AND ABANDONMENT

OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down. Company representative will be on location during plugging procedures.

- A notice of intent to plug and abandon a wellbore is required to be approved before plugging
 operations are conducted. A cement evaluation tool is required in order to ensure isolation of
 producing formations, protection of water and correlative rights. A cement bond log or other
 accepted cement evaluation tool is to be provided to the division for evaluation if one has not
 been previously run or if the well did not have cement circulated to surface during the original
 casing cementing job or subsequent cementing jobs. Insure all bradenheads have been
 exposed, identified and valves are operational prior to rig up.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 8. Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 10. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- 13. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 14. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
 - A) Fusselman
 - B) Devonian
 - C) Morrow
 - D) Wolfcamp
 - E) Bone Springs
 - F) Delaware
 - G) Any salt sections
 - H) Abo
 - 1) Glorieta
 - J) Yates.
 - K) Cherry Canyon Eddy County
 - L) Potash---(In the R-111-P Area (Page 3 & 4), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQUIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name 2. Lease and Well Number 3.API Number 4. Unit Letter 5. Quarter Section (feet from the North, South, East or West) 6. Section, Township and Range 7. Plugging Date 8. County (SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

R-111-P Area

T 18S - R 30E

Sec 10 Unit P. Sec 11 Unit M,N. Sec 13 Unit L,M,N. Sec 14 Unit C -P. Sec 15 Unit A G,H,I,J,K,N,O,P. Sec 22 Unit All except for M. Sec 23, Sec 24 Unit C,D,E,L, Sec 26 Unit A-G, Sec 27 Unit A,B,C

T 19S - R 29E

Sec 11 Unit P. Sec 12 Unit H-P. Sec 13. Sec 14 Unit A,B,F-P. Sec 15 Unit P. Sec 22 Unit A,B,C,F,G,H,I,J K,N,O,P. Sec 23. Sec 24. Sec 25 Unit D. Sec 26 Unit A-F. Sec 27 Unit A,B,C,F,G,H.

T 19S - R 30E

Sec 2 Unit K,L,M,N. Sec 3 Unit I,L,M,N,O,P. Sec 4 Unit C,D,E,F,G,I-P. Sec 5 Unit A,B,C,E-P. Sec 6 Unit I,O,P. Sec 7 – Sec 10. Sec 11 Unit D, G—P. Sec 12 Unit A,B,E-P. Sec 13 Unit A-O. Sec 14-Sec 18. Sec 19 Unit A-L, P. Sec 20 – Sec 23. Sec 24 Unit C,D,E,F,L,M,N. Sec 25 Unit D. Sec 26 Unit A-G, I-P. Sec 27, Sec 28, Sec 29 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 32 Unit A,B,G,H,I,J,N,O,P. Sec 33. Sec 34. Sec 35. Sec 36 Unit D,E,F,I-P.

T 19S - R 31E

Sec 7 Unit C,D,E,F,L. Sec 18 Unit C,D,E,F,G,K,L. Sec 31 Unit M. Sec 34 Unit P. Sec 35 Unit M,N,O. Sec 36 Unit O,P.

T 20S - R 29E

Sec 1 Unit H,I,P. Sec 13 Unit E,L,M,N. Sec 14 Unit B-P. Sec 15 Unit A,H,I,J,N,O,P. Sec 22 Unit A,B,C,F,G,H,I,J,O,P. Sec 23. Sec 24 Unit C,D,E,F,G,J-P. Sec 25 Unit A-O. Sec 26. Sec 27 Unit A,B,G,H,I,J,O,P. Sec 34 Unit A,B,G,H. Sec 35 Unit A-H. Sec 36 Unit B-G.

T 20S - R 30E

Sec 1 – Sec 4. Sec 5 Unit A,B,C,E-P. Sec 6 Unit E,G-P. Sec 7 Unit A-H,I,J,O,P. Sec 8 – 17. Sec 18 Unit A,B,G,H,I,J,O,P. Sec 19 Unit A,B,G,H,I,J,O,P. Sec 30 Unit A-L,N,O,P. Sec 31 Unit A,B,G,H,I,P. Sec 32 – Sec 36.

T 20S - R 31E

Sec 1 Unit A,B,C,E-P. Sec 2. Sec 3 Unit A,B,G,H,I,J,O,P. Sec 6 Unit D,E,F,J-P. Sec 7. Sec 8 Unit E-P. Sec 9 Unit E,F,J-P. Sec 10 Unit A,B,G-P. Sec 11 – Sec 36.

T 21S - R 29E

Sec 1 – Sec 3. Sec 4 Unit L1 – L16,I,J,K,O,P. Sec 5 Unit L1. Sec 10 Unit A,B,H,P. Sec 11 – Sec 14. Sec 15 Unit A,H,I. Sec 23 Unit A,B. Sec 24 Unit A,B,C,D,F,G,H,I,J,O,P. Sec 25 Unit A,O,P. Sec 35 Unit G,H,I,J,K,N,O,P. Sec 36 A,B,C,F – P.

T 21S - R 30E

Sec 1 – Sec 36

T 21S - R 31E

Sec 1 – Sec 36

T 22S - R 28E

Sec 36 Unit A,H,I,P.

T 22S - R 29E

Sec 1. Sec2. Sec 3 Unit I,J,N,O,P. Sec 9 Unit G – P. Sec 10 – Sec 16. Sec 19 Unit H,I,J. Sec 20 – Sec 28. Sec 29 Unit A,B,C,D,G,H,I,J,O,P. Sec 30 Unit A. Section 31 Unit C – P. Sec 32 – Sec 36

T 22S - R 30E

Sec 1 – Sec 36

T 22S - R 31E

Sec 1 – Sec 11. Sec 12 Unit B,C,D,E,F,L. Sec 13 Unit E,F,K,L,M,N. Sec 14 – Sec 23. Sec 24 Unit C,D,E,F,K,L,M,N. Sec 25 Unit A,B,C,D. Sec 26 Unit A,BC,D,G,H. Sec 27 – Sec 34.

T 23S - R 28E

Sec 1 Unit A

T 23S - R 29E

Sec 1 – Sec 5. Sec 6 Unit A – I, N,O,P. Sec 7 Unit A,B,C,G,H,I,P. Sec 8 Unit A – L, N,O,P. Sec 9 – Sec 16. Sec 17 Unit A,B,G,H,I,P. Sec 21 – Sec 23. Sec 24 Unit A – N. Sec 25 Unit D,E,L. Sec 26. Sec 27. Sec 28 Unit A – J, N,O,P. Sec 33 Unit A,B,C. Sec 34 Unit A,B,C,D,F,G,H. Sec 35. Sec 36 Unit B,C,D,E,F,G,K,L.

T 23S - R 30E

Sec 1 – Sec 18. Sec 19 Unit A – I,N,O,P. Sec 20, Sec 21. Sec 22 Unit A – N, P. Sec 23, Sec 24, Sec 25. Sec 26 Unit A,B,F-P. Sec 27 Unit C,D,E,I,N,O,P. Sec 28 Unit A – H, K,L,M,N. Sec 29 Unit A – J, O,P. Sec 30 Unit A,B. Sec 32 A,B. Sec 33 Unit C,D,H,I,O,P. Sec 34, Sec 35, Sec 36.

T 23S - R 31E

Sec 2 Unit D,E,J,O. Sec 3 – Sec 7. Sec 8 Unit A – G, K – N. Sec 9 Unit A,B,C,D. Sec 10 Unit D,P. Sec 11 Unit G,H,I,J,M,N,O,P. Sec 12 Unit E,L,K,M,N. Sec 13 Unit C,D,E,F,G,J,K,L,M,N,O. Sec 14. Sec 15 Unit A,B,E – P. Sec 16 Unit I, K – P. Sec 17 Unit B,C,D,E, I – P. Sec 18 – Sec 23. Sec 24 Unit B – G, K,L,M,N. Sec 25 Unit B – G, J,K,L. Sec 26 – Sec 34. Sec 35 Unit C,D,E.

T 24S – R 29E

Sec 2 Unit A, B, C, D. Sec 3 Unit A

T 24S - R 30E

Sec 1 Unit A – H, J – N. Sec 2, Sec 3. Sec 4 Unit A,B,F – K, M,N,O,P. Sec 9 Unit A – L. Sec 10 Unit A – L, O,P. Sec 11. Sec 12 Unit D,E,L. Sec 14 Unit B – G. Sec 15 Unit A,B,G,H.

T 24S - R 31E

Sec 3 Unit B – G, J – O. Sec 4. Sec 5 Unit A – L, P. Sec 6 Unit A – L. Sec 9 Unit A – J, O,P. Sec 10 Unit B – G, K – N. Sec 35 Unit E – P. Sec 36 Unit E,K,L,M,N.


T 25S - R 31E

Sec 1 Unit C,D,E,F. Sec 2 Unit A – H.

South Lucky Lake Queen Unit 001

Current WBD


South Lucky Lake Queen Field Unit P, 330' FSL & 990' FEL, Section 16, T15S, R29E Chaves County, NM, API #30-005-60360

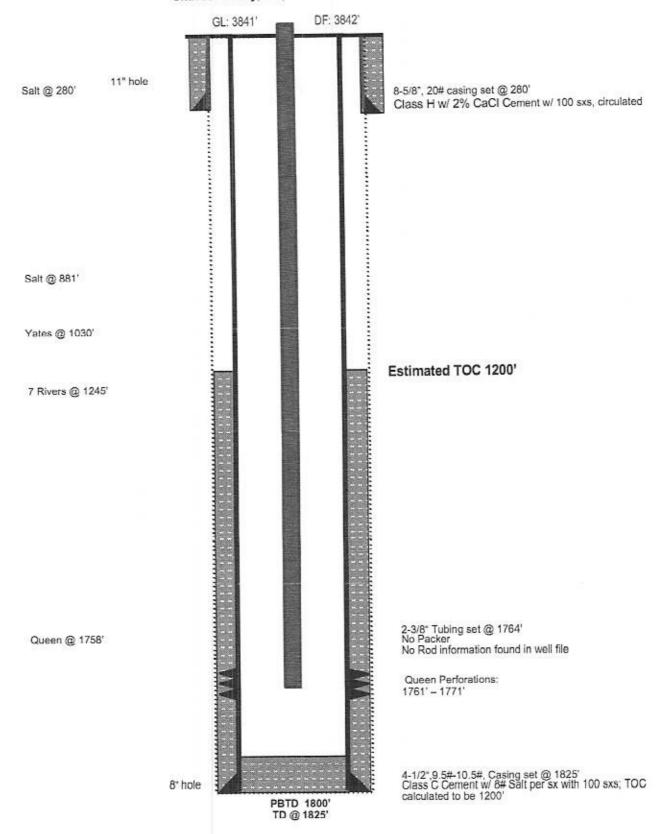

South Lucky Lake Queen Unit 001

Proposed P&A

South Lucky Lake Queen Field Unit P, 330' FSL & 990' FEL, Section 16, T15S, R29E Chaves County, NM, API #30-005-60360

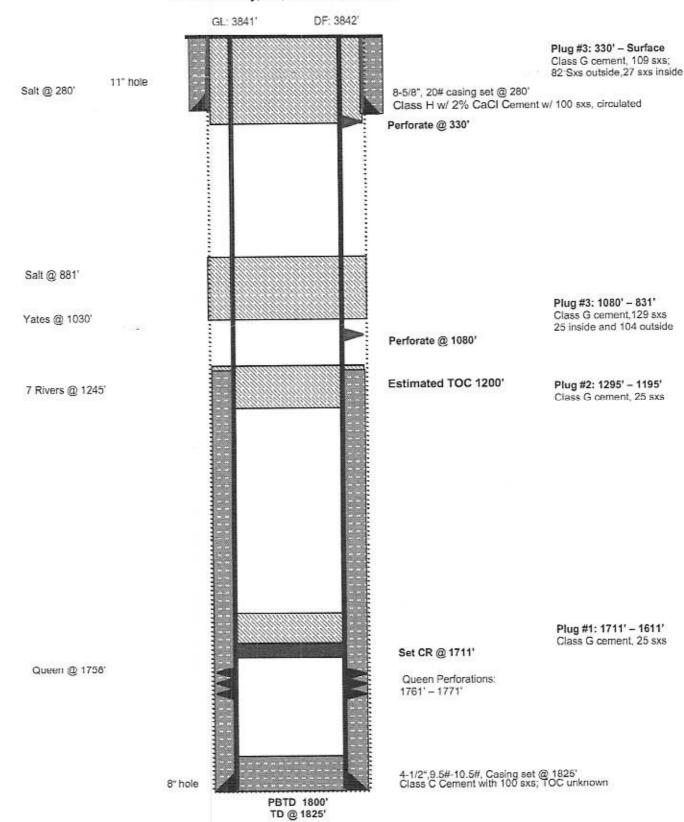

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720 District II

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720 District III

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. **Santa Fe, NM 87505**

COMMENTS

Action 187679

COMMENTS

Operator:	OGRID:
A-PLUS WELL SERVICE, INC.	370317
P.O. Box 1979	Action Number:
Farmington, NM 87499	187679
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

COMMENTS

Created By	Comment	Comment Date
plmartin	DATA ENTRY PM	2/22/2023

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720 District II

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720 District III

1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. **Santa Fe, NM 87505**

CONDITIONS

Action 187679

CONDITIONS

Operator:	OGRID:
A-PLUS WELL SERVICE, INC.	370317
P.O. Box 1979	Action Number:
Farmington, NM 87499	187679
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

CONDITIONS

Created By	Condition	Condition Date
gcordero	None	2/22/2023