Form 3160-5 (March 2012)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS Do not use this form for proposals to drill or to re-enter an

abandoned well. Use Form 3160-3 (APD) for such proposals.

OCD Artesia NM OIL CONSERVATION ARTESIA DISTRICT

AUG 19 2014

FORM APPROVED OMB No. 1004-0137 Expires: October 31, 2014

RECEIVED

. Lease Serial No.	
ROW NM-29683	
. If Indian, Allottee or Tribe Name	_

					1137 \		
SÜBMIT IN TRIPLICATE - Other instructions on page 2.					7. If Unit or CA/Agreement, Name and/or No.		
1. Type of Well					NA		
Oil Well Gas Well X Other SWD					8. Well Name and No.		
2. Name of Operator					Monsanto Foster SWD #1		
Yates Petroleum Corporation					9. API Well No.		
3a. Address 3b. Phone No. (include area code)					30-015-10340		
105 S. 4th Str., Artesia, NM 88210 575-748-1471					10. Field and Pool or Exploratory Area		
4. Location of Well (Footage, Sec., T., R., M., OR Survey Description)					SWD; Devonian		
					11. County or Parish, State		
660' FNL and 660' FWL of Section 5-T20S-R25E (Unit D,NWNW)					Eddy County, New Mexico		
12. CHECK THE APPR	ROPRIATE BOX(ES). T	o indic	ATE NATURE O	F NOTICE, I	REPORT OR (OTHER DATA	
TYPE OF SUBMISSION			TYPE O	F ACTION	,		
	Acidize		Deepen	Production ((Start/Resume)	Water Shut-Off	
X Notice of Intent	Alter Casing		Fracture Treat	Reclamation		Well Integrity	
	Casing Repair		New Construction	Recomplete		Other	
Subsequent Report	Change Plans	X	Plug and Abandon	Temporarily	Abandon		
Final Abandonment Notice	Convert to Injection		Plug Back	. Water Dispo	osal		
13. Describe Proposed of Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If							
the proposal is to deepen directionally or recon	nplete horizontally, give subsurfac	e locations and	measured and true vertical	depths of all pertine	ent markers and zones.		
Attach the Bond under which the work will be following completion of the involved operations	•		·				
following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has							
determined that the site is ready for final inspection. SEE ATTACHED FOR							
Vates Petroleum Corporation plans to plug and abandon this well as follows:							
1. MIRU well service unit. NU BOP and release packer. CONDITIONS OF APPROVAL							
2. Run a gauge ring and junk b	oasket to 10,190'. Se	et a CIBP a	at 10,180' and ca	ap it with 35	' Class "C" cer	ment.	
3. Spot a 100' Class "C" cemer				See	Attach	ed_r	
4. Spot a 100' Class "C" cemei	, ,	•	•	ASS:	tions &	Charges	
5. Spot a 100' Class "C" cemer			_	7-	1-		
			_				
6. Perforate at 1,350'. Spot a 100' Class "C" cement plug up the 5-1/2" annulus from 1,350' to 1,250'. WOC and tag.							
7. Perforate at 500'. Spot a 100' Class "C" cement plug up the 5-1/2" annulus from 500' to 400'. WOC and tag.							
8. Perforate at 100'. Spot a Class "C" cement plug up the 5-1/2" annulus from 100' to surface.							
9. Cut off wellhead, install dry hole marker and clean location. RECLAMATION PROCEDURE ATTACHED							
Wellbore schematics attached.							
		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	,		ing and the second of the seco		
Laura Watts Title Regulatory Reporting Technician							
Signature Tourier Watts Date June 3, 2014							
THIS SPACE FOR FEDERAL OR STATE OFFICE USE							
Approved by	o a an		Title	SAK	Dat	e 8-12-14	
Conditions of epproval, if any, are attached certify that the applicant holds legal or equivalent yould entitle the applicant to conduct	litable title to those rights in		or	CED	, ,	· ·	
Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States							
any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction							

Well Name: Monsanto Foster SWD #1 Field:


Location: 660' FNL & 660' FWL Sec 5-20S-25E

County: Eddy State: New Mexico
GL: 3,531' Zero: KB:

Spud Date: 1/8/1971 Completion Date: 3/31/1971

Comments: API # 30-015-10340

BEFORE

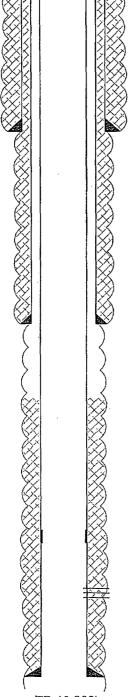

Casing Program					
Size/Wt/Grade	Depth Set				
13 %" 48#	450'				
9 5%" 36#	1,301'				
5 ½" 15# & 17#	10,524'				
	·				

13 %" csg @ 450' cmtd w/ 595 sx.

9 %" csg @ 1,301' cmtd w/ 450 sx.

TOC @ 3,400' by Temp Survey

Saltel Csg Patch @ 9,371-9,391' (4.5" ID)

Devonian perfs 10,220-10,504'

5 ½" csg @ 10,524' cmtd w/ 200 sx.

TD 10,869'

DATE: 4/28/2013

Well Name: Monsanto Foster SWD #1 Field:

Location: 660' FNL & 660' FWL Sec 5-20S-25E

County: Eddy State: New Mexico
GL: 3,531' Zero: KB:

Spud Date: 1/8/1971 Completion Date: 3/31/1971

Comments: API # 30-015-10340

AFTER

Size/Wt/Grade Depth Set


13 %" 48# 450'

9 %" 36# 1,301'

5 ½" 15# & 17# 10,524'

100' cement plug to surf.

Casing Program

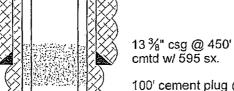

100' cement plug @ 500-400'

9 %" csg @ 1,301' cmtd w/ 450 sx. 100' cement plug @ 1,350-1,250'

100' cement plug @ 3,450-3,350' TOC @ 3,400' by Temp Survey

100' cement plug @ 5,100-5,000'

100' cement plug @ 8,100-8,000'

Saltel Csg Patch @ 9,371-9,391' (4.5" ID)

CIBP @ 10,180' w/ 35' cement Devonian perfs 10,220-10,504'

5 ½" csg @ 10,524' cmtd w/ 200 sx.

Yates Petroleum Corporation 105 South 4th St. Artesia, NM 88210

RE: NMNM29683 (ROW); Monsanto Foster SWD #1

0660' FNL /FWL, Section 5, T20S-R25E

Eddy County, New Mexico

Notice of Intent to Plug and Abandon, Conditions of Approval, Changes to Procedure:

- 1. Okay
- 2. Cap CIBP W/35' Class H cement, or spot 25 sack Class H cement plug.
 Add 200' Class H cement plug from 9400'-9200' (Covers casing patch). WOC tag.
- 3. Spot 180' Class H cement plug from 8390'-8210' (Covers T/Strawn). Add 170' Class H cement plug from 7705'-7535' (Covers T/Cisco).
- 4. Spot 160' Class C cement plug from 6080'-5920' (Covers squeeze holes @ 6000'). WOC tag.
- 5. Spot 130' Class C cement plug from 3661'-3531' (Covers T/Bone Spring).
 Add 120' Class C cement plug from 2304'-2184' (Covers T/ Glorieta). Perforate @ 2304' and squeeze cement to 2184. WOC tag.
- 6. Squeeze instead of spot.
- 7. Squeeze instead of spot.
- 8. Squeeze instead of spot.
- 9. Okay

If any questions contact Jim Amos @ 575-234-5909 (office), or 575-361-2648 (cell).

8/12/14

BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90th day provide this office, prior to the 90th day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

- 2. <u>Notification:</u> Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. In lieu of a cement plug in a cased hole, a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

- 6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement. The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).
- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and five copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash:</u> All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration conditions of approval will be developed and furnished to you.



United States Department of the Interior

BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its predisturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, redistribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

- 1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.
- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation

equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.

- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Petroleum Engineering Tech 575-234-5909, 575-361-2648 (Cell)

Solomon Hughes Natural Resource Specialist 575-234-5951

Jeffery Robertson Natural Resource Specialist 575-234-2230

Duncan Whitlock Environmental Protection Specialist 575-234-5926

Linda Denniston Environmental Protection Specialist 575-234-5974 Cody Layton Supervisory Multi Resources 575-234-5959

Trishia Bad Bear Natural Resource Specialist 575-393-3612

Amanda Lynch Natural Resource Specialist 575-234-5922

Jessie Rice Natural Resource Specialist 575-234-5913

Indra Dahal Natural Resource Specialist 575-234-5996