

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil well ☐ gas well ☒ other ☐

2. NAME OF OPERATOR
El Paso Natural Gas Company

3. ADDRESS OF OPERATOR
P.O. Box 289, Farmington, N.M. 87401

4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)
AT SURFACE: 800'N, 1500'E
AT TOP PROD. INTERVAL:
AT TOTAL DEPTH:

16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

REQUEST FOR APPROVAL TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
PULL OR ALTER CASING ☐
MULTIPLE COMPLETE ☐
CHANGE ZONES ☐
ABANDON* ☒
(other) ☐

☐
☐
☐
☐
☐
☐
☐
☐

5. LEASE

SE 078356

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

Huerfanito Unit

8. FARM OR LEASE NAME

Huerfanito Unit

9. WELL NO.

88

10. FIELD OR WILDCAT NAME

Blanco MV, Basin Dakota

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 23, T-27-N, R-9-W

12. COUNTY OR PARISH

San Juan

13. STATE

New Mexico


14. API NO.

15. ELEVATIONS (SHOW DF, KDB, AND WD)

6108 GL, 6118 DF

(NOTE: Report results of multiple completion or zone change on Form 9-330.)

U. S. GEOLOGICAL SURVEY
FARMINGTON, N. M.

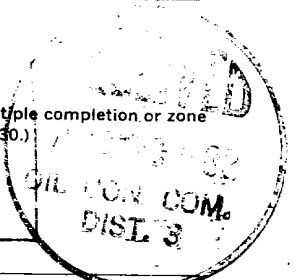

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

- 1) Spot a plug from 6772' to 6251' to cover from TD to 50' above the Greenhorn. Pull the 2 1/2" packer and 1 1/4" tubing (15 sk).
- 2) Perforate @ 5606'. Run tubing with packer and squeeze 31 sk and spot 10 sk to cover from 5606' to 5506' (Gallup) 40 sk.
- 3) Spot a plug from 4496' to 4350' to cover the Mesa Verde (4 sk).
- 4) Spot a plug from 2122' to 1858' to cover the Fruitland and Pictured Cliffs formations. (8 sk)
- 5) Pull a free point on the Dakota and cut off and recover the 2 7/8" casing.
- 6) Spot a 50' plug on top of the casing stub. (12 sk)
- 7) Spot a plug in the 8 3/4" hole from 1358' to 1142' to cover the Kirtland and Ojo Alamo formations (68 sk)
- 8) Go in the MV casing and clean out TD (drill out BP @ 3850').
(over)

Subsurface Safety Valve: Manu. and Type _____ Set @ _____ Ft.

18. I hereby certify that the foregoing is true and correct

Production
Engineer

SIGNED

TITLE

DATE

August 25, 1982

APPROVED

(Space for Federal or State office use)

APPROVED BY
CONDITIONS OF

TITLE

DATE

AUG 26 1982

JAMES F. SIMS

DISTRICT ENGINEER

Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between, and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

GPO : 1976 O - 214-149

- 9) Spot a plug from TD to 4350' to cover the Mesa Verde (13 sk).
- 10) Spot a plug from 2122' to 1858' to cover the Fruitland and Pictured Cliffs formations (8 sk).
- 11) Spot a plug from 377' to surface in the Mesa Verde casing. (11 sk)
- 12) Run tubing in to 377' in the 8 3/4" hole and spot a plug to 277' (32 sk).
- 13) Cut off the wellhead and spot a plug from 50' to surface and install a dry hole marker. (16 sk)