

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT

FORM APPROVED  
Budget Bureau No. 1004-0135  
Expires: March 31, 1993

**SUNDRY NOTICES AND REPORTS ON WELLS**

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.  
Use "APPLICATION FOR PERMIT" for such proposals

5. Lease Designation and Serial No.

NM - 010989

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

1. Type of Well  
☐ Oil Well ☒ Gas Well ☐ Other

2. Name of Operator

AMOCO PRODUCTION COMPANY

3. Address and Telephone No.

P.O. BOX 3092 HOUSTON, TX 77253

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1780' FSL

1495' FEL

Sec.

T. 32N R. 11W

UNIT J

8. Well Name and No.

Fields LS

10

9. API Well No.

30-045-22823


10. Field and Pool, or Exploratory Area

Blanco (Pictured Cliffs)

11. County or Parish, State

SAN JUAN

NEW MEXICO

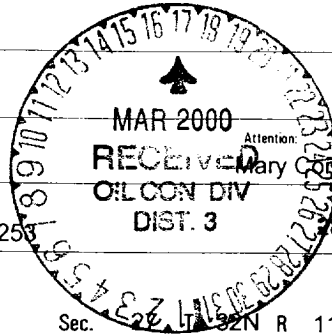

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent  
☐ Subsequent Report  
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment  
☐ Recompletion  
☐ Plugging Back  
☐ Casing Repair  
☐ Altering Casing  
☒ Other BLM LTR 9/10/1999

- ☐ Change of Plans  
☐ New Construction  
☐ Non-Routine Fracturing  
☐ Water Shut-Off  
☐ Conversion to Injection  
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Amoco Production Company request permission to plug and abandon the subject well as follows:

1. Notify regulatory agencies (BLM, NMOCD, FIMO) 24 hours in advance of plugging activity. Contact BLM and indicate well is allotted (FIMO regulations effective April 1, 1997).
2. Rigless operation. Blow down well.
3. Bullhead Class B neat cement down casing to abandon PC. Leave cement top at 2,590' to cover Fruitland. Wait on cement 3 hours. Perforate squeeze holes at 1,320'. Pump down casing and circulate cement to surface. Use 65:35 POZ and tail in with 100 sacks Class B neat cement leaving casing full of cement.
4. Cut off casing and wellhead. Install PXA marker according to BLM or state requirements.
5. Contact FMC and ship surface equipment to yard or other location per instructions.
6. Provide workorder to Buddy Shaw for reclamation.
7. Rehabilitate location according to BLM or State requirements.

14. I hereby certify that the foregoing is true and correct

Signed

Title

Sr. Business Analyst

Date

02-10-2000

(This space for Federal or State office use)

Approved by

/s/ Charlie Beecham

Title

Date

MAR 11 2000

Conditions of approval, if any:

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious, or fraudulent statements or representations as to any matter within its jurisdiction.

\* See Instructions on Reverse Side

NMOCD