

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well
☐ Oil Well ☒ Gas Well ☐ Other

2. Name of Operator
Read & Stevens, Inc.

3. Address and Telephone No.
P. O. Box 1518 Roswell, New Mexico 88202

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1980' FNL & 2030' FWL
Section 26 T5S-R26E

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

5. Lease Designation and Serial No.

NM-18821

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Northstack Federal #1

30-005-60783

10. Field and Pool, or Exploratory Area

Dos Ranchos Montoya

11. County or Parish, State

Chaves County, NM

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☐ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☒ Other Plug and Abandon

- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Read & Stevens, Inc. proposes to plug and abandon the subject well as follows:

- 1) CIBP @ 5,700' w/ 35' of cmt on top.
- 2) Cut & pull 4 1/2" csg from 3,200'.
- 3) Set 130' cmt plug, 1/2 in and 1/2 out of csg stub.
- 4) Set 100' cmt plug across the shoe of the 8 5/8" csg @ 1,450'.
- 5) Set a 100' cmt plug from 600' to 500' above the San Andres.
- 6) Cut off wellhead and set 50' surface plug, install dry hole marker and reclaim location.

Prior to plugging well, will circulate w/ 9 ppg mud laden fluid.
All plugs will be spotted w/ mud laden fluid.

14. I hereby certify that the foregoing is true and correct


Signed John C. Maxey, Jr.
(This space for Federal or State office use)

Title Petroleum Engineer

Date 6-13-95

Approved by
Conditions of approval, if any:

Title

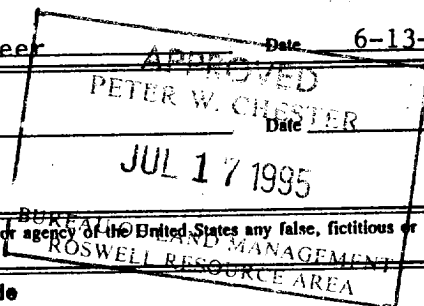

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

*See Instruction on Reverse Side