

Submit 3 Copies
to Appropriate
District Office

State of New Mexico
Energy, Minerals and Natural Resources Department

Form C-103
Revised 1-1-89

DISTRICT I
P.O. Box 1980, Hobbs, NM 88240

DISTRICT II
P.O. Drawer DD, Artesia, NM 88210

DISTRICT III
1000 Rio Brazos Rd., Aztec, NM 87410

OIL CONSERVATION DIVISION
P.O. Box 2088
Santa Fe, New Mexico 87504-2088

RECEIVED
NOV 12 1992

O. C. D.
ARTESIA

WELL API NO.	
5. Indicate Type of Lease	STATE ☒ FEE ☐
6. State Oil & Gas Lease No. B-11276-2	
7. Lease Name or Unit Agreement Name Cowtown Unit Tract 5	
8. Well No.	501
9. Pool name or Wildcat Artesia On Gb SA	

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)	
1. Type of Well: OIL WELL ☒ GAS WELL ☐ OTHER ☐	
2. Name of Operator Anadarko Petroleum Corporation	
3. Address of Operator P. O. Drawer 130, Artesia, New Mexico 88211-0130	
4. Well Location Unit Letter C : 660 Feet From The North Line and 1980 Feet From The West Line Section 24 Township 18S Range 28E NMPM Eddy County	
10. Elevation (Show whether DF, RKB, RT, GR, etc.) 3540 G.R.	

11. Check Appropriate Box to Indicate Nature of Notice, Report, or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK ☐	REMEDIAL WORK ☐
TEMPORARILY ABANDON ☐	ALTERING CASING ☐
PULL OR ALTER CASING ☐	COMMENCE DRILLING OPNS. ☐
OTHER: ☐	PLUG AND ABANDONMENT ☐
	CASING TEST AND CEMENT JOB ☐
	OTHER: ☐

12. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.
1. RUPU. GIH with CIBP on tbg. Set at 2695' to shut off SA perfs. Circulate hole with salt gel mud. Spot 35' cement on top of CIBP. This plug covers SA formation top.
 2. Spot 35 sx Class C cement with 3% CaCl from 2340' up to 2115'. This plug covers GB formation top. Pull up and wait on cement. Tag top of plug.
 - * 3. Spot 35 sx Class C with 3% CaCl from 1870' up to 1645'. TOH. This Plug covers Queen formation top.
 4. Tag top of plug with perf gun. Pull up and perf 4 squeeze holes at 765' (100' below salt). GIH with pker and cement squeeze with 40 sx Class C with 3% CaCl, leaving 100' cement in and out of casing. This covers base of salt.
 5. Tag top of plug with perf gun. Pull up and perf 4 squeeze holes at 268' (50' above salt). GIH with pker and cement squeeze with 40 sx Class C with 3% CaCl, leaving 100' in and out of casing. This covers top of salt. -Cont.-

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Mike Braswell TITLE Field Foreman DATE 11-12-92
TYPE OR PRINT NAME Mike Braswell TELEPHONE NO. 677-2411

(This space for State Use)

APPROVED BY Mark R. Kelly TITLE _____ DATE NOV 25 1992
CONDITIONS OF APPROVAL, IF ANY:

Notify N.M.O.C.G. in sufficient time to witness

REMARKS




12. Describe Proposed or Completed Operations. Cont. from page 1.

6. Tag top of plug and set 50' surface plug.

7. Cut off all casing and anchors below surface; Set P&A marker; Clean and level location.

Cowtown Unit Tract 5 No. 501
 Unit Letter C
 660' FNL & 1980' FWL
 Sec 24, T18S, R28E
 Eddy Co., New Mexico

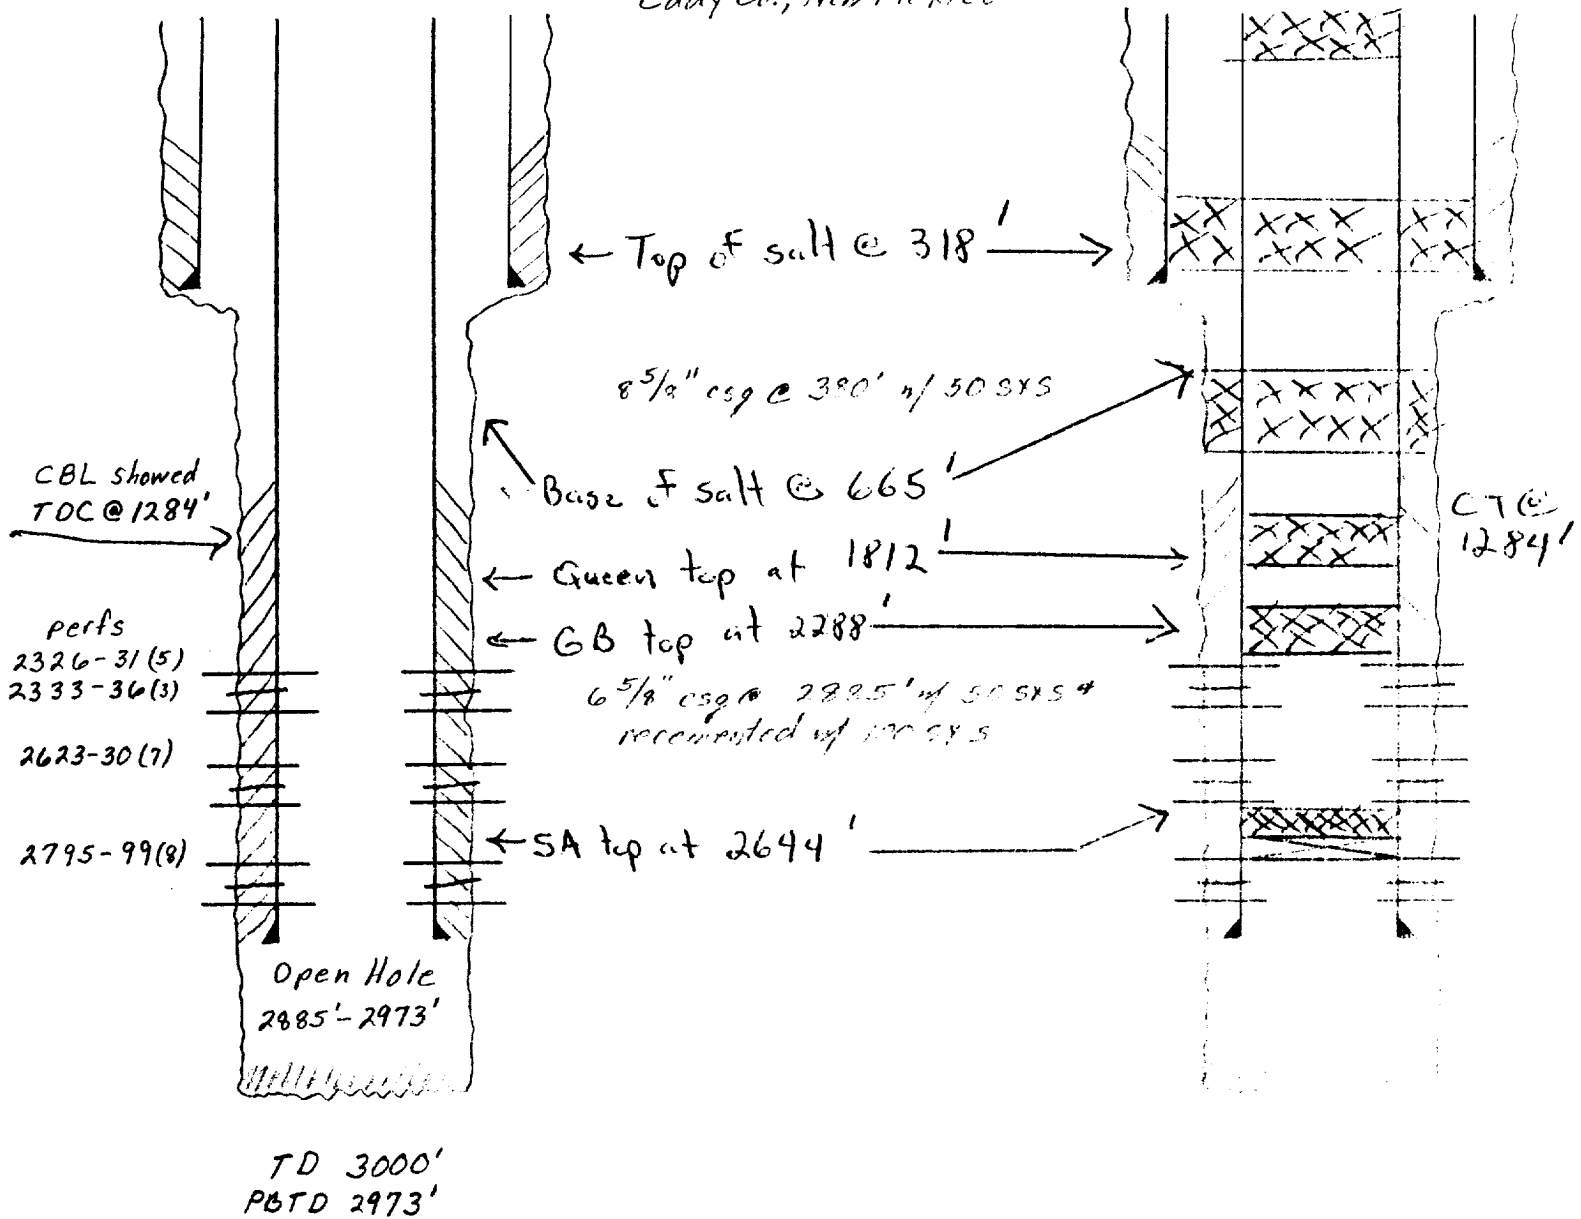

9151
 8-12-91