

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
GEOLOGICAL SURVEYCATE\*  
on re-Form approved.  
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM-34560

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

-----

7. UNIT AGREEMENT NAME

-----

8. FARM OR LEASE NAME

Indian Wells

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Wildcat

11. SEC., T., R., M., OR BLK. AND  
SURVEY OR AREA

Sec. 19-T22S-R25E

12. COUNTY OR PARISH

Eddy

13. STATE

NM

## SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT—" for such proposals.)1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ - Dry Hole

JUN 26 1981

2. NAME OF OPERATOR

MORRIS R. ANTWEIL /

3. ADDRESS OF OPERATOR

P. O. Box 2010 Hobbs, New Mexico 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.\*  
See also space 17 below.)  
At surface2080' FSL & 1980' FEL  
Sec. 19-T22S-R25E

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3736' GR

## 16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

## NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON\*

CHANGE PLANS

X

## SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

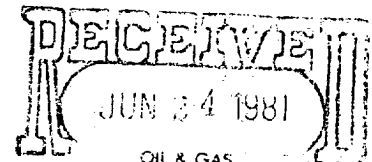
ABANDONMENT\*

(NOTE: Report results of multiple completion on Well  
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

TD 10855' PBTD 10286' Propose to P&amp;A as follows:

1. Spot 40 sx cement plug across perfs from 9700'-9250'.
2. Spot 65 sx cement plug across top of 4½" liner and across top of Wolfcamp from 7860'-7500'.
3. Cut 7" casing at free point (estimated 7400'). Pick 7" up 100'. Dump gravel down 7" to form bridge on top of 7" stub.
4. Pull 7" casing. Run tbg. Spot 100 sx cement plug on gravel bridge. WOC 12 hrs. Tag plug.
5. Spot 40 sx cement plug across top Bone Spring from 3750'-3650'.
6. Spot 35 sx cement plug across 8 5/8" casing shoe from 2650'-2550'.
7. Spot 35 sx cement plug across 13 3/8" casing shoe from 630'-530'.
8. Spot 15 sx surface plug w/marker.

OIL & GAS  
U.S. GEOLOGICAL SURVEY  
ROSWELL, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED

*R. Williams*

TITLE

Agent

DATE 23 Jun 81

(This space for Federal or State use)

APPROVED

APPROVED BY (Orig. Sgd.) ROGER A. CHAPMAN

DATE

CONDITIONS OF APPROVAL, IF ANY:

JUN 25 1981

\* SUBJECT TO THE ATTACHED CONDITIONS.

*for* JAMES A. GILLHAM  
DISTRICT SUPERVISOR

\*See instructions on Reverse Side