

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

078195

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

Monte Vista Unit

8. FARM OR LEASE NAME

9. WELL NO.

164

10. FIELD AND POOL, OR WILDCAT

Monte Vista Group

11. SEC., T., R., M., OR BLM. AND SURVEY OR AREA

Sec. 1, T. 25-N, R. 13-W

12. COUNTY OF PARTIAL 13. STATE

San Juan

New Mexico

1.

OIL WELL ☐ GAS WELL ☐ OTHER ☒ Water Injection Well

2. NAME OF OPERATOR

Gulf Oil Corporation

3. ADDRESS OF OPERATOR

Box 670, Hobbs, New Mexico 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*

See also space 17 below.)
At surface

1980' PBL & 660' PBL, Section 1, 25-N, 13-W

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

6207' GL

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZING ☐

REPAIR WELL ☐

(Other)

PULL OR ALTER CASING ☐

MULTIPLE COMPLETION ☐

ABANDON* ☒

CHANGE PLANS ☐

Plug & Abandon

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other)

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

5031' TD, 5003' PB.

Pull tubing and packer. Set retainer at 4687' on tubing. Test tubing with 3500#. Squeeze 5 1/2" perforations 4820-40', 4850-81' and 4888-4914' with 100 sacks of Glass A Neat cement. Maximum pressure 1500#. Allow injection and end squeeze with 300#. Test with 100#. Pull tubing. Spot 30 sack Glass A Neat cement plug inside 5 1/2" casing from 261' to surface. Pump 15 sacks of Glass A Neat cement into 9-5/8" - 5 1/2" annulus. Calculate 190' to surface. Remove well head and spot 10 sacks cement to surface. Clean location and install dry hole marker.

(Verbal permission granted May 28, 1968 from Mr. P. T. McGrath to Mr. P. D. Elias to plug and abandon as above).



RECEIVED
MAY 29 1968
GEOLOGICAL SURVEY

18. I hereby certify that the foregoing is true and correct

ORIGINAL SIGNED BY

SIGNED C. D. BORLAND

TITLE Area Production Manager

DATE May 28, 1968

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side


Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1963-O-685229
507-951

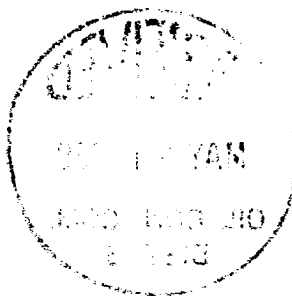

WELL ABANDONMENT
REPORT