

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE
(Other instructions on reverse side)

Form approved.
Budget Bureau No. -2-R142.
5. LEASE DESIGNATION AND SERIAL NO.
N00-C-14-20-5321
6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT" for such proposals.)

1. ☐ OIL ☒ GAS ☐ OTHER
WELL ☒ WELL ☐ OTHER

2. NAME OF OPERATOR

TEXACO, Inc. Prod. Dept. West U.S.

3. ADDRESS OF OPERATOR

P. O. Box EE, Cortez, CO. 81321

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. *
No. of space 17 below.)
At surface

NE $\frac{1}{4}$ NE $\frac{1}{4}$ Sec. 16

660' from North line and 660' from East lin.

14. PERMIT NO.

15. ELEVATION (Show whether of RT, RL, or SL)

5682' KB or 5669' GR

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF	SEAL OR ALTER CASING
FRACURE TREAT	ALTER CEMENT
SHOOT OR ACIDIZE	ABANDON*
REPAIR WELL	CHANGE PLANS
(Other)	

WATER SHUT-OFF	REPAIRING WELL
FRACURE TREATMENT	ALTERING CASING
SHOOTING OR ACIDIZING	ABANDONMENT*
(Other)	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

Texaco, Inc. plans to plug and abandon this dry hole because no shows of oil or gas were discovered in the proposed pay and no shallow potential exists. Navajo Tribe "BT" No. 1 will be abandoned as follows:

- 1) Spot 30 sx cement across perms. (6750' to TD).
- 2) Run free point survey; cut and recover 2-7/8" tubing.
- 3) Run free point survey; cut and recover 7" OD casing.
- 4) Spot 50 sx cement across top of 7" OD casing stub.
- 5) Spot 100 sx cement from 2450' to 2600' (top Todilito)
- 6) Set 9-5/8" cement retainer at 1570' (above bottom of 9-5/8" surface casing at 1620')
- 7) Displace 100 sx cement through retainer with tubing.
- 8) Spot 10 sx. cement at surface.
- 9) Erect dry hole marker and clean location.

18. I hereby certify that the foregoing is true and correct

SIGNED *[Signature]*

TITLE **Field Foreman**

DATE **12-1-77**


(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

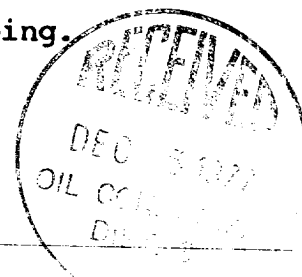

*See Instructions on Reverse S

USGS(4) MOCC(3) LE_ARM-JHP