

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒	5. LEASE DESIGNATION AND SERIAL NO. I-149-IND-6185
2. NAME OF OPERATOR PAN AMERICAN PETROLEUM CORPORATION	6. IF INDIAN, ALLOTTEE OR TRIBE NAME Navajo Tribe
3. ADDRESS OF OPERATOR P. O. Box 480, Farmington, New Mexico	7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 790 PNL and 990 PNL	8. FARM OR LEASE NAME Navajo "C"
	9. WELL NO. 1
	10. FIELD AND POOL, OR WILDCAT Undesignated Paradox
	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA N1/4, N1/4 Section 1 T-28-N, R-17-W
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4976 (DF)
	12. COUNTY OR PARISH San Juan
	13. STATE New Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐(Other) ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON* ☒CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐(Other) ☐REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT* ☐(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

As a result of failure to find oil or gas during work over operations, we propose to plug and abandon the above well as follows:

1. Run 5" retainer and set at 5930. Squeeze perforations 6137 to 6209 with 50 sacks cement. (Top of Paradox 5996).
2. Spot 25 sack cement plug at 5417-5900. (Top of 5" liner at 5577).
3. Spot 25 sack cement plug at 9957-9857. (Top of Culer at 9907).
4. Spot 25 sack cement plug at 2357-2297. (10-3/4" surface casing set at 2300).
5. Pull tubing, cement 7-5/8" - 10-3/4" annulus with 100 sacks cement followed by 100 sacks cement containing 2% calcium chloride.
6. Spot 25 sacks cement from 100' to surface.
7. Install abandonment marker and clean up location.

Above procedure verbally approved January 20, 1965, M. L. Seelinger, District Engineer, Farmington, N. M.

18. I hereby certify that the foregoing is true and correct

Fred L. Nabors, District Engineer

SIGNED

M. L. HOLLINGSWORTH

TITLE

January 27, 1965

(This space for Federal or State office use)

APPROVED BY

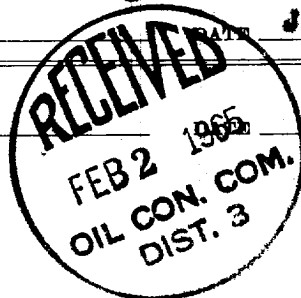
TITLE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

RECEIVED

FEB 1 1965

U. S. GEOLOGICAL SURVEY
FARMINGTON, N. M.

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.