

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 05859

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input checked="" type="checkbox"/> Water Injection Well	7. UNIT AGREEMENT NAME L. W. Swarts
2. NAME OF OPERATOR Clinton Oil Company	8. FARM OR LEASE NAME NE Hogback Unit
3. ADDRESS OF OPERATOR P. O. Box 2434 - Casper, Wyoming 82601	9. WELL NO. 17
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 560' FSL and 660' FWL	10. FIELD AND POOL, OR WILDCAT Horseshoe Gallup
14. PERMIT NO.	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 13-T30N-R16W
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 5351' GL	12. COUNTY OR PARISH San Juan
	13. STATE N. Mexico

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐FRACTURE TREAT ☐SHOOT OR ACIDIZE ☐REPAIR WELL ☐(Other) ☐PULL OR ALTER CASING ☐MULTIPLE COMPLETE ☐ABANDON* ☒CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐FRACTURE TREATMENT ☐SHOOTING OR ACIDIZING ☐(Other) ☐REPAIRING WELL ☐ALTERING CASING ☐ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

Casing: 8-5/8" - set at 211' w/160 sacks cement
5-1/2" - set at 3928' w/130 sacks cement

Perf: 3756'-3790' Upper Gallup
3838'-3862' Lower Gallup

Baker Model "N" packer set at 3816'

Propose to squeeze 25 sacks cement down tubing below packer

Place 20 sack cement plug 3816'-3666'

Shoot off 5-1/2" casing. Pull and lay down.

Place 25 sack cement plug 50' inside and 50' above 5-1/2" casing stub

Place 50 sack cement plug 2190'-2040' (Pt. Lookout 2090'-2560')


Place 30 sack cement plug 900'-800' (Menefee 850'-2090')

Place 20 sack cement plug 211'-161'

Place 10 sack cement plug 30'-GL

Install dry hole marker

Clean up location

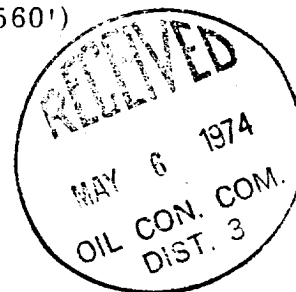

18. I hereby certify that the foregoing is true and correct

SIGNED W. SwartsTITLE District ManagerDATE 4/30/74

(This space for Federal or State office use)

APPROVED BY _____

TITLE _____

DATE _____

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side