

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 05859

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

L. W. Swarts

8. FARM OR LEASE NAME

N. E. Hogback Unit

9. WELL NO.

18

10. FIELD AND POOL, OR WILDCAT

Horseshoe Gallup

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 13-T30N-R16W

12. COUNTY OR PARISH

San Juan

13. STATE

N. Mexico

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)1. OIL ☒ GAS ☐ OTHER ☐
WELL WELL

2. NAME OF OPERATOR

Clinton Oil Company

3. ADDRESS OF OPERATOR

P. O. Box 2434 - Casper, Wyoming 82601

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

660' FSL and 1980' FWL

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5402' GL

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(Note: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any
proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones perti-
nent to this work.)*Casing: 8-5/8" - set at 216' - w/160 sacks cement
5-1/2" - set at 4047' w/130 sacks cementPerf: 3846'-3882' upper Gallup
3939' - 3971' Lower Gallup

Propose to plug back with sand from PBTD -4013'-3820'

Place 15 sack cement plug 3820'-3700'

Shoot off 5-1/2" casing. Pull and lay down.

Place 25 sack cement plug 50' inside and 50' above 5-1/2" casing stub

Place 50 sack cement plug 2290'-2140' (Pt. Lookout 2190'-2595')


Place 30 sack cement plug 730'-630' (Menefee 680'-2190')

Place 20 sack cement plug 216'-166'

Place 10 sack cement plug 30'-GL

Install dry hole marker

Clean up location

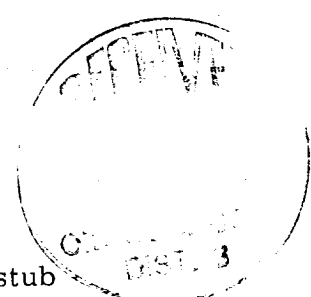

MAY 8 1974

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

DATE

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side