

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. ☐ OIL WELL ☐ GAS WELL ☒ OTHER		5. LEASE DESIGNATION AND SERIAL NO. 1-22-IND-2772
2. NAME OF OPERATOR SOUTHERN UNION PRODUCTION COMPANY		6. IF INDIAN, ALLOTTEE OR TRIBE NAME UTE MOUNTAIN TRIBE OF INDIANS
3. ADDRESS OF OPERATOR P. O. BOX 808, FARMINGTON, NEW MEXICO 87401		7. UNIT AGREEMENT NAME
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 613 FT. FROM NORTH LINE AND 1078 FT. FROM THE WEST LINE		8. FARM OR LEASE NAME BARKER HOLE
14. PERMIT NO.		9. WELL NO. 1
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6303 FT. D.F.		10. FIELD AND POOL, OR WILDCAT BARKER CREEK DAKOTA
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA SEC. 21, T. 2 N., R. 12 E., 1874
		12. COUNTY OR PARISH SAN JUAN
		13. STATE NEW MEXICO

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING


ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

WE PROPOSE TO PLUG AND ABANDON WELL AS FOLLOWS. WELL IS LOCATED LOW ON STRUCTURE AND IS PRESENTLY NON-PRODUCTIVE.

1. SET CEMENT PLUG OVER DAKOTA FORMATION FROM TOTAL DEPTH OF 2475 FT. TO 2278 FT, USING 65 SACKS OF CMT. TOP OF CEMENT WILL BE 100 FT. UP IN BOTTOM OF 7" CSG.
2. FILL 7" CASING WITH 9.0#/GAL. MUD FROM 2278 FT. TO 400 FT.
3. PERFORATE 2 HOLES IN 7" CASING AT 400 FT. CEMENT THRU HOLES W/100 SACKS CEMENT TO SET PLUG IN ANNULUS BEHIND 7" CASING FROM 400 FT. TO 200 FT. DISPLACE CEMENT IN 7" CASING TO 350 FT. LEAVING 50 FT. CEMENT ABOVE PERFORATIONS INSIDE CASING.
4. SET 5 SACKS CEMENT PLUG IN TOP OF 7" CASING FROM 20 FT. TO SURFACE.
5. ALL OF THE 7" CASING WILL BE LEFT IN THE WELL.
6. ERECT DRY HOLE MARKER, CLEAN LOCATION AND ABANDON WELL.

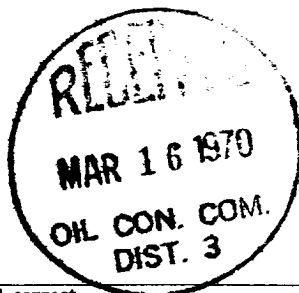

18. I hereby certify that the foregoing is true and correct

SIGNED GILBERT D. NOLAND, JR.

TITLE DRILLING SUPERINTENDENT

DATE MARCH 12, 1970

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.