### OCD-ARTESIA

Form 3160 -3 (February 2005)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT RECEIVED

FORM APPROVED OMB No 1004-0137 Expires March 31, 2007

JUN -2 2010 5

ease Serial No. VM 108953

APPLICATION FOR PERMIT TO DRILL OR REMIDED ARTESIA

Indian, Allotee or Tribe Name

la Type of work.	TER	7 If Unit or CA Agree	ment, Name and No		
lb. Type of Well. Onl Well Gas Well Other	Single Zone Multiple Zone	8 Lease Name and W SKEENA 35 FE			
2 Name of Operator <b>EOG Resources, Inc.</b>		9 API Well No. 30-015-	891		
3a Address P.O. Box 2267 Midland, TX 79702	3b. Phone No. (include area code) 432-686-3642	10 Field and Pool, or Ex	•		
4. Location of Well (Report location clearly and in accordance with		11 Sec , T. R M or Blk	eek Wolfcamp West		
At surface 205' FEL & 1150' FNL (U/L A)		7. 500, 7. 10 10 51	t and survey of theu		
At proposed prod zone 660' FWL & 760' FNL (U/L D)	UNCRTHODOX	Section 35, T16	S-R24E, N.M.P.M.		
4 Distance in miles and direction from nearest town or post office*  Approx 9.0 miles WNW of Artesia, NM	LOCATION	12 County or Parish  Eddy	13 State NM		
5 Distance from proposed* 205' location to nearest	16 No. of acres in lease 17 Space	ing Unit dedicated to this we	ell		
property or lease line, ft (Also to nearest drig unit line, if any)	320 N/2	Sec 35, T16S-R24E, N.M	Sec 35, T16S-R24E, N.M.P.M.		
8 Distance from proposed location*	19 Proposed Depth 20 BLN	/BIA Bond No on file			
to nearest well, drilling, completed, applied for, on this lease, ft 730'	4820'(TVD); 9131'(TMD) NM	2308			
Elevations (Show whether DF, KDB, RT, GL, etc.)	22 Approximate date work will start*	23 Estimated duration			
GL 3659.3'	09/01/2010	14			
	24. Attachments				
he following, completed in accordance with the requirements of Onsi	hore Oil and Gas Order No I, must be attached to	this form.			
Well plat certified by a registered surveyor  A Drilling Plan.	4 Bond to cover the operat	ions unless covered by an e	xisting bond on file (see		
A Surface Use Plan (if the location is on National Forest System	,				
SUPO must be filed with the appropriate Forest Service Office)	6. Such other site specific in BLM.	nformation and/or plans as n	nay be required by the		
5 Signature / // Mor	Name (Printed/Typed)		Date		
itle	Donny G. Glanton		04/06/2010		
Sr. Lease Operations ROW Representative					
Approved by (Signature) /s/ Don Peterson	Name (Printed Typed)	I	DateMAY 2 7 20		
itle FIELD MANAGER	Office	CARLSBAD FIELD	OFFICE		
application approval does not warrant or certify that the applicant ho	olds legal or equitable title to those rights in the s	ubject lease which would en	title the applicant to		
onduct operations thereon. Conditions of approval, if any, are attached.	AP	PROVAL FOR	TWO YEARS		
Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a	crime for any person knowingly and willfully to	make to any department or	agency of the United		
itle 18 USC Section 1001 and Title 43 USC Section 1212, make it a tates any false, fictitious or fraudulent statements or representations a	crime for any person knowingly and willfully to as to any matter within its jurisdiction.	make to any department or	agency of the United		

\*(Instructions on page 2)

Roswell Controlled Water Basin

Approval Subject to General Requirements & Special Stipulations Attached

SEE ATTACHED FOR CONDITIONS OF APPROVAL District I

1625 N. French Dr., Hobbs, NM 88240

District II

1301 W. Grand Avenue, Artesia, NM 88210

District III

1000 Rio Brazos Rd., Aztec, NM 87410

District IV 1220 S. St. Francis Dr., Santa Fe, NM 87505 State of New Mexico

Energy, Minerals & Natural Resources Department

OIL CONSERVATION DIVISION

1220 South St. Francis Dr.

Santa Fe, NM 87505

Form C-102

Revised October 12, 2005

Submit to Appropriate District Office

State Lease- 4 Copies

Fee Lease-3 Copies


AMENDED REPORT

WELL LOCATION AND ACREAGE DEDICATION PLAT


API Number	Pool Code	Pool Name					
30-015- 378	91 75260	Cottonwood Creek Wolfcamp West					
37909		erty Name Well Number 35 FED. 1H					
OGRID No.	OCRID No. Operator Name						
7377	EOG RESOURCES, INC.						
	Surf	ce Location					
L or lot no. Section Towns	nip Range L	Idn Feet from the North/South line Feet from the East/West line County					

A	35	16 SOUTH	24 EAST, N.	M. P. M.		1150	NORTH	205	EAST	EDDY
			Bottom H	tole Loca	tion	lf Differen	t From Sur	face		
UL or lot no.	Section	Township	Range		Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
D	35	16 SOUTH	24 EAST, N.	М. Р. М.		760	NORTH	660	WEST	EDDY
Dedicated	Acres	Joint or Infill	Consolidation Code	Order No.						•
320										

No allowable will be assigned to this completion until all interests have been consolidated or a non-standard unit has been approved by the

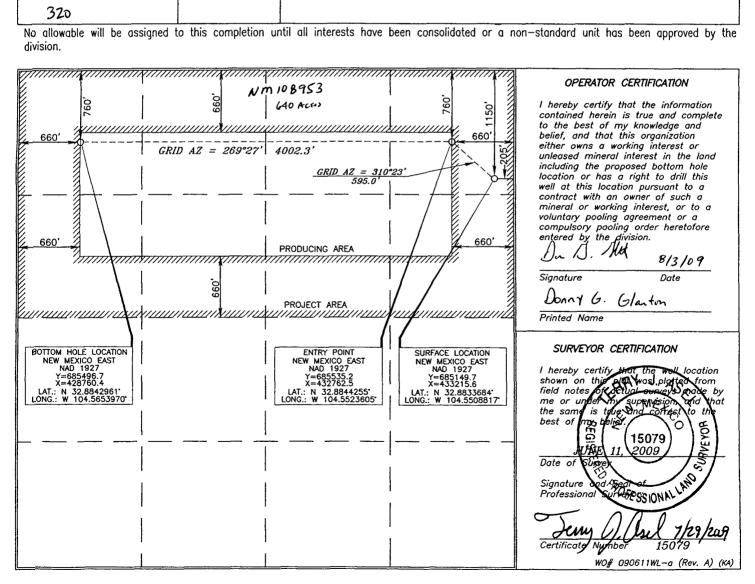

## LOCATION VERIFICATION MAP

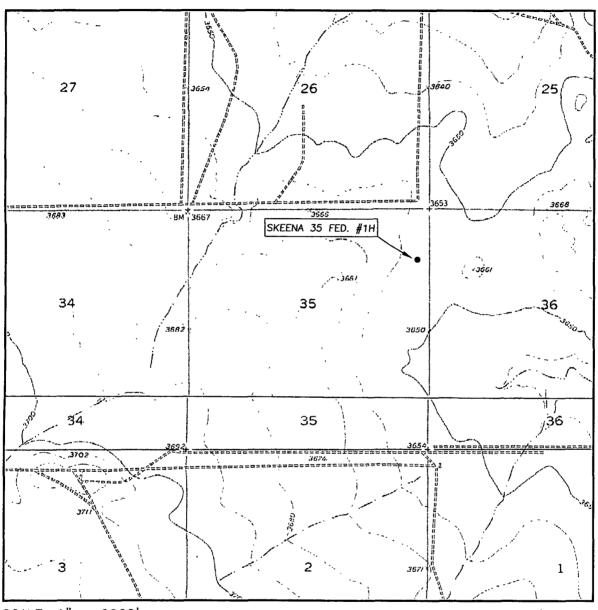

SCALE: 1" = 2000'

CONTOUR INTERVAL: 10'

SEC. 35 TWP. 16-S RGE. 24-E

SURVEY N.M.P.M.

COUNTY EDDY

DESCRIPTION 1150' FNL & 205' FEL

ELEVATION 3659.3'

OPERATOR EOG RESOURCES INC.

LEASE SKEENA 35 FED. #1H


U.S.G.S. TOPOGRAPHIC MAP
HOPE NE, N.M.

Asel Surveying


P.O. BOX 393 - 310 W. TAYLOR
HOBBS, NEW MEXICO - 575-393-9146





### VICINITY MAP

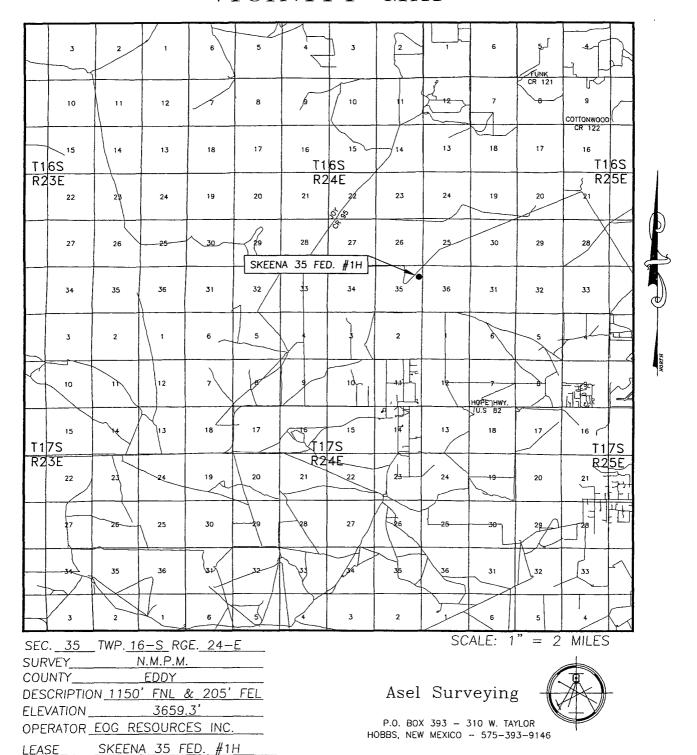

DIRECTIONS BEGINNING IN ARTESIA AT THE INTERSECTION OF U.S. HWY. #285 AND U.S. HWY. #82, GO WEST ON U.S. HWY. #82 FOR 11.4 MILES, TURN RIGHT ON COUNTY ROAD #95 (JOY ROAD) AND GO NORTH FOR 4.2 MILES, TURN RIGHT AND GO EAST ON CALICHE ROAD FOR 1.8 MILES, TURN RIGHT AND GO SOUTH FOR 0.6 MILES, TURN RIGHT ON PROPOSED NEW ROAD AND GO WEST FOR 110 FEET, TURN LEFT AND GO SOUTH FOR 0.6 MILES TO LOCATION.

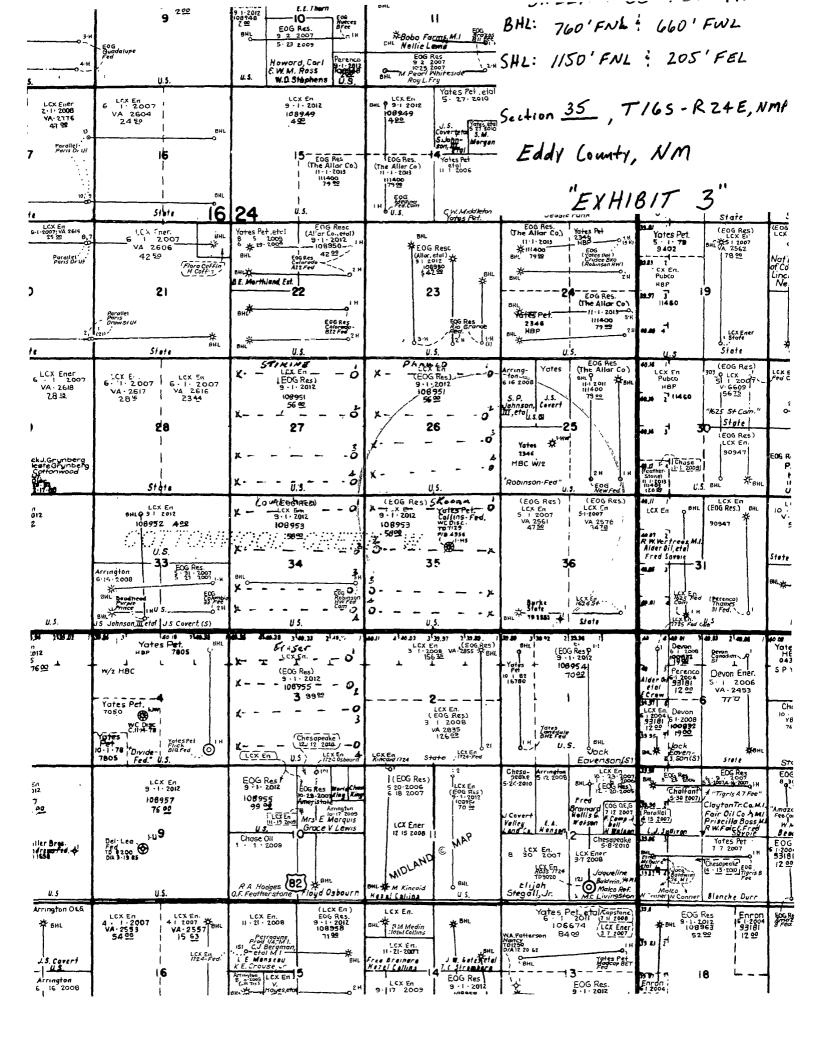

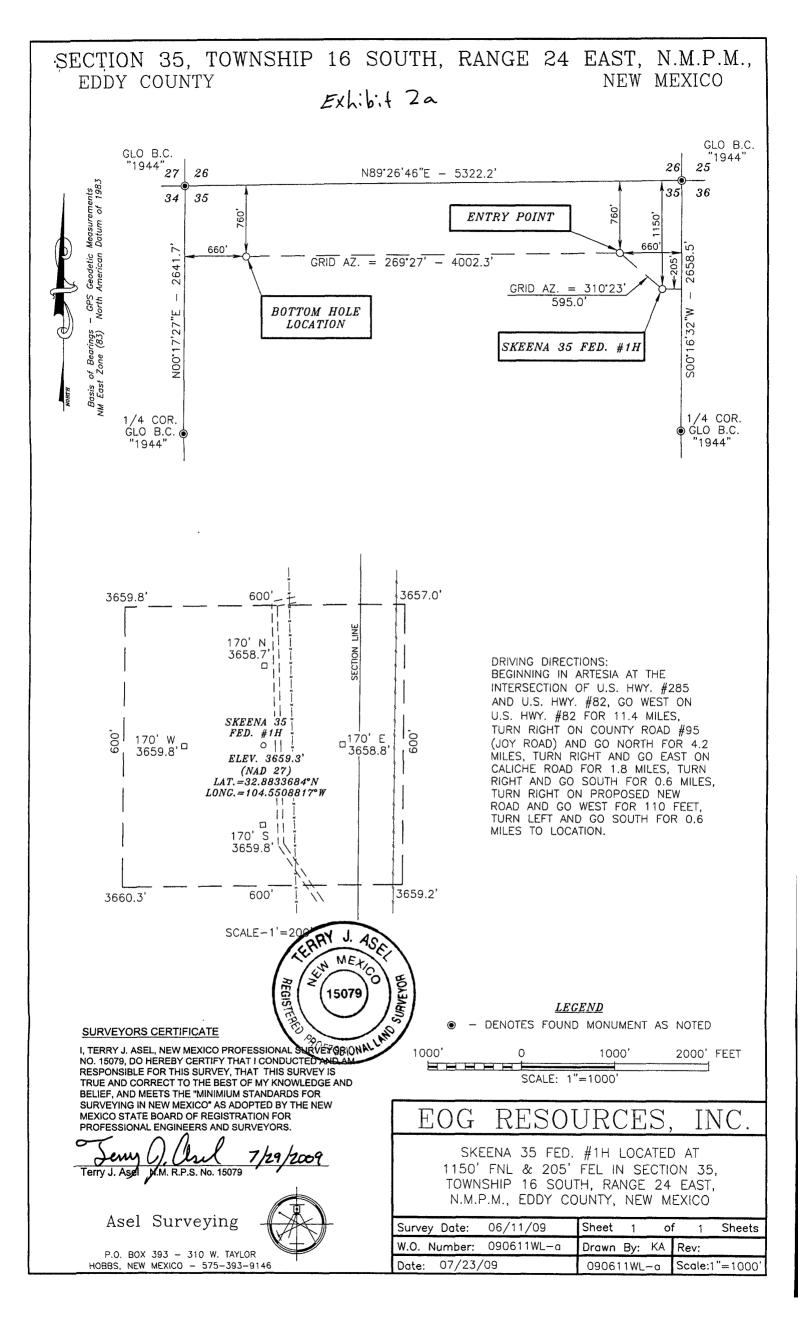

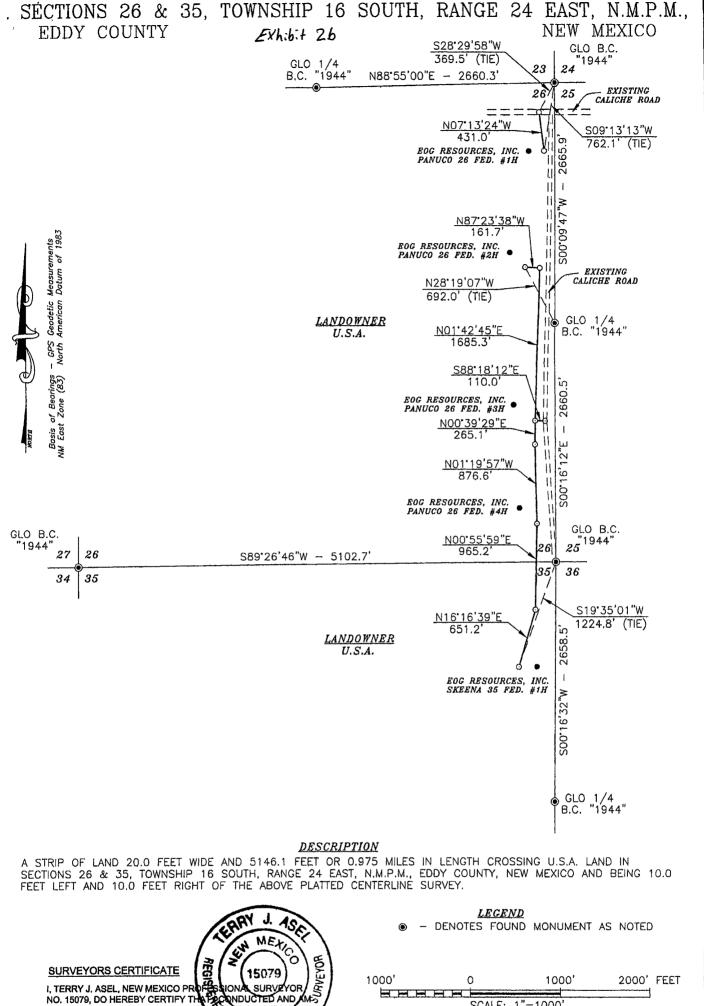

I, TERRY J. ASEL, NEW MEXICO PROFESSIONAL SURVEYOR
NO. 15079, DO HEREBY CERTIFY THA PECONDUCTED AND AM
RESPONSIBLE FOR THIS SURVEY, TARETHIS SURVEY IS
TRUE AND CORRECT TO THE BEST OF AN ANOMEROE AND
BELIEF, AND MEETS THE "MINIMIUM STANDARDS FORM"
SURVEYING IN NEW MEXICO" AS ADOPTED BY THE NEW MEXICO STATE BOARD OF REGISTRATION FOR PROFESSIONAL ENGINEERS AND SURVEYORS. J. Asel No. 1. R.P.S. No. 15079 Terry J. Asel Asél Surveying


P.O. BOX 393 - 310 W. TAYLOR HOBBS, NEW MEXICO - 575-393-9146

SCALE: 1"=1000

#### RESOURCES INC. EOG

SURVEY FOR A ROAD EASEMENT CROSSING U.S.A. LAND IN SECTIONS 26 & 35, TOWNSHIP 16 SOUTH, RANGE 24 EAST, N.M.P.M., EDDY COUNTY, NEW MEXICO

Survey Date: 07/10/09	Sheet 5 or	f 5 Sheets
W.O. Number: 090811RD	Drawn By: KA	
Date: 08/12/09	090811RD.DWG	Scale:1"=1000'

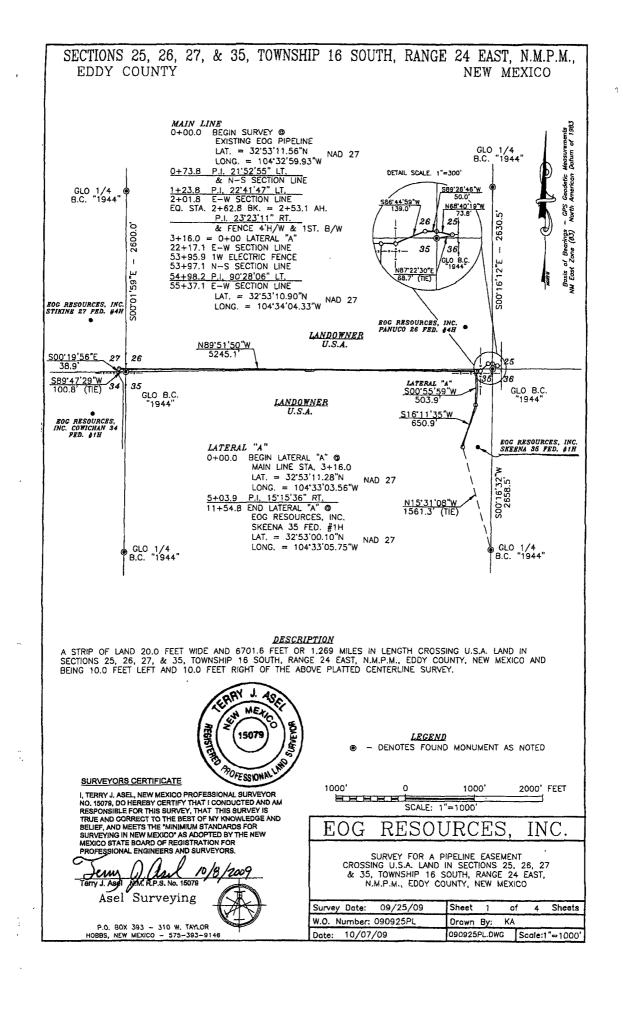


はないなかけんかこれでしたかけるの

THE THE WAY TO THE

蒋江 等级明 學級一品

京人下下 四十二

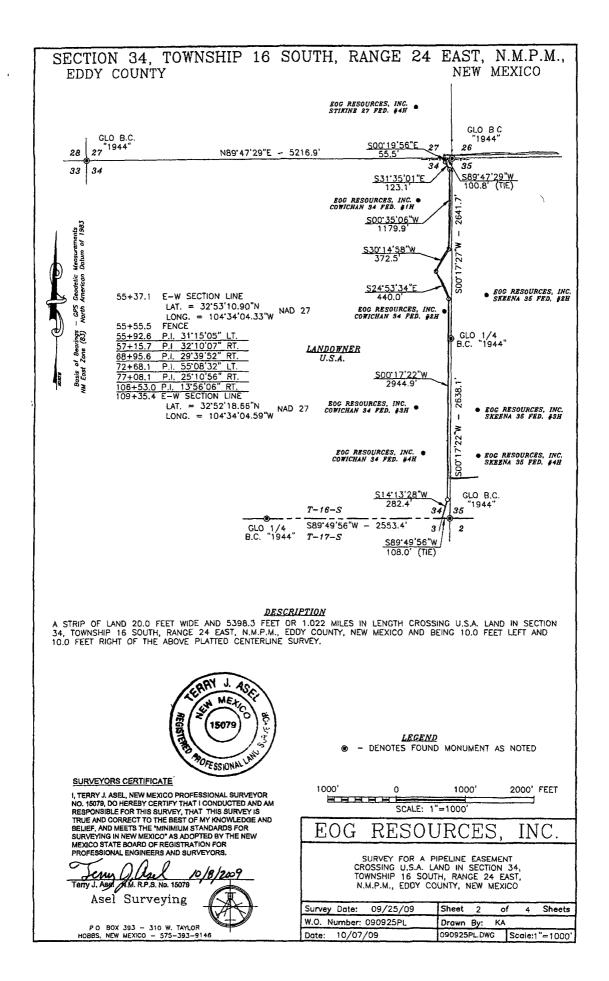

#### EOG RESOURCES, INC. SKEENA 35 FED 1H

#### 1. GEOLOGIC NAME OF SURFACE FORMATION:

Quaternary Alluvium

0-200

#### 2. ESTIMATED TOPS OF IMPORTANT GEOLOGICAL MARKERS:

San Andres	450'
Glorieta	1,610'
Tubb	3,090'
Abo Shale	3,750°
Wolfcamp Pay	4,775'

#### 3. ESTIMATED DEPTHS OF ANTICIPATED FRESH WATER, OIL OR GAS:

Quaternary Alluvium	0- 200'	Fresh Water
San Andres	450'	Oil
Glorieta	1,610'	Oil/Gas
Tubb	3,090'	Oil/Gas
Abo/Wolfcamp Pay	4,775'	Gas

No other Formations are expected to give up oil, gas or fresh water in measurable quantities. Surface fresh water sands will be protected by setting 8.625" casing at 1,200° and circulating cement back to surface.

#### 4. CASING PROGRAM - NEW

			Con aby	G <sub>CM</sub>		<u>Collapse</u>	<u>Burst</u>	Tension
			Para			Design	Design	<u>Design</u>
<u>Hole</u>	<u>Interval</u>	OD Csg	Weight	<u>Grade</u>	Conn.	<u>Factor</u>	Factor	<u>Factor</u>
12.250"	0-900'	8.625"	24#32*	J-55	LT&C	4.76	2.62	7.40
7.875"	0-9,131'	5.5"	17#	N-80	LT&C	3.07	1.29	2.36

#### Cementing Program:

8.625" Surface Casing:

Cement to surface, Lead: 345 sx 35:65 Poz C + 0.005 pps Static Free + 5% NaCl + 5 pps LCM-1 + 0.005 gps FP-6L + 4% Bentonite + 5% MPA-5 + 0.8% SMS,

12.7 ppg, 2.02 yield

Tail: 400 sx Prem Plus C + 0.125 pps CelloFlake + 0.005 FP-6L + 0.005 pps Static Free, 14.8 ppg, 1.33

yield

#### EOG RESOURCES, INC. SKEENA 35 FED 1H

#### 7. AUXILIARY WELL CONTROL AND MONITORING EQUIPMENT:

- (A) A kelly cock will be kept in the drill string at all times.
- (B) A full opening drill pipe-stabbing valve (inside BOP) with proper drill pipe connections will be on the rig floor at all times.

# 8. LOGGING, TESTING AND CORING PROGRAM: See COA

Open-hole logging is anticipated in the 7-7/8" production hole. The logging suites for this hole section are listed below:

Electric logging will consist of GR-Dual Laterlog and GR-Compensated Density-Neutron from +/-1,200' to TVD.

Possible sidewall cores based on shows. Possible FMI.

## 9. ABNORMAL CONDITIONS, PRESSURES, TEMPERATURES AND POTENTIAL HAZARDS:

The estimated bottom hole temperature (BHT) at TD is 125 degrees F with an estimated maximum bottom-hole pressure (BHP) at TD of 2000 psig. No hydrogen sulfide or other hazardous gases or fluids have been encountered, reported or are known to exist at this depth in this area. No major loss circulation zones have been reported in offsetting wells.

#### 10. ANTICIPATED STARTING DATE AND DURATION OF OPERATIONS:

The drilling operation should be finished in approximately one month. If the well is productive, an additional 30-60 days will be required for completion and testing before a decision is made to install permanent facilities.

# Skeena 35 Fed #1H Thames Field Eddy County, New Mexico

1150' FNL 205' FEL Section 35 T-16-S, R-24-E

**Proposed Wellbore** 

KB: 3,678.3' GL: 3,659.3'

API: 30-015-

Bit Size: 12-1/4" 8-5/8", 32#, J-55, LT&C 0' - 900' w/ 445 sx 35:65 Poz C + 4% Bentonite + 0.005 gps FP-6L + 0.005 pps Static Free + 5 pps LCM 1 + 5% NaCl + 5% MPA-5 + 0.8% SMS and 400 sx-Class C + 0.005 gps FP-6L + 0.005 pps Static Free + 0.125 pps CelloFlake KOP: 4350' Bit Size: 7-7/8" Wolfcamp Lateral: 9,131' MD, 4820' TVD BH Location: 760' FNL & 660' FWL Section 35 T-16-S, R-24-E

Bit Size: 7-7/8"

5-1/2", 17# , N-80, LT&C @ 9,131'

w 630 sx 50:50 Poz C + 10% Bentonite + 0.005 gps FP-6L + 0.005 pps Static Free +0.125 pps CelloFlake

745 sx 50:50 Poz C + 2% Bentonite + 0.005 gps FP-6L + 0.005 pps Static Free + 5% NaCl + 0.3% FL-52A + 0.2% CD-32 + 0.05% R-3

TVD Vertical Well: 5100'

#### ' Permit Information:

Well Name: Skeena 35 Fed #1H

Location:

SL

1150' FNL & 205' FEL, Section 35, T-16-S, R-24-E, Eddy Co., N.M.

BHL

760' FNL & 660' FWL, Section 35, T-16-S, R-24-E, Eddy Co., N.M.

#### **Casing Program:**

Casing	Setting Depth	Hole Size	Casing Size	Casing Weight	Casing Grade	Desired TOC
Surface	900'	12-1/4"	8-5/8"	32#	J-55	Surface
Production	9,131'	7-7/8"	5 1/2"	17#	N-80	Surface

#### **Cement Program:**

Depth	No.	Slurries:
	Sacks	
900'	345	Lead: 35:65 Poz C + 4% Bentonite+ 0.005 gps FP-6L + 0.005 pps Static Free + 5 pps LCM-1 + 5% NaCl + 5% MPA-5 + 0.8% SMS
	400	Tail: Class C + 0.005 gps FP-6L + 0.005 pps Static Free + 0.125 pps CelloFlake
9,131'	630	Lead: 50:50 Poz:Class C + 0.005 gps FP-6L + 10% Bentonite + 0.005 pps Static Free + 0.125 pps CelloFlake
	745	Tail: 50:50 Poz:Class C + 2% Bentonite + 0.005 gps FP-6L + 0.005 pps Static Free + 5% NaCl + 0.3% FL-2A + 0.2% CD-32 + 0.05% R-3

**Mud Program**:

Depth	Туре	Weight (ppg)	Viscosity	Water Loss
0 – 900'	Fresh - Gel	8.6-8.8	28-34	N/c
900' - 4,400'	Cut Brine	8.8-9.2	28-34	N/c
4,400' - 5,100'	Cut Brine	8.6-9.2	28-34	10-15
4,350' – 9,131'	Polymer (Lateral)	8.8-9.4	35-45	10-20

# Seogresources

## **EOG** Resources, Inc.

Eddy County Skeena 35 Fed #1H OH

Plan: Plan #1

# Pathfinder X & Y Planning Report

11 January, 2010





Pathfinder X & Y Planning Report



Well#1H Company: EOG Resources; Inc. Local Co-ordinate Reference: WELL @ 3678:30ft (Original Well Elev) Project: Eddy County 🕒 TVD Reference: WELL @ 3678.30ft (Original-Well Elev) MD Reference: Site: Skeena 35 Fed North Reference: Grid Well: Minimum Curvature Survey Calculation Method: 0Н. Wellbore: Database: Midland Database Plan #1 عربية عليه Design: Eddy County Project Mean Sea Level Map System: US State Plane 1927 (Exact solution) System Datum: NAD 1927 (NADCON CONUS) Geo Datum: New Mexico East 3001 Map Zone: Site Skeena 35 Fed Northing: 681,881.600 ft 32° 52' 27.688 N Site Position: Latitude: 104° 33' 58.482 W 428,492.100 ft Longitude: Мар Easting: From: -0.13 ° 0.00 ft Slot Radius: **Grid Convergence: Position Uncertainty:** Wells-See #1H 685,149.700 ft Latitude: 32° 53' 0 126 N **Well Position** +N/-S 0.00 ft Northing: +E/-W 0.00 ft Easting: 433,215 600 ft Longitude: 104° 33' 3.175 W 3,659.30 ft 0 00 ft Wellhead Elevation: **Ground Level: Position Uncertainty** OH Wellböre \* Declination Dip Angle Field Strength Magnetics Model Name Sample Date in (a) \_(ñΤ̂)⁻ 49,041 IGRF2010 01/11/2010 8.26 60.66 Design & E. S. Plan #1 **Audit Notes:** Version: Phase: PLAN Tie On Depth: 0 00 Vertical Section: Depth From (TVD) +N/-S +E/-W#\*\* Direction (°) (ft) : (ft) : (ft) 0.00 0.00 274 45 Survey Tool Program Date 01/11/2010 Survey (Wellbore) Tool Name Description -9,130.13 Plan #1 (OH) MWD MWD - Standard 0.00



Pathfinder X & Y Planning Report



, Company: Project: Site:

Well: \*\*\* Wellbore:

Design: ,.

Eddy County Skeena 35 Fed #1H

EOG Resources; Inc. 🗇

OH AND TO

TVD Reference: MD Reference: WELL @ 3678 30ft (On North Reference: Grid.
Survey Calculation Method: Minimum Curvature MD Reference:

Database:

WELL @ 3678 30ft (Original Well Elev)

Midland Database

Planned Surv	

									*	
MD	lnc (°)	Azi	πTVD (ft)	TVDSS (ft)				)Leg 100ft)	Northing (ft)	Easting (ft)
(ft) 0.00	0.00	0.00	<u>(π)</u> 0.00	-3,678.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
100.00	0.00	0.00	100.00	-3,578.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
200.00	0 00	0.00	200.00	-3,478.30	0.00	0.00	0.00	0 00	685,149.70	433,215 60
300.00	0.00	0.00	300.00	-3,378.30	0.00	0 00	0 00	0.00	685,149.70	433,215.60
400.00	0 00	0 00	400.00	-3,278.30	0.00	0.00	0.00	0.00	685,149 70	433,215.60
500.00	o oo	0.00	500.00	-3,178.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
600.00	0.00	0.00	600 00	-3,078.30	0.00	0.00	0.00	0 00	685,149.70	433,215.60
700.00	0 00	0.00	700.00	-2,978.30	0.00	0.00	0 00	0.00	685,149.70	433,215.60
800.00	0.00	0.00	800.00	-2,878.30	0.00	0 00	0 00	0.00	685,149 70	433,215.60
900.00	0 00	0 00	900 00	-2,778.30	· 0 00	0.00	0.00	0.00	685,149.70	433,215 60
1,000.00	0.00	0.00	1,000.00	-2,678 30	0.00	0.00	0 00	0 00	685,149.70	433,215.60
1,100.00	0.00	0.00	1,100 00	-2,578 30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
1,200 00	0.00	0.00	1,200.00	-2,478.30	0.00	0.00	0 00	0.00	685,149 70	433,215.60
1,300.00	0.00	0.00	1,300.00	-2,378 30	0.00	0.00	0 00	0 00	685,149.70	433,215.60
1,400.00	0 00	0.00	1,400 00	-2,278.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
1,500 00	0.00	0.00	1,500.00	-2,178 30	0.00	0.00	0.00	0 00	685,149.70	433,215.60
1,600.00	0.00	0 00	1,600.00	-2,078 30	0 00	0.00	0.00	0.00	685,149.70	433,215.60
1,700.00	0.00	0.00	1,700.00	-1,978.30	0.00	0 00	0 00	0 00	685,149 70	433,215.60
1,800 00	0.00	0.00	1,800.00	-1,878 30	0.00	0.00	0 00	0 00	685,149.70	433,215.60
1,900 00	0.00	0.00	1,900.00	-1,778 30	0 00	0.00	0.00	0.00	685,149.70	433,215 60
2,000.00	0 00	0 00	2,000 00	-1,678.30	0.00	0 00	0 00	0.00	685,149.70	433,215.60
2,100.00	0.00	0.00	2,100.00	-1,578 30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
2,200.00	0.00	0.00	2,200 00	-1,478.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
2,300.00	0.00	0 00	2,300 00	-1,378.30	0.00	0 00	0 00	0 00	685,149.70	433,215 60
2,400 00	0.00	0.00	2,400.00	-1,278.30	0 00	0.00	0.00	0 00	685,149.70	433,215.60
. 2,500 00	0.00	0.00	2,500.00	-1,178.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
- 2,600 00	0.00	0 00	2,600 00	-1,078.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60



Pathfinder X & Y Planning Report



Company: Project:

Site:

EOG Resources, Inc.

Skeena 35 Fed

Well: ОН Wellbore: Plan #1 Design:

Local Co-ordinate Reference:

TVD Reference: MD Reference: North Reference:

Survey Calculation Method:

Database:

Well#1H

WELL @ 3678:30ft (Original Well Elev) WELL @ 3678.30ft (Original Well Elev)

Grid

Minimum Curvature Midland Database

Planned Survey										
MD	lnc .	Azi	τνĎ	TVDSS	N/S	E/W	V. Sec	DLeg	Northing	Easting
(ft)	(°)	(°)	(ft)	(ft),	(ft)	(ft)	ું કહે. (ft) જું કે કે	.(°/100ft):	(ft)	(ft)
2,700.00	0 00	0.00	2,700.00	-978.30	0.00	0.00	0.00	0.00	685,149.70	433,215 60
2,800.00	0.00	0.00	2,800.00	-878.30	0 00	0 00	0 00	0.00	685,149.70	433,215.60
2,900 00	0 00	0.00	2,900 00	-778.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
3,000.00	0.00	0.00	3,000.00	-678.30	0 00	0.00	0 00	0.00	685,149.70	433,215.60
3,100 00	0 00	0.00	3,100.00	-578 30	0.00	0.00	0.00	0.00	685,149.70	433,215 60
3,200 00	0.00	0.00	3,200 00	-478.30	0.00	0.00	0.00	0.00	685,149.70	433,215 60
3,300.00	0.00	0.00	3,300.00	-378.30	0.00	0.00	0.00	0.00	685,149.70	433,215.60
3,400.00	0 00	0 00	3,400.00	-278 30	0.00	0.00	0.00	0.00	685,149.70	433,215 60
3,500.00	0.00	0.00	3,500.00	-178.30	0.00	0.00	0 00	0.00	685,149 70	433,215.60
3,600.00	0.00	0 00	3,600.00	-78 30	. 0.00	0 00	0.00	0.00	685,149.70	433,215 60
3,700.00	0.00	0 00	3,700 00	21.70	0.00	0.00	0.00	0.00	685,149.70	433,215.60
3,800 00	0.00	0 00	3,800.00	121.70	0.00	0 00	0.00	0.00	685,149.70	433,215.60
3,900 00	0 00	0.00	3,900 00	221 70	0.00	0 00	0.00	0 00	685,149.70	433,215.60
4,000.00	0 00	0 00	4,000.00	321.70	0.00	0.00	0 00	0.00	685,149.70	433,215.60
4,100 00	0 00	0.00	4,100.00	421 70	0 00	0.00	0.00	0 00	685,149.70	433,215.60
4,200.00	0.00	0.00	4,200 00	521 70	0.00	0.00	0.00	0 00	685,149.70	433,215.60
4,300.00	0.00	0.00	4,300.00	621.70	0.00	0 00	0 00	0.00	685,149 70	433,215.60
4,342.50	0 00	0.00	4,342 50	664.20	0.00	0.00	0.00	0 00	685,149.70	433,215 60
4,350 00	0.90	293.38	4,350 00	671.70	0.02	-0.05	0.06	12.00	685,149.72	433,215.55
4,375.00	3.90	293 38	4,374.97	696.67	0.44	-1.01	1 05	12.00	685,150.14	433,214.59
4,400.00	6 90	293.38	4,399.86	721.56	1.37	-3.17	3.27	12.00	685,151 07	433,212 43
4,425.00	9.90	293.38	4,424.59	746.29	2 82	-6.53	6.72	12 00	685,152 52	433,209.07
4,450.00	12.90	293.38	4,449.09	770.79	4.78	-11.06	11 40	12 00	685,154.48	433,204.54
4,475 00	15 90	293 38	4,473.31	795.01	7.25	-16.77	17 28	12.00	685,156 95	433,198.83
4,500.00	18.90	293.38	4,497.16	818.86	10.21	-23.63	24.35	12.00	685,159.91	433,191 97
4,525.00	21.90	293.38	4,520.59	842.29	13.67	-31.62	32.59	12.00	685,163.37	433,183.98
- 4,550 00	24.90	293.38	4,543 53	865.23	17.61	-40.74	41.98	12 00	685,167.31	433,174.86



Pathfinder X & Y Planning Report



Company: Project:

EOG Resources, Inc. Eddy County, Skeena 35 Fed

Site: Well: OH: Wellbore: Design:

Local Co-ordinate Reference:

TVD Reference: MD Reference:

North Reference: Survey Calculation Method:

Database:

Well #1H: WELL @ 3678 30ft (Original Well Elev) WELL @ 3678 30ft (Original Well Elev)

Grid

Grid Minimum Curvature Midland Database

,"	PΙ	a	ńr	ned	'S	ŭ	r,	٧	ē	١
	•	-	٠.	2,2	• •		-	٠:		1

MD	Inc	Azi	TVD	TVDSS	N/S	E/Ŵ =	V. Sec	DLeg	Northing	Easting
(ft) ·		- (°)*	(ft) 👙 🗧	1. (ft)		. (ft)	(ft) (	°/100ft)	(ft)*	(ft)
4,575.00	27.90	293.38	4,565 92	887.62	, 22 02	-50.94	52 49	12 00	685,171.72	433,164.66
4,600.00	30.90	293 38	4,587 70	909.40	26.89	-62.20	64.10	12.00	685,176 59	433,153.40
4,625.00	33.90	293.38	4,608.81	930.51	32.21	-74.49	76 77	12 00	685,181.91	433,141.11
4,650.00	36.90	293.38	4,629 18	950.88	37.95	-87.78	90.47	12.00	685,187.65	433,127.82
4,675.00	39.90	293 38	4,648.77	970.47	44.11	-102 04	105.15	12.00	685,193.81	433,113 56
4,700.00	42 90	293.38	4,667.52	989.22	50 67	-117 21	120.79	12.00	685,200.37	433,098.39
4,725 00	45.90	293.38	4,685.39	1,007.09	57.61	-133.26	137.33	12.00	685,207.31	433,082 34
4,750.00	48.90	293.38	4,702.31	1,024.01	64 91	-150.15	154.74	12.00	685,214.61	433,065.45
4,775.00	51 90	293.38	4,718 24	1,039.94	72 56	-167.83	172.96	12 00	685,222.26	433,047 77
4,800.00	54.90	293.38	4,733.15	1,054.85	80.52	-186.25	191.94	12.00	685,230.22	433,029 35
4,825 00	57.90	293.38	4,746.98	1,068.68	88.78	-205.36	211.63	12.00	685,238.48	433,010.24
4,850.00	60 90	293.38	4,759.71	1,081 41	97.32	-225 11	231.98	12.00	685,247.02	432,990.49
4,875 00	63.90	293.38	4,771.29	1,092.99	106.11	-245.44	252.94	12.00	685,255.81	432,970.16
4,900 00	66.90	293.38	4,781.70	1,103 40	115.13	-266 30	274.44	12 00	685,264.83	432,949.30
4,925.00	69.89	293.38	4,790 90	1,112 60	124.35	-287 63	296.42	12.00	685,274 05	432,927.97
4,950.00	72.89	293.38	4,798.88	1,120.58	133.75	-309.38	318 83	12.00	685,283.45	432,906 22
4,975.00	75.89	293.38	4,805 60	1,127.30	143.31	-331 48	341 60	12.00	685,293.01	432,884.12
5,000 00	78.89	293 38	4,811.06	1,132.76	152.99	-353.87	364.68	12.00	685,302.69	432,861 73
5,025.00	81.89	293 38	4,815.23	1,136.93	162.77	-376.49	387 99	12.00	685,312.47	432,839.11
5,050.00	84.89	293.38	4,818.10	1,139 80	, 172 62	-399.28	411.48	12 00	685,322.32	432,816 32
5,075.00	87.89	293 38	4,819.68	1,141.38	182.52	-422.18	435 08	12.00	685,332.22	432,793.42
5,092.56	90 00	293.38	4,820.00	1,141 70	189.49	-438.29	451.68	12.00	685,339.19	432,777.31
5,100.00	90.00	293.16	4,820.00	1,141.70	192.43	-445 13	458.73	3 00	685,342.13	432,770.47
5,200.00	90.00	290.16	4,820.00	1,141.70	229 33	-538 06	554.25	3 00	685,379.03	432,677.54
5,300.00	90.00	287.16	4,820.00	1,141.70	261.31	-632 80	651.18	3.00	685,411.01	432,582.80
5,400 00	90 00	284.16	4,820 00	1,141.70	288.30	-729.08	749.26	3.00	685,438.00	432,486.52
5,500.00	90.00	281.16	4,820 00	1,141.70	310.20	-826.64	848.23	3.00	685,459.90	432,388.96



Pathfinder X & Y Planning Report



Company: Project:

EOG Resources, Inc.

Eddy County Skeena 35 Fed #1H

Site: Well: Wellbore: 🖑 Design:

Local Co-ordinate Reference:

TVD Reference: MD Reference:

North Reference:

Survey Calculation Method:

Database:

Well#1H

WELL @ 3678 30ft (Original Well Elev) WELL @ 3678 30ft (Original Well Elev)

Grid

Minimum Curvature Midland Database

				u		

					a a same a s					2. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
MD.	. ၂ ် <b>lñc</b> ်ပါ သို့ မြောင်း (°)။ ရှိနှင့်	· Azili j	TVD (ft)	TVDSS	N/S (ft)	E/W (ft)	`V. Sec` کا '' حیر(ft)	DLeg °/100ft)	Northing (ft)	Easting (ft)
5,600.00	90.00	278.16	4,820 00	1,141.70	326.98	-925.21	947.80	3.00	685,476.68	432,290 39
5,700.00	90 00	275 16	4,820.00	1,141.70	338 57	-1,024.52	1,047 72	3.00	685,488 27	432,191.08
5,800 00	90.00	272.16	4,820.00	1,141 70	344.94	-1,124.31	1,147.70	3 00	685,494.64	432,091.29
5,871 48	90.00	270.01	4,820.00	1,141.70	346.30	-1,195.77	1,219 05	3.00	685,496.00	432,019 83
5,900 00	90.00	270 01	4,820 00	1,141.70	346 30	-1,224 29	1,247.48	0 00	685,496.00	431,991.31
6,000.00	90.00	270.01	4,820.00	1,141.70	346.33	-1,324.29	1,347.18	0 00	685,496.03	431,891.31
6,100.00	90.00	270.01	4,820 00	1,141.70	346.35	-1,424.29	1,446.88	0.00	685,496.05	431,791 31
6,200.00	90 00	270.01	4,820.00	1,141 70	346.37	-1,524.29	1,546 58	0.00	685,496.07	431,691.31
6,300 00	90.00	270.01	4,820.00	1,141.70	346 39	-1,624.29	1,646.28	0.00	685,496.09	431,591 31
6,400.00	90 00	270 01	4,820 00	1,141 70	346 41	-1,724.29	1,745.98	0 00	685,496 11	431,491.31
6,500.00	90.00	270.01	4,820.00	1,141.70	346 43	-1,824 29	1,845 68	0.00	685,496.13	431,391.31
6,600 00	90 00	270.01	4,820 00	1,141 70	346 45	-1,924.29	1,945 38	0 00	685,496.15	431,291 31
6,700.00	90.00	270.01	4,820.00	1,141.70	346.48	-2,024.29	2,045.08	0.00	685,496.18	431,191.31
6,800.00	90 00	270 01	4,820 00	1,141.70	346.50	-2,124 29	2,144.78	0.00	685,496 20	431,091.31
6,900.00	90.00	270.01	4,820.00	1,141.70	346.52	-2,224.29	2,244.48	0.00	685,496 22	430,991.31
7,000.00	90.00	270 01	4,820.00	1,141 70	346.54	-2,324.29	2,344 18	0 00	685,496.24	430,891.31
7,100.00	90.00	270.01	4,820.00	1,141.70	346.56	-2,424 29	2,443.88	0.00	685,496.26	430,791.31
7,200.00	90.00	270 01	4,820.00	1,141 70	346 58	-2,524.29	2,543.58	0.00	685,496.28	430,691.31
7,300 00	90.00	270.01	4,820.00	1,141.70	346.61	-2,624 29	2,643.28	0 00	685,496 31	430,591 31
7,400.00	90,00	270.01	4,820 00	1,141 70	346.63	-2,724.29	2,742.98	0.00	685,496 33	430,491.31
7,500 00	90 00	270.01	4,820.00	1,141.70	346.65	-2,824.29	2,842.68	0.00	685,496 35	430,391.31
7,600.00	90.00	270.01	4,820.00	1,141 70	346.67	-2,924.29	2,942.38	0.00	685,496.37	430,291.31
7,700.00	90 00	270 01	4,820.00	1,141.70	346.69	-3,024 29	3,042.08	0 00	685,496 39	430,191.31
7,800.00	90.00	270.01	4,820.00	1,141 70	346.71	-3,124.29	3,141.78	0 00	685,496.41	430,091.31
7,900.00	90.00	270.01	4,820 00	1,141 70	346 73	-3,224 29	3,241.48	0.00	685,496 43	429,991.31
_ 8,000 00	90.00	270.01	4,820.00	1,141.70	346.76	-3,324 29	3,341 18	0 00	685,496.46	429,891.31
8,100.00	90.00	270.01	4,820.00	1,141.70	346 78	-3,424.29	3,440 88	0 00	685,496.48	429,791.31

# eog resources

#### **Pathfinder Energy Services**

Pathfinder X & Y Planning Report



Company:

Project: Site: Well:

EOG Resources, linc. Edgy County Skeena 35 Fed

Wellbore: Design:

OH SEE

Local Co-ordinate Reference:

TVD Reference: MD Reference:

North Reference: Survey Calculation Method:

Database:

Well #1H WELL @-3678:30ff (Original Well Elev) WELL @ 3678:30ft (Original Well Elev)

Grid

Minimum Curvature

Midland Database


Planned Survey

MD (1)	Inc	Azi•	TVĎ (ft)	TVDSS (ft)	N/S (ft).	E/W (ft)	V: Sec	DLeg °/100ft)	Northing (ft)	Easting (ft)
8,200 00	90 00	270.01	4,820.00	1,141 70	346.80	-3,524.29	3,540.58	0.00	685,496 50	429,691.3
8,300.00	90 00	270 01	4,820.00	1,141.70	346 82	-3,624.29	3,640 28	0.00	685,496 52	429,591.3
8,400.00	90.00	270.01	4,820.00	1,141.70	346.84	-3,724.29	3,739.98	0.00	685,496.54	429,491.3
8,500.00	90 00	270 01	4,820.00	1,141.70	346.86	-3,824.29	3,839.68	0.00	685,496.56	429,391.3
8,600.00	90.00	270.01	4,820 00	1,141.70	346.89	-3,924.29	3,939.38	0.00	685,496 59	429,291 3
8,700 00	90.00	270.01	4,820 00	1,141.70	346.91	-4,024.29	4,039 08	0 00	685,496.61	429,191.3
8,800 00	90.00	270 01	4,820.00	1,141 70	346.93	-4,124.29	4,138.78	0 00	685,496.63	429,091.3
8,900.00	90 00	270.01	4,820.00	1,141.70	346 95	-4,224.29	4,238.48	0.00	685,496 65	428,991.3
9,000.00	90.00	270.01	4,820.00	1,141.70	346 97	-4,324 29	4,338 18	0 00	685,496.67	428,891.3
9,100 00	90.00	270.01	4,820 00	1,141 70	346 99	-4,424 29	4,437.88	0.00	685,496.69	428,791:3
9,130 91	90 00	270.01	4,820.00	1,141.70	347.00	-4,455.20	4,468.69	0.00	685,496.70	428,760.4
PBHĽ(SKN#1H	):,: 5	;	,		1 .		* * * * * * * * * * * * * * * * * * *	1 4 3 -	<u></u>	

Targets Target Name Anit/miss target Shape	Ángle (°)	Dip Dir.	TVĎ	+N/-S (ft)	+E/-W (ff)	Northing (ft)	Easting (ft)	Lätitude	Longitude
PBHL(SKN#1H) - plan hits target center - Point	0 00	360.00	4,820.00	347.00	-4,455.20	685,496.700	428,760.400	32° 53' 3.466 N	104° 33' 55.429 W

Checked By:	Approved By:	Date:






Azimuths to Grid North True North: 0.12° Magnetic North: 8.37°

Magnetic Field Strength: 49040.6snT Dip Angle: 60.66° Date: 01/11/2010 Model: IGRF2010



#### West(-)/East(+) (200 ft/in)

Project: Eddy County Site: Skeena 35 Fed Well: #1H Wellbore: OH Plan: Plan #1 (#1H/OH)

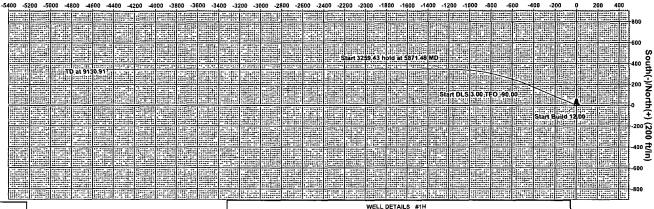

| SECTION DETAILS | SECTION DE

### WELL DETAILS #TH

Ground Elevation:: 3655,30

RKB Elevation: WELL @ 3678 30ft (Original Well Elev)


Rig Name: Original Well Elev

+N/-S +E/-W Northing Easting Latittude Longitude Siot

0.00 0 00 685149 700 433215 500 32\* 53\* 0.126 N 104\* 33\* 3 175 W

WELLBORE TARGET DETAILS (MAP CO-ORDINATES)

Name TVD +N/-S +E/-W Northing Easting Sha PBHL(SKN#1H) 4820 00 347 00 -4455 20 685496 700 428760 400 Poli

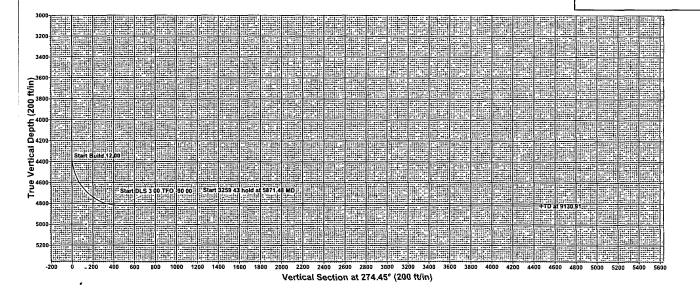

LEGEND

+ Plan #1


PROJECT DETAILS: Eddy County
Geodetic System: US State Plane 1927 (Exact solution)
Datum: NAD 1927 (NADCON CONUS)
Elipsoid: Clarke 1866
Zone: New Mexico East 3001
System Datum: Mean Sea Level
Local North: Grid

Plan. Plan #1 (#1H/OH)


Created By. Nate Bingham Date. 15 14, January 11 2010

Checked \_\_\_\_\_

\_\_\_\_ Date \_\_\_\_

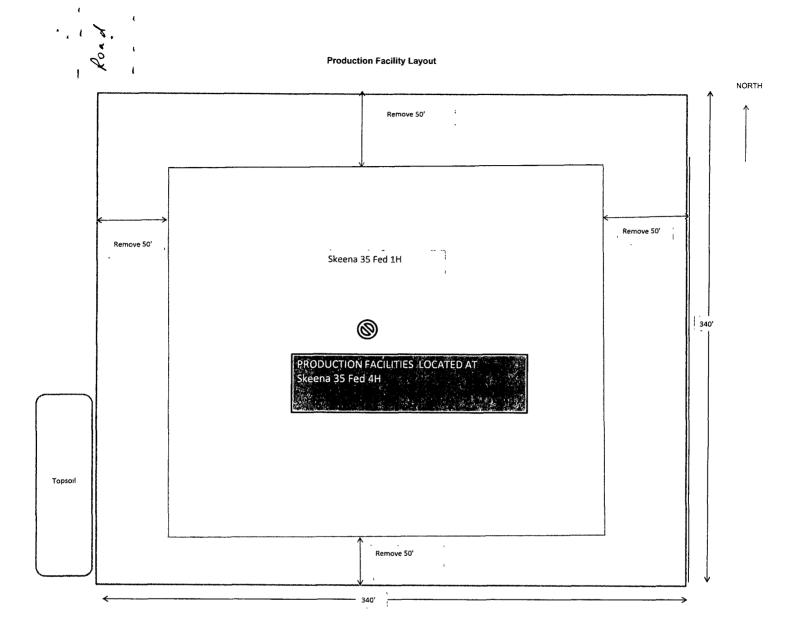

NOT TO SCALE

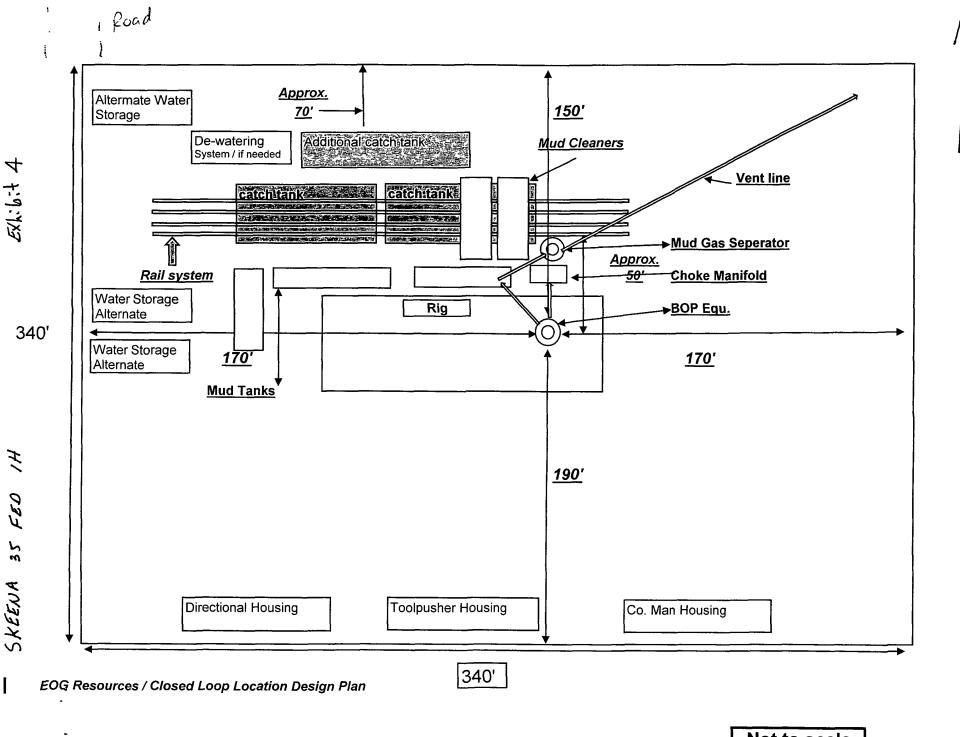

Not to scale

6/30/2008


#### EOG RESOURCES, INC. SKEENA 35 FED 1H


#### **ATTACHMENT TO EXHIBIT #1**

- 1. Wear ring to be properly installed in head.
- 2. Blow out preventer and all fittings must be in good condition, 5000 psi W.P. minimum. Exhibit #1.
- 3. All fittings to be flanged
- 4. Safety valve must be available on rig floor at all times with proper connections, valve to be full bore 5000 psi W.P. minimum.
- 5. All choke and fill lines to be securely anchored especially ends of choke lines.
- 6. Equipment through which bit must pass shall be at least as large as the diameter of the casing being drilled through.
- 7. Kelly cock on kelly.
- 8. Extension wrenches and hand wheels to be properly installed.
- 9. Blow out preventer control to be located as close to driller's position as feasible.
- 10. Blow out preventer closing equipment to include minimum 40-gallon accumulator, two independent sources of pump power on each closing unit installation, and meet all API specifications.

EOG Resources, Inc.

## Skeena 35 Fed 1H

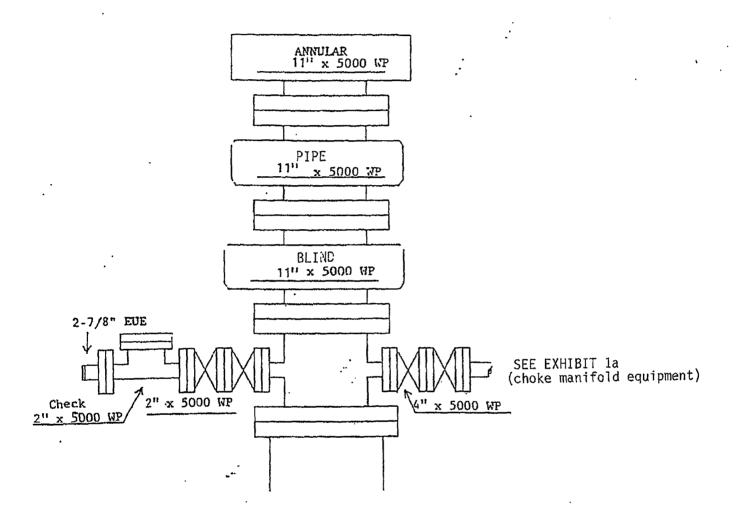

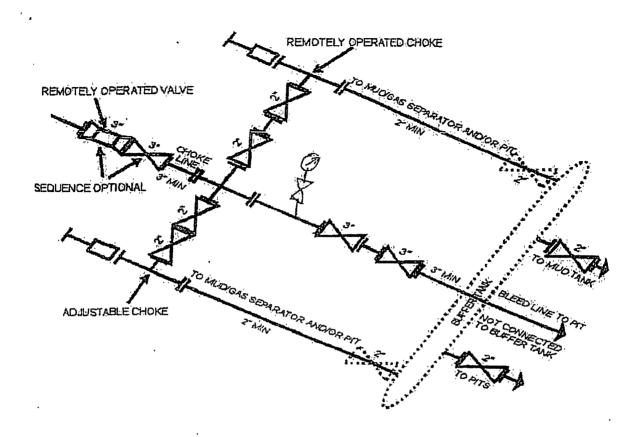


#### 5M CHOKE MANIFOLD EQUIPMENT - CONFIGURATION OF CHOKES MAY VARY


Although not required for any of the choke manifold systems, buffer tanks are sometimes installed downstream of the choke assemblies for the purpose of manifolding the bleed lines together. When buffer tanks are employed, valves shall be installed upstream to isolate a failure or malfunction without interrupting flow control. Though not shown on 2M, 3M, 10M, OR 15M drawings, it would also be applicable to those situations.

[54 FR 3952#, Sept. 27, 1989]

# Profile View of Piping from Choke Manifold to the Mud Gas Separator

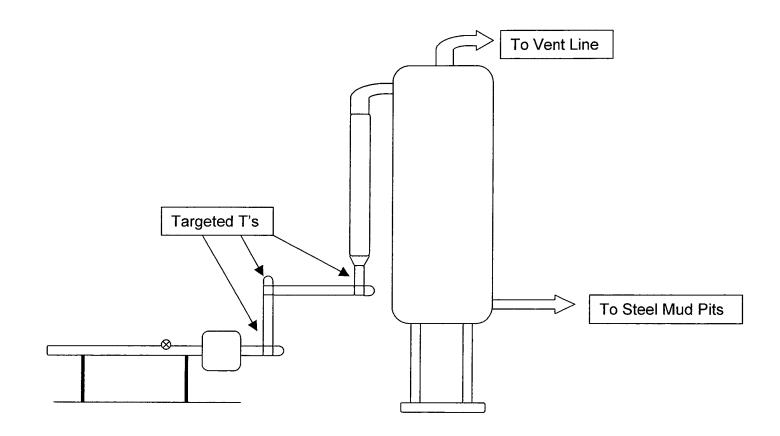

Aerial View of the Piping from the Choke Manifold to the Mud Gas Separator

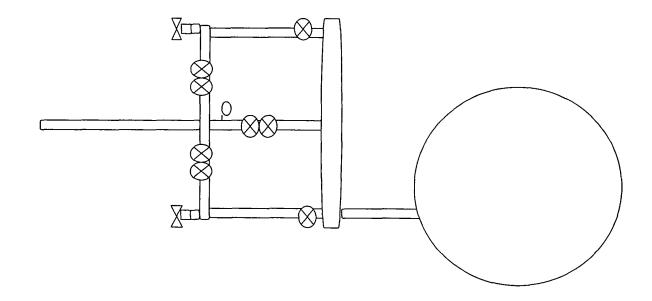


# **EOG** Resources, Inc.

Legal's:

#### Skeena 35 Fed. Wells

Eddy Co. New Mexico

# H<sub>2</sub>S "Contingency Plan"

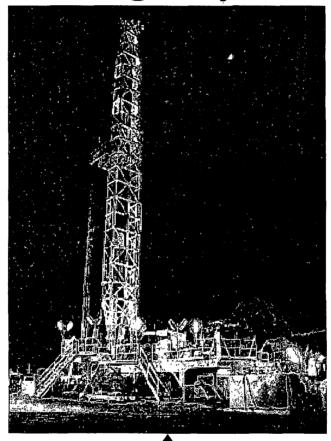



Safety Solutions, LLC 3222 Commercial Dr.

(432) 686-8555 Midland, TX 79701

#### Legal's:

#### Skeena 35 Fed. #1H

Eddy Co. New Mexico

1150' FNL & 205' FEL Surface Location

760' FNL & 660' FWL Bottom Hole Location

Section 35

Section 35 T-16-S, R-24-E

T-16-S, R-24-E Lat: N 32.8833684

Lat: N 32.8842961

Long: W 104.5508817

Long: W 104.5653970

#### Legal's:

#### Skeena 35 Fed. #2H

Eddy Co. New Mexico

2010' FNL & 510' FWL Surface Location

1880' FNL & 660' FEL Bottom Hole Location

Section 35

Section 35

T-16-S, R-24-E

T-16-S, R-24-E

Lat: N 32.8808546

Lat: N 32.8813467

Long: W 104.5658970

Long: W 104.5523704

#### Legal's:

#### Skeena 35 Fed. #3H

Eddy Co. New Mexico

1595' FSL & 390' FWL Surface Location

1880' FNL & 660' FEL Bottom Hole Location Section 35

Section 35

T-16-S, R-24-E

T-16-S, R-24-E

Lat: N 32.8762402

Lat: N 32.8770786

Long: W 104.5663036

Long: W 104.5523850

#### **Table of Contents**

#### I. H<sub>2</sub>S Contingency Plan

- a. Scope
- b. Objective
- c. Discussion of Plan

#### **II.** Emergency Procedures

- a. Emergency Procedures
- b. Emergency Reaction Steps
- c. Simulated Blowout Control Drills

#### III. Ignition Procedures

- a. Responsibility
- b. Instructions

#### **IV. Training Requirements**

#### V. Emergency Equipment

#### **VI. Check Lists**

- a. Status Check List
- b. Procedural Check List

#### **VII. Briefing Procedures**

#### VIII. Evacuation Plan

- a. General Plan
- b. Emergency Phone Lists

#### IX. Maps and Plats

- a. Location Plat
- b. Map to Location
- c. Radius of Exposure

#### X. General Information

- a. Drilling/Re-entry Permits
- b. H-9 Permit
- c. H<sub>2</sub>S Permissible Limits
- d. Toxicity Table
- e. Physical Properties
- f. Respirator Use
- g. Emergency Rescue

#### H<sub>2</sub>S CONTINGENCY PLAN SECTION

#### Scope:

This contingency plan provides an organized plan of action for alerting and protecting the public within an area of exposure prior to an intentional release, or following the accidental release of a potentially hazardous volume of hydrogen sulfide. The plan establishes guidelines for all personnel whose work activity may involve exposure to Hydrogen Sulfide Gas (H<sub>2</sub>S).

#### Objective:

Prevent any and all accidents, and prevent the uncontrolled release of H<sub>2</sub>S into the atmosphere.

Provide proper evacuation procedures to cope with emergencies.

Provide immediate and adequate medical attention should an injury occur.

#### Discussion of Plan:

#### **Suspected Problem Zones:**

*Implementation:* This plan, with all details, is to be fully implemented 1000' before drilling into the first sour zone.

**Emergency Response Procedure:** This section outlines the conditions and denotes steps to be taken in the event of an emergency.

**Emergency Equipment and Procedure:** This section outlines the safety and emergency equipment that will be required for the drilling of this well.

**Training Provisions:** This section outlines the training provisions that must be adhered to 1000' before drilling into the first sour zone.

**Emergency call list:** Included are the telephone numbers of all persons that would need to be contacted, should an H<sub>2</sub>S emergency occur.

Briefing: This section deals with the briefing of all persons involved with the drilling of this well.

Public Safety: Public Safety Personnel will be made aware of the drilling of this well.

**Check Lists:** Status check lists and procedural check lists have been included to ensure adherence to the plan.

General Information: A general information section has been included to supply support information.

#### **EMERGENCY PROCEDURES SECTION**

- I. In the event of any evidence of H<sub>2</sub>S level above 10ppm, take the following steps immediately:
  - a. Secure breathing apparatus.
  - b. Order non-essential personnel out of the danger zone.
  - c. Take steps to determine if the H<sub>2</sub>S level can be corrected or suppressed, and if so, proceed with normal operations.
- II. If uncontrollable conditions occur, proceed with the following:
  - a. Take steps to protect and/or remove any public downwind of the rig, including partial evacuation or isolation. Notify necessary public safety personnel and the New Mexico Oil Conservation Division of the situation.
  - b. Remove all personnel to the Safe Briefing Area.
  - c. Notify public safety personnel for help with maintaining roadblocks and implementing evacuation.
  - d. Determine and proceed with the best possible plan to regain control of the well. Maintain tight security and safety measures.

#### III. Responsibility:

- a. The Company Approved Supervisor shall be responsible for the total implementation of the plan.
- b. The Company Approved Supervisor shall be in complete command during any emergency.
- c. The Company Approved Supervisor shall designate a back up Supervisor in the event that he/she is not available.

#### **EMERGENCY PROCEDURE IMPLEMENTATION**

#### I. Drilling or Tripping

#### a. All Personnel

- i. When alarm sounds, don escape unit and report to upwind Safe Briefing Area.
- ii. Check status of other personnel (buddy system).
- iii. Secure breathing apparatus.
- iv. Wait for orders from supervisor.

#### b. Drilling Foreman

- i. Report to the upwind Safe Briefing Area.
- **ii.** Don Breathing Apparatus and return to the point of release with the Tool Pusher or Driller (buddy system).
- iii. Determine the concentration of H<sub>2</sub>S.
- iv. Assess the situation and take appropriate control measures.

#### c. Tool Pusher

- i. Report to the upwind Safe Briefing Area.
- **ii.** Don Breathing Apparatus and return to the point of release with the Drilling Foreman or the Driller (buddy system).
- iii. Determine the concentration of H<sub>2</sub>S.
- iv. Assess the situation and take appropriate control measures.

#### d. Driller

- i. Check the status of other personnel (in a rescue attempt, always use the buddy system).
- **ii.** Assign the least essential person to notify the Drilling Foreman and Tool Pusher, in the event of their absence.
- **iii.** Assume the responsibility of the Drilling Foreman and the Tool Pusher until they arrive, in the event of their absence.

#### e. Derrick Man and Floor Hands

i. Remain in the upwind Safe Briefing Area until otherwise instructed by a supervisor.

#### f. Mud Engineer

- i. Report to the upwind Safe Briefing Area.
- ii. When instructed, begin check of mud for pH level and H<sub>2</sub>S level.

#### g. Safety Personnel

- i. Don Breathing Apparatus.
- ii. Check status of personnel.
- iii. Wait for instructions from Drilling Foreman or Tool Pusher.

#### II. Taking a Kick

- a. All Personnel report to the upwind Safe Briefing Area.
- b. Follow standard BOP procedures.

#### III. Open Hole Logging

- a. All unnecessary personnel should leave the rig floor.
- **b.** Drilling Foreman and Safety Personnel should monitor the conditions and make necessary safety equipment recommendations.

#### IV. Running Casing or Plugging

- a. Follow "Drilling or Tripping" procedures.
- **b.** Assure that all personnel have access to protective equipment.

#### SIMULATED BLOWOUT CONTROL DRILLS

All drills will be initiated by activating alarm devices (air horn). One long blast, on the air horn, for ACTUAL and SIMULATED Blowout Control Drills. This operation will be performed by the Drilling Foreman or Tool Pusher at least one time per week for each of the following conditions, with each crew:

Drill #1 Bottom Drilling

Drill #2 Tripping Drill Pipe

In each of these drills, the initial reaction time to shutting in the well shall be timed as well as the total time for the crew to complete its entire pit drill assignment. The times must be recorded on the IADC Driller's Log as "Blowout Control Drill".

Drill No .:

Reaction Time to Shut-In:

minutes,

seconds.

Total Time to Complete Assignment:

minutes,

seconds.

#### I. Drill Overviews

- a. Drill No. 1 Bottom Drilling
  - i. Sound the alarm immediately.
  - ii. Stop the rotary and hoist Kelly joint above the rotary table.
  - iii. Stop the circulatory pump.
  - iv. Close the drill pipe rams.
  - v. Record casing and drill pipe shut-in pressures and pit volume increases.
- b. Drill No. 2 Tripping Drill Pipe
  - i. Sound the alarm immediately.
  - ii. Position the upper tool joint just above the rotary table and set the slips.
  - iii. Install a full opening valve or inside blowout preventer tool in order to close the drill pipe.
  - iv. Close the drill pipe rams.
  - v. Record the shut-in annular pressure.

#### II. Crew Assignments

#### a. Drill No. 1 - Bottom Drilling

#### i. Driller

- 1. Stop the rotary and hoist Kelly joint above the rotary table.
- 2. Stop the circulatory pump.
- 3. Check Flow.
- 4. If flowing, sound the alarm immediately
- 5. Record the shit-in drill pipe pressure
- 6. Determine the mud weight increase needed or other courses of action.

## ii. Derrickman

- 1. Open choke line valve at BOP.
- 2. Signal Floor Man #1 at accumulator that choke line is open.
- 3. Close choke and upstream valve after pipe tam have been closed.
- 4. Read the shut-in annular pressure and report readings to Driller.

#### iii. Floor Man #1

- 1. Close the pipe rams after receiving the signal from the Derrickman.
- 2. Report to Driller for further instructions.

## iv. Floor Man #2

- 1. Notify the Tool Pusher and Operator representative of the H<sub>2</sub>S alarms.
- 2. Check for open fires and, if safe to do so, extinguish them.
- 3. Stop all welding operations.
- 4. Turn-off all non-explosions proof lights and instruments.
- 5. Report to Driller for further instructions.

#### v. Tool Pusher

- 1. Report to the rig floor.
- 2. Have a meeting with all crews.

- 3. Compile and summarize all information.
- 4. Calculate the proper kill weight.
- 5. Ensure that proper well procedures are put into action.

#### vi. Operator Representative

- 1. Notify the Drilling Superintendent.
- 2. Determine if an emergency exists and if so, activate the contingency plan.

## b. Drill No. 2 - Tripping Pipe

#### i. Driller

- 1. Sound the alarm immediately when mud volume increase has been detected.
- 2. Position the upper tool joint just above the rotary table and set slips.
- 3. Install a full opening valve or inside blowout preventer tool to close the drill pipe.
- 4. Check flow.
- 5. Record all data reported by the crew.
- 6. Determine the course of action.

#### ii. Derrickman

- 1. Come down out of derrick.
- 2. Notify Tool Pusher and Operator Representative.
- 3. Check for open fires and, if safe to do so, extinguish them.
- 4. Stop all welding operations.
- 5. Report to Driller for further instructions.

#### iii. Floor Man #1

- 1. Pick up full opening valve or inside blowout preventer tool and stab into tool joint above rotary table (with Floor Man #2).
- 2. Tighten valve with back-up tongs.

- 3. Close pipe rams after signal from Floor Man #2.
- 4. Read accumulator pressure and check for possible high pressure fluid leaks in valves or piping.
- 5. Report to Driller for further instructions.

#### iv. Floor Man #2

- 1. Pick-up full opening valve or inside blowout preventer tool and stab into tool joint above rotary table (with Floor Man #1).
- 2. Position back-up tongs on drill pipe.
- 3. Open choke line valve at BOP.
- 4. Signal Floor Man #1 at accumulator that choke line is open.
- 5. Close choke and upstream valve after pipe rams have been closed.
- 6. Check for leaks on BOP stack and choke manifold.
- 7. Read annular pressure.
- 8. Report readings to the Driller.

#### v. Tool Pusher

- 1. Report to the rig floor.
- 2. Have a meeting with all of the crews.
- 3. Compile and summarize all information.
- 4. See that proper well kill procedures are put into action.

## vi. Operator Representative

- 1. Notify Drilling Superintendent
- 2. Determine if an emergency exists, and if so, activate the contingency plan.

#### **IGNITION PROCEDURES**

#### Responsibility:

The decision to ignite the well is the responsibility of the DRILLING FOREMAN in concurrence with the STATE POLICE. In the event the Drilling Foreman is incapacitated, it becomes the responsibility of the RIG TOOL PUSHER. This decision should be made only as a last resort and in a situation where it is clear that:

- 1. Human life and property are endangered.
- 2. There is no hope of controlling the blowout under the prevailing conditions.

If time permits, notify the main office, but do not delay if human life is in danger. Initiate the first phase of the evacuation plan.

Instructions for Igniting the Well:

- 1. Two people are required for the actual igniting operation. Both men must wear self-contained breathing apparatus and must use a full body harness and attach a retrievable safety line to the D-Ring in the back. One man must monitor the atmosphere for explosive gases with the LEL monitor, while the Drilling Foreman is responsible for igniting the well.
- 2. The primary method to ignite is a 25mm flare gun with a range of approximately 500 feet.
- 3. Ignite from upwind and do not approach any closer than is warranted.
- 4. Select the ignition site best suited for protection and which offers an easy escape route.
- 5. Before igniting, check for the presence of combustible gases.
- 6. After igniting, continue emergency actions and procedures as before.
- 7. All unassigned personnel will limit their actions to those directed by the Drilling Foreman.

Note: After the well is ignited, burning Hydrogen Sulfide will convert to Sulfur Dioxide, which is also highly toxic. Do not assume the area is safe after the well is ignited.

## TRAINING PROGRAM

When working in an area where Hydrogen Sulfide ( $H_2S$ ) might be encountered, definite training requirements must be carried out. The Company Supervisor will ensure that all personnel, at the well site, have had adequate training in the following:

- 1. Hazards and characteristics of Hydrogen Sulfide.
- 2. Physicals effects of Hydrogen Sulfide on the human body.
- 3. Toxicity of Hydrogen Sulfide and Sulfur Dioxide.
- 4. H<sub>2</sub>S detection, Emergency alarm and sensor location.
- 5. Emergency rescue.
- 6. Resuscitators.
- 7. First aid and artificial resuscitation.
- 8. The effects of Hydrogen Sulfide on metals.
- 9. Location safety.

Service company personnel and visiting personnel must be notified if the zone contains H<sub>2</sub>S, and each service company must provide adequate training and equipment for their employees before they arrive at the well site.

## **EMERGENCY EQUIPMENT REQUIREMENTS**

## **Lease Entrance Sign:**

Should be located at the lease entrance with the following information:

# CAUTION – POTENTIAL POISON GAS HYDROGEN SULFIDE NO ADMITTANCE WITHOUT AUTHORIZATION

## **Respiratory Equipment:**

- Fresh air breathing equipment should be placed at the safe briefing areas and should include the following:
- Two SCBA's at each briefing area.
- Enough air line units to operate safely, anytime the H<sub>2</sub>S concentration reaches the IDLH level (100 ppm).
- Cascade system with enough breathing air hose and manifolds to reach the rig floor, the derrickman and the other operation areas.

#### Windsocks or Wind Streamers:

- A minimum of two 10" windsocks located at strategic locations so that they may be seen from any point on location.
- Wind streamers (if preferred) should be placed at various locations on the well site to ensure wind consciousness at all times. (Corners of location).

#### **Hydrogen Sulfide Detector and Alarms:**

- 1 Four channel H<sub>2</sub>S monitor with alarms.
- Four (4) sensors located as follows: #1 Rig Floor, #2 Bell Nipple, #3 Shale Shaker, #4 Mud Pits.
- Gastec or Draeger pump with tubes.
- Sensor test gas.

## Well Condition Sign and Flags:

The Well Condition Sign w/flags should be placed a minimum of 150' before you enter the location. It should have three (3) color coded flags (green, yellow and red) that will be used to denote the following location conditions:

GREEN – Normal Operating Conditions YELLOW – Potential Danger RED – Danger, H₂S Gas Present

## **Auxiliary Rescue Equipment:**

- Stretcher
- 2 100' Rescue lines.
- First Aid Kit properly stocked.

#### **Mud Inspection Equipment:**

Garret Gas Train or Hach Tester for inspection of Hydrogen Sulfide in the drilling mud system.

#### Fire Extinguishers:

Adequate fire extinguishers shall be located at strategic locations.

#### **Blowout Preventer:**

- The well shall have hydraulic BOP equipment for the anticipated BHP.
- The BOP should be tested upon installation.
- BOP, Choke Line and Kill Line will be tested as specified by Operator.

## **Confined Space Monitor:**

There should be a portable multi-gas monitor with at least 3 sensors ( $O_2$ , LEL  $H_2S$ ). This instrument should be used to test the atmosphere of any confined space before entering. It should also be used for atmospheric testing for LEL gas before beginning any type of Hot Work. Proper calibration documentation will need to be provided.

#### **Communication Equipment:**

- Proper communication equipment such as cell phones or 2-way radios should be available at the rig.
- Radio communication shall be available for communication between the company man's trailer, rig floor and the tool pusher's trailer.

Communication equipment shall be available on the vehicles.

## **Special Control Equipment:**

- Hydraulic BOP equipment with remote control on the ground.
- Rotating head at the surface casing point.

#### **Evacuation Plan:**

- Evacuation routes should be established prior to spudding the well.
- Should be discussed with all rig personnel.

## **Designated Areas:**

#### Parking and Visitor area:

- All vehicles are to be parked at a pre-determined safe distance from the wellhead.
- Designated smoking area.

## Safe Briefing Areas:

- Two Safe Briefing Areas shall be designated on either side of the location at the maximum allowable distance from the well bore so they offset prevailing winds or they are at a 180 degree angle if wind directions tend to shift in the area.
- Personal protective equipment should be stored at both briefing areas or if a moveable cascade trailer is used, it should be kept upwind of existing winds. When wind is from the prevailing direction, both briefing areas should be accessible.

## Note:

- Additional equipment will be available at the Safety Solutions, LLC office.
- Additional personal H<sub>2</sub>S monitors are available for all employees on location.
- Automatic Flare Igniters are recommended for installation on the rig.

# **CHECK LISTS**

# **Status Check List**

Note: Date each item as they are implemented.

1.	Sign at location entrance.
2.	Two (2) wind socks (in required locations).
3.	Wind Streamers (if required).
4.	SCBA's on location for all rig personnel and mud loggers.
5.	Air packs, inspected and ready for use.
6.	Spare bottles for each air pack (if required).
7.	Cascade system for refilling air bottles.
8.	Cascade system and hose line hook up.
9.	Choke manifold hooked-up and tested. (before drilling out surface casing.)
10.	Remote Hydraulic BOP control (hooked-up and tested before drilling out surface casing).
11.	BOP tested (before drilling out surface casing).
12.	Mud engineer on location with equipment to test mud for H <sub>2</sub> S.
13.	Safe Briefing Areas set-up
14.	Well Condition sign and flags on location and ready.
15.	Hydrogen Sulfide detection system hooked -up & tested.
16.	Hydrogen Sulfide alarm system hooked-up & tested.
17.	Stretcher on location at Safe Briefing Area.
18.	2 – 100' Life Lines on location.
19.	1 – 20# Fire Extinguisher in safety trailer.
20.	Confined Space Monitor on location and tested.
21.	All rig crews and supervisor trained (as required).

22. Access restricted for unauthorized personnel.	
23. Drills on H <sub>2</sub> S and well control procedures.	
24. All outside service contractors advised of potential H <sub>2</sub> S on the well.	
25. NO SMOKNG sign posted.	
26. H <sub>2</sub> S Detector Pump w/tubes on location.	
27. 25mm Flare Gun on location w/flares.	
28. Automatic Flare Igniter installed on rig.	

#### **Procedural Check List**

## Perform the following on each tour:

- 1. Check fire extinguishers to see that they have the proper charge.
- 2. Check breathing equipment to insure that they have not been tampered with.
- 3. Check pressure on the supply air bottles to make sure they are capable of recharging.
- 4. Make sure all of the Hydrogen Sulfide detection systems are operative.

## Perform the following each week:

- 1. Check each piece of breathing equipment to make sure that they are fully charged and operational. This requires that the air cylinder be opened and the mask assembly be put on and tested to make sure that the regulators and masks are properly working. Negative and Positive pressure should be conducted on all masks.
- 2. BOP skills.
- 3. Check supply pressure on BOP accumulator stand-by source.
- 4. Check all breathing air mask assemblies to see that straps are loosened and turned back, ready for use.
- 5. Check pressure on cascade air cylinders to make sure they are fully charged and ready to use for refill purposes if necessary.
- 6. Check all cascade system regulators to make sure they work properly.
- 7. Perform breathing drills with on-site personnel.
- 8. Check the following supplies for availability:
  - Stretcher
  - Safety Belts and Ropes
  - Spare air Bottles
  - Spare Oxygen Bottles (if resuscitator required)
  - Gas Detector Pump and Tubes
  - Emergency telephone lists
- 9. Test the Confined Space Monitor to verify the batteries are good

# BRIEFING PROCEDURES

The following scheduled briefings will be held to ensure the effective drilling and operation of this project:

## Pre-Spud Meeting

Date: Prior to spudding the well.

Attendance: Drilling Supervisor

Drilling Engineer
Drilling Foreman
Rig Tool Pushers
Rig Drillers
Mud Engineer
All Safety Personnel

**Key Service Company Personnel** 

Purpose: Review and discuss the well program, step-by-step, to insure complete understanding of

assignments and responsibilities.

#### **EVACUATION PLAN**

#### General Plan

The direct lines of action prepared by SAFETY SOLUTIONS, LLC to protect the public from hazardous gas situations are as follows:

- 1. When the company approved supervisor (Drilling Foreman, Tool Pusher or Driller) determine that Hydrogen Sulfide gas cannot be limited to the well location, and the public will be involved, he will activate the evacuation plan. Escape routes are noted on the area map.
- 2. Company safety personnel or designee will notify the appropriate local government agency that a hazardous condition exists and evacuation needs to be implemented.
- 3. Company approved safety personnel that have been trained in the use of the proper emergency equipment will be utilized.
- 4. Law enforcement personnel (State Police, Local Police Department, Fire Department, and the Sheriff's Department) will be called to aid in setting up and maintaining road blocks. Also, they will aid in evacuation of the public if necessary.

NOTE: Law enforcement personnel will not be asked to come into a contaminated area. Their assistance will be limited to uncontaminated areas. Constant radio contact will be maintained with them.

5. After the discharge of gas has been controlled, "Company" safety personnel will determine when the area is safe for re-entry.

**See Emergency Action Plan** 

# **Emergency Assistance Telephone List**

PUBLIC SAFETY:	91	1 or
Eddy County Sheriff's Department	(575) 887-7551	
Kent Waller		
Fire Department:		
Carlsbad	(575) 885-3125	
Artesia	(575) 746-5050	
Hospitals:		
Carlsbad	(575) 887-4121	
Artesia	(575) 748-3333	
Hobbs	(575) 392-1979	
Dept. of Public Safety/Carlsbad	(575) 748-9718	
Highway Department	(575) 885-3281	
New Mexico Oil Conservation	(575) 476-3440	
U.S. Dept. of Labor	(575) 887-1174	
	, ,	
EOG Resources, Inc.		
EOG / Midland	Office (432) 686-3600	
Company Drilling Consultants:	, ,	
Danny Kiser	Cell (281) 833-2749	
	(===,==================================	
Drilling Engineer		
Steve Munsell	Office (432) 686-3609	
	Cell (432) 894-1256	
Operations Manager	` '	
Joel Pettit	Office (432) 686-3705	
	Cell (432)894-1226	
Drilling Superintendent	, ,	
Barney Thompson	Office (432) 686-3678	
, .	Cell (432) 254-9056	
Field Drilling Superintendent	` ,	
Ron Welch	Cell (432) 386-0592	
	` ,	
McVay Drilling		
McVay Drilling / Hobbs	Office (575) 397-3311	
McVay Drilling Rig #4	Rig (575) 370-5598	
	2	
Tool Pusher:		
Terry Johnson	Cell (575) 370-5620	
Safety Consultants		
Safety Solutions, LLC	Office (432) 686-8555	
Cliff Strasner	Cell (432) 894-9789	
Craig Strasner	Cell (432) 894-0341	
_		

#### **Affected Notification List**

(within a 65' radius of exposure @100ppm)

The geologic zones that will be encountered during drilling are known to contain hazardous quantities of  $H_2S$ . The accompanying map illustrates the affected areas of the community. The residents within this radius will be notified via a hand delivered written notice describing the activities, potential hazards, conditions of evacuation, evacuation drill siren alarms and other precautionary measures.

**Evacuee Description:** 

Residents: THERE ARE NO RESIDENTS WITHIN 3000' ROE.

**Notification Process:** 

A continuous siren audible to all residence will be activated, signaling evacuation of previously notified and informed residents.

**Evacuation Plan:** 

All evacuees will migrate lateral to the wind direction.

The Oil Company will identify all home bound or highly susceptible individuals and make special evacuation preparations, interfacing with the local and emergency medical service as necessary.

## Toxic Effects of H<sub>2</sub>S Poisoning

Hydrogen Sulfide is extremely toxic. The acceptable ceiling concentration for eight-hour exposure is 10 PPM, which is .001% by volume. Hydrogen Sulfide is heavier than air (specific gravity -1.192) and is colorless and transparent. Hydrogen Sulfide is almost as toxic as Hydrogen Cyanide and is 5-6 times more toxic than Carbon Monoxide. Occupational exposure limits for Hydrogen Sulfide and other gases are compared below in Table 1. Toxicity table for  $H_2S$  and physical effects are shown in Table 2.

Table 1
Permissible Exposure Limits of Various Gases

Common Name	Symbol	Sp. Gravity	TLV	STEL	IDLH
Hydrogen Cyanide	HCN	.94	4.7 ppm	С	
Hydrogen Sulfide	H <sub>2</sub> S	1.192	10 ppm	15 ppm	100 ppm
Sulfide Dioxide	SO <sub>2</sub>	2.21	2 ppm	5 ppm	
Chlorine	CL	2.45	.5 ppm	1 ppm	
Carbon Monoxide	СО	.97	25 ppm	200 ppm	
Carbon Dioxide	CO <sub>2</sub>	1.52	5000 ppm	30,000 ppm	
Methane	CH₄	.55	4.7% LEL	14% UEL	

#### **Definitions**

- A. TLV Threshold Limit Value is the concentration employees may be exposed based on a TWA (time weighted average) for eight (8) hours in one day for 40 hours in one (1) week. This is set by ACGIH (American Conference of Governmental Hygienists) and regulated by OSHA.
- B. STEL Short Term Exposure Limit is the 15 minute average concentration an employee may be exposed to providing that the highest exposure never exceeds the OEL (Occupational Exposure Limit). The OEL for H<sub>2</sub>S is 19 PPM.
- C. IDLH Immediately Dangerous to Life and Health is the concentration that has been determined by the ACGIH to cause serious health problems or death if exposed to this level. The IDLH for  $H_2S$  is 100 PPM.
- D. TWA Time Weighted Average is the average concentration of any chemical or gas for an eight
   (8) hour period. This is the concentration that any employee may be exposed based on an TWA.

TABLE 2			
		Toxicity Table of H₂S	
Percent %	PPM	Physical Effects	
.0001	1	Can smell less than 1 ppm.	
.001	10	TLV for 8 hours of exposure.	
.0015	15	STEL for 15 minutes of exposure.	
.01	100	Immediately Dangerous to Life & Health. Kills sense of smell in 3 to 5 minutes.	
.02	200	Kills sense of smell quickly, may burn eyes and throat.	
.05	500	Dizziness, cessation of breathing begins in a few minutes.	
.07	700	Unconscious quickly, death will result if not rescued promptly.	
.10	1000	Death will result unless rescued promptly. Artificial resuscitation may be necessary.	

#### PHYSICAL PROPERTIES OF H<sub>2</sub>S

The properties of all gases are usually described in the context of seven major categories:

COLOR

**ODOR** 

VAPOR DENSITY

**EXPLOSIVE LIMITS** 

**FLAMMABILITY** 

SOLUBILITY (IN WATER)

**BOILING POINT** 

Hydrogen Sulfide is no exception. Information from these categories should be considered in order to provide a fairly complete picture of the properties of the gas.

#### COLOR - TRANSPARENT

Hydrogen Sulfide is colorless so it is invisible. This fact simply means that you can't rely on your eyes to detect its presence. In fact that makes this gas extremely dangerous to be around.

#### **ODOR - ROTTEN EGGS**

Hydrogen Sulfide has a distinctive offensive smell, similar to "rotten eggs". For this reason it earned its common name "sour gas". However,  $H_2S$ , even in low concentrations, is so toxic that it attacks and quickly impairs a victim's sense of smell, so it could be fatal to rely on your nose as a detection device.

#### VAPOR DENSITY - SPECIFIC GRAVITY OF 1.192

Hydrogen Sulfide is heavier than air so it tends to settle in low-lying areas like pits, cellars or tanks. If you find yourself in a location where  $H_2S$  is known to exist, protect yourself. Whenever possible, work in an area upwind and keep to higher ground.

#### **EXPLOSIVE LIMITS - 4.3% TO 46%**

Mixed with the right proportion of air or oxygen, H<sub>2</sub>S will ignite and burn or explode, producing another alarming element of danger besides poisoning.

#### **FLAMMABILITY**

Hydrogen Sulfide will burn readily with a distinctive clear blue flame, producing Sulfur Dioxide (SO<sub>2</sub>), another hazardous gas that irritates the eyes and lungs.

#### **SOLUBILITY - 4 TO 1 RATIO WITH WATER**

Hydrogen Sulfide can be dissolved in liquids, which means that it can be present in any container or vessel used to carry or hold well fluids including oil, water, emulsion and sludge. The solubility of  $H_2S$  is dependent on temperature and pressure, but if conditions are right, simply agitating a fluid containing  $H_2S$  may release the gas into the air.

## **BOILING POINT – (-76 degrees Fahrenheit)**

Liquefied Hydrogen Sulfide boils at a very low temperature, so it is usually found as a gas.

#### **RESPIRATOR USE**

The Occupational Safety and Health Administration (OSHA) regulate the use of respiratory protection to protect the health of employees. OSHA's requirements are written in the Code of Federal Regulations, Title 29, Part 1910, Section 134, Respiratory Protection. This regulation requires that all employees who might be required to wear respirators, shall complete a OSHA mandated medical evaluation questionnaire. The employee then should be fit tested prior to wearing any respirator while being exposed to hazardous gases.

Written procedures shall be prepared covering safe use of respirators in dangerous atmospheric situations, which might be encountered in normal operations or in emergencies. Personnel shall be familiar with these procedures and the available respirators.

Respirators shall be inspected prior to and after each use to make sure that the respirator has been properly cleaned, disinfected and that the respirator works properly. The unit should be fully charged prior to being used.

Anyone who may use respirators shall be properly trained in how to properly seal the face piece. They shall wear respirators in normal air and then in a test atmosphere. (Note: Such items as facial hair (beard or sideburns) and eyeglass temple pieces will not allow a proper seal.) Anyone that may be expected to wear respirators should have these items removed before entering a toxic atmosphere. A special mask must be obtained for anyone who must wear eyeglasses. Contact lenses should not be allowed.

Respirators shall be worn during the following conditions:

- A. Any employee who works near the top or on the top of any tank unless tests reveal less than 20 ppm of  $H_2S$ .
- B. When breaking out any line where  $H_2S$  can reasonably be expected.
- C. When sampling air in areas where H<sub>2</sub>S may be present.
- D. When working in areas where the concentration of  $H_2S$  exceeds the Threshold Limit Value for  $H_2S$  (10 ppm).
- E. At any time where there is a doubt as to the H<sub>2</sub>S level in the area to be entered.

#### **EMERGENCY RESCUE PROCEDURES**

## DO NOT PANIC!!!

#### Remain Calm - Think

- 1. Before attempting any rescue you must first get out of the hazardous area yourself. Go to a safe briefing area.
- 2. Sound alarm and activate the 911 system.
- 3. Put on breathing apparatus. At least two persons should do this, when available use the buddy system.
- 4. Rescue the victim and return them to a safe briefing area.
- 5. Perform an initial assessment and begin proper First Aid/CPR procedures.
- 6. Keep victim lying down with a blanket or coat, etc.., under the shoulders to keep airway open. Conserve body heat and do not leave unattended.
- 7. If the eyes are affected by H<sub>2</sub>S, wash them thoroughly with potable water. For slight irritation, cold compresses are helpful.
- 8. In case a person has only minor exposure and does not lose consciousness totally, it's best if he doesn't return to work until the following day.
- 9. Any personnel overcome by H<sub>2</sub>S should always be examined by medical personnel. They should always be transported to a hospital or doctor.

# SURFACE USE PLAN OF OPERATION

SHL: 1150' FNL & 205' FEL, Unit A, Section 35, T16S-R24E, N.M.P.M., Eddy, NM BHL: 760' FNL & 660' FWL, Unit D, Section 35, T16S-R24E, N.M.P.M., Eddy, NM

## 1. EXISTING ROADS:

- a. The well site and elevation plat for the proposed well are reflected on the well site layout; Form C-102. The well was staked by Terry Asel, RPL 15079.
- b. All roads into the location are depicted on Exhibit 2, 2a & 2b.
- c. <u>Directions to Locations:</u> From the Intersection of U.S. Hwy 82 & U.S. Hwy 285, Go west on Hwy 82 for 11.4 miles; turn right, go north on County Road No. 95 (Joy Road) for 4.2 miles; turn right, go east on County Road No. 75 for 1.8 miles; turn right, go south for 0.6 miles, turn right on proposed new road and go 110 feet, turn left and go south for 0.6 miles to location.

## 2. NEW OR RECONSTRUCTED ACCESS ROAD:

- a. The well site layout, Exhibit 2a shows the layout. A new access road will be constructed of compact caliche a distance of 1,616.4' (See Exhibit 2b).
- b. The maximum width of the road will be 15'. It will be crowned and made of 6" of rolled and compacted caliche. Water will be deflected, as necessary, to avoid accumulation and prevent soil erosion.
- **c.** Surface material will be native caliche. This material will be obtained from a BLM approved pit nearest in proximity to the location. The average grade will be approximately 1%. No cattleguards, gates or fence cuts will be required. No turnouts are planned.

## 3. LOCATION OF EXISTING WELLS:

Exhibit #3 shows all existing wells within a one-mile radius of this well.

## 4. LOCATION OF EXISTING AND/OR PROPOSED PRODUCTION FACILITIES:

- a. In the event the well is found to be productive, the necessary production equipment will be installed at the Skeena 35 Fed 4H CTB. No Production Facilities on location. See diagram.
- b. As a proposed gas well, no electric power is required.
- c. All flow lines will adhere to API standards.
- d. Refer to b above.
- e. If the well is productive, rehabilitation plans are as follows:
  - i. The location shall be reduced on Four (4) sides as depicted by the Production Facilities Layout. The interim reclamation will be performed when optimal

- conditions exist during the growing season as per the interim reclamation guidelines of the BLM.
- ii. The original topsoil from the well site will be returned to the location. The location will be contoured as close as possible to match the original topography.

## 5. LOCATION AND TYPE OF WATER SUPPLY:

This location will be drilled using a combination of water mud systems (outlined in the drilling program). The water will be obtained from commercial water stations in the area and hauled to location by transport truck using existing and proposed roads shown in Exhibit 2, 2a and 2b. On occasion, water will be obtained from existing water wells. In these cases where a poly pipeline is used to transport water for drilling purposes, proper authorizations will be secured. If poly pipeline is used to transport fresh water to the location, proper authorization will be secured by the contractor.

## 6. Construction Materials:

Obtaining Mineral Material – Caliche utilized for the drilling pad and proposed access road will be obtained either from an existing approved pit, or by benching into a hill which will allow the pad to level with existing caliche from cut, or extracted by "flipping" the location. A caliche permit shall be obtained from the BLM prior to excavating any caliche on Federal Lands. Amount will vary for each pad. The procedure for "flipping" the location is as follows:

- 1. An adequate amount of topsoil for final reclamation will be stripped from the well location surface and stockpiled along the edge of the location as shown in the well site layout.
- 2. An area will be used within the proposed well site to excavate caliche.
- 3. The subsoil will then be removed and stockpiled within the footages of the well location.
- 4. Once caliche/mineral material is found, the material will be excavated and stockpiled within the footages of the well location.
- 5. The subsoil will then be placed back in the excavated hole.
- 6. Caliche/mineral material will then be placed over the entire pad and/or road to be compacted.

In the event that caliche is not found on site, a permit will be acquired if caliche is obtained from a BLM approved caliche pit.

## 7. METHODS OF HANDLING WASTE MATERIALS

- a. Drill cuttings shall be disposed of in a steel cuttings bin (catch tanks) on the drilling pad (behind the steel mud tanks). The bin and cuttings shall be hauled to an approved cuttings dumpsite.
  - At the site, the cuttings shall be removed from the bin & the bin shall be returned to the drilling site for reuse.
- b. All trash, junk, and other waste material shall be contained in trash cages or trash bins to prevent scattering. When a job is completed, all contents shall be removed and disposed of in an approved landfill.
- c. The supplier, including broken sacks, shall pick up salts remaining after completion of well.
- d. If necessary, a porto-john shall be provided for the rig crews. This equipment shall be properly maintained during the drilling and completion operations and shall be removed when all operations are complete.
- e. Remaining drilling fluids shall be hauled off by transports to a state approved disposal site. Water produced during completion shall be put in storage tanks and disposed of in a state approved disposal. Oil and condensate produced shall be put in a storage tank and sold.
- f. Disposal of fluids to be transported by the following companies:
  - i. RGB TRUCKING
  - ii. LOBO TRUCKING
  - iii. I & W TRUCKING
  - iv. CRANE HOT OIL & TRANSPORT
  - v. JWS
  - vi. QUALITY TRUCKING

## 8. ANCILLARY FACILITIES:

a. No airstrip, campsite, or other facilities will be built.

## 9. WELL SITE LAYOUT:

- a. Exhibit 4 shows the proposed location of reserve and sump pits, living facilities and well site layout with dimensions of the pad layout.
- b. Mud pits in the active circulating system shall be steel pits and the catch tanks shall be steel tanks set in shallow sumps behind the steel circulating tanks and sumps.
- c. The area where the catch tanks are placed shall be reclaimed and the surface vegetation restored to as or near the same condition that existed prior to operations.

## 10. PLANS FOR SURFACE RECLAMATION:

- a. After concluding the drilling and/or completion operations, if the well is found non-commercial, the caliche shall be removed from the pad and transported to the original caliche pit or used for other drilling locations and roads. The road shall be reclaimed and the surface vegetation restored to as or near the same condition that existed prior to operations. The original topsoil shall again be returned to the pad and contoured, as close as possible, to the original topography.
- b. After the well is plugged and abandoned, the location and road shall be reclaimed and the surface vegetation restored to as or near the same condition that existed prior to operations.
- c. If the well is deemed commercially productive, the catch tank area shall be restored as described in 4(e)(i). Caliche from areas of the pad site not required for operations shall be reclaimed. The original topsoil shall be returned to the area of the drill pad not necessary to operate the well. These unused areas of the drill pad shall be contoured, as close as possible, to match the original topography.

#### 11. SURFACE OWNERSHIP

The surface is owned by the Bureau of Land Management. The surface is multiple use with the primary uses of the region for the grazing of livestock and the production of oil and gas.

#### 12. OTHER INFORMATION:

- a. The area surrounding the well is cactus and tar brush. The topsoil is sandy in nature. The vegetation is moderately sparse with native prairie grass, cactus and shinnery oak. No wildlife was observed but it is likely that deer, rabbits, coyotes, birds and rodents transverse the area.
- b. There are not dwellings within 2 miles of location.
- c. There is no permanent or live water within 1.0 miles of the location.
- d. Cultural Resources Examination will be conducted by Danny Boone and registered with the CFO.

## 13. BOND COVERAGE:

a. Bond Coverage is Nationwide; Bond No. NM 2308

## **COMPANY REPRESENTATIVES:**

Representatives responsible for ensuring compliance of the surface use plan are listed below:

# Permitting & Land

Mr. Donny G. Glanton Senior Lease Operations ROW Representative EOG Resources, Inc. P.O. Box 2267 Midland, TX 79702 (432) 686-3642 Office (432) 770-0602 Cell

<b>Operations</b>
Mr. Howard Kemp
Production Manager
EOG Resources, Inc
P.O. Box 2267
Midland, TX 79702
(432) 686-3704 Office
(432) 634-1001 Cell

# **OPERATOR CERTIFICATION**

I certify that I, or someone under my direct supervision, have inspected the drill site and access route proposed herein; that I am familiar with the conditions that presently exist; that I have full knowledge of State and Federal Laws applicable to this operation; that the statements made in this APD package are, to the best of my knowledge, true, and correct; and that the work associated with the operations proposed herein will be performed in conformity with this APD package and the terms and conditions under which it is approved. I also certify that I, or the company I represent, am responsible for the operations conducted under this application. These statements are subject to the provisions of 18 U.S.C. 1001 for the filing of false statements. Executed this 6<sup>th</sup> day of April 2010.

Name: Donny G. Glanton

Position: Sr. Lease Operations ROW Representative

Address: P.O. Box 2267 Midland, TX 79705

Telephone: <u>432-686-3642</u>

Email: donny\_glanton@eogresources.com

Signed: In D. Mut

# PECOS DISTRICT CONDITIONS OF APPROVAL

OPERATOR'S NAME:
LEASE NO.:
NM-108953
WELL NAME & NO.:
SURFACE HOLE FOOTAGE:
BOTTOM HOLE FOOTAGE
LOCATION:
COUNTY:
EOG Resources, Inc.
NM-108953
Skeena 35 Fed 1H
1150' FNL & 0205' FEL
0760' FNL & 0660' FWL
EOCATION:
COUNTY: Eddy County, New Mexico

## TABLE OF CONTENTS

Standard Conditions of Approval (COA) apply to this APD. If any deviations to these standards exist or special COAs are required, the section with the deviation or requirement will be checked below.

☐ General Provisions
Permit Expiration
Archaeology, Paleontology, and Historical Sites
Noxious Weeds
Special Requirements
Aplomado Falcon
Range Improvement Projects
<b>⊠</b> Construction
Notification
Topsoil
Closed Loop System
Federal Mineral Material Pits
Well Pads
Roads
☐ Road Section Diagram
<b>☑</b> Drilling
Casing/Cement
Logging Requirements
<b>⊠</b> Production (Post Drilling)
Well Structures & Facilities
Pipelines
Interim Reclamation
Final Abandonment & Reclamation

#### I. GENERAL PROVISIONS

The approval of the Application For Permit To Drill (APD) is in compliance with all applicable laws and regulations: 43 Code of Federal Regulations 3160, the lease terms, Onshore Oil and Gas Orders, Notices To Lessees, New Mexico Oil Conservation Division (NMOCD) Rules, National Historical Preservation Act As Amended, and instructions and orders of the Authorized Officer. Any request for a variance shall be submitted to the Authorized Officer on Form 3160-5, Sundry Notices and Report on Wells.

## II. PERMIT EXPIRATION

If the permit terminates prior to drilling and drilling cannot be commenced within 60 days after expiration, an operator is required to submit Form 3160-5, Sundry Notices and Reports on Wells, requesting surface reclamation requirements for any surface disturbance. However, if the operator will be able to initiate drilling within 60 days after the expiration of the permit, the operator must have set the conductor pipe in order to allow for an extension of 60 days beyond the expiration date of the APD. (Filing of a Sundry Notice is required for this 60 day extension.)

## III. ARCHAEOLOGICAL, PALEONTOLOGY & HISTORICAL SITES

Any cultural and/or paleontological resource discovered by the operator or by any person working on the operator's behalf shall immediately report such findings to the Authorized Officer. The operator is fully accountable for the actions of their contractors and subcontractors. The operator shall suspend all operations in the immediate area of such discovery until written authorization to proceed is issued by the Authorized Officer. An evaluation of the discovery shall be made by the Authorized Officer to determine the appropriate actions that shall be required to prevent the loss of significant cultural or scientific values of the discovery. The operator shall be held responsible for the cost of the proper mitigation measures that the Authorized Officer assesses after consultation with the operator on the evaluation and decisions of the discovery. Any unauthorized collection or disturbance of cultural or paleontological resources may result in a shutdown order by the Authorized Officer.

## IV. NOXIOUS WEEDS

The operator shall be held responsible if noxious weeds become established within the areas of operations. Weed control shall be required on the disturbed land where noxious weeds exist, which includes the roads, pads, associated pipeline corridor, and adjacent land affected by the establishment of weeds due to this action. The operator shall consult with the Authorized Officer for acceptable weed control methods, which include following EPA and BLM requirements and policies.

## V. SPECIAL REQUIREMENT(S)

## Conditions-of-Approval for Drilling in Aplomado Falcon Habitat

- No yuccas or trees over 5 feet in height will be damaged, to protect nesting structures.
- All active raptor nests will be avoided by a minimum of 400 meters by all activities or curtail activities until fledging is complete. All inactive raptor nests will be avoided by a minimum of 200 meters by all activities.
- Well pad size will not exceed 300 ft. x 390 ft (2.69 acres).
- All roads associated with well development will not exceed 30 ft in width
- All unused portions of the well pad associated with producing wells will be reclaimed following the abandoned well protocol below
- Final abandonment protocol: Remove all caliche from well pads and roads that are plugged and abandoned. Reclamation will consist of disking, mulching, seeding with a drill (See seed mixture below), and application of water to encourage seed germination.

Buffalograss (Buchloe dactyloides) 4 lbs/acre
Blue grama (Bouteloua gracilis) 1 lbs/acre
Cane bluestem (Bothriochloa barbinodis) 5 lbs/acre
Sideoats grama (Boutelou curtipendula) 5 lbs/acre
Plains bristlegrass (Setaria macrostachya) 6 lbs/acre

## **Livestock Watering Requirement**

Structures that provide water to livestock, such as windmills, pipelines, drinking troughs, and earthen reservoirs, will be avoided by moving the proposed action.

#### Cattleguards

An appropriately sized cattleguard(s) sufficient to carry out the project shall be installed and maintained at fence crossing(s). Any existing cattleguard(s) on the access road shall be repaired or replaced if they are damaged or have deteriorated beyond practical use. The operator shall be responsible for the condition of the existing cattleguard(s) that are in place and are utilized during lease operations. A gate shall be constructed on one side of the cattleguard and fastened securely to H-braces.

## Fence Requirement

Where entry is required across a fence line, the fence shall be braced and tied off on both sides of the passageway prior to cutting. Once the work is completed, the fence will be restored to its prior condition, or better. The operator shall notify the private surface landowner or the grazing allotment holder prior to crossing any fence(s).

The fence line where the Skeena 35 Fed 1H well site will be constructed will need to be rerouted around the well pad.

## VI. CONSTRUCTION

## A. NOTIFICATION

The BLM shall administer compliance and monitor construction of the access road and well pad. Notify the Carlsbad Field Office at (575) 234-5972 at least 3 working days prior to commencing construction of the access road and/or well pad.

When construction operations are being conducted on this well, the operator shall have the approved APD and Conditions of Approval (COA) on the well site and they shall be made available upon request by the Authorized Officer.

#### B. TOPSOIL

The operator shall stockpile the topsoil in a low profile manner in order to prevent wind/water erosion of the topsoil. The topsoil to be stripped is approximately 6 inches in depth. The topsoil will be used for interim and final reclamation.

## C. CLOSED LOOP SYSTEM

Tanks are required for drilling operations: No Pits.

The operator shall properly dispose of drilling contents at an authorized disposal site.

#### D. FEDERAL MINERAL MATERIALS PIT

Payment shall be made to the BLM prior to removal of any federal mineral materials. Call the Carlsbad Field Office at (575) 234-5972.

## E. WELL PAD SURFACING

Surfacing of the well pad is not required.

If the operator elects to surface the well pad, the surfacing material may be required to be removed at the time of reclamation.

The well pad shall be constructed in a manner which creates the smallest possible surface disturbance, consistent with safety and operational needs.

## F. ON LEASE ACCESS ROADS

## Road Width

The access road shall have a driving surface that creates the smallest possible surface disturbance and does not exceed fourteen (14) feet in width. The maximum width of surface disturbance, when constructing the access road, shall not exceed thirty (30) feet.

## Surfacing

Surfacing material is not required on the new access road driving surface. If the operator elects to surface the new access road or pad, the surfacing material may be required to be removed at the time of reclamation.

Where possible, no improvements should be made on the unsurfaced access road other than to remove vegetation as necessary, road irregularities, safety issues, or to fill low areas that may sustain standing water.

The Authorized Officer reserves the right to require surfacing of any portion of the access road at any time deemed necessary. Surfacing may be required in the event the road deteriorates, erodes, road traffic increases, or it is determined to be beneficial for future field development. The surfacing depth and type of material will be determined at the time of notification.

## **Crowning**


Crowning shall be done on the access road driving surface. The road crown shall have a grade of approximately 2% (i.e., a 1" crown on a 14' wide road). The road shall conform to Figure 1; cross section and plans for typical road construction.

## Ditching

Ditching shall be required on both sides of the road.

#### **Turnouts**

Vehicle turnouts shall be constructed on the road. Turnouts shall be intervisible with interval spacing distance less than 1000 feet. Turnouts shall be constructed on all blind curves. Turnouts shall conform to the following diagram:

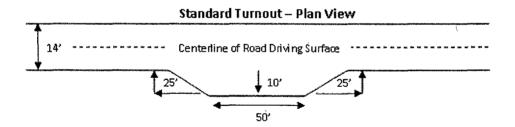


#### Drainage

Drainage control systems shall be constructed on the entire length of road (e.g. ditches, sidehill outsloping and insloping, lead-off ditches, culvert installation, and low water crossings).

A typical lead-off ditch has a minimum depth of 1 foot below and a berm of 6 inches above natural ground level. The berm shall be on the down-slope side of the lead-off ditch.

**Cross Section of a Typical Lead-off Ditch** 



All lead-off ditches shall be graded to drain water with a 1 percent minimum to 3 percent maximum ditch slope. The spacing interval are variable for lead-off ditches and shall be determined according to the formula for spacing intervals of lead-off ditches, but may be amended depending upon existing soil types and centerline road slope (in %);

## Formula for Spacing Interval of Lead-off Ditches

Example - On a 4% road slope that is 400 feet long, the water flow shall drain water into a lead-off ditch. Spacing interval shall be determined by the following formula:

400 foot road with 4% road slope: 
$$\frac{400'}{4\%}$$
 + 100' = 200' lead-off ditch interval

#### **Culvert Installations**

Appropriately sized culvert(s) shall be installed at the deep waterway channel flow crossing.

## **Public Access**

Public access on this road shall not be restricted by the operator without specific written approval granted by the Authorized Officer.

center line of roadway shoulder---/ 100' Intervisible runouts shall be constructed on all single tone roads on all blind curves with additional tunouts as needed to keep spacing below 1000 feet full turnout width **Typical Turnout Plan** height of fill at shoulder slope **Embankment Section** road CTOWN 03 - 05 ft/ft earth surface .02 - .04 ft/ft aggregate surfa paved surface .02 - .03 ft/ft Depth measured from the bottom of the ditch **Side Hill Section** 

Figure 1 – Cross Sections and Plans For Typical Road Sections

fravel surface [slope 2 - 4% ]

**Typical Inslope Section** 

**Typical Outsloped Section** 

## VII. DRILLING

## A. DRILLING OPERATIONS REQUIREMENTS

The BLM is to be notified a minimum of 4 hours in advance for a representative to witness:

- a. Spudding well
- b. Setting and/or Cementing of all casing strings
- c. BOPE tests

## **Eddy County**

Call the Carlsbad Field Office, 620 East Greene St., Carlsbad, NM 88220, (575) 361-2822

- 1. Although Hydrogen Sulfide has not been reported in the area, it is always a potential hazard. If Hydrogen Sulfide is encountered, please report measured amounts and formations to the BLM.
- 2. Unless the production casing has been run and cemented or the well has been properly plugged, the drilling rig shall not be removed from over the hole without prior approval.
- 3. Floor controls are required for 3M or Greater systems. These controls will be on the rig floor, unobstructed, readily accessible to the driller and will be operational at all times during drilling and/or completion activities. Rig floor is defined as the area immediately around the rotary table; the area immediately above the substructure on which the draw works are located, this does not include the dog house or stairway area.
- 4. The record of the drilling rate along with the CAL/GR/N well log run from TD to surface will be submitted to the BLM office as well as all other logs run on the borehole 30 days from completion. If available, a digital copy of the logs is to be submitted in addition to the paper copies.

#### B. CASING

Changes to the approved APD casing and cement program require submitting a sundry and receiving approval prior to work. Failure to obtain approval prior to work will result in an Incident of Non-Compliance being issued.

Centralizers required on surface casing per Onshore Order 2.III.B.1.f.

Wait on cement (WOC) time for a primary cement job will be a minimum 18 hours for a water basin, 24 hours in the potash area, or 500 pounds compressive strength, whichever is greater for all casing strings. Provide compressive strengths including hours to reach required 500 pounds compressive strength prior to cementing each casing string. See individual casing strings for details regarding lead cement slurry requirements.

No pea gravel permitted for remedial or fall back remedial without prior authorization from the BLM engineer.

Possible lost circulation in the Grayburg and San Andres formations. Possible water flows in the upper San Andres.

- 1. The 8-5/8 inch surface casing shall be set at approximately 900 feet and cemented to the surface. Casing should be set within the base of the San Andres.
  - a. If cement does not circulate to the surface, the appropriate BLM office shall be notified and a temperature survey utilizing an electronic type temperature survey with surface log readout will be used or a cement bond log shall be run to verify the top of the cement. Temperature survey will be run a minimum of six hours after pumping cement and ideally between 8-10 hours after completing the cement job.
  - b. Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry.
  - c. Wait on cement (WOC) time for a remedial job will be a minimum of 4 hours after bringing cement to surface or 500 pounds compressive strength, whichever is greater.
  - d. If cement falls back, remedial cementing will be done prior to drilling out that string.

Pilot hole is required to have a plug at the bottom of the hole. If two plugs are set, the BLM is to be contacted (575-361-2822) prior to tag of bottom plug, which must be a minimum of 150' in length. Operator can set one plug from bottom of pilot hole to kick-off point and save the WOC time for tagging the first plug.

Centralizers required on horizontal leg, must be type for horizontal service and minimum of one every other joint.

2.	The minimum required fill of cement behind the 5-1/2 inch production casing is:
	□ Cement to surface. If cement does not circulate, contact the appropriate BLM office.

3. If hardband drill pipe is rotated inside casing, returns will be monitored for metal. If metal is found in samples, drill pipe will be pulled and rubber protectors which have a larger diameter than the tool joints of the drill pipe will be installed prior to continuing drilling operations.

## C. PRESSURE CONTROL

- 1. All blowout preventer (BOP) and related equipment (BOPE) shall comply with well control requirements as described in Onshore Oil and Gas Order No. 2 and API RP 53 Sec. 17.
- 2. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall be 3000 (3M) psi. 5M system being tested as a 3M.
- 3. The appropriate BLM office shall be notified a minimum of 4 hours in advance for a representative to witness the tests.
  - a. Casing cut-off and BOP installation will not be initiated until the cement has had a minimum of 8 hours setup time for a water basin. The casing shall remain stationary and under pressure for at least eight hours after the operator places the cement. In the potash area, the minimum time is 12 hours and the casing shall remain stationary and under pressure during this time period. Casing shall be under pressure if the operator uses some acceptable means of holding pressure or if the operator employs one or more float valves to hold the cement in place. Testing the BOP/BOPE against a plug can commence after meeting the above conditions plus the BOP installation time.
  - b. The tests shall be done by an independent service company utilizing a test plug.
  - c. The results of the test shall be reported to the appropriate BLM office.
  - d. All tests are required to be recorded on a calibrated test chart. A copy of the BOP/BOPE test chart and a copy of independent service company test will be submitted to the appropriate BLM office.
  - e. The BOP/BOPE test shall include a low pressure test from 250 to 300 psi. The test will be held for a minimum of 10 minutes if test is done with a test plug and 30 minutes without a test plug.

# D. DRILL STEM TEST

If drill stem tests are performed, Onshore Order 2.III.D shall be followed.

DHW 052110

## VIII. PRODUCTION (POST DRILLING)

#### A. WELL STRUCTURES & FACILITIES

#### **Placement of Production Facilities**

Production facilities should be placed on the well pad to allow for maximum interim recontouring and revegetation of the well location.

#### **Containment Structures**

The containment structure shall be constructed to hold the capacity of the entire contents of the largest tank, plus 24 hour production, unless more stringent protective requirements are deemed necessary by the Authorized Officer.

## **Painting Requirement**

All above-ground structures including meter housing that are not subject to safety requirements shall be painted a flat non-reflective paint color Shale Green, Munsell Soil Color Chart # 5Y 4/2

#### B. PIPELINES

#### **BURIED PIPELINE STIPULATIONS**

A copy of the APD and attachments, including conditions of approval, survey plat and/or map, will be on location during construction. BLM personnel may request to you a copy of your permit during construction to ensure compliance with all stipulations.

Holder agrees to comply with the following stipulations to the satisfaction of the Authorized Officer:

- 1. The Holder shall indemnify the United States against any liability for damage to life or property arising from the occupancy or use of public lands under this grant.
- 2. The Holder shall comply with all applicable Federal laws and regulations existing or hereafter enacted or promulgated. In any event, the holder shall comply with the Toxic Substances Control Act of 1976 as amended, 15 USC 2601 et seq. (1982) with regards to any toxic substances that are used, generated by or stored on the right-of-way or on facilities authorized under this right-of-way grant. (See 40 CFR Part 702-799 and especially, provisions on polychlorinated biphenyls, 40 CFR 761.1-761.193.) Additionally, any release of toxic substances (leaks, spills, etc.) in excess of the reportable quantity established by 40 CFR Part 117 shall be reported as required by the Comprehensive Environmental Response, Compensation, and Liability Act, section 102b. A copy of any report required or requested by any Federal agency or State government as a result of a reportable release or spill of any toxic substances shall be furnished to the authorized officer concurrent with the filing of the reports to the involved Federal agency or State government.
- 3. The holder agrees to indemnify the United States against any liability arising from the release of any hazardous substance or hazardous waste (as these terms are defined in the Comprehensive

Environmental Response, Compensation and Liability Act of 1980, 42 U.S.C. 9601, et seq. or the Resource Conservation and Recovery Act, 42 U.S.C.6901, et seq.) on the Right-of-Way (unless the release or threatened release is wholly unrelated to the Right-of-Way holder's activity on the Right-of-Way), or resulting from the activity of the Right-of-Way holder on the Right-of-Way. This agreement applies without regard to whether a release is caused by the holder, its agent, or unrelated third parties.

- 4. If, during any phase of the construction, operation, maintenance, or termination of the pipeline, any oil or other pollutant should be discharged from the pipeline system, impacting Federal lands, the control and total removal, disposal, and cleaning up of such oil or other pollutant, wherever found, shall be the responsibility of holder, regardless of fault. Upon failure of holder to control, dispose of, or clean up such discharge on or affecting Federal lands, or to repair all damages resulting therefrom, on the Federal lands, the Authorized Officer may take such measures as he deems necessary to control and clean up the discharge and restore the area, including where appropriate, the aquatic environment and fish and wildlife habitats, at the full expense of the holder. Such action by the Authorized Officer shall not relieve holder of any responsibility as provided herein.
- 5. All construction and maintenance activity will be confined to the authorized right-of-way.
- 6. The pipeline will be buried with a minimum cover of 36 inches between the top of the pipe and ground level.
- 7. Blading of all vegetation in the right-of-way will not be allowed. Blading is defined as the complete removal of brush and ground vegetation. Clearing of brush species will be allowed. Clearing defined as the removal of brush while leaving ground vegetation (grasses, weeds, etc.) intact. Clearing is best accomplished by holding the blade 4 to 6 inches above the ground surface. In areas where clearing is allowed, maximum width of these operations will not exceed 30 feet. Blading is only allowed within the width of the pipeline trench.
- 8. The holder shall stockpile an adequate amount of topsoil where blading is allowed. The topsoil to be stripped is approximately 6 inches in depth. The topsoil will be segregated from other spoil piles from trench construction. The topsoil will be evenly distributed over the bladed area for the preparation of seeding.
- 9. The holder shall minimize disturbance to existing fences and other improvements on public lands. The holder is required to promptly repair improvements to at least their former state. Functional use of these improvements will be maintained at all times. The holder will contact the owner of any improvements prior to disturbing them. When necessary to pass through a fence line, the fence shall be braced on both sides of the passageway prior to cutting of the fence. No permanent gates will be allowed unless approved by the Authorized Officer.
- 10. Vegetation, soil, and rocks left as a result of construction or maintenance activity will be randomly scattered on this right-of-way and will not be left in rows, piles, or berms, unless

otherwise approved by the Authorized Officer. The entire right-of-way shall be recontoured to match the surrounding landscape. The backfilled soil shall be compacted and a 6 inch berm will be left over the ditch line to allow for settling back to grade.

- 11. In those areas where erosion control structures are required to stabilize soil conditions, the holder will install such structures as are suitable for the specific soil conditions being encountered and which are in accordance with sound resource management practices.
- 12. The holder will seed all disturbed areas. Seeding will be done according to the attached seeding requirements, using the Northern Aplomado Falcon seed mix.
- 13. All above-ground structures not subject to safety requirements shall be painted by the holder to blend with the natural color of the landscape. The paint used shall be color which simulates "Standard Environmental Colors" **Shale Green**, Munsell Soil Color No. 5Y 4/2.
- 14. The pipeline will be identified by signs at the point of origin and completion of the right-of-way and at all road crossings. At a minimum, signs will state the holder's name, BLM serial number, and the product being transported. All signs and information thereon will be posted in a permanent, conspicuous manner, and will be maintained in a legible condition for the life of the pipeline.
- 15. The holder shall not use the pipeline route as a road for purposes other than routine maintenance as determined necessary by the Authorized Officer in consultation with the holder before maintenance begins. The holder will take whatever steps are necessary to ensure that the pipeline route is not used as a roadway. As determined necessary during the life of the pipeline, the Authorized Officer may ask the holder to construct temporary deterrence structures.
- 16. Any cultural and/or paleontological resources (historic or prehistoric site or object) discovered by the holder, or any person working on his behalf, on public or Federal land shall be immediately reported to the Authorized Officer. Holder shall suspend all operations in the immediate area of such discovery until written authorization to proceed is issued by the Authorized Officer. An evaluation of the discovery will be made by the Authorized Officer to determine appropriate actions to prevent the loss of significant cultural or scientific values. The holder will be responsible for the cost of evaluation and any decision as to proper mitigation measures will be made by the Authorized Officer after consulting with the holder.

#### 17. Special Stipulations:

)

• The authorized right-of-way width will be <u>30</u> feet. 14 feet of the right-of-way width will consist of existing disturbance (existing lease roads) and the remaining 16 feet will consist of area adjacent to the disturbance. All construction and maintenance activity will be confined to existing roads.

## IX. INTERIM RECLAMATION

During the life of the development, all disturbed areas not needed for active support of production operations should undergo interim reclamation in order to minimize the environmental impacts of development on other resources and uses.

Within six (6) months of well completion, operators should work with BLM surface management specialists (Jim Amos: 575-234-5909) to devise the best strategies to reduce the size of the location. Interim reclamation should allow for remedial well operations, as well as safe and efficient removal of oil and gas.

During reclamation, the removal of caliche is important to increasing the success of revegetating the site. Removed caliche that is free of contaminants may be used for road repairs, fire walls or for building other roads and locations. In order to operate the well or complete workover operations, it may be necessary to drive, park and operate on restored interim vegetation within the previously disturbed area. Disturbing revegetated areas for production or workover operations will be allowed. If there is significant disturbance and loss of vegetation, the area will need to be revegetated. Communicate with the appropriate BLM office for any exceptions/exemptions if needed.

All disturbed areas after they have been satisfactorily prepared need to be reseeded with the seed mixture provided below.

Upon completion of interim reclamation, the operator shall submit a Sundry Notices and Reports on Wells, Subsequent Report of Reclamation (Form 3160-5).

## X. FINAL ABANDONMENT & RECLAMATION

At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land are restored.

Earthwork for final reclamation must be completed within six (6) months of well plugging. All pads, pits, facility locations and roads must be reclaimed to a satisfactory revegetated, safe, and stable condition, unless an agreement is made with the landowner or BLM to keep the road and/or pad intact.

After all disturbed areas have been satisfactorily prepared; these areas need to be revegetated with the seed mixture provided below. Seeding should be accomplished by drilling on the contour whenever practical or by other approved methods. Seeding may need to be repeated until revegetation is successful, as determined by the BLM.

Operators shall contact a BLM surface protection specialist prior to surface abandonment operations for site specific objectives (Jim Amos: 575-234-5909).

# Northern Aplomado Falcon Habitat Seed Mixture

Buffalograss (Buchloe dactyloides)	4 lbs/acre
Blue grama (Bouteloua gracilis)	1 lbs/acre
Cane bluestem (Bothriochloa barbinodis)	5 lbs/acre
Sideoats grama (Boutelou curtipendula)	5 lbs/acre
Plains bristlegrass (Setaria macrostachya)	6 lbs/acre