

Submit 1 Copy To Appropriate District Office  
District I - (575) 393-6161  
1625 N. French Dr., Hobbs, NM 88240  
District II - (575) 748-1283  
811 S. First St., Artesia, NM 88210  
District III - (505) 334-6178  
1000 Rio Brazos Rd., Aztec, NM 87410  
District IV - (505) 476-3460  
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico  
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION  
1220 South St. Francis Dr.  
Santa Fe, NM 87505

Form C-103  
Revised July 18, 2013

WELL API NO. <b>30-015-23942</b>
5. Indicate Type of Lease <b>STATE</b> <input checked="" type="checkbox"/> <b>FEE</b> <input type="checkbox"/>
6. State Oil & Gas Lease No. <b>LG 1637</b>
7. Lease Name or Unit Agreement Name <b>New Mexico DC State</b>
8. Well Number <b>1</b>
9. OGRID Number <b>229137</b>
10. Pool name or Wildcat <b>Palmillo; Upper Penn &amp; Palmillo; Wolfcamp, W</b>

**SUNDRY NOTICES AND REPORTS ON WELLS**  
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☐ Gas Well ☐ Other ☐

2. Name of Operator  
**COG Operating, LLC**

3. Address of Operator  
**600 W. Illinois Ave, Midland, TX 79701**

4. Well Location  
Unit Letter **H** : **1980** feet from the **N** line and **660** feet from the **E** line  
Section **18** Township **19S** Range **29E** NMPM County **Eddy**

11. Elevation (Show whether DR, RKB, RT, GR, etc.)  
**3379' GR**

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	P AND A <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	MULTIPLE COMPL <input type="checkbox"/>	CASING/CEMENT JOB <input type="checkbox"/>	
DOWNHOLE COMMINGLE <input type="checkbox"/>			
CLOSED-LOOP SYSTEM <input type="checkbox"/>			
OTHER: <input type="checkbox"/>		OTHER: <input type="checkbox"/>	

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

1. Tag 5 1/2" CIBP @ 10,500' w/ 35.
2. Set 5 1/2" CIBP @ 9336'. Dump Bail 50' or spot 25 sx cmt.
3. Set 5 1/2" CIBP @ 8891'. Circulate hole w/ MLF. Pressure test csg. Spot 25 sx cmt @ 8890-8791'. WOC & Tag.
4. Spot 25 sx cmt @ 6850-6750'.
5. Spot 25 sx cmt @ 3700-3600'. (Bone Springs)
6. Perf & Sqz 50 sx cmt @ 2994-2894'. WOC & Tag (Shoe)
7. Spot 25 sx cmt @ 1185-1085'. (7 Rivers)
8. Perf & Sqz 50 sx @ 915-815'. (Yates)
9. Perf & Sqz 50 sx cmt @ 415-315'. WOC & Tag (Shoe)
10. Perf & Sqz 20 sx @ 60'-Surface.
11. Cut off well head, verify cmt to surface, weld on Dry Hole Marker.

Approved for plugging of well bore only.  
Liability under bond is retained pending receipt  
of C-103 (Subsequent Report of Well Plugging)  
which may be found at OCD Web Page under  
Forms: [www.cmnrd.state.nm.us/oecd](http://www.cmnrd.state.nm.us/oecd).

Spud Date:

Rig Release Date:

**WELL MUST BE PLUGGED BY 9/11/18**

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Abigail Montgomery TITLE Agent DATE 9/5/17  
Type or print name Abigail Montgomery E-mail address: abbym@bcmmandassociates.com  
**For State Use Only** PHONE: 432-580-7161


APPROVED BY: Robert J. Byrd TITLE COMPLIANCE OFFICER DATE 9/11/2018  
Conditions of Approval (if any):

**SEE ATTACHED COA-S**

Author:	MRM (8/2017)
Well Name	New Mexico DC S Well No. #1
Field	API #: 30-015-23942
County	Eddy Prop #:
State	New Mexico Zone: Wolfcamp
Spud Date	12/6/1982 1980 FNL & 660 FEL
GL	3,379' Sec 18 T19S R29E

Description	O.D.	Grade	Weight	Depth	Cmt Sx	TOC
Surface Csg	13.875"	K-55	54.5	365'	425	surface
Inter Csg	8.625"	K-55	24 & 32	2,944'	2,000	surface
Prod Csg	5.5"	N-80	15.5, 17 & 20	11,798'	2,300	950'
Liner						

Originally dril  
Marbob Ener  
COG took ov

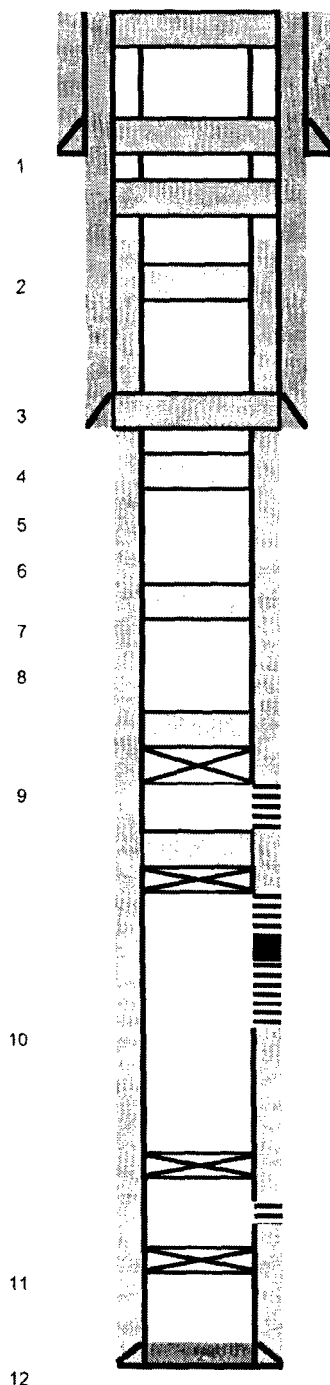

TD @ 11,800'  
PBTD @ 10,465'

#### 10. Perf & Sqz 20 sx @ 60'-Surface.

17-1/2" hole

13-7/8" (54.5#) @ 365' with 400 sks, circ with ?? sks

TOC @ surf

#### 9. Perf & Sqz 50 sx cmt @ 415-315'. WOC & Tag (Shoe)

#### 8. Perf & Sqz 50 sx @ 915-815'. (Yates)

#### 7. Spot 25 sx cmt @ 1185-1085'. (7 Rivers)

11" hole

8-5/8" (24# & 32#) @ 2,944' with 2,000 sks, circ with 410 sks

TOC @ surf

#### 6. Perf & Sqz 50 sx cmt @ 2994-2894'. WOC & Tag (Shoe)

#### 5. Spot 25 sx cmt @ 3700-3600'. (Bone Springs)

#### 4. Spot 25 sx cmt @ 6850-6750'.

#### 3. Set 5 1/2" CIBP @ 8891'. Circulate hole w/ MLF. Pressure test csg. Spot 25 sx cmt @ 8890-8791'. WOC & Tag.

8,941'-9,111' ( Wolfcamp ) 23 holes - 04/27/2002 acidized with 4,000 gal

9,178'-9,291' ( Wolfcamp ) 10 holes - 04/27/2002 acidized with 2,000 gal

#### 2. Set 5 1/2" CIBP @ 9336'. Dump Bail 50' or spot 25 sx cmt.

9,386'-9,494' ( Wolfcamp ) 12 holes - 04/27/2002 acidized with 2,000 gal

9,558'-9,602' ( Wolfcamp ) 2 spf - 02/15/1996 acidized with 5,000 gal

9,557'-9,698' & 9,706'-9,982' ( Cisco Canyon ) 101 holes - 05/04/1982 acidized with 18,000 gal  
squeezed cement with 250 sks

9,706'-9,982' ( Cisco Canyon ) 85 holes - 05/11/1983 acidized with 63,000 gal

#### 1. Tag 5 1/2" CIBP @ 10,500' w/ 35.

CIBP @ 10,500' with 35' cement on top - 02/15/1996

10,684'-10,700' ( Atoka ) ?? holes - 07/1991 acidized with 3,000 gal on 12/11/1992

CIBP @ 10,895' with 35' cement on top 07/1991

7-7/8" hole

5-1/2" (15 5#, 17# & 20#) @ 11,874' with 2,050 sks

DV Tool @ 8,504' 1st stage - 1,000 sks

TOC @ 950' 2nd stage - 1,300 sks

#### Formation Tops

Bone Springs 3,658'

1st Bone Spring 6,810'

2nd Bone Spring Carbonate 6,898'

2nd Bone Spring Sand 7,440'

3rd Bone Spring Carbonate 7,866'

3rd Bone Spring Sand 8,543'

~~Wolfcamp 8,923'~~

~~Cisco 8,278'~~

~~Canyon 8,002'~~

~~Strawn 10,147'~~

~~Atoka 10,419'~~

~~Morrow 10,675'~~

~~Barnett Shale 11,503'~~

~~Mississippi Lime 11,622'~~

Author: MRM (8/2017)

Well Name: New Mexico DC State Well No. #1

Field: API #: 30-015-23942

County: Eddy Prop #:


State: New Mexico Zone: Wolfcamp

Spud Date: 12/6/1982

GL: 3,379' 1980 FNL & 660 FEL  
Sec 18 T19S R29E

Description	O.D.	Grade	Weight	Depth	Cmt Sx	TOC
Surface Csg	13.875"	K-55	54.5	365'	425	surface
Inter Csg	8.625"	K-55	24 & 32	2,944'	2,000	surface
Prod Csg	5.5"	N-80	15.5, 17 & 20	11,798'	2,300	950'
Liner						

Originally drill  
Marbob Ener  
COG took ov

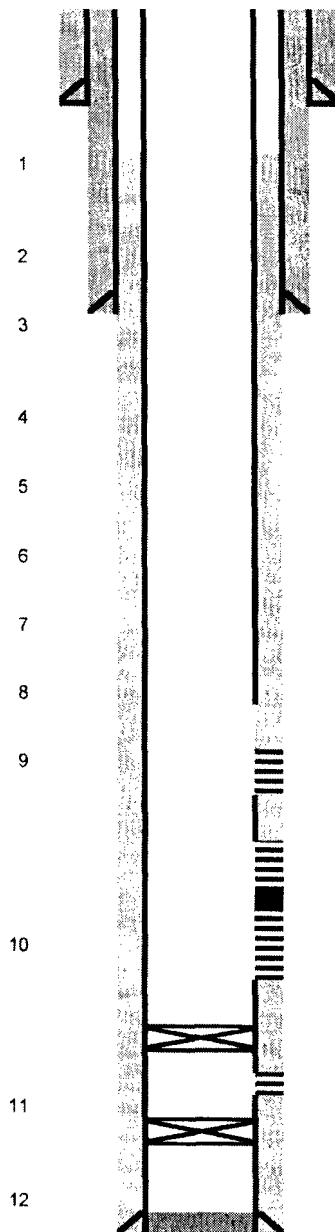

TD @ 11,800'  
PBTD @ 10,465'

#### 17-1/2" hole

13-7/8" (54.5#) @ 365' with 400 sks, circ with ?? sks

TOC @ surf

#### 11" hole

8-5/8" (24# & 32#) @ 2,944' with 2,000 sks, circ with 410 sks

TOC @ surf

#### 7-7/8" hole

5-1/2" (15.5#, 17# & 20#) @ 11,874' with 2,050 sks

DV Tool @ 8,504' 1st stage - 1,000 sks

TOC @ 950' 2nd stage - 1,300 sks

#### Formation Tops

Bone Springs 3,658'  
1st Bone Spring 6,810'

2nd Bone Spring Carbonate 6,898'  
2nd Bone Spring Sand 7,440'  
3rd Bone Spring Carbonate 7,866'  
3rd Bone Spring Sand 8,543'  
Wolfcamp 8,925'  
Cisco 9,270'  
Canyon 9,902'  
Strawn 10,147'  
Atoka 10,419'  
Morrow 10,875'  
Barnett Shale 11,503'  
Mississippi Lime 11,622'

8,941'-9,111' ( Wolfcamp ) 23 holes - 04/27/2002 acidized with 4,000 gal  
9,178'-9,291' ( Wolfcamp ) 10 holes - 04/27/2002 acidized with 2,000 gal

9,386'-9,494' ( Wolfcamp ) 12 holes - 04/27/2002 acidized with 2,000 gal  
9,558'-9,602' ( Wolfcamp ) 2 spf - 02/15/1996 acidized with 5,000 gal  
9,557'-9,698' & 9,706'-9,982' ( Cisco Canyon ) 101 holes - 05/04/1982 acidized with 18,000 gal  
squeezed cement with 250 sks  
9,706'-9,982' ( Cisco Canyon ) 85 holes - 05/11/1983 acidized with 63,000 gal

CIBP @ 10,500' with 35' cement on top - 02/15/1996

10,684'-10,700' ( Atoka ) ?? holes - 07/1991 acidized with 3,000 gal on 12/11/1992

CIBP @ 10,895' with 35' cement on top 07/1991

*Completed*

32.6627121  
-164.1077423

## **CONDITIONS FOR PLUGGING AND ABANDONMENT**

### **District II / Artesia N.M.**

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, **Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work.**

1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs.
2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
3. Trucking companies being used to haul oilfield waste fluids to a disposal – commercial or private – shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
6. If the well is not plugged within 1
7. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
8. **Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.**
9. Produced water **will not** be used during any part of the plugging operation.
10. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
11. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
12. **Class 'C' cement will be used above 7500 feet.**
13. **Class 'H' cement will be used below 7500 feet.**
14. **A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged**
15. **All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing**

16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
17. **A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.**
18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, **(WOC 4 hrs and tag).**
19. **No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.**
20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
  - A) Fusselman
  - B) Devonian
  - C) Morrow
  - D) Wolfcamp
  - E) Bone Springs
  - F) Delaware
  - G) Any salt sections
  - H) Abo
  - I) Glorieta
  - J) Yates.
  - K) **Potash---** (In the R-111-P Area (Potash Mine Area), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, **WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.**
21. **If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing**

#### **DRY HOLE MARKER REQUIREMENTS**

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

**1. Operator name 2. Lease and Well Number 3.API Number 4. Unit Letter 5. Quarter Section (feet from the North, South, East or West) 6. Section, Township and Range 7. Plugging Date 8. County**

#### **(SPECIAL CASES)**

#### **AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS**

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact