

Submit 3 Copies To Appropriate District
Office
District I
1625 N. French Dr., Hobbs, NM 88240
District II
811 South First, Artesia, NM 88210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
2040 South Pacheco, Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
2040 South Pacheco
Santa Fe, NM 87505

Form C-103
Revised March 25, 1999

WELL API NO.
30005-61624

5. Indicate Type of Lease
STATE ☐ FEE ☒

6. State Oil & Gas Lease No. ☒

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well:
Oil Well ☒ Gas Well ☐ Other ☐ Injection ☐

2. Name of Operator
Concho Oil & Gas Corp. /

3. Address of Operator
110 W. Louisiana Ste 410; Midland, Tx 79701

4. Well Location
Unit Letter G : 1650 Feet from the North line and 2310 feet from the East line
Section 18 Township 9S Range 29E NMPM Chaves County

7. Lease Name or Unit Agreement Name:
Twin Lakes San Andres Unit

7. Well No.
120

8. Pool name or Wildcat
Twin Lakes; San Andres (Assoc)

10. Elevation (Show whether DR, RKB, RT, GR, etc.)
3939 GL

11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data


NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒	REMEDIAL WORK ☐ ALTERING CASING ☐
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐	COMMENCE DRILLING OPNS. ☐ PLUG AND ABANDONMENT ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPLETION ☐	CASING TEST AND CEMENT JOB ☐
OTHER: ☐	OTHER: ☐

12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Concho Oil & Gas Corp. respectfully requests approval to plug and abandon the TLSAU #120 well according to the following procedure:

1. Notify NMOCD Artesia 24 hrs prior to commencement of procedure.
2. Cap CIBP @ 2673' w/ 35' of cmt.
3. Circ hole w/ mud.
4. Set 100' cmt plug @ 2050-2150'.
5. Set 100' cmt plug @ 1635-1735'.
6. Set 100' cmt plug @ 960-1060'.
7. Perf csg @ 195'. Squeeze w/ 25 sx.
8. Circ cmt from 195' to surface.
9. Cut off wellhead & install dry hole marker.

Perf csg - Squeeze 100' of cmt outside csg - 2050' to 2150'
Leave 100' of cmt inside csg - 2050' to 2150'
Perf csg - Squeeze 100' of cmt outside csg - 1400' to 1500'
Leave 100' of cmt inside csg - 1400' to 1500'
Perf csg - Squeeze 100' of cmt outside csg - 960' to 1060'
Leave 100' of cmt inside csg - 960' to 1060'

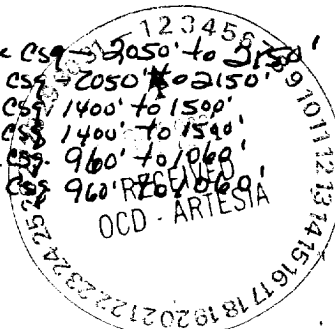

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE [Signature] TITLE Production Analyst DATE 9-28-01

Type or print name Terr Stathem Telephone No. 915/688-7443

(This space for State use)

APPROVED BY [Signature] TITLE Wild Sep ID DATE 10-10-01

Conditions of approval, if any:


TLSAU #120

Formerly - Moonshine 18 #3

Lease No.: 23391 Dist. No.: County: Chaves Field: Twin Lakes San Andres
 Section: 18 Twsp: 9S Range: 29E Unit Ltr: G Location: 1650' FNL & 2310' FEL

API No. 30-005-61624

Spud Date: 06/15/82
 TD Date: 06/20/82
 Comp Date: 10/03/82

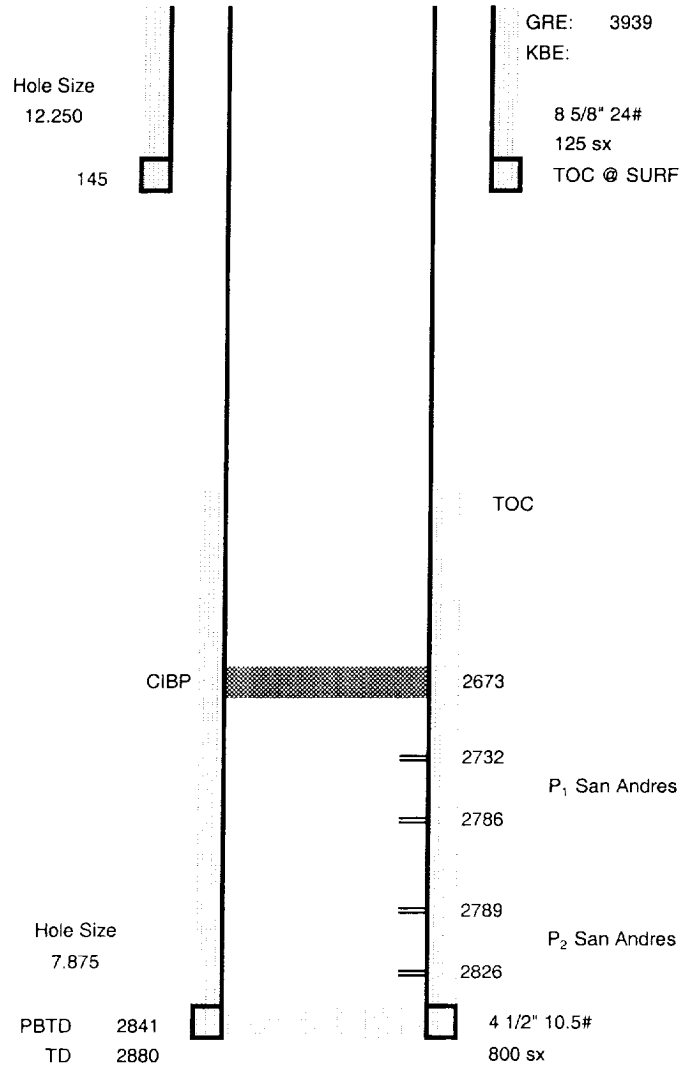

Original Perf Details: P1: 2752, 53, 54, 56, 57, 58, 67, 68, 71, 72, 73
 5000 gals 20% acid

Apr-88 Add P1: 2732, 33, 34, 39, 40, 44, 45, 46, 47, 48, 49, 50, 59, 63, 65, 66, 74, 75, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86
 Add P2: 2789-94, 2796-98, 2800-08, 2811-16, 2818-21, 2824-26
 Acid'd all perms w/ 6000 gals 20%

Sep-01 Set CIBP @ 2673'. Loaded hole and pressured casing. Pressured bled off.

Operator Concho Oil Co.
 Well Twin Lakes SA Unit # 120
 Unit G Section 18 Township 9 Range 29
 API # 30-005-61624

- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install Dry Hole Marker

* Notify OCD 24 hrs. prior to any work done



← 195' Plug 195' to surface
 ← Perf csg @ 195' squeeze 25' of cmt outside csg

← 100' Plug Perf csg & squeeze 100' of cmt outside csg 960' to 1060'
 LEAVE 100' of cmt inside csg. 960' to 1060'

← 100' Plug Perf csg & squeeze 100' of cmt outside csg. 1400' to 1500'
 LEAVE 100' of cmt inside csg. 1400' to 1500'

← 100' Plug Perf csg & squeeze 100' of cmt outside csg. 2050' to 2150'
 LEAVE 100' of cmt inside csg. 2050' to 2150'

2352' - TOL - CALC @ 50%

CIAP → 2673' Place 35' of cmt on CIAP

2732' Perfs
 2826'

4 1/2"
 2880'
 800' SX