

STATE OF NEW MEXICO
ENERGY AND MINERALS DEPARTMENT

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

OIL CONSERVATION DIVISION
P. O. BOX 2088
SANTA FE, NEW MEXICO 87501

Form C-103
Revised 10-1-78

5a. Indicate Type of Lease
State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.
B-9512

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- Water Disposal Well	7. Unit Agreement Name
2. Name of Operator TEXACO Inc.	8. Farm or Lease Name N.M. "CW" St. NCT-1
3. Address of Operator P.O. Box 728, Hobbs, New Mexico 88240	9. Well No. 2
4. Location of Well UNIT LETTER L , 1980 FEET FROM THE South LINE AND 624 FEET FROM THE West LINE, SECTION 18 TOWNSHIP 17-S RANGE 37-E NMPM.	10. Field and Pool, or Wildcat Midway Abo
15. Elevation (Show whether DF, RT, GR, etc.) 3822' (DF)	12. County Lea

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data
NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER Repair Water Flow <input checked="" type="checkbox"/>

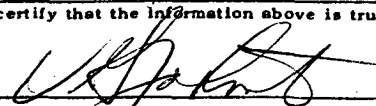
SUBSEQUENT REPORT OF:

REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
CASING TEST AND CEMENT JOBS <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. Rig up. Install BOP. Pull tubing & Pkr.
2. Set RBP @ 5000' & spot 25 sx. sand on top of plug.
3. Perforate 4 1/2" Csg W/2 JS @ approx. 3250'.
4. Set Cement retainer @ 3200'.
5. Cement to surface W/850 sx. Class 'H' Cement. Squeeze W/addl. 200 sx. class 'H' Cement. WOC. DOC. Test.
6. Pull RBP.
7. Run injection equipment. Return to water disposal.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Asst. Dist. Mgr.	DATE 1-7-83
ORIGINAL SIGNED BY		
APPROVED BY JERRY SEXTON	TITLE	DATE JAN 13 1983
CONDITIONS OF APPROVAL DISTRICT 1 SUPP.		