

Submit 3 Copies To Appropriate District
Office
District I
1625 N. French Dr., Hobbs, NM 88240
District II
1301 W. Grand Ave., Artesia, NM 88210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
1220 S. St. Francis Dr., Santa Fe, NM
87505

State of New Mexico
Energy, Minerals and Natural Resources
OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

Form C-103
June 19, 2008

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR, USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS)		WELL API NO. 30-25-29780
1. Type of Well: Oil Well ☒ Gas Well ☒ Other ☐		5. Indicate Type of Lease STATE ☒ FEE ☐
2. Name of Operator Mack Energy Corporation		6. State Oil & Gas Lease No. VO-5232
3. Address of Operator P.O. Box 960 Artesia, NM 88210		7. Lease Name or Unit Agreement Name Cherry State
4. Well Location Unit Letter <u>E</u> <u>1982</u> feet from the <u>North</u> line and <u>662</u> feet from the <u>West</u> line Section <u>9</u> Township <u>16S</u> Range <u>32E</u> NMPM County <u>Lea</u>		8. Well Number 1
11. Elevation (Show whether DR, RKB, RT, GR etc.) 4345' GR		9. OGRID Number 013837
		10. Pool Name or Wildcat Anderson Ranch; Wolfcamp, West

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK ☐	PLUG AND ABANDON ☒	PERFORM REMEDIAL WORK ☐	ALTERING CASING ☐
TEMPORARILY ABANDON ☐	CHANGE PLANS ☐	RECOMMENCE DRILLING OPS. ☐	PLUG AND A ☐
PULL OR ALTER CASING ☐	MULTIPLE COMPLETIONS ☐	REPAIRMENT JOB ☐	
DOWNHOLE COMMINGLE ☐			

OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions, include a description of the program of proposed completion or recompletion.

Notify OCD 24 hours prior to starting plugging operations.

1. Set CIBP @ 9475' w/35' cmt cap (Cover top of curve).
2. Perf @ 9110'. Squeeze 40sx Class H from 9110-8812' (Cover Wolfcamp). WOC & tag.
3. Perf @ 7680'. Squeeze 40sx Class H from 7680-7382' (Cover Abo). WOC & tag.
4. Set 25sx cmt plug from 5705-5448' (Cover Glorieta). WOC TAG
5. Set 25sx cmt plug from 4450-4090' (Cover intermediate shoe and San Andres). WOC - TAG
6. Set 25sx cmt plug from 2515-2258' (Cover base of salt). WOC & tag.
7. Set 25sx cmt plug from 1420-906' (Cover top of salt and 7" casing stub). WOC & tag.
8. Set 25sx cmt plug from 575-318' (Cover surface shoe).
9. Circulate cement from 60' to surface. Install Dry Hole Marker.

Note: Circ. Well with salt gel mud consisting of at least 9.5# Brine with 25 pounds of gel per barrel after the bottom plug is set.

Spud Date:

12/7/2010

Rig Release Date:

1/7/2011

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

Jerry W. Sherrell

TITLE Production Clerk

DATE 10/12/11

Type or print name Jerry W. Sherrell

E-mail address: jerrys@mec.com

PHONE: (575)748-1288

For State Use Only

APPROVED BY

[Signature]

TITLE

STAFF MGR


DATE 10-14-2011

Conditions of Approval (if any):

Before

**Mack Energy Corporation
Cherry State #1 30-025-29780**

Before

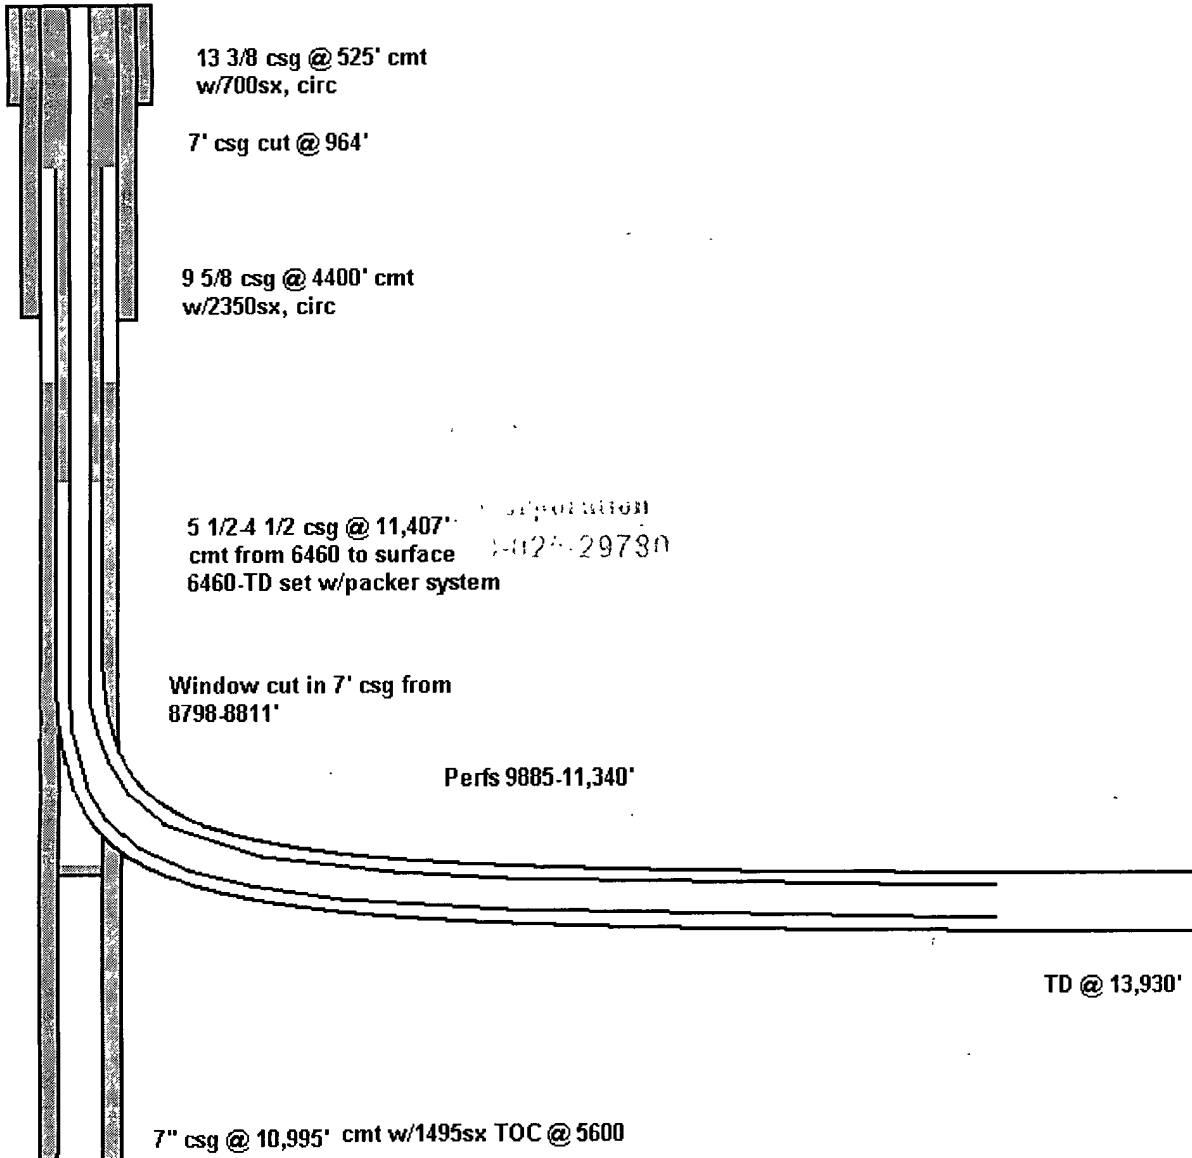

Mack Energy Corporation
Cherry State #1 30-025-29780

13 3/8 csg @ 525' cmt
w/700sx, circ

7' csg cut @ 964'

9 5/8 csg @ 4400' cmt
w/2350sx, circ

5 1/2 1/2 csg @ 11,407'
cmt from 6460 to surface
6460-TD set w/packer system

Window cut in 7' csg from
8798-8811'

Perfs 9885-11,340'

TD @ 13,930'

7" csg @ 10,995' cmt w/1495sx TOC @ 5600

1. Set CIBP @ 9475' w/35' cmt cap (Cover top of curve).
2. Perf @ 9110'. Squeeze 40sx Class H from 9110-8812' (Cover Wolfcamp). WOC & tag.
3. Perf @ 7680'. Squeeze 40sx Class H from 7680-7382' (Cover Abo). WOC & tag.
4. Set 25sx cmt plug from 5705-5448' (Cover Glorieta). WOC TAG
5. Set 25sx cmt plug from 4450-4090' (Cover intermediate shoe and San Andres).
6. Set 25sx cmt plug from 2515-2258' (Cover base of salt). WOC & tag.
7. Set 25sx cmt plug from 1420-906' (Cover top of salt and 7" casing stub). WOC & tag.
8. Set 25sx cmt plug from 575-318' (Cover surface shoe).
9. Circulate cement from 60' to surface. Install Dry Hole Marker.