

Submit 3 Copies To Appropriate District
Office
District I
1625 N. French Dr., Hobbs, NM 87240
District II
811 South First, Artesia, NM 87210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
2040 South Pacheco, Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
2040 South Pacheco
Santa Fe, NM 87505

Form C-103
Revised March 25, 1999

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)		WELL API NO. 30-025-03220
1. Type of Well: Oil Well ☐ Gas Well ☐ Other Injection ☐		5. Indicate Type of Lease STATE ☒ FEE ☐
2. Name of Operator Xeric Oil & Gas Corporation		6. State Oil & Gas Lease No. E-5838
3. Address of Operator P. O. Box 352 Midland, TX 79702		7. Lease Name or Unit Agreement Name: East Pearl Queen Unit
4. Well Location Unit Letter <u>K</u> : 1980 feet from the <u>South</u> line and 1980 feet from the <u>West</u> line Section <u>27</u> Township <u>19S</u> Range <u>35E</u> NMPM Lea County		8. Well No. 32
10. Elevation (Show whether DR, RKB, RT, GR, etc.) 3726' DF		9. Pool name or Wildcat Pearl Queen

11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPLETION ☐
OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ PLUG AND ABANDONMENT ☐
CASING TEST AND CEMENT JOB ☐
OTHER: ☐

12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

- 1) MIRU Pulling Unit.
- 2) Circulate hole w/+/- 60 bbls mud.
- 3) Spot 25 sx Class C @ 4600' & tag.
- 4) Perforate @ 1700' & squeeze 50' in & out & tag @ 1650'.
- 5) Perforate @ 350' & squeeze 50' out and circulate to surface.
- 6) Circulate 10 sx Class C cement @ 60' & to surface.
- 7) RD. Install dry hole marker & clean location.

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Angie Crawford TITLE Production Analyst DATE 9/4/03

Type or print name Angie Crawford Telephone No. 432-683-3171

(This space for State use)

APPROVED BY
Conditions of approval, if any:

GARY W WINK
FIELD REPRESENTATIVE II/STAFF MANAGER

DATE

SEP 08 2003

XERIC OIL & GAS CORP.
WELLBORE DIAGRAM

WELL: East Pearl Queen #32


COUNTY: Lea

STATE: NM

HOLE SIZE: 11"
CASING: 8 5/8" @ 317
CEMENTED WITH: 300 SX
CEMENT TOP: Surface

TUBING: _____
RODS: _____
PUMP: _____
PACKER: _____

HOLE SIZE: 7 7/8"
CASING: 5 1/2" @ 5699
CEMENTED WITH: 550 SX
CEMENT TOP: 2000'

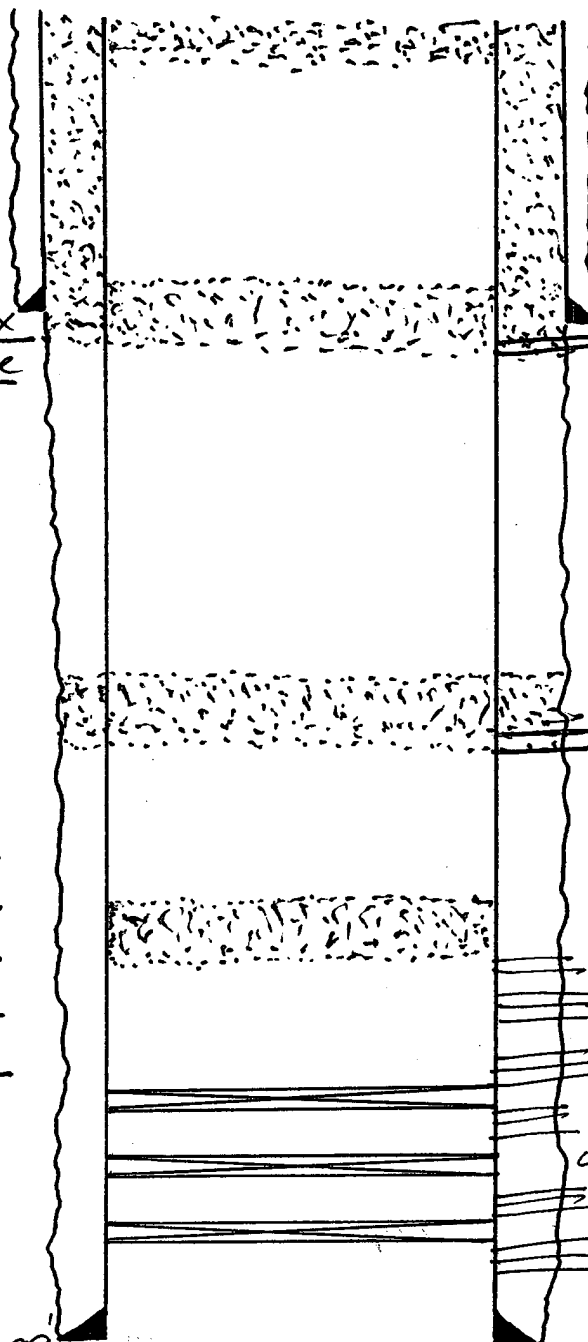

Perf @ 350'

Perf @ 1700'

PERFS:
4801' - 22'
4834' - 45'
4852' - 57'
4869' - 77'
4880' - 77'
4890' - 70'
5158' - 70'
5190' - 77'
5668' - 77'

PBTD: 4862'

TD: 5699'