

Submit 3 Copies To Appropriate
District Office
District I
1625 N. French Dr., Hobbs, NM 88240
District II
1301 W. Grand Ave., Artesia, NM 88210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
1220 S. St. Francis Dr., Santa Fe, NM
87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
Revised June 10, 2003

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO. 30 025 21358
5. Indicate Type of Lease STATE ☒ FEE ☐
6. State Oil & Gas Lease No.
7. Lease Name or Unit Agreement Name Aztec State
8. Well Number 1
9. OGRID Number 20713
10. Pool name or Wildcat: Vacuum; Grayburg-SA 62180

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH
PROPOSALS.)

1. Type of Well: Oil Well ☒ Gas Well ☐ Other (Injection) ☐
2. Name of Operator Shinnery Oil Co., Inc.
3. Address of Operator 606 W. Tennessee, Suite 107, Midland, TX 79701
4. Well Location (Surface): Unit Letter <u>N</u> : <u>660</u> feet from the <u>South</u> line and <u>1984</u> feet from the <u>West</u> line Section <u>15</u> Township <u>17S</u> Range <u>34E</u> NMPM Lea County

11. Elevation (Show whether DR, RKB, RT, GR, etc.):

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐	PLUG AND ABANDON ☒
TEMPORARILY ABANDON ☐	CHANGE PLANS ☐
PULL OR ALTER CASING ☐	MULTIPLE COMPLETION ☐
OTHER:	

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐	ALTERING CASING ☐
COMMENCE DRILLING OPNS ☐	PLUG AND ABANDONMENT ☐
CASING TEST AND CEMENT JOB ☐	
OTHER:	


13. Describe proposed or completed operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Propose to P & A as follows:

1. Casing has collapsed above San Andres perforations @ 4715-43'
2. CIBP @ 3600' w/35' cement on top. PBTD @ 3565'
3. Set CIBP @ 2900' & put 35' of cement on top - tag.
4. Stretch and cut 4 1/2" @ 2360', cement inside & outside stub w/25 sx -
5. 25 sx plug from 1400-1500', tag.
6. 25 sx plug from 900-1000', tag.
7. 40 sx plug from 275-375', 8 5/8" casing shoe, tag.
8. 10 sx plug @ surface - WOC & set P & A Marker.

Class C/Poz cement or type as specified by OCD.
Wellbore Diagram attached.

WOC TAG
WHICHEVER IS GREATER
SPACE BETWEEN
PLUGS W/ SALT GEL MUD

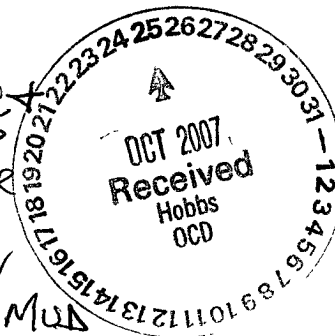

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE _____ TITLE Regulatory Agent _____ DATE: 10-09-07 _____

Type or print name Ann E. Ritchie E-mail address: ann.ritchie@wtor.net Telephone No. 432 684-6381

(This space for State use)

APPROVED BY _____ TITLE _____
Conditions of approval, if any: _____
THE OIL CONSERVATION DIVISION MUST
BE NOTIFIED 24 HOURS PRIOR TO THE
BEGINNING OF PLUGGING OPERATIONS

Aztec-State

Sec 15, T-17-S, R-34-E

660' FSL & 1984' FWL

Spud 11-64

