

NO. OF COPIES RECEIVED		
DISTRIBUTION		
SANTA FE		
FILE		
U.S.G.S.		
LAND OFFICE		
OPERATOR		

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	<b>E-7425</b>

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

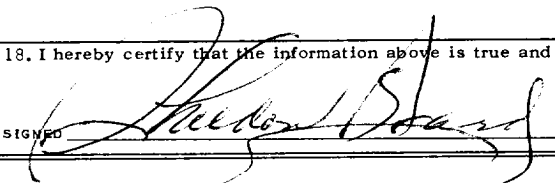
1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator <b>Texas Pacific Oil Company</b>	8. Farm or Lease Name <b>State "AG"</b>
3. Address of Operator <b>Box 1069, Hobbs, New Mexico</b>	9. Well No. <b>1</b>
4. Location of Well UNIT LETTER <b>G</b> , <b>2310</b> FEET FROM THE <b>North</b> LINE AND <b>1980</b> FEET FROM THE <b>East</b> LINE, SECTION <b>15</b> TOWNSHIP <b>10</b> RANGE <b>36</b> N.M.P.M.	10. Field and Pool, or Wildcat <b>San Andres</b>
15. Elevation (Show whether DF, RT, GR, etc.) <b>4003'</b>	12. County <b>Lea</b>

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input checked="" type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. Spot drilling mud from TD (4980') over perforations 4925' to 4939' (7 holes) back to 4900'.
2. Run C.I. Bridge Plug and set at 4900' and spot 25 sack cement on top of plug.
3. Shoot off 5 1/2" casing at 4245' approximate cement top 4246' (Indicated by temperature survey).
4. Pull and lay down 5 1/2" casing.
5. Run 2 3/8" tubing.
6. Displace water in hole with drilling mud.
7. Spot 25 sack cement at top of 5 1/2" casing cut off (approx. 4245).
8. Remove all surface well head equipment.
9. Spot 10 sack cement plug at surface and install marker.
10. Clean location and fill cellar.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE <b>Area Superintendent</b>	DATE <b>1-21-66</b>
APPROVED BY _____	TITLE _____	DATE _____
CONDITIONS OF APPROVAL, IF ANY: _____		