

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well <input checked="" type="checkbox"/> Oil Well <input type="checkbox"/> Gas Well <input type="checkbox"/> Other	5. Lease Designation and Serial No. LC 068401
2. Name of Operator O'Neill Properties, Ltd.	6. If Indian, Allottee or Tribe Name
3. Address and Telephone No. P. O. Box 2840, Midland, Texas 79702 915/683-2771	7. If Unit or CA, Agreement Designation
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) Unit D, 660' FNL & 510' FWL, Sec. 34-8S-37E /	8. Well Name and No. Federal K No. 1
	9. API Well No. 30-041-00193
	10. Field and Pool, or Exploratory Area Allison (Perm)
	11. County or Parish, State Roosevelt

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION
<input checked="" type="checkbox"/> Notice of Intent	<input checked="" type="checkbox"/> Abandonment
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Recompletion
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Plugging Back
	<input type="checkbox"/> Casing Repair
	<input type="checkbox"/> Altering Casing
	<input type="checkbox"/> Other
	<input type="checkbox"/> Change of Plans
	<input type="checkbox"/> New Construction
	<input type="checkbox"/> Non-Routine Fracturing
	<input type="checkbox"/> Water Shut-Off
	<input type="checkbox"/> Conversion to Injection
	<input type="checkbox"/> Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Propose to permanently abandon well as follows:

1. Call Roswell Office and notify work is starting.
2. Place 30 sxs plug on CIBP @ 9560', filling casing 250' to 9310'.
3. Pull 5 1/2" casing from at least 4276'.
4. Place 200' cement plug across cement top depth @ 7730'.
5. Place 200' cement plug across 5 1/2" casing stub. *Tag plug.*
6. Place 200' cement plug across 8 5/8" casing seat. (can be combined with No. 5 if seat and stub are close together). *Tag plug.*
7. Perforate 8 5/8" casing opposite 13 3/8" casing seat @ 431'. Squeeze with 20 sxs, leaving 100' inside 8 5/8".
8. Place 50' cement plug @ surface.
9. Erect abandoned hole marker. Restore surface. Remove all junk. Call Roswell Office for inspection.

14. I hereby certify that the foregoing is true and correct

Signed [Signature]


Title Petroleum Engineer

Date 5-17-93

(This space for Federal or State office use)

Approved by _____
Conditions of approval, if any:

Title _____

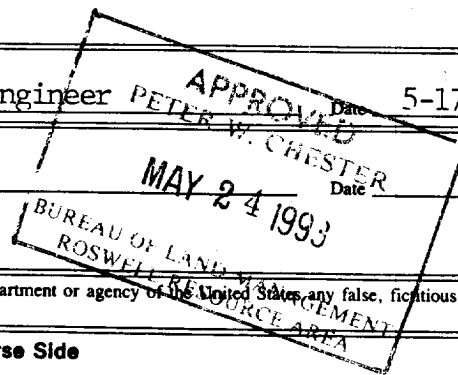

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

*See Instruction on Reverse Side

RECEIVED
MAY 20 1993
OCD HOBBS OFFICE