

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPI
(Other instructions
reverse side)TE*
re-Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM- 01 000

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Roland McLean Federal

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Todd Wolfcamp

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREASec. 23, T-7-S,
R-35-E

12. COUNTY OR PARISH

13. STATE

Roosevelt

N.M.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐		7. UNIT AGREEMENT NAME	
2. NAME OF OPERATOR Texaco Inc.		8. FARM OR LEASE NAME Roland McLean Federal	
3. ADDRESS OF OPERATOR Box 720, Hobbs, New Mexico 78240		9. WELL NO. 1	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 555' FSL & 550' FWL of Section 23, T-7-S, R-35-E, Unit Letter M		10. FIELD AND POOL, OR WILDCAT Todd Wolfcamp	
14. PERMIT NO. Regular		15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4122' OR	
		13. STATE N.M.	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐PULL OR ALTER CASING ☐FRACTURE TREAT ☐MULTIPLE COMPLETE ☐SHOOT OR ACIDIZE ☐ABANDON* ☒REPAIR WELL ☐CHANGE PLANS ☐(Other) ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐REPAIRING WELL ☐FRACTURE TREATMENT ☐ALTERING CASING ☐SHOOTING OR ACIDIZING ☐ABANDONMENT* ☐(Other) ☐(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

1. Pull production equipment.
2. Mud up hole, spot 100' (20 sk.) cement plug across perfs. (7394-617).
3. Pull tubing, run free point indicator, cut off 5-1/2" casing and pull same. (Calc. cement top @ 4525').
4. Run free point indicator, cut off 5-1/2" casing and pull same. (Calc. cement top @ 2950').
5. Run tubing, spot 100' (35 sk.) cement plug across 5-1/2" casing stub. If stub is below 8-5/8" casing shoe, spot 100' (50 sk.) cement plug across 8-5/8" casing shoe @ 4000'.
6. Pull up and spot 100' (50 sk.) cement plug across 8-5/8" casing stub. If 8-5/8" casing stub is below 11-3/4" casing shoe @ 365', spot 100' cement plug across 11-3/4" casing shoe.
7. Spot 10 sk. cement plug @ surface, install marker and clean location.

AMENDMENT: If 8-5/8" casing cannot be pulled below 365' place additional
100 foot cement plug inside 8-5/8" casing in the interval
900-1000 feet.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE Asst. Dist. Supt.

DATE 10-17-72

(This space for Federal or State office use)


APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

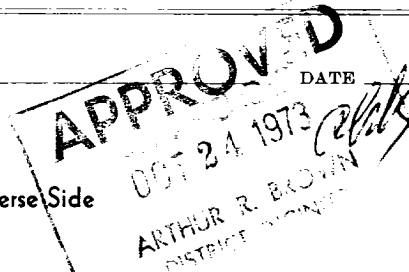

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations; and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.