

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

N. H. GIL ROSS, COMMISSIONER
P. O. BOX 1000
ROOSEVELT, NEW MEXICO 88240

FORM APPROVED
Budget Bureau No. 1004-0131
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

5. Lease Designation and Serial No.

NM-0560261

6. If Indian, Allottee or Tribe Name

7. If Unit or L.A. Agreement Designation

SUBMIT IN TRIPLICATE

1. Type of Well:

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

Amoco Production Company *as agent for Central Tx Oper. Inc.*

3. Address and Telephone No.

P. O. Box 3092 (Rm 17.182) Houston, TX 77253-3092 (713) 366-7686

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1980' FNL x 660' FNL, Section 8, T-8-S, R-38-E

8. Well Name and No.

Ainsworth Federal No. 1

9. API Well No.

30-041-20343

10. Field and Pool, or Exploratory Area

Bluitt (San Andres)

11. County or Parish, State

Roosevelt, NM

CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION


- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☐ Other

- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

1. Pull Production Equipment (available records show 2-3/8 Tubing set at 4741' with a packer at 4741' measured depth.)
2. Set CIBP at 4700' and cap with 50' cement (perforations at 4748-4760').
3. Determine 4-1/2" Casing cement top by free point stretch test. Cut 4-1/2 casing at free point and pull.
4. Spot cement plug from 50' below to 50' above cut 4-1/2 casing. *Tag plug*
5. Spot cement plug from 346' to 296', to cover 8-5/8" casing shoe at 346' measured depth. *Tag plug*
6. Spot cement plug from 50' to surface.
7. Load well with 10# saltgel mud between cement plugs.
8. Weld Steel plate, with pressure valve and identification sign, on top.

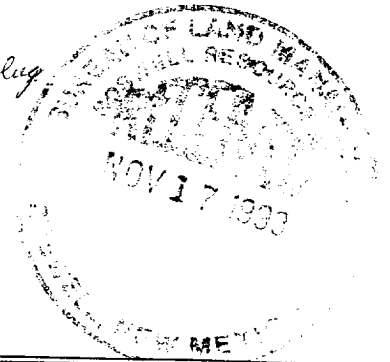

14. I hereby certify that the foregoing is true and correct.

Signed: *Dennis Plencia*

Title: Staff Assistant

(This space for Federal or State Office use)

Approved by: _____
Conditions of approval, if any: _____

Title: _____

APPROVED 11-10-93

NOV 19 1993

BUREAU OF LAND MANAGEMENT
ROOSEVELT, NEW MEXICO
RESOURCE AREA

*See instruction on Reverse Side
NMOC

cc: Jack Erwin
Well File

Joe Mitchell
Matt Wines