☐ Final Abandonment Notice

TED STATES

DEPARTM. INTERIOR **BUREAU OF LAND MANAGEMENT**

'W. Oil C s. i ் 25 N. French Du

Water Disposal

FORM APPROVED OMB No. 1004-0135 Expires July 31, 1996

SUNDRY NOTICES AND REPORTS ON WEL

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

Hobbs, NN C624 Lease Serial No. LC 029509B

6. If Indian, Allottee or Tribe Name

SUBMIT IN TRIPLICATE - Other instructions on reverse side	7. If Unit or CA/Agreement, Name and/or No.	
1. Type of Well Oil Well Gas Well Other Injection	8. Well Name and No.	
2. Name of Operator Conoco, Inc.	M.C.A. #87 9. API Well No.	
3a. Address 10 Desta Dr. Ste.100W Midland, TX 3b. Phone No. (include area code) 915-686-5580	30-025-00626 10. Field and Pool, or Exploratory Area	
4. Location of Well (Footage, Sec., T., R., M., or Survey Description)	Maljamar GB-SA	
Un. Ltr. N, 660' FSL & 1980' FWL Section 22, T-17S, R-32E	11. County or Parish, State Lea County, NM	
12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE,	REPORT, OR OTHER DATA	

TYPE OF SUBMISSION		TY	PE OF ACTION	
Notice of Intent Subsequent Report	Acidize Alter Casing Casing Repair	Deepen Fracture Treat New Construction	Production (Start/Resume) Reclamation Recomplete	Water Shut-Off Well Integrity Other
Final Abandonment Notice	Change Plans	Plug and Abandon	Temporarily Abandon	

- 13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereo. If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zone: Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 day following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed onc testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)
 - Set a cement retainer at 3225'. Squeeze 35 sxs cement into 3" liner. 1.

Plug Back

Circulate the hole with gelled brine mud.


Convert to Injection

- 3. Spot 25 sxs cement plug 2000'-2360'.
- Cut and pull the 4 1/2" casing at 1500'. Spot a 25 sxs cement stub plug 1400'-1600'. -A.
- Perforate the 7" casing at 900'. Set a cement retainer at 800' and 5. squeeze 40 sxs cement thru perfs at 900'.
- Perforate the 7" casing at 300'. Circulate 125 sxs cement thru perfs at 300' and fill hole to surface.
- Install dryhole marker and clear location.

Regulatory Assistant
1egulatory /1551574/11
SE
WENCEN P

Time 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious of fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions op reverse) Distrib: BUNG, OCD(), SHEAR, PONCA, COST ASST,

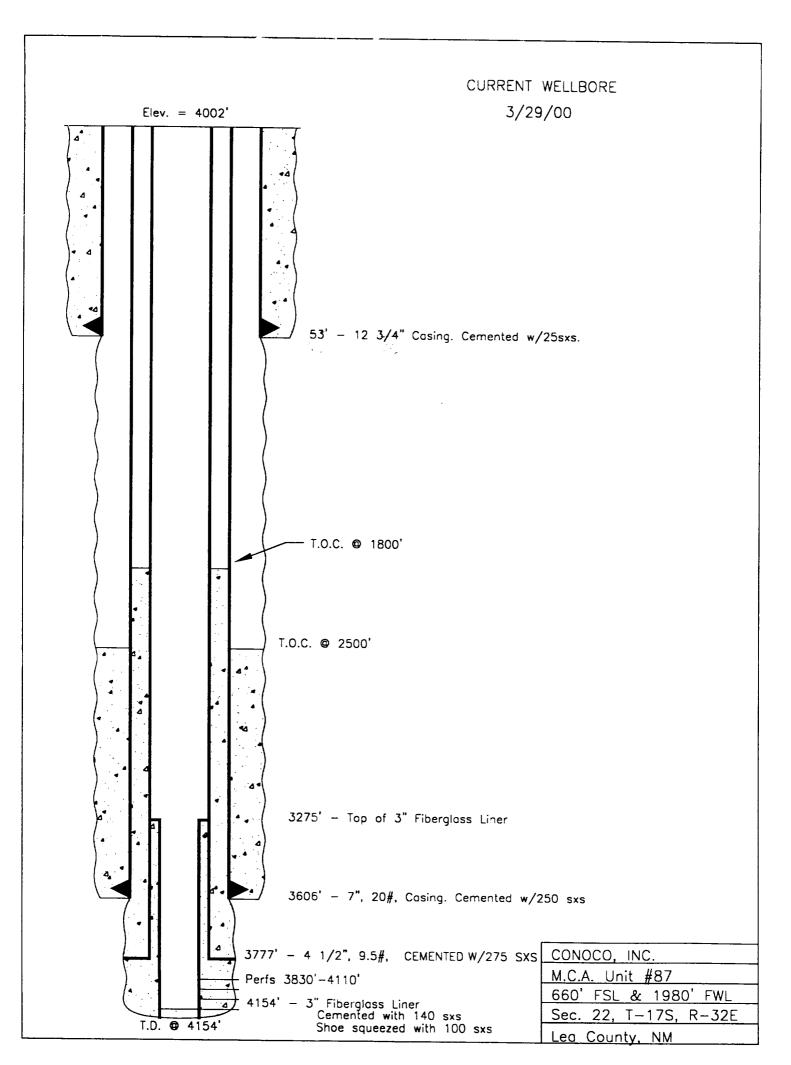

PROPOSED PLUG AND ABANDONMENT

