

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TR. DATE
(Order, Instructions, or Form)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS
(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Injection Well
2. NAME OF OPERATOR
Conoco Inc.
3. ADDRESS OF OPERATOR
P.O. Box 460 - Hobbs, New Mexico 88240
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

14. PERMIT NO.
30-025-00704
15. ELEVATIONS (Show whether DF, RT, GR, etc.)

5. LEASE DESIGNATION AND SERIAL NO.
LC-058699
6. IF INDIAN, ALLOTTEE OR TRIBE NAME
7. UNIT AGREEMENT NAME
MCA Unit
8. FARM OR LEASE NAME
MCA Unit
9. WELL NO.
187
10. FIELD AND POOL, OR WILDCAT
Maljamar G-SA
11. SEC. T., R. M., OR BLK. AND SURVEY OR AREA
26-17S-32 E
12. COUNTY OR PARISH
Lea
13. STATE
nm

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
(Other) ☐

PULL OR ALTER CASING ☐
MULTIPLE COMPLETE ☐
ABANDON* ☒
CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐
FRACTURE TREATMENT ☐
SHOOTING OR ACIDIZING ☐
(Other) ☐

REPAIRING WELL ☐
ALTERING CASING ☐
ABANDONMENT* ☐

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

1. MIRU. G1H w/working - to cement plug at 2054'. If tag on csq collapse at 465', pick up bit & DC & turn thru collapse. If cannot get thru bad csq, procedures will be modified.
2. At 2054' spot 33. bbls mud from 2054' - 700'. Displace w/2.3 bbls to obtain spot. Pull 1000'. Spot 21 sxs class "C" w/2 CaCl₂ from 1000' - 800'. Displace cement w/3 bbls POOH.
3. Establish pump-in rate. Pump 230 sxs class "C" w/2% CaCl₂ down csq. Displace cement w/4.3 bbls water to 175'.
4. Tag TOC at 175'. Shoot squeeze at 150' w/4 js pf. Pump 75 sxs class "C" w/2% CaCl₂ down csq. Circ to surface. Close csq valve & squeeze remainder of cement away. Leave csq full of cement.
5. Cut off csq and install PFA marker.

18. I hereby certify that the foregoing is true and correct

SIGNED William W. Baker
(This space for Federal or State office use)

TITLE Administrative Supervisor

DATE May 3, 1989

APPROVED BY John J. [Signature]
CONDITIONS OF APPROVAL, IF ANY:

FOR:
TITLE


DATE 5-22-89

Like Approval
By State

*See Instructions on Reverse Side

MCA 187

1980' FSL 660 FNL 26-17-32
 El. 3943 (DF)
 TD 4073

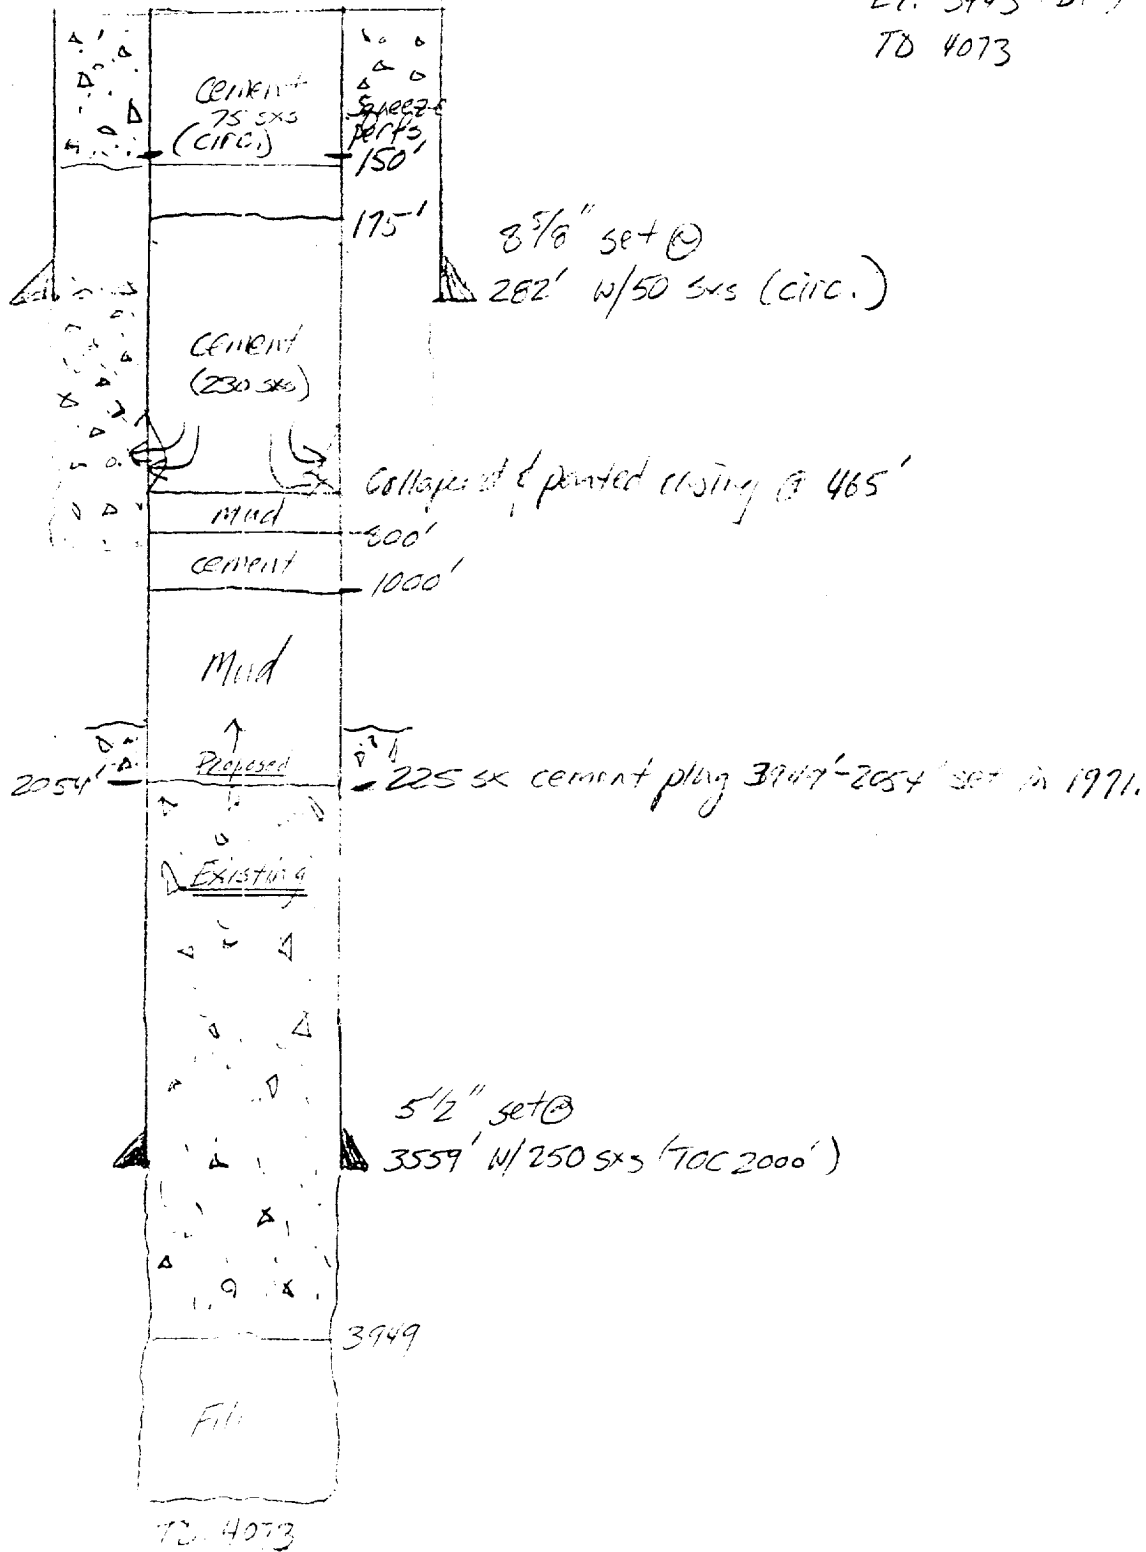

PROPOSED DE CORE

Calculation sheet

MCA 187