

NO. OF COPIES RECEIVED		
DISTRIBUTION		
SANTA FE		
FILE		
U.S.G.S.		
LAND OFFICE		
OPERATOR		

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	OG-5460

## SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator Imperial-American Management Co.	8. Name of Lease Name Stipp State
3. Address of Operator 507 Midland Savings Bldg., Midland, Texas 79701	9. Well No. 1
4. Location of Well UNIT LETTER <u>F</u> , <u>1980</u> FEET FROM THE <u>North</u> LINE AND <u>1980</u> FEET FROM THE <u>West</u> LINE, SECTION <u>9</u> TOWNSHIP <u>15-S</u> RANGE <u>33-E</u> NMPM.	10. Field and Pool, or Well Unit Saunders Permo Penn
15. Elevation (Show whether DF, RT, GR, etc.) 4194.6 GR	12. County Lea

## Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

### NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>

### SUBSEQUENT REPORT OF:


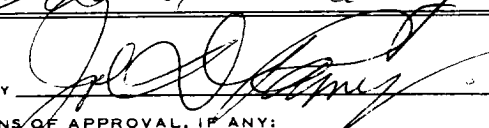
REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
CASING TEST AND CEMENT JOBS <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

We propose to plug and abandon this well as follows:

1. Load hole w/9.5# mud.
2. Set cast iron bridge plug @ 9500' w/20' cement on plug.
3. Shoot off 5½" csg at free point, est. 7000', and pull same.
4. Set 30 sx cement plug 4200-4300', half in - half out of 8-5/8" csg.
5. Shoot off 8-5/8" csg. at free point, est. 2000' and pull same.
6. Set 100' cement plug at base of salt section, 2500-2600'.
7. Set 100' cement plug at top of salt section 1500-1600'.
8. Set 75 sx cement plug from 320-420', half in - half out of 13-3/8" casing.
9. Set 15 sx cement plug from 0-20'.
10. Remove wellhead, weld on plate set surface marker, clean up location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE <u>Division Manager</u>	DATE <u>3-18-71</u>
APPROVED BY 	TITLE <u>SUPERVISOR DISTRICT 1</u>	DATE <u>MAR 22 1971</u>
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

MAR 10 1971

OIL CONSERVATION COMM.  
HOBBBS, W. L.