

NO. OF COPIES RECEIVED	
DISTRIBUTION	
DATE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease	
State <input checked="" type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	
B-1306-1	

## SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL, GO TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL <input checked="" type="checkbox"/> WELL GAS <input type="checkbox"/> WELL OTHER <input type="checkbox"/>		7. Unit Agreement Name
2. Name of Operator TEXACO Inc.		8. Farm or Lease Name New Mexico 'R' State NCT-1
3. Address of Operator P.O. Box 728, Hobbs, New Mexico 88240		9. Well No. 11
4. Location of Well UNIT LETTER H 990 FEET FROM THE East LINE AND 1650 FEET FROM THE North LINE, SECTION 6 TOWNSHIP 18S RANGE 35E N.M.P.M.		10. Field and Pool, or Wildcat Vacuum Glorieta
15. Elevation (Show whether DF, RT, GR, etc.) 3980 DF		12. County Lea

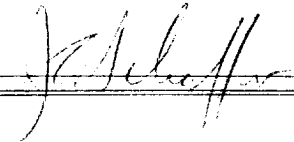
## Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER Squeeze to shut off Yates water <input checked="" type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. Pull rods and pump.
2. Run temperature survey to determine water entry.
3. Run RBP in 2 7/8" casing and set below water entry, dump sand on BP.
4. Perforate 2 7/8" casing w/2 holes. Set E Z drill cement retainer above perforations and squeeze w/class 'C' cement w/18% salt and 2% CaCl.
5. Drill out retainer and cement, test casing.
6. Pull RBP, run pumping equipment and return to production.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Asst. Dist. Supt.	DATE 2-12-75
APPROVED BY _____	TITLE _____	DATE _____
CONDITIONS OF APPROVAL, IF ANY:		