

Submit 3 Copies To Appropriate District

Office

District I

1625 N. French Dr., Hobbs, NM 88240

District II

811 South First, Artesia, NM 88210

District III

1000 Rio Brazos Rd., Aztec, NM 87410

District IV

1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

Form C-103

Revised March 25, 1999

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)	
1. Type of Well: Oil Well ☐ Gas Well ☐ Other Injection ☐	WELL API NO. 30-025-32873
2. Name of Operator Texaco Exploration & Production, Inc.	5. Indicate Type of Lease STATE ☒ FEE ☐
3. Address of Operator P.O. Box 3109 Midland, Texas 79702	6. State Oil & Gas Lease No. B-1306
4. Well Location Unit Letter <u>G</u> <u>1410</u> feet from the <u>North</u> line and <u>2630</u> feet from the <u>East</u> line Section <u>6</u> Township <u>18S</u> Range <u>35E</u> NMPM Lea County	7. Lease Name or Unit Agreement Name: New Mexico "R" State NCT-1
8. Well No. 16	
9. Pool name or Wildcat Vacuum Drinkard	
10. Elevation (Show whether DR, RKB, RT, GR, etc.)	

11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒

TEMPORARILY ABANDON ☐ CHANGE PLANS ☐

PULL OR ALTER CASING ☐ MULTIPLE COMPLETION ☐

OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐

COMMENCE DRILLING OPNS. ☐ PLUG AND ABANDONMENT ☐

CASING TEST AND CEMENT JOB ☐

OTHER: ☐

12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

1. Set 5½" CIBP @ 7575', spot 25 SX plug 7575' - 7375' (Drinkard) WOC Tag
2. Displace hole W/MLF, 9.5# Brine W/25# gel P/BBL
3. Spot 25 Sx plug 3800' - 3600' (Queen)
4. Spot 25 Sx Plug 2800' - 2600' (Yates, B-Salt) WOC Tag
5. Spot 50 Sx plug 1600' - 1200' (8 5/8 shoe, T-Salt) WOC Tag
6. 10 Sx surface, install dry hole marker

THE COMMISSIONARY SHALL BE NOTIFIED 24 HOURS PRIOR TO THE COMMENCING OF PLUGGING OPERATIONS FOR THE C-103 TO BE APPROVED.

I hereby certify that the information above is true and complete to the best of my knowledge and belief.


SIGNATURE James T. Corbett TITLE FACILITY ENGINEER

Type or print name JAMES T. CORBETT

(This space for State use)

APPROVED BY Harry W. Wink TITLE

Conditions of approval, if any:

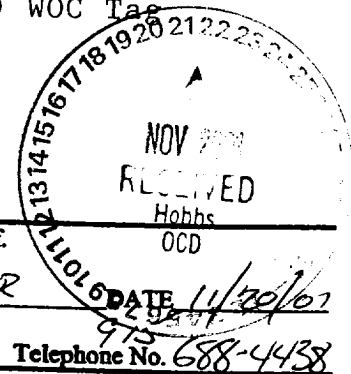

Telephone No. 688-4438


DATE 11/20/01

PLUGGING & ABANDONMENT WORKSHEET

(2 STRING CSNG)

OPERATOR Texaco Exploration & Production Inc.
LEASENAME NEW MEXICO "R" STATE NCT-1

WELL # 16
SECT 6 TWN 18S RNG 35E
FROM 1410 NSL 2630 EWL
TD: 8100 FORMATION @ TD DRINKARD
PBD: 8028 FORMATION @ PBD

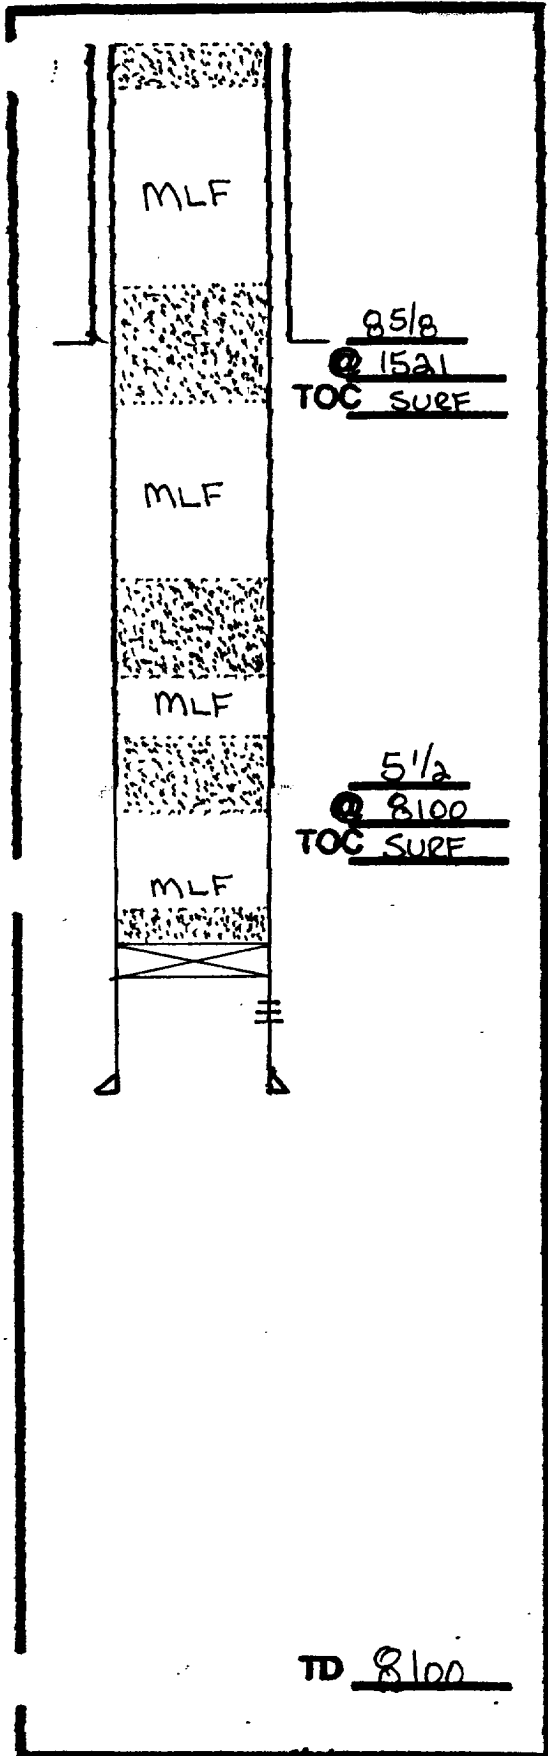

	SIZE	SET @	TOC	TOC DETERMINED BY
SURFACE	8 5/8	1521	SURF	Circ
INTMED 1				
INTMED 2				
PROD	5 1/2	8100	SURF	Circ
	SIZE	TOP	BOT	TOC DETERMINED BY
LINER 1				
LINER 2				
	CUT & PULL @		TOP - BOTTOM	
INTMED 1			FEARS	7630 - 7946
INTMED 2			OPENHOLE	-
PROD				

*REQUIRED PLUGS DISTRICT I

PLUG	TYPE	SACKS	DEPTH
FLUG #1	OH	35 SXS	6400'
FLUG #2	SHOE	30 SXS	5350'-5450'
FLUG #3	CIBP/35'		4800'
FLUG #4	CIBP	25 SXS	4800'
FLUG #5	STUB	30 SXS	3600'-3700'
FLUG #6	REDUC SQZ	200 SXS	400'
FLUG #7	SURF	10 SXS	0-10'
FLUG #8	CIBP		7575
FLUG #9	DRINKARD	25 SX	7575-7375
FLUG #10	QUEEN	25 SX	3800-3600
FLUG #11	YATES	25 SX	2800-2600
FLUG #12	8 5/8 S	50 SX	1600-1200
FLUG #13	SURF	10 SX	10'-SURF
FLUG #14			
FLUG #15			
FLUG #16			
FLUG #17			
FLUG #18			
FLUG #19			
FLUG #20			
FLUG #21			
FLUG #22			
FLUG #23			
FLUG #24			
FLUG #25			
FLUG #26			
FLUG #27			
FLUG #28			
FLUG #29			
FLUG #30			
FLUG #31			
FLUG #32			
FLUG #33			
FLUG #34			
FLUG #35			
FLUG #36			
FLUG #37			
FLUG #38			
FLUG #39			
FLUG #40			
FLUG #41			
FLUG #42			
FLUG #43			
FLUG #44			
FLUG #45			
FLUG #46			
FLUG #47			
FLUG #48			
FLUG #49			
FLUG #50			

PLUG	TYPE	SACKS	DEPTH
FLUG #1	OH	35 SXS	6400'
FLUG #2	SHOE	30 SXS	5350'-5450'
FLUG #3	CIBP/35'		4800'
FLUG #4	CIBP	25 SXS	4800'
FLUG #5	STUB	30 SXS	3600'-3700'
FLUG #6	REDUC SQZ	200 SXS	400'
FLUG #7	SURF	10 SXS	0-10'
FLUG #8	CIBP		7575
FLUG #9	DRINKARD	25 SX	7575-7375
FLUG #10	QUEEN	25 SX	3800-3600
FLUG #11	YATES	25 SX	2800-2600
FLUG #12	8 5/8 S	50 SX	1600-1200
FLUG #13	SURF	10 SX	10'-SURF
FLUG #14			
FLUG #15			
FLUG #16			
FLUG #17			
FLUG #18			
FLUG #19			
FLUG #20			
FLUG #21			
FLUG #22			
FLUG #23			
FLUG #24			
FLUG #25			
FLUG #26			
FLUG #27			
FLUG #28			
FLUG #29			
FLUG #30			
FLUG #31			
FLUG #32			
FLUG #33			
FLUG #34			
FLUG #35			
FLUG #36			
FLUG #37			
FLUG #38			
FLUG #39			
FLUG #40			
FLUG #41			
FLUG #42			
FLUG #43			
FLUG #44			
FLUG #45			
FLUG #46			
FLUG #47			
FLUG #48			
FLUG #49			
FLUG #50			

