

Submit 3 Copies To Appropriate District Office

District I

1625 N. French Dr., Hobbs, NM 88240

District II

811 South First, Artesia, NM 88210

District III

1000 Rio Brazos Rd., Aztec, NM 87410

District IV

1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

Form C-103
Revised March 25, 1999

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)		WELL API NO. 30-025-32874
1. Type of Well: Oil Well ☐ Gas Well ☐ Other ☒ Injector		5. Indicate Type of Lease STATE ☒ FEE ☐
2. Name of Operator Texaco Exploration, Inc.		6. State Oil & Gas Lease No. B-1306
3. Address of Operator P. O. Box 3109, Midland, TX 79702		7. Lease Name or Unit Agreement Name: New Mexico "R" State NCT - 1
4. Well Location Unit Letter G : 2530 feet from the North line and 2530 feet from the East line Section 6 Township 18-S Range 35-E NMPM Lea County		8. Well No. 17
10. Elevation (Show whether DR, RKB, RT, GR, etc.)		9. Pool name or Wildcat Vacuum Drinkard

11. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒

TEMPORARILY ABANDON ☐ CHANGE PLANS ☐

PULL OR ALTER CASING ☐ MULTIPLE COMPLETION ☐

OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐

COMMENCE DRILLING OPNS. ☐ PLUG AND ABANDONMENT ☐

CASING TEST AND CEMENT JOB ☐

OTHER: ☐

12. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompilation.

1. Set 5 1/2" CIBP @ 7600', spot 25 sx plug 7600'-7400' (Drinkard) WOC Tag.
2. Displace hole w/MLF, 9.5# Brine w/25# gel P/BBL.
3. Spot 25 sx plug 3800'-3600' (Queen)
4. Spot 25 sx plug 2800'-2600' (Yates, B-Salt) WOC Tag.
5. Spot 50 sx plug 1600'-1200' (8 5/8" shoe, T-Salt) WOC Tag.
6. 10 sx surface, Install dry hole marker.

THE COMMISSION MUST BE NOTIFIED 24 HOURS PRIOR TO THE BEGINNING OF PLUGGING OPERATIONS FOR THE C-103 TO BE APPROVED.


I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE James T. Corbitt TITLE FACILITY ENGINEER

Type or print name JAMES T. CORBITT
(This space for State use)

APPROVED BY Gary W. Wink TITLE NATURAL SCIENCE ENGINEER

Conditions of approval, if any:

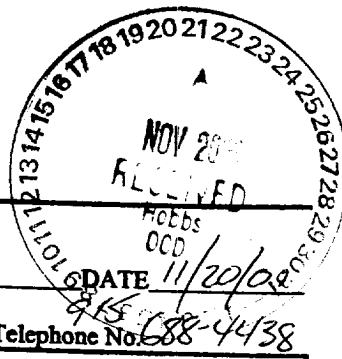

ORIGINAL SIGNED BY GARY W. WINK Telephone No. 688-4438

DATE NOV 21 2001

PLUGGING & ABANDONMENT WORKSHEET

(2 STRING CSNG)

OPERATOR TEXACO EXPLORATION & PRODUCTION INC.
LEASENAME NEW MEXICO "R" STATE NCT-1


SECT 6 TWN 18 S RNG 35-E
FROM 2530 NSL 2530 EWL
TD: 8100 FORMATION @ TD Drinkard
PBD: 8052 FORMATION @ PBD

	SIZE	SET @	TOC	TOC DETERMINED BY
SURFACE	8 5/8	1550	SURF	CIRC
INTMED 1				
INTMED 2				
PROD	5 1/2	8100	SURF	CIRC
	SIZE	TOP	BOT	TOC DETERMINED BY
LINER 1				
LINER 2				
	CUT & PULL @		TOP - BOTTOM	
INTMED 1			FEETS	7654 - 7880
INTMED 2			OPENHOLE	-
PROD				

*REQUIRED PLUGS DISTRICT I

PLUG	TYPE	BACKS	DEPTH
FLUG #1	OH	35 SX	6400
FLUG #2	SHOE	50 SX	5350-5450
FLUG #3	CIBP/35'		4000
FLUG #4	CIBP	25 SX	4000
FLUG #5	STUB	50 SX	3000-3700
FLUG #6	RETNR 30'	200 SX	400
FLUG #7	SURF	10 SX	0-10'
FLUG #8	CIBP		7600
FLUG #9	Drinkard	25 SX	7600-7400
FLUG #10	QUEEN	25 SX	3800-3600
FLUG #11	YATES	25 SX	2800-2600
FLUG #12	85/8 S	50 SX	1600-1200
FLUG #13	SURF	10 SX	10 - SURF
FLUG #14			
FLUG #15			
FLUG #16			
FLUG #17			
FLUG #18			
FLUG #19			
FLUG #20			
FLUG #21			
FLUG #22			
FLUG #23			
FLUG #24			
FLUG #25			
FLUG #26			
FLUG #27			
FLUG #28			
FLUG #29			
FLUG #30			
FLUG #31			
FLUG #32			
FLUG #33			
FLUG #34			
FLUG #35			
FLUG #36			
FLUG #37			
FLUG #38			
FLUG #39			
FLUG #40			
FLUG #41			
FLUG #42			
FLUG #43			
FLUG #44			
FLUG #45			
FLUG #46			
FLUG #47			
FLUG #48			
FLUG #49			
FLUG #50			

PLUG	TYPE	BACKS	DEPTH
FLUG #1	OH	35 SX	6400
FLUG #2	SHOE	50 SX	5350-5450
FLUG #3	CIBP/35'		4000
FLUG #4	CIBP	25 SX	4000
FLUG #5	STUB	50 SX	3000-3700
FLUG #6	RETNR 30'	200 SX	400
FLUG #7	SURF	10 SX	0-10'
FLUG #8	CIBP		7600
FLUG #9	Drinkard	25 SX	7600-7400
FLUG #10	QUEEN	25 SX	3800-3600
FLUG #11	YATES	25 SX	2800-2600
FLUG #12	85/8 S	50 SX	1600-1200
FLUG #13	SURF	10 SX	10 - SURF
FLUG #14			
FLUG #15			
FLUG #16			
FLUG #17			
FLUG #18			
FLUG #19			
FLUG #20			
FLUG #21			
FLUG #22			
FLUG #23			
FLUG #24			
FLUG #25			
FLUG #26			
FLUG #27			
FLUG #28			
FLUG #29			
FLUG #30			
FLUG #31			
FLUG #32			
FLUG #33			
FLUG #34			
FLUG #35			
FLUG #36			
FLUG #37			
FLUG #38			
FLUG #39			
FLUG #40			
FLUG #41			
FLUG #42			
FLUG #43			
FLUG #44			
FLUG #45			
FLUG #46			
FLUG #47			
FLUG #48			
FLUG #49			
FLUG #50			

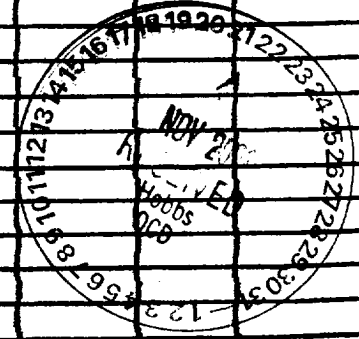

8 5/8
@ 1550
TOC SURF

5 1/2
@ 8100
TOC SURF

TD 8100