

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

<b>SUNDRY NOTICES AND REPORTS ON WELLS</b> <small>(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)</small>		5a. Indicate Type of Lease State <input checked="" type="checkbox"/> <input type="checkbox"/>
1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER-		5. State Oil & Gas Lease No. E-8321
2. Name of Operator TEXACO Inc.		7. Unit Agreement Name None
3. Address of Operator P. O. Box 728, Hobbs, New Mexico 88240		8. Farm or Lease Name Ohio-State
4. Location of Well UNIT LETTER <u>H</u> <u>660</u> FEET FROM THE <u>East</u> LINE AND <u>1980</u> FEET FROM THE <u>North</u> LINE, SECTION <u>2</u> TOWNSHIP <u>24-S</u> RANGE <u>32-E</u> NMPM.		9. Well No. 1
15. Elevation (Show whether DF, RT, GR, etc.) 3621' (GR)		10. Field and Pool, or Wildcat Triste Draw (Delaware)
		12. County Lea


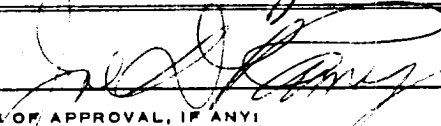
16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data			
NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

TEXACO INC. PROPOSES TO PLUG AND ABANDON SUBJECT IN THE FOLLOWING MANNER:

1. Pull rods, tubing and pump.
2. Spot 15 sx. cement plug 5030' to 4930'. Load hole w/mud-laden fluid.
3. Cut off and pull 4 1/2" casing. Spot 35 sx. cement plug from 50' below to 50' above 4 1/2" casing stub.
4. Spot 35 sx. cement plug from 1580' to 1480'.
5. Spot 35 sx. cement plug from 1280' to 1180'.
6. Spot 50 sx. cement plug from 365' to 265'.
7. Spot 10 sx. cement plug in top of 8 5/8" od casing.
8. Set 4" marker extending 4' above ground level and clean up location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE January 23, 1969
APPROVED BY 	TITLE	DATE
CONDITIONS OF APPROVAL, IF ANY:		