

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions reverse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LC 064118

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

E. C. Hill "E" Federal

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Teague (Ellenburger)

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

34-23S-37E

12. COUNTY OR PARISH

Lea

13. STATE

N. Mex.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Salt Water Disposal	
2. NAME OF OPERATOR Carter Foundation Production Company	
3. ADDRESS OF OPERATOR P. O. Box 900, Kermit, Texas 79745	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' FN&EL's Section 34, T-23-S, R-37-E, Lea County, New Mexico	
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3274' (DF), 3264' (GR)

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Proposed Operations:

1. Load hole with heavy mud.
2. Run bridge plug on wire line and set at 9400' ($\pm$ 20').
Dump 5 sacks cement on plug.
3. Rig up casing pullers and attempt to pull 6800' 7" casing.
4. Place 30 sack cement plug in and out casing cut-off point.
5. Place 100 sack cement plug from 5000' to 5300' (300') Blinbry Zone.
6. Place 60 sack cement plug from 3350' to 3500' (150').
7. Place 20 sack plug at base of 9-5/8", 2895'.
8. Place 10 sacks at surface with steel marker at surface to abandon.

Work to begin as soon as possible.

AMENDMENT: Step 2: Place 3 sacks cement on top of B.P. instead of 5. Step 2(2): Place additional 25 sack cement plug at 7000-7100 feet. Step 4: Place 35 sack cement plug instead of 30. Step 6: Instead of one 60 sack plug, place 35 sack plug at 3500-3600 and 35 sack plug at 3300-3400 feet. Step 7: Place 35 sack plug instead of 20 sacks. Step 7(d): Place additional 35 sack plug in interval 1000 to 1100 feet.

18. I hereby certify that the foregoing is true and correct

SIGNED

E. C. Hill


TITLE Production Superintendent

DATE 11-15-1974

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

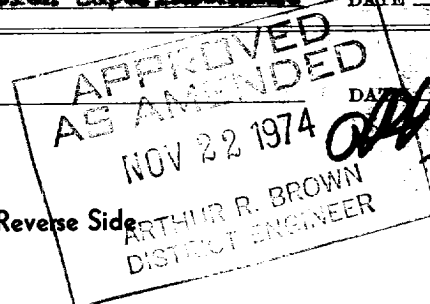

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 1: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.