

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN REPLY
(Other instructions on reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.
LC-049439 (a)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

G. D. BIGGS "A"

9. WELL NO.

#2

10. FIELD AND POOL, OR WILDCAT

LANGRISH MATTHEW

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 1, T26S, R37E

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3027 DF

12. COUNTY OR PARISH

LEA

13. STATE

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☒
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐
☐
☐

REPAIRING WELL

☐
☐
☐
☐
☐

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT*

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Well has reached its economic limit. No other productive zones exist. It is proposed to plug and abandon this well as follows:

1. Run tubing to T.D. Mud up. Fill open hole interval 3368' to 3170' with mud. Pull tubing to 3170'. Lay a 30 sack cement plug in and out of 7" casing shoe. Pull tubing to 2500'. Wait on cement 16 hours. Tag plug to make sure top of cement is above 3100'.
2. If 7" casing is salvaged:
 - a. Place a 25 sack plug in and out of 7" casing stub.
 - b. Put 25 sack plug in and out of 8-5/8" casing shoe.
 - c. Place a 10 sack plug at surface.
 - d. Erect suitable surface marker.
3. If 7" casing is not salvaged:
 - a. Place a 10 sack plug at surface.
 - b. Erect a suitable surface marker.

4. If no 5-1/2" casing is pulled, place 15 sack cement plug inside 5-1/2" casing at 900-1000 feet.

Hole to be filled with mud between plugs

18. I hereby certify that the foregoing is true and correct

ORIGINAL SIGNED BY:

SIGNED C. L. Wade


TITLE AREA SUPERINTENDENT

DATE June 16, 1971

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

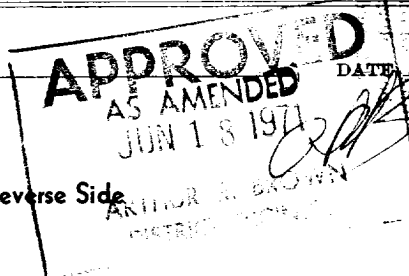

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below, or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1963-O-685229

847-485

RECEIVED

JUN 23 1971

OIL CONSERVATION COMM.
HARPER, W. M.