Form 3160-3	Zeris	ed Dia	6 <u>0</u> (	FORM	APPROVED
(June 2015) UNITED STATE DEPARTMENT OF THE I BUREAU OF LAND MAN APPLICATION FOR PERMIT TO D	NTERIOR		2420 2420 CEIV	OMB N Expires: J 5. Lease Serial No. OM006870 6. If Indian, Alloted	
la. Type of work:	EENTER	1		7. If Unit or CA Ag	creement. Name and No.
	ingle Zone [	Multiple Zone		8. Lease Name and MESCALERO 6 F 4H	
2. Name of Operator CHISHOLM ENERGY OPERATING LLC <b>372.137</b>	)			9. API Well No. <b>30-025 -</b>	46291-
3a. Address 801 Cherry St., Suite 1200 Unit 20 Fort Worth TX 76102	3b. Phone N (817)469-1	lo. <i>(include area cod</i> <b>104</b>	e) Ek	10. Field and Pool, BUFFALO / BONE	1 1 1 1 1
<ol> <li>Location of Well (Report location clearly and in accordance of At surface LOT C / 125 FNL / 1380 FWL / LAT 32.681 At proposed prod. zone LOT 4 / 330 FNL / 530 FWL / LA</li> </ol>	6054 / LONG	6 -103.6033212	62362	11. Sec., T. R. M. o SEC 7 / T19S / R3	r Blk. and Survey or Arc 34E / NMP
<ol> <li>Distance in miles and direction from nearest town or post off 15 miles</li> </ol>	ice*			12. County or Paris	h 13. State NM
15. Distance from proposed* location to nearest property or lease line, ft. (Also to nearest drig, unit line, if any)	16. No of ac <b>593.24</b>	eres in lease	17. Space 157.33	ing Unit dedicated to	this well
<ol> <li>Distance from proposed location*</li> <li>to nearest well, drilling, completed, applied for, on this lease, ft.</li> <li>60 feet</li> </ol>	19. Propose 10040 feet	d Depth / 15589 feet		//BIA Bond No. in file //B001468	
21. Elevations (Show whether DF, KDB, RT, GL, etc.) 3772 feet	22. Approxi 10/15/2018	mate date work will	start*	23. Estimated durat 30 days	lion
The following, completed in accordance with the requirements o	24. Attac				
<ul> <li>(as applicable)</li> <li>I. Well plat certified by a registered surveyor.</li> <li>2. A Drilling Plan.</li> <li>3. A Surface Use Plan (if the location is on National Forest Syste SUPO must be filed with the appropriate Forest Service Office</li> </ul>	:).	Item 20 above). 5. Operator certific 6. Such other site sp BLM.	ation.		n existing bond on file (s s may be requested by the
25. Signature (Electronic Submission) Title Senior Regulatory Technician	1	(Printed/Typed) er Elrod / Ph: (817)	953-3728	8	Date 02/06/2018
Approved by (Signature) (Electronic Submission)	1	(Printed/Typed) Layton / Ph: (575)2	34-5959		Date 10/12/2018
Title Assistant Field Manager Lands & Minerals	Office CARL				
Application approval does not warrant or certify that the applicar applicant to conduct operations thereon. Conditions of approval, if any, are attached.	t holds legal o	or equitable title to the	iose rights	in the subject lease w	hich would entitle the
Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, n of the United States any false, fictitious or fraudulent statements					any department or agenc
GCP Rec 10/24/18	ven WI	TH CONDIT	IONS	KB-	24/18
(Continued on page 2)	100	10/10/2010		*(In	structions on page 2
4	oval Date	: 10/12/2018			

### **INSTRUCTIONS**

GENERAL: This form is designed for submitting proposals to perform certain well operations, as indicated on Federal and Indian lands and leases for action by appropriate Federal agencies, pursuant to applicable Federal laws and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from local Federal offices.

ITEM I: If the proposal is to redrill to the same reservoir at a different subsurface location or to a new reservoir, use this form with appropriate notations. Consult applicable Federal regulations concerning subsequent work proposals or reports on the well.

ITEM 4: Locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local Federal offices for specific instructions.

ITEM 14: Needed only when location of well cannot readily be found by road from the land or lease description. A plat, or plats, separate or on the reverse side, showing the roads to, and the surveyed location of, the wen, and any other required information, should be furnished when required by Federal agency offices.

ITEMS 15 AND 18: If well is to be, or has been directionany drilled, give distances for subsurface location of hole in any present or objective productive zone.

ITEM 22: Consult applicable Federal regulations, or appropriate officials, concerning approval of the proposal before operations are started.

ITEM 24: If the proposal will involve hydraulic fracturing operations, you must comply with 43 CFR 3162.3-3, including providing information about the protection of usable water. Operators should provide the best available information about all formations containing water and their depths. This information could include data and interpretation of resistivity logs run on nearby wells. Information may also be obtained from state or tribal regulatory agencies and from local BLM offices.

### NOTICES

The Privacy Act of 1974 and regulation in 43 CFR 2.48( d) provide that you be furnished the following information in connection with information required by this application.

AUTHORITY: 30 U.S.C. 181 et seq., 25 U.S.C. 396; 43 CFR 3160

PRINCIPAL PURPOSES: The information will be used to: (1) process and evaluate your application for a permit to drill a new oil, gas, or service wen or to reenter a plugged and abandoned well; and (2) document, for administrative use, information for the management, disposal and use of National Resource Lands and resources including (a) analyzing your proposal to discover and extract the Federal or Indian resources encountered; (b) reviewing procedures and equipment and the projected impact on the land involved; and (c) evaluating the effects of the proposed operation on the surface and subsurface water and other environmental impacts.

ROUTINE USE: Information from the record and/or the record win be transferred to appropriate Federal, State, and local or foreign agencies, when relevant to civil, criminal or regulatory investigations or prosecution, in connection with congressional inquiries and for regulatory responsibilities.

EFFECT OF NOT PROVIDING INFORMATION: Filing of this application and disclosure of the information is mandatory only if you elect to initiate a drilling or reentry operation on an oil and gas lease.

The Paperwork Reduction Act of 1995 requires us to inform you that:

The BLM conects this information to anow evaluation of the technical, safety, and environmental factors involved with drilling for oil and/or gas on Federal and Indian oil and gas leases. This information will be used to analyze and approve applications. Response to this request is mandatory only if the operator elects to initiate drilling or reentry operations on an oil and gas lease. The BLM would like you to know that you do not have to respond to this or any other Federal agency-sponsored information collection unless it displays a currently valid OMB control number.

**BURDEN HOURS STATEMENT:** Public reporting burden for this form is estimated to average 8 hours per response, including the time for reviewing instructions, gathering and maintaining data, and completing and reviewing the form. Direct comments regarding the burden estimate or any other aspect of this form to U.S. Department of the Interior, Bureau of Land Management (1004-0137), Bureau Information Conection Clearance Officer (WO-630), 1849 C Street, N.W., Mail Stop 401 LS, Washington, D.C. 20240.

# **Additional Operator Remarks**

### Location of Well

1. SHL: LOT C / 125 FNL / 1380 FWL / TWSP: 19S / RANGE: 34E / SECTION: 7 / LAT: 32.6816054 / LONG: -103.6033212 ( TVD: 0 feet, MD: 0 feet ) PPP: LOT M / 330 FSL / 530 FWL / TWSP: 19S / RANGE: 34E / SECTION: 6 / LAT: 32.682846 / LONG: -103.6062742 ( TVD: 9874 feet, MD: 10071 feet ) BHL: LOT 4 / 330 FNL / 530 FWL / TWSP: 19S / RANGE: 34E / SECTION: 6 / LAT: 32.6960385 / LONG: -103.6062362 ( TVD: 10040 feet, MD: 15589 feet )

# **BLM Point of Contact**

Name: Tenille Ortiz Title: Legal Instruments Examiner Phone: 5752342224 Email: tortiz@blm.gov

### **Review and Appeal Rights**

A person contesting a decision shall request a State Director review. This request must be filed within 20 working days of receipt of the Notice with the appropriate State Director (see 43 CFR 3165.3). The State Director review decision may be appealed to the Interior Board of Land Appeals, 801 North Quincy Street, Suite 300, Arlington, VA 22203 (see 43 CFR 3165.4). Contact the above listed Bureau of Land Management office for further information.

# AFMSS

APD ID: 10400026525

U.S. Department of the Interior BUREAU OF LAND MANAGEMENT

Zip: 76102

क्षेत्रकी विद्योहित्य क्षेत्रके diada the most

10/15/2018

Well Name: MESCALERO 6 FED COM 2BS

**Operator Name: CHISHOLM ENERGY OPERATING LLC** 

Well Type: OIL WELL

Submission Date: 02/06/2018

Well Number: 4H Well Work Type: Drill Show Final Text

Application Data Report

Section 1 - General 10400026525 Tie to previous NOS? 10400022933 Submission Date: 02/06/2018 APD ID: BLM Office: CARLSBAD User: Jennifer Elrod Title: Senior Regulatory Technician Federal/Indian APD: FED Is the first lease penetrated for production Federal or Indian? FED Lease number: NMNM006870 Lease Acres: 593.24 Surface access agreement in place? Allotted? **Reservation:** Agreement in place? NO Federal or Indian agreement: Agreement number: Agreement name: Keep application confidential? NO **APD Operator: CHISHOLM ENERGY OPERATING LLC** Permitting Agent? NO **Operator letter of designation:** 

**Operator Info** 

**Operator Organization Name: CHISHOLM ENERGY OPERATING LLC** 

Operator Address: 801 Cherry St., Suite 1200 Unit 20

**Operator PO Box:** 

**Operator City:** Fort Worth State: TX

Operator Phone: (817)469-1104

**Operator Internet Address:** 

### **Section 2 - Well Information**

Well in Master Development Plan? NO	Mater Development Plan name:	
Well in Master SUPO? EXISTING	Master SUPO name: Mescalero	
Well in Master Drilling Plan? EXISTING	Master Drilling Plan name: MES	SCALERO
Well Name: MESCALERO 6 FED COM 2BS	Well Number: 4H	Well API Number:
Field/Pool or Exploratory? Field and Pool	Field Name: BUFFALO	Pool Name: BONE SPRING

Is the proposed well in an area containing other mineral resources? USEABLE WATER, NATURAL GAS, OIL

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Describe other minerals:		
Is the proposed well in a Helium production area? N	Use Existing Well Pad? NO	New surface disturbance?
Type of Well Pad: MULTIPLE WELL	Multiple Well Pad Name:	Number: 4H,5H,9H,10H,11H
Well Class: HORIZONTAL	MESCALERO WEST PAD Number of Legs: 1	
Well Work Type: Drill		
Well Type: OIL WELL		
Describe Well Type:		
Well sub-Type: INFiLL		
Describe sub-type:		
Distance to town: 15 Miles Distance to n	earest well: 60 FT Distance	ce to lease line: 125 FT
Reservoir well spacing assigned acres Measurement	: 157.33 Acres	
Well plat: Mescalero_6_Fed_Com_2BS_4H_c102_1	1302017_20180124133722.pdf	
Well work start Date: 10/15/2018	Duration: 30 DAYS	
Section 3 - Well Location Table		
Survey Type: RECTANGULAR		
Describe Survey Type:		
Datum: NAD83	Vertical Datum: NAVD88	
Survey number: 5733		
NS-Foot NS Indicator EW-Foot EW Indicator Twsp Twsp Twsp Section Aliquot/Lot/Tract	Latitude Longitude County State	Meridian Lease Type Lease Number Elevation MD TVD
SHL         125         FNL         138         FWL         19S         34E         7         Lot         32           Leg         0         0         19S         34E         7         C         54           #1         1         1         1         1         1         1         32	L68160 - LEA NEW NE 103.6033 212 CO CO	EXI 006870 2
KOP         125         FNL         138         FWL         19S         34E         7         Lot         32           Leg         0         0         1         1         0         2         0         2         48           #1         1	2.68160 - LEA NEW NE 103.6033 MEXI ME 212 CO CC	EXI 006870 561 1 1
PPP 330 FSL 530 FWL 19S 34E 6 Lot 32 Leg #1	2.68284 - LEA NEW NE 103.6062 NEXI ME 742 CO CO	EXI 006869 610 71 4

# **VAFMSS**

### U.S. Department of the Interior BUREAU OF LAND MANAGEMENT

### APD ID: 10400026525

**Operator Name: CHISHOLM ENERGY OPERATING LLC** 

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Well Type: OIL WELL

Well Work Type: Drill

# Section 1 - Geologic Formations

Formation			True Vertical			· · · · · · · · · · · · · · · · · · ·	Producing
1D	Formation Name	Elevation	Depth	Depth	Lithologies	Mineral Resources	Formation
1	RUSTLER	3772	. 0	0	ANHYDRITE	USEABLE WATER	No
2	SALADO	1868	1905	1905	SALT	NONE	No
3	SEVEN RIVERS	-2	3775	3775	DOLOMITE,ANHYDRIT E	NATURAL GAS,OIL	No
4	QUEEN	-727	4500	4500	LIMESTONE,SANDSTO NE,DOLOMITE	NATURAL GAS,OIL	No
5	DELAWARE	-2598	6371	6371	SHALE,SANDSTONE,SI LTSTONE	NATURAL GAS,OIL	No
6	BONE SPRING	-4098	7871	7871	LIMESTONE,SHALE	NATURAL GAS,OIL	No
7	BONE SPRING 1ST	-5333	9106	9106	SHALE,SANDSTONE,SI LTSTONE	NATURAL GAS,OIL	No
8	BONE SPRING 2ND	-5880	9653	9653	SHALE, SANDSTONE, SI LTSTONE	NATURAL GAS,OIL	Yes

# **Section 2 - Blowout Prevention**

Pressure Rating (PSI): 5M

Rating Depth: 12000

Equipment: Rotating Head, remote kill line, mud-gas sperator

### Requesting Variance? YES

Variance request: WE PROPOSE UTILIZING A CACTUS SPEED HEAD MULTI-BOWL WELLHEAD FOR THIS WELL. PLEASE SEE ATTACHED DIAGRAM AND PRESSURE TESTING STATEMENT. ALSO WE REQUEST TO USE A FLEX CHOKE HOSE; PLEASE SEE ATTACHMENT.

**Testing Procedure:** BOP will be tested by an independent service company, per onshore order 2. BOP testing procedure - N/U the rig's BOP. Use 3rd party testers to perform the following: -Test the pipe rams, blind rams, floor valves (IBOP and/or upper Kelly valve), choke lines and manifold to 250 psi/5,000 psi with a test plug and a test pump. -Test the Hydril annular to 250 psi/2,500 psi with same as above.

### **Choke Diagram Attachment:**

5M\_Choke\_Manifold\_Diagram\_20180124124349.pdf

### **BOP Diagram Attachment:**

5m\_BOP\_Diagram\_20180124124357.pdf



Show Final Text

10/15/2018

Drilling Plan Data Report

Submission Date: 02/06/2018

Operator Name: CHISHOLM ENERGY OPERATING LLC

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

# Section 3 - Casing

											-											
Casing ID	String Type	Hole Size	Csg Size	Condition	Standard	Tapered String	Top Set MD	Bottom Set MD	Top Set TVD	Bottom Set TVD	Top Set MSL	Bottom Set MSL	Calculated casing length MD	Grade	Weight	Joint Type	Collapse SF	Burst SF	Joint SF Type	Joint SF	Body SF Type	Body SF
1	SURFACE	17.5	13.375	NEW	API	N	0	1500	0	1500	3772	2272	1500	J-55	54.5	BUTT	1.72	4.17	DRY	11.1 2	DRY	10.4 3
	INTERMED IATE	12.2 5	9.625	NEW	API	N	0	5300	0	5300	3772	-1528	5300	J-55	40	LTC	1.37	1.41	DRY	2.45	DRY	2.97
	PRODUCTI ON	8.75	5.5	NEW	API	N	0	15590	0	10040	3772	-6268	15590	P- 110	17	BUTT	1.51	2.15	DRY	3.33	DRY	3.2

### Casing Attachments

Casing ID: 1 String Type: SURFACE

Inspection Document:

Spec Document:

Tapered String Spec:

# Casing Design Assumptions and Worksheet(s):

Mescalero\_Casing\_Assumptions\_2BS\_20180202111535.pdf

Well Number: 4H

### **Casing Attachments**

Casing ID: 2

String Type: INTERMEDIATE

**Inspection Document:** 

Spec Document:

**Tapered String Spec:** 

### Casing Design Assumptions and Worksheet(s):

Mescalero\_Casing\_Assumptions\_2BS\_20180202111545.pdf

Casing ID: 3 String Type: PRODUCTION

**Inspection Document:** 

Spec Document:

**Tapered String Spec:** 

### Casing Design Assumptions and Worksheet(s):

Mescalero\_Casing\_Assumptions\_2BS\_20180202111555.pdf

Section	4 - Ce	emen	t								
String Type	Lead/Tail	Stage Tool Depth	Top MD	Bottom MD	Quantity(sx)	Yield	Density	Cu Ft	Excess%	Cement type	Additives
SURFACE	Lead		0	1150	789	2.53	12	1997	150	Class C	Sodium Metasilicate, Defoamer, KCL
SURFACE	Tail		1150	1500	460	1.32	14.8	608	150	Class C	none
INTERMEDIATE	Lead		0	4950	1405	2.31	12	3245	150	Class H	Sodium Metasilicate, Defoamer, KCL, Kol- Seal, Cellophane Flakes, ROF SealCheck
INTERMEDIATE	Tail		4950	5300	226	1.21	14.4	274	150	Class H	Fluid Loss, Dispercent, Retarder

### Operator Name: CHISHOLM ENERGY OPERATING LLC

# Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

String Type	Lead/Tail	Stage Tool Depth	Top MD	Bottom MD	Quantity(sx)	Yield	Density	Cu Ft	Excess%	Cement type	Additives
RODUCTION	Lead		4300	9540	724	2.21	11.5	1600	25	Class C	Bentonite, Compressive Strength Enhancer, Silica Fume Alternative, Fluid Loss, Defoamer, Sodium Metasilicate, Retarder
RODUCTION	Tail		9540	1559 0	1661	1.15	15.8	1910	25	Class H	Fluid Loss, Suspension Agent, Retarder, Defoamer, Dispersant

# Section 5 - Circulating Medium

**Circulating Medium Table** 

ud System Type: Closed

ill an air or gas system be Used? NO

escription of the equipment for the circulating system in accordance with Onshore Order #2:

agram of the equipment for the circulating system in accordance with Onshore Order #2:

escribe what will be on location to control well or mitigate other conditions: Sufficient mud materials to maintain mud operties and meet minimum lost circulation and weight increase requirements will be kept on location at all times.

escribe the mud monitoring system utilized: Pason PVT system will be in place throughout the well as well as visual necks

						·- ····· ·					
Top Depth	Bottom Depth	Mud Type	Min Weight (Ibs/gal)	Max Weight (Ibs/gal)	Density (lbs/cu ft)	Gel Strength (lbs/100 sqft)	Н	Viscosity (CP)	Salinity (ppm)	Filtration (cc)	Additional Characteristics
0	1500	SPUD MUD	8.5	9.2							
5300	1004 0	WATER-BASED MUD	8.8	9.5							
1500	5300	SALT SATURATED	9.8	10.2							

**Operator Name: CHISHOLM ENERGY OPERATING LLC** 

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

# Section 6 - Test, Logging, Coring

List of production tests including testing procedures, equipment and safety measures: None

List of open and cased hole logs run in the well:

CBL,DS,GR,MWD

Coring operation description for the well:

None

Section 7 - Pressure

Anticipated Bottom Hole Pressure: 5020

Anticipated Surface Pressure: 2811.2

Anticipated Bottom Hole Temperature(F): 163

Anticipated abnormal pressures, temperatures, or potential geologic hazards? NO

Describe:

**Contingency Plans geoharzards description:** 

**Contingency Plans geohazards attachment:** 

### Hydrogen Sulfide drilling operations plan required? YES

Hydrogen sulfide drilling operations plan:

Lea\_County\_H2S\_plan\_20180809131541.pdf

# Section 8 - Other Information

### Proposed horizontal/directional/multi-lateral plan submission:

Mescalero\_6\_Fed\_Com\_2BS\_4H\_Plan\_numbers\_20180124134933.pdf Mescalero\_6\_Fed\_Com\_2BS\_4H\_Plot\_20180124134933.pdf


#### Other proposed operations facets description:


We propose utilizing a cactus speed head for this well. Please see attached diagram and pressure testing statement. Also we request to use a co flex hose. Please find attached information regarding co flex hose.

### Other proposed operations facets attachment:

### Other Variance attachment:

Cactus\_Speed\_Head\_Installation\_Procedure\_20180809131611.pdf Cactus\_Speed\_Head\_Pressure\_Testing\_Statement\_20180809131612.pdf Cactus\_Speedhead\_Diagram\_20180809131612.pdf Choke\_Hose\_M55\_1\_07102017\_145204\_66\_1225\_04\_14\_2014\_\_20180809131613.pdf Choke\_Hose\_M55\_2\_07102017\_145421\_66\_1042\_05\_03\_2013\_\_20180809131613.pdf

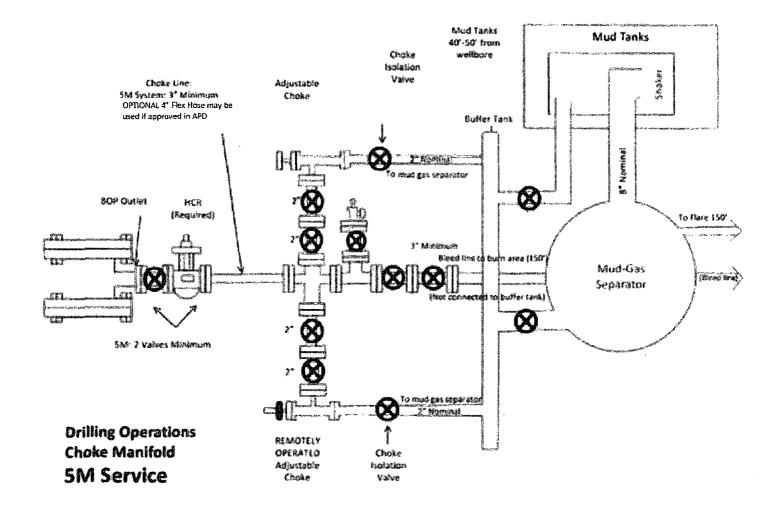

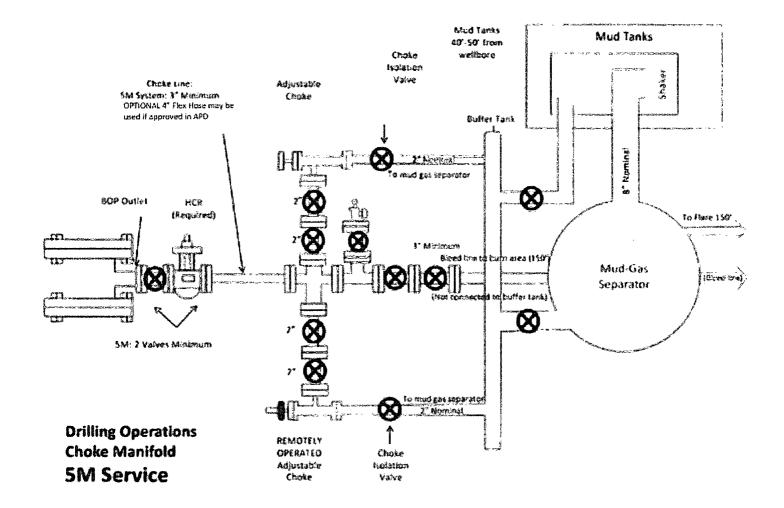

#### Casing Program: Minis (13 3/8" x 9 5/8" x 5 1/2")

.

Open Hole Size (Inches)	Casing Depth; From (ft)	Casing Setting Depth (ft) MD	Casing Setting Depth (ft) TVD	Casing Size (inches)	Casing Weight (lb/ft)	Casing Grade	Thread	Condition	Anticipated Mud Weight (ppg)	Burst (psi)	Burst SF (1.125)	Collapse (psi)	Collapse SF (1.125)	Tension Joint (klbs)	Air Weight (lbs)	Tension Joint SF (1.8)	Tension Body (klbs)	Air Weight (Ibs)	Tension Body SF (1.8)
Surface																			
17.5"	0'	1,500'	1,500'	13 3/8"	54.5	J-55	8TC	New	8.4	2730	4.17	1130	· · 1.72 ·	909,000	81,750	11.12	853,000	81,750	10.43
Intermediate																			
12.25"	0'	\$,300'	5,300'	9 5/8"	40	J-55	LTC	New	10.2	3950	1.41	2570	-1.37	520,000	212,000	2.45	630,000	212,000	·2.97 ·
Production																			
8.75"	0'	15,590'	10,040'	5 1/2"	17	P110	BTC	New	9.5	10640	2.15	7480	1.51	568,000	170,680	: 3.33	546,000	170,680	3.20

、


.


Casing Design Criteria and Casing Loading Assumptions:	
Surface	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	8.4 ppg
Collapse A 1.125 design factor with full internal evacuation and collapse force equal to a mud gradient of:	8.4 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	8.4 ppg
Intermediate	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	10.2 ppg
Collapse A 1.125 design factor with 1/3 TVD internal evacuation and collapse force equal to a mud gradient of:	10.2 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	10.2 ppg
Production	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	9.5 ppg
Collapse A 1.125 design factor with full internal evacuation and collapse force equal to a mud gradient of:	9.5 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	9.5 ppg

### Casing Program: Minis (13 3/8" x 9 5/8" x 5 1/2")

Open Hole Size (Inches)	Casing Depth; From (ft)	Casing Setting Depth (ft) MD	Casing Setting Depth (ft) TVD	Casing Size (inches)	Casing Weight (Ib/ft)	Casing Grade	Thread	Condition	Anticipated Mud Weight (ppg)	Burst (psi)	Burst SF (1.125)	Collapse {psi}	Collapse SF (1.125)	Tension Joint (klbs)	Air Weight (Ibs)	Tension Joint SF (1.8)	Tension Body (klbs)	Air Weight (Ibs)	Tension Body SF (1.8)
Surface																			
17.5"	0'	1,500'	1,500'	13 3/8"	54.5	J-55	BTC	New	8.4	2730	4.17	1130	1.72	909,000	81,750	11.12	853,000	81,750	10.43
Intermediate																			
12.25"	0'	5,300'	5,300'	9 5/8"	40	J-55	LTC	New	10.2	3950	1.41 .	2570	1.37	520,000	212,000	- 2.45	630,000	212,000	2.97
Production																			
8.75"	0'	15,590'	10,040'	5 1/2"	17	P110	BTC	New	9.5	10640	2.15	7480	1.51	568,000	170,680	3:33	546,000	170,680	3.20

Casing Design Criteria and Casing Loading Assumptions:	
Surface	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	8.4 ppg
Collapse A 1.125 design factor with full internal evacuation and collapse force equal to a mud gradient of:	8.4 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	8.4 ppg
Intermediate	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	10.2 ppg
Collapse A 1.125 design factor with 1/3 TVD internal evacuation and collapse force equal to a mud gradient of:	10.2 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	10.2 ppg
Production	
Tension A 1.8 design factor with effects of buoyancy with a fluid equal to a mud weight of:	9.5 ppg
Collapse A 1.125 design factor with full internal evacuation and collapse force equal to a mud gradient of:	9.5 ppg
Burst A 1.125 design factor with full external evacuation and burst force equal to a mud gradient of:	9.5 ppg

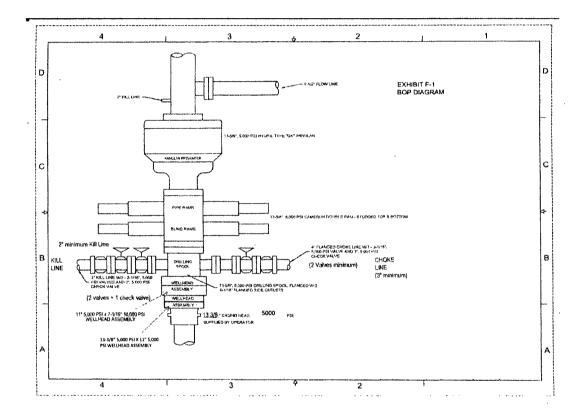

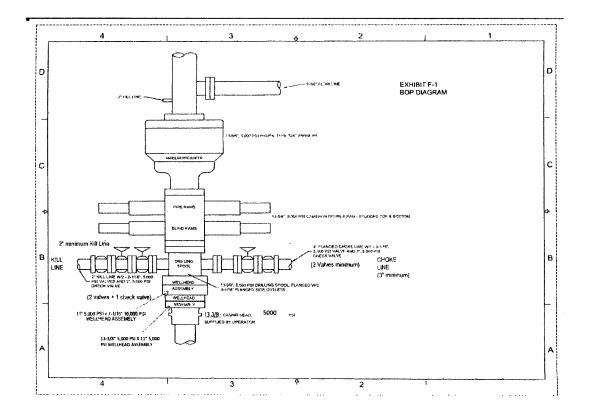

# **Cactus** Wellhead

Installation Procedure Prepared For:

# **Chisholm Energy**

13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead System With CTH-HPS-F MOD Tubing Head

Publication # IP0571

May, 2017

INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.


INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# **Table of Contents**

	System Drawing	
	Bill of Materials	2
Stage 1 —	Install the MBU-3T Housing	5
Stage 2 —	Nipple Up The BOP Stack	6
Stage 3 —	Test the BOP Stack	
Stage 4 —	Run the Lower Wear Bushing Run the Wear Bushing Before Drilling	8
	Retrieve the Wear Bushing After Drilling	8
Stage 5 —	Hang Off the 9-5/8" Casing Running the 13-5/8" Wash Tool	
Stage 5A	Hang Off the 9-5/8" Casing (Emergency)	
Stage 6 —	Install the MBU-3T Mandrel Hanger Packoff	
Oldge U	Landing the Packoff	
	Seal Test	
	Engaging the Lockring	
	Retrieving the Packoff	
Stage 6A —	Install the MBU-3T Emergency Packoff	23
	Landing the Packoff	25
	Seal lest	
Stage 7 —	Test the BOP Stack	
Stage 8 —	Run the Upper Wear Bushing	
Stage o	Run the Wear Bushing Before Drilling	28
	Retrieve the Wear Bushing After Drilling	
Stage 9 —	Hang Off the 5-1/2" Casing	
Stage 10 —	Install the 'Quick Connect' TA Cap Assembly	
otage to	Connection Test	
Stage 11 —	Remove the TA Cap Assembly	33
Stage 12	Install the Tubing Head	35
	Seal Test	36
	Flange Test	37
	Recommended Procedure for Field Welding Pipe to	
	Wellhead Parts for Pressure Seal	38

INFORMATION CONTAINED F. . . . , N IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

# **System Drawing**

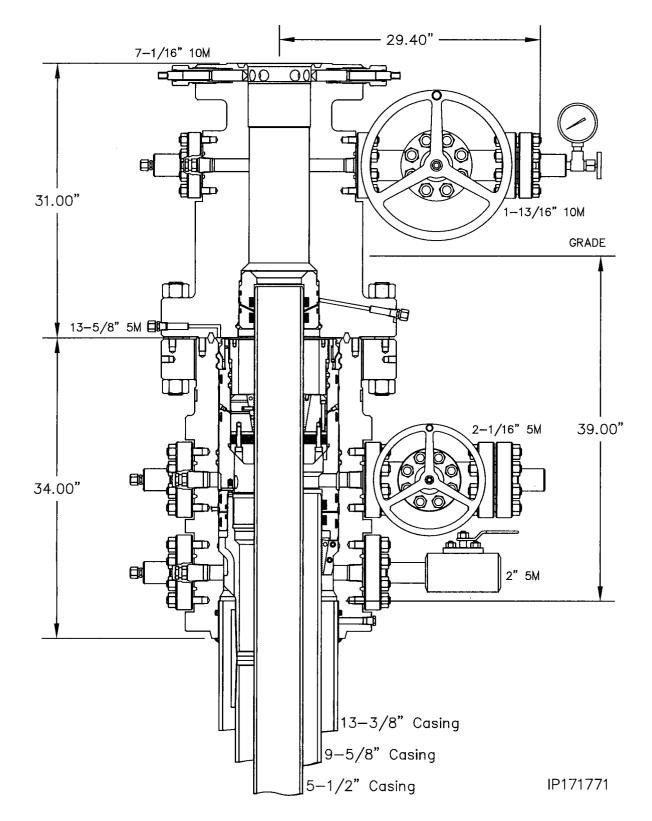




Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. 'RODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# **Bill of Materials**

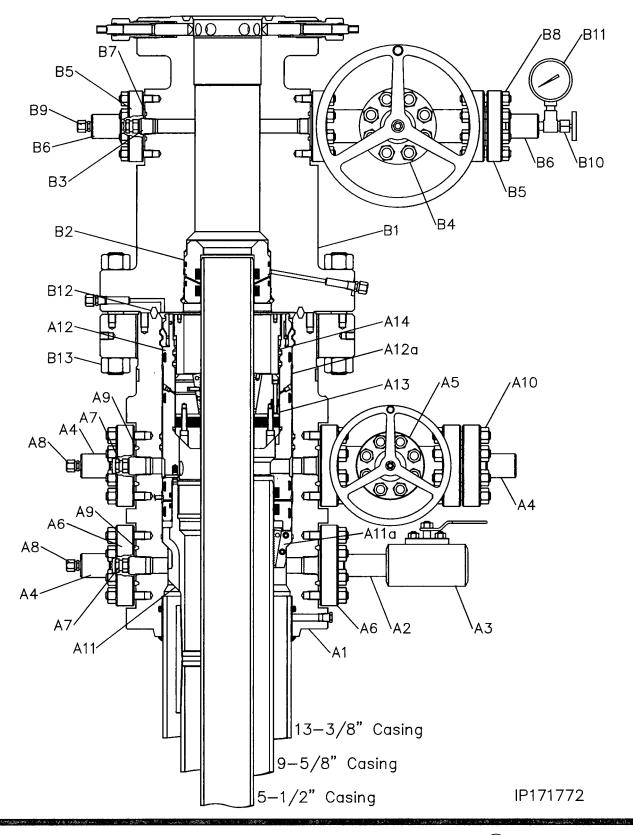

IP 0571 Page 2



INFORMATION CONTAINED H IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

MBU-3T HOUSING ASSEMBLY		MBU-3T HOUSING ASSEMBLY				TUBING HEAD ASSEMBLY		
ltem	Qty	Description	Item	Qty	Description	lter	n Qty	Description
A1		Housing, CW, MBU-3T, 13.5/8" 5M x 13-3/8" SOW, with two 2-1/16" 5M studded upper and lower outlets with o-ring, 6A-PU-AA-1-2 Part # 117620	A11	1	Casing Hanger, CW, MBU3T-LWR-TP, fluted, 13-5/8" x 9-5/8" (40#) LC bottom x 10.250" 4 Stub Acme 2G RH box top, with 11-1/2" OD neck, 6A-U-AA-1-2 Part # 120251	B	1	Tubing Head, CW, CTH-HPS-F, 9" (MOD), 13-5/8" 5M x 7-1/16" 10M, with two 1-13/16" 10M studded outlets, round bar, 17-4PH lockscrews, 6A-PU-EE- 0,5-2-1 Part #
A2 A3	1	Nipple, 2" line pipe x 6" long Part # NP6A Ball Valve, TV, 2" RP, 5M x 2" LP, WCB body SS trim, Delrin	A12	1	Packoff, CW, MBU-3T, Mandrel, 13-5/8" nested x 11" with 11.250" 4 Stub Acme 2G LH box top, 1/8" NPT test ports,	B2	: 1	Secondary Seal, CW, HPS-F, 9 MOD x 5-1/2", 6A-PU-DD- NL-1-2 Part # 110503
		seats, HNBR seals, nace with locking handle Part # 115184		4	6A-U-AA-1-1 Part # 117152	в	1	VR Plug, 1-1/4" Sharp Vee x 1-1/4" hex
A4	3	Bull Plug, 2" line pipe x 1/2" line pipe, 4130 60K Part # BP2T	A13		Casing Hanger, C2, 11" x 5-1/2" Part # 108067 Hold Down Ring, for C2 hanger,	B∠	- 1	Part # VR1 Gate valve, AOZE, 1-13/16" 10M, flanged end, handwheel operated, EE-0,5 trim,
A5	1	Gate valve, CW1, 2-1/16" 3/5M, flanged end, handwheel operated, AA/DD-NL trim, (6A-LU-AA/DD-NL-1-2)		·	11" x 7 through 4-1/2", arranged for packoff MBU-3T, 13-5/8" with 11.250" 4 Stub Acme 2G LH pin x 9.06" ID x 6.25" long,		2	(6A-LU-EE-0,5-3-1) Part # 103188 Companion Flange, 1-13/16"
A6	4	Part # 610003 Companion Flange, 2-1/16" 5M x 2" line pipe, 4130 CMS-102,			with 2.12" thread length, 4140 110K Part # 117418		_	10M x 2" LP, 5000 psi max WP, 6A-KU-EE-NL-1 Part # 200010
A7	2	CMS-002 Part # 200002 VR Plug, 1-1/2" Sharp Vee x				B	2	Bull Plug, 2" line pipe x 1/2" line pipe, 4130 60K Part # BP2T
		1-1/4" hex Part # VR2				B7	3	Ring Gasket, BX151, 1-13/16" 10M Part # BX-151
A8		Fitting, grease, vented cap, 1/2" NPT alloy non-nace Part # FTG1				B	8	Studs, all thread with two nuts, black, 3/4" x 5-1/2" long, B7/2H Part # 780080
A9		Ring Gasket, R-24, 2-1/16" 3/5M Part # R24				BS	1	Fitting, grease, vented cap, 1/2" NPT alloy non-nace Part # FTG1
A10	8	Studs, all thread with two nuts, black, 7/8" x 6-1/2" long, B7/2H Part # 780067				B1	01	Needle Valve, MFA, 1/2" NPT 10M service Part # NVA
						B1	11	Pressure Gauge, 5M, 4-1/2" face, liquid filled, 1/2" NPT PG5M
						B1	2 1	Ring Gasket, BX-160, 13-5/8" 15M Part # BX-160
						B1	3 16	Studs, all thread with two nuts, black, 1-5/8" x 12-3/4" long, B7/2H Part # 780087



Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

# INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

		I	EMERGENCY EQUIPMENT		
Description	Item Qty Description		Item Qty Description		
Test Plug/Retrieving Tool, CW, 13-5/8" x 4-1/2" IF (NC-50), 1-1/4" LP bypass and spring loaded lift dogs Part # 104467	R1 1	Threaded Hub, CW, MBU-3T, 13-5/8" 5M With 19.000" 2 Stub Acme-2G Left Hand Box Thread Part # 117268	A11a 1 A12a 1	Casing Hanger, CW, MBU-3T, 13-5/8" x 9-5/8" 6A-PU-DD-3-1 Part # 116998 Packoff, CW, MBU-3T,	
Wear Bushing, CW, MBU-3T-LWR, 13-5/8" x 12.31" ID x 27.0" long with 3/8" o-ring Part # 116974	R2 1	Drilling Adapter, CW, MBU-3T, 13-5/8" 5M Quick Connect Bottom x 13-5/8" 5M Studded Top, Temp Rating PU Part # 117278		Emergency, 13-5/8" nested x 11" with 11.250" 4 Stub Acme 2G LH box top, 1/8" NPT test ports, 6A-U-AA-1-1 Part # 117184	
Casing Hanger Running Tool, CW, MBU-3T-LR-TP, 13-5/8" x 9-5/8" LC box top x 10.250" 4 Stub Acme 2G RH pin bottom, max load capacity 1000K, max torque 18000 ft-lbs. spec for rotating casing Part # 105845	R3 1	TA Cap, CW, MBU-3T-HPS, 13-5/8" 5M quick connect, with one 2" LPO & 1/2" NPT port, with 1/2" NPT needle valve and 2" LP nipple and valve, 6A-U-AA-1-1 Part # 117317			
Torque Collar, CW, for use with running tool, TP, 10.250 4 stub Acme 2G RH pin bottom and arranged for 11.50" OD x 5.00" long box hanger neck, maximum torque 18,000 ft-lbs	1 R4 4	Secondary Seal Bushing, CW, HPS, 9" x 5-1/2 Part # 109026 Lift Eyes, 3/4", side pull hoist ring			
Part # 118906 Wash Tool, CW, Casing Hanger, MBU-LR/MBS2, fluted, 13-5/8" x 4-1/2" IF (NC-50) box top threads, with brushes Part # 106277		Part # 115542			
Packoff Running Tool, CW, MBU-3T UPR, 13-5/8" nested, with 11.250" 4 Stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top with seal sleeve Part # 117310					
Test Plug, CW, MBU-2LR Inner, 11" x 4-1/2" IF, 1-1/4" LP bypass Part # 108848					
Wear Bushing, MBU-3T-UPR, nested, 13-5/8" x 11" x 9.00" I.D. x 20.0" long, arranged for 13-5/8" tool Part # 117158					
	<ul> <li>13-5/8" x 4-1/2" IF (NC-50),</li> <li>1-1/4" LP bypass and spring loaded lift dogs Part # 104467</li> <li>Wear Bushing, CW,</li> <li>MBU-3T-LWR, 13-5/8" x 12.31"</li> <li>ID x 27.0" long with 3/8" o-ring Part # 116974</li> <li>Casing Hanger Running Tool,</li> <li>CW, MBU-3T-LR-TP, 13-5/8" x 9-5/8" LC box top x 10.250" 4</li> <li>Stub Acme 2G RH pin bottom,</li> <li>max load capacity 1000K, max torque 18000 ft-lbs. spec for rotating casing Part # 105845</li> <li>Torque Collar, CW, for use with running tool, TP, 10.250 4</li> <li>stub Acme 2G RH pin bottom and arranged for 11.50" OD x 5.00" long box hanger neck,</li> <li>maximum torque 18,000 ft-lbs</li> <li>Part # 118906</li> <li>Wash Tool, CW, Casing Hanger,</li> <li>MBU-LR/MBS2, fluted, 13-5/8" x 4-1/2" IF (NC-50) box top threads, with brushes Part # 106277</li> <li>Packoff Running Tool, CW,</li> <li>MBU-3T UPR, 13-5/8" nested, with 11.250" 4 Stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top threads, WBU-2LR Inner, 11" x 4-1/2" IF, 1-1/4" LP bypass Part # 108848</li> <li>Wear Bushing, MBU-3T-UPR, nested, 13-5/8" x 11" x 9.00"</li> <li>I.D. x 20.0" long, arranged for 13-5/8" tool</li> </ul>	<ul> <li>13-5/8" x 4-1/2" IF (NC-50), 1-1/4" LP bypass and spring loaded lift dogs Part # 104467</li> <li>Wear Bushing, CW, MBU-3T-LWR, 13-5/8" x 12.31" ID x 27.0" long with 3/8" o-ring Part # 116974</li> <li>Casing Hanger Running Tool, CW, MBU-3T-LR-TP, 13-5/8" x 9-5/8" LC box top x 10.250" 4 Stub Acme 2G RH pin bottom, max load capacity 1000K, max torque 18000 ft-lbs. spec for rotating casing Part # 105845</li> <li>Torque Collar, CW, for use with running tool, TP, 10.250 4 stub Acme 2G RH pin bottom and arranged for 11.50" OD x 5.00" long box hanger neck, maximum torque 18,000 ft-lbs Part # 118906</li> <li>Wash Tool, CW, Casing Hanger, MBU-LR/MBS2, fluted, 13-5/8" x 4-1/2" IF (NC-50) box top threads, with brushes Part # 106277</li> <li>Packoff Running Tool, CW, MBU-3T UPR, 13-5/8" nested, with 11.250" 4 Stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top with seal sleeve Part # 117310</li> <li>Test Plug, CW, MBU-2LR Inner, 11" x 4-1/2" IF, 1-1/4" LP bypass Part # 108848</li> <li>Wear Bushing, MBU-3T-UPR, nested, 13-5/8" x 11" x 9.00" I.D. x 20.0" long, arranged for 13-5/8" tool</li> </ul>	<ul> <li>13-5/8" x 4-1/2" IF (NC-50), 1-1/4" LP bypass and spring loaded lift dogs Part # 104467</li> <li>Wear Bushing, CW, MBU-3T-LWR, 13-5/8" x 12.31" ID x 27.0" long with 3/8" o-ring Part # 116974</li> <li>Casing Hanger Running Tool, CW, MBU-3T-LR-TP, 13-5/8" x 9-5/8" LC box top x 10.250" 4 Stub Acme 2G RH pin bottom, max load capacity 1000K, max torque 18000 ft-lbs. spec for rotating casing Part # 105845</li> <li>Torque Collar, CW, for use with running tool, TP, 10.250 4 stub Acme 2G RH pin bottom and arranged for 11.50" OD x 5.00" long box hanger neck, maximum torque 18,000 ft-lbs Part # 118906</li> <li>Wash Tool, CW, Casing Hanger, MBU-LR/MBS2, fluted, 13-5/8" x 4-1/2" IF (NC-50) box top threads, with brushes Part # 105277</li> <li>Packoff Running Tool, CW, MBU-3T UPR, 13-5/8" nested, with 11.250" 4 Stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top with seal sleeve Part # 117310</li> <li>Test Plug, CW, MBU-3T-UPR, nested, 13-5/8" x 11" x 9.00" I.D. x 20.0" long, arranged for 13-5/8" tool</li> </ul>	<ul> <li>13-5/8" x 4-1/2" F (NC-50), 1-1/4" LP bypass and spring loaded lift dogs Part # 104467</li> <li>Wear Bushing, CW, MBU-3T-LWR, 13-5/8" x 12.31" 10 x 27.0" long with 3/8" o-ring Part # 116974</li> <li>Casing Hanger Running Tool, CW, MBU-3T-LR-TP, 13-5/8" x 9-5/8" L box top x 10.250" 4 Stub Acme 2G RH pin bottom, max load capacity 1000K, max torque 18000 ft-lbs. spec for rotating casing Part # 105845</li> <li>Torque Collar, CW, for use with running tool, TP, 10.250 4 Stub Acme 2G RH pin bottom and arranged for 11.50" OD x 5.00" long box hanger neck, maximum torque 18,000 ft-lbs Part # 118906</li> <li>Wash Tool, CW, Casing Hanger, MBU-LR/MBS2, fluted, 13-5/8" stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top threads, with brushes Part # 106277</li> <li>Packoff Running Tool, CW, MBU-3T UPR, 13-5/8" nested, with 12.50" A Stub Acme 2G LH pin bottom x 4-1/2" IF (NC-50) box top with seal sleeve Part # 116848</li> <li>Wear Bushing, MBU-3T-UPR, nested, 13-5/8" x 11" x 9.00" I.D. x 20.0" long, arranged for 13-5/8" tool</li> </ul>	




INFORMATION CONTAINED HL. ...IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

# Stage 1 — Install the MBU-3T Housing

- 1. Run the conductor and 13-3/8" surface casing to the required depth and cement as required.
- 2. Cut the conductor pipe off level with the cellar floor.
- Final cut the 13-3/8" surface casing at 39.00" below ground level (grade). Ensure the cut is level and square with the horizon.
- 4. Place an 3/16" x 3/8" bevel on the OD of the stub.

**Note:** The slip on and weld preparation is 4.25" in depth.

- 5. Examine the 13-5/8" 5M x 13-3/8" SOW x 19.00" 2 Stub Acme LH (Left Hand Thread) MBU-3T Wellhead Housing (Item A1). Verify the following:
  - internal bore is clean and in good condition
  - external Acme thread is clean and in good condition
  - thread flange is in place and rotates freely
  - valves are intact and in good condition
  - weld socket is clean and free of grease and debris and o-ring is in place and in good condition
- Align and level the Wellhead Assembly over the casing stub, orienting the outlets so they will be compatible with the drilling equipment.
- 7. Remove the pipe plug from the port on the bottom of the Head.
- 8. Slowly and carefully lower the assembly over the casing stub, weld and test the MBU-3T wellhead to the surface casing.
- 9. Replace the pipe plug in the port on the bottom of the wellhead.

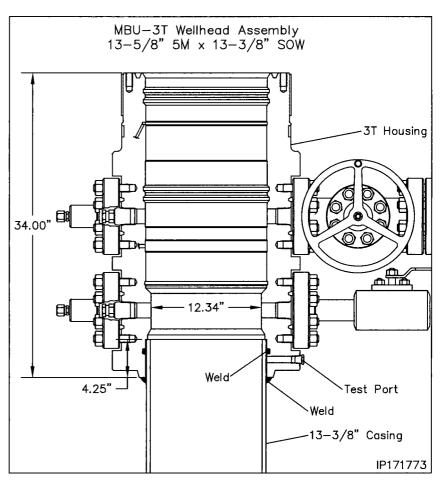

**Note:** The weld should be a fillet-type weld with legs no less than the wall thickness of the casing. Legs of 1/2" to 5/8" are adequate for most jobs.

Refer to the back of this publication for the **Recommended Procedure for Field Welding Pipe to Wellhead Parts for Pressure Seal** and for field testing of the weld connection.




INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. 'RODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .


# Stage 2 — Nipple Up The BOP Stack

- Examine the 13-5/8" 5M x 19.00"
   4 Stub Acme Threaded Hub (Item R1). Verify the following:
  - Acme thread are clean and in good condition
  - remove the (4) retainer set screws an place them in a safe place
- Thoroughly clean and lightly lubricate the mating threads of the housing and the Thread Hub with Copper Coat or Never Seize.
- Pick up the Hub and carefully thread it onto the top of the housing with counter clockwise rotation until the top of the ring is approximately a 1/4" below the top of the housing.
- 4. Position the hub gage ring on top of the housing with the counter bore down as indicated. Ensure the gage ring is level and straight.
- 5. Rotate the Hub clockwise (UP) until it contacts the gage ring.

WARNING: Do not off seat the gage ring.

- 6. Locate the retainer screw holes in the threaded hub.
- 7. Rotate the Hub up or down to align the holes in the hub with the notches in the housing.
- 8. Install the set screws and tighten securely. Remove gage ring.
- 9. Make up the 13-5/8" 5M Quick Connect x 13-5/8" 5M Studded Adapter (Item R2) to the bottom of the BOP stack using a new BX-160 . Ring Gasket.
- Thoroughly clean the MBU-3T hub, ring groove and the mating clamp segments and ring groove of the Adapter attached to the BOP stack.
- 11. Install a new **BX-160 Ring Gasket** into the ring groove of the housing.
- 12. Pick up the BOP stack and carefully lower it over the top of the housing and land it on the ring gasket.

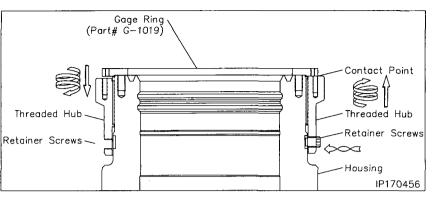

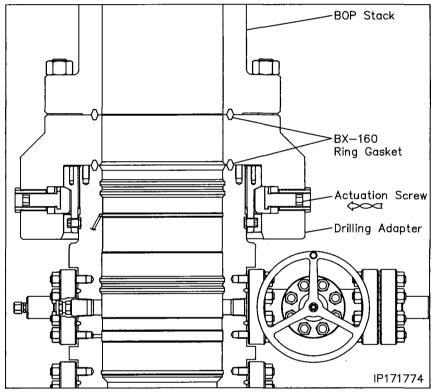

- 13. Ensure the BOP is level and then carefully run in all of the drive screws of the upper adapter to contact point.
- 14. Ensure the assembly remains level, run in one actuation and torque to 100 ft lbs.
- 15. Locate the screw 180° from the first and torque it to 100 ft lbs.
- 16. Locate the screws 90° to the right and left and torque them to 100 ft lbs.

- 17. Position the second 4 point sequence 90° from the first and torque each screw to 200 ft lbs.
- Run in all remaining screws to contact and then torque each screw to 400 ft lbs.
- 19. Make one additional round until a stable torque of 400 ft lbs on all (16) screws is achieved.

### IP 0571 Page 6



INFORMATION CONTAINED h. IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 3 — Test the BOP Stack

Immediately after making up the BOP stack and periodically during the drilling of the well for the next casing string the BOP stack (connections and rams) must be tested.


- Examine the 13-5/8" Nominal x 4-1/2" IF (NC-50) CW Test Plug/ Retrieving Tool (Item ST1). Verify the following:
  - 1-1/4" VR plug and weep hole plug are in place and tightened securely
  - elastomer seal is in place and in good condition
  - retractable lift lugs are in place, clean, and free to move
  - drill pipe threads are clean and in good condition
- Position the test plug with the elastomer seal down and the lift lugs up and make up the tool to a joint of drill pipe.

**WARNING:** Ensure that the lift lugs are up and the elastomer seal is down

- Remove the 1/2" NPT pipe plug from the weep hole if pressure is to be supplied through the drill pipe.
- 4. Open the housing lower side outlet valve.
- 5. Lightly lubricate the test plug seal with oil or light grease.
- Carefully lower the test plug through the BOP and land it on the load shoulder in the housing, 29.69" below the top of the drilling adapter.
- 7. Close the BOP rams on the pipe and test the BOP to 5000 psi or as required by site supervisor.

**Note:** Any leakage past the test plug will be clearly visible at the open side outlet valve.

8. After a satisfactory test is achieved, release the pressure and open the rams.

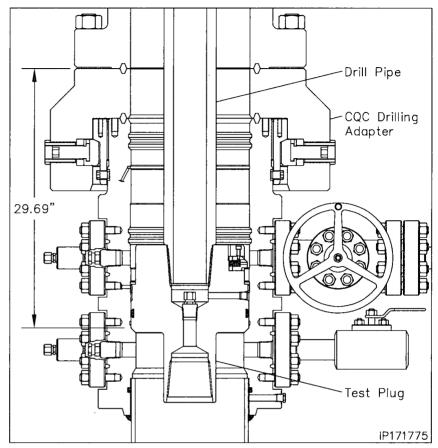

9. Remove as much fluid as possible from the BOP stack and the retrieve the test plug with a straight vertical lift.

**Note:** When performing the BOP blind ram test it is highly recommended to suspend a stand of drill pipe below the test plug to ensure the plug stays in place while disconnecting it from the drill pipe.

10. Repeat this procedure as required during the drilling of the hole section.



# INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 4 — Run the Lower Wear Bushing

Note: Always use a Wear Bushing while drilling to protect the load shoulders from damage by the drill bit or rotating drill pipe. The Wear Bushing **must be retrieved** prior to running the casing.

- 1. Examine the 13-5/8" Nominal MBU-3T-LWR Wear Bushing (Item ST2). Verify the following
  - internal bore is clean and in good condition
  - upper trash o-ring is in place and in good condition
  - shear o-ring cord is in place and in good condition
  - paint anti-rotation lugs white and allow paint to dry

# Run the Wear Bushing Before Drilling

- Orient the 13-5/8" Nominal x 4-1/2" IF (NC-50) CW Test Plug/Retrieving Tool (Item ST1) with drill pipe connection up.
- 3. Attach the Retrieving Tool to a joint of drill pipe.

**WARNING:** Ensure that the lift lugs are down and the elastomer seal is up


4. Align the retractable lift lugs of the tool with the retrieval holes of the bushing and carefully lower the tool into the Wear Bushing until the lugs snap into place.

**Note:** If the lugs did not align with the holes, rotate the tool in either direction until they snap into place.

# 5. Apply a heavy coat of grease, not dope, to the OD of the bushing.

- 6. Ensure the BOP stack is drained and free of any debris from previous test.
- 7. Slowly lower the Tool/Bushing Assembly through the BOP stack and land it on the load shoulder in the housing, 29.69" below the top of the drilling adapter.
- 8. Rotate the drill pipe clockwise (right) to locate the stop lugs in their mating notches in the head. When properly aligned the bushing will drop an additional 1/2".

**Note:** The Shear O-Ring on bottom of the bushing will locate in a groove above the load shoulder in the head to act as a retaining device for the bushing.

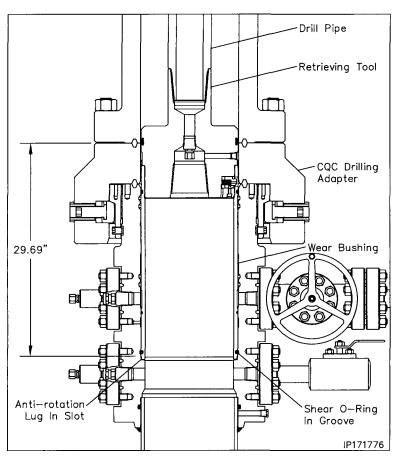

- 9. Remove the tool from the Wear Bushing by rotating the drill pipe counter clockwise (left) 1/4 turn and lifting straight up.
- 10. Drill as required.

**Note:** It is highly recommended to retrieve, clean, inspect, grease, and reset the wear bushing each time the hole is tripped during the drilling of the hole section.

# Retrieve the Wear Bushing After Drilling

- 11. Make up the Retrieving Tool to the drill pipe.
- 12. Drain BOP stack and wash out if necessary.
- 13. Slowly lower the tool into the Wear Bushing.
- 14. Rotate the Retrieving Tool clockwise until a positive stop is felt. This indicates the lugs have snapped into the holes in the bushing.
- 15. Using the top drive, slowly pick up on the landing joint in 1000 lbs increments until the busing starts to rise. This action should take a minimum of 3000 lbs pull. Do Not Exceed 60,000 lbs.
- 16. Retrieve the Wear Bushing, and remove it and the Retrieving Tool from the drill string.

IP 0571 Page 8




INFORMATION CONTAINED H. IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5 — Hang Off the 9-5/8" Casing

- Examine the 13-5/8" x 9-5/8" CW-MBU-3T-TP4 Casing Hanger Running Tool (Item ST3). Verify the following:
  - internal bore and threads are clean and in good condition
  - o-ring seal is clean and in good condition
  - torque dogs are in place, in upper most position and retainer set screws are tightened securely
- 2. Make up a landing joint to the top of the Running Tool and torque connection to thread manufacturer's maximum make up torque.
- 3. Lay down the landing joint on the pipe rack.
- On the pipe rack, examine the 13-5/8" x 9-5/8" CW-MBU-3T-TP4 Mandrel Casing Hanger (Item A11). Verify the following:
  - internal bore and threads are clean and in good condition
  - neck seal area is clean and undamaged
  - torque slots are clean and in good condition
  - pin threads are clean and in good condition. Install thread protector
  - paint indicator groove white as indicated and allow paint to dry
- Liberally lubricate the mating threads, seal areas and o-ring of the hanger and running tool with a oil or light grease.
- <u>Using chain tongs only</u>, thread the Running Tool into the hanger, with right hand rotation, until it shoulders out on the Hanger body.

WARNING: Do Not apply torque to the Hanger/Tool connection.

**Note:** If steps 1 through 6 were done prior to being shipped to location, the running tool should be backed off 1 turn and made back up to ensure it will back off freely.

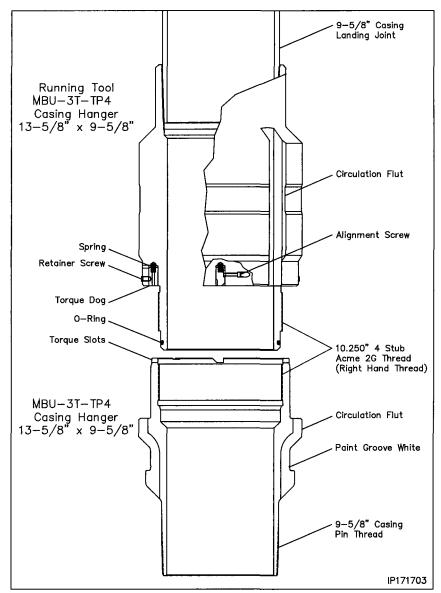


- 7. Calculate the total landing dimension by adding the previously determined RKB dimension and 29.69", the depth of the wellhead.
- 8. Starting at the top of the 45° angle load shoulder of the casing hanger measure up the landing joint and place a paint mark on the joint. Mark **HANGER LANDED**.
- 9. Place a second mark 30" below the first and mark STOP ROTATING.
- 10. Run the 9-5/8" casing as required and space out appropriately for the mandrel casing hanger.



INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC

Stage 5 — Hang Off the 9-5/8" Casing

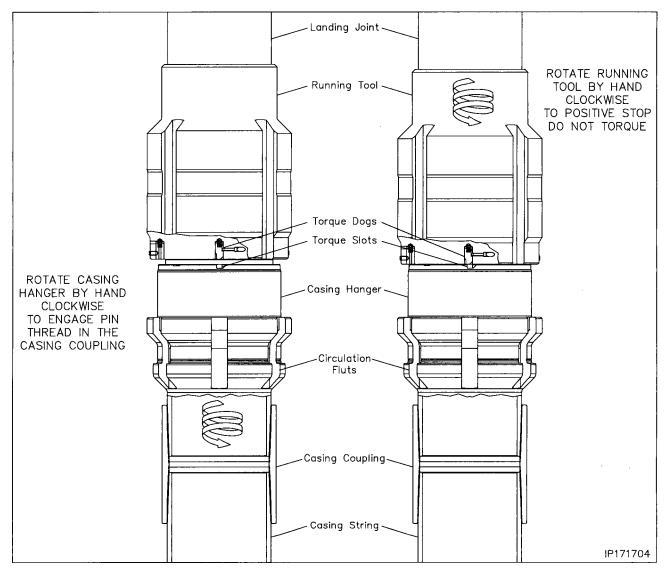

**Note:** If the 9-5/8" casing becomes stuck and the mandrel casing hanger cannot be landed, Refer to **Stage 5A** for the emergency slip casing hanger procedure.

- 11. Pick up the casing hanger/running tool joint assembly.
- 12. Remove the casing hanger thread protector and carefully thread the hanger into the last joint of casing ran. Rotate the hanger clockwise, by hand, to a positive stop.
- 13. Rotate the running tool clockwise by hand to a positive stop.

IP 0571 Page 10



INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5 — Hang Off the 9-5/8" Casing


14. Locate the (4) 3/8" socket head set screws in the side of the hanger running tool and remove the screws.


**WARNING:** Place the screws in a safe place to reinstall in the tool when the job is completed.

**Note:** This will release the running tool torque dogs allowing them to move downward.

15. Using only chain tongs, rotate the running tool to the left to allow the torque dogs to engage the torque slots in the top of the hanger.

**WARNING:** Do not rotate the running tool more than 1/4 turn to the left. Doing so will decrease the torque dog engagement

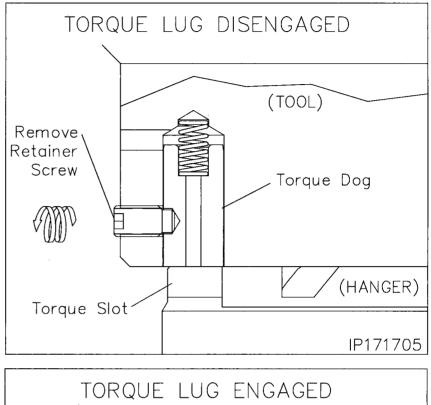

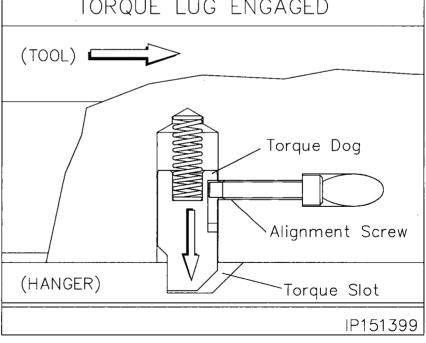




INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. 'RODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

# Stage 5 — Hang Off the 9-5/8" Casing

16. Engage the CRT tool on the landing joint and torque the casing hanger in the casing string to thread manufacturer's maximum make up torque.

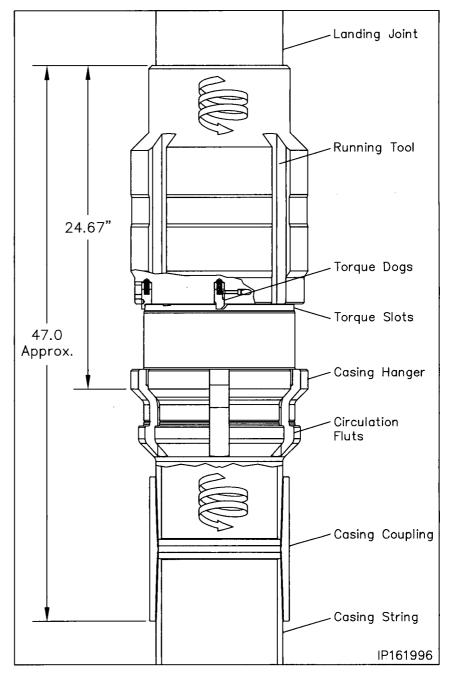




INFORMATION CONTAINED H IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5 — Hang Off the 9-5/8" Casing

- 17. Pick up the casing string and remove the floor slips and rotary bushings.
- 18. Carefully lower the hanger completely through the BOP annular and then engage the top drive to allow the casing to be rotated clockwise.
- 19. While rotating the casing clockwise, carefully lower the casing string until the **STOP ROTATING** mark on the landing joint is level with the rig floor.

**Note:** The torque dogs have a maximum rated capacity of 18,000 ft lbs.

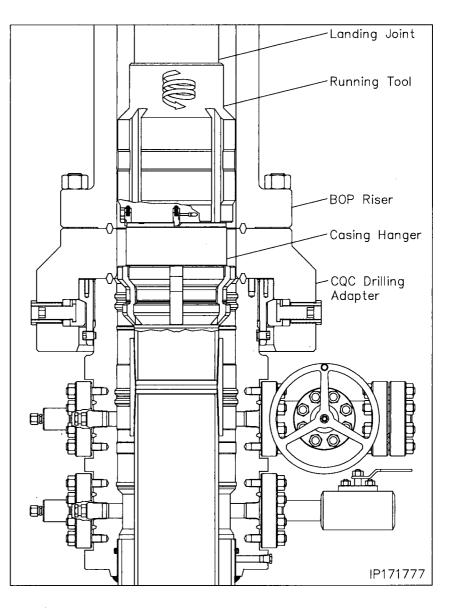



# INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5 — Hang Off the 9-5/8" Casing


WARNING: Torque wrap can build in the casing string as it is rotated. Ensure the string comes to a neutral position, by allowing it to back off slowly counter clockwise, before the casing hanger is fully landed.

- 20. Cease rotation and continue carefully lowering the hanger through the wellhead and land it on the load shoulder in the MBU-3T housing, 29.69" below the top of the drilling adapter.
- 21. Slack off all weight on the casing and verify that the **HANGER LANDED** paint mark has aligned with the rig floor.
- 22. Open the MBU-3T housing lower outlet valve and drain the BOP stack.
- 23. Sight through the valve bore to confirm the hanger is properly landed. The white painted indicator groove will be clearly visible in the center of the open outlet valve.
- 24. Close the open valve and place a vertical paint mark on the landing joint to verify if the casing string rotates during the cementing process.
- 25. Cement the casing as required.

**Note:** Returns may be taken through the circulation slots and out the BOP or out the side outlets on the housing.

- 26. With cement in place, bleed off all pressure and remove the cementing head.
- 27. <u>Using Chain Tongs Only located</u> <u>180° apart</u>, retrieve the Running Tool and landing joint by rotating the landing joint counter clockwise (left) approximately 13 turns or until the tool comes free of the hanger.

WARNING: The rig floor tong may be used to break the connection but under no circumstances is the top drive to be used to rotate or remove the casing hanger running tool.

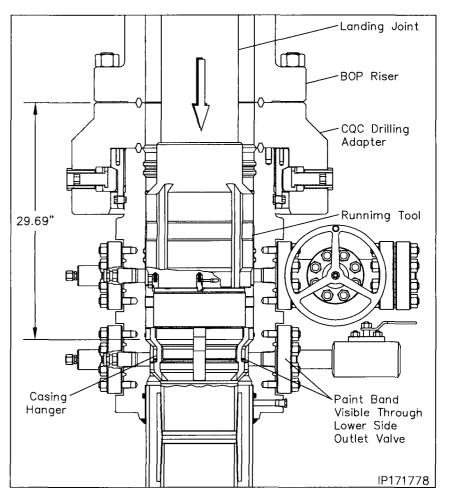




INFORMATION CONTAINED H \_\_\_\_IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5 — Hang Off the 9-5/8" Casing

### Running the 13-5/8" Wash Tool

- Examine the 13-5/8" x 4-1/2" IF Wash Tool (Item ST5). Verify the following:
  - drill pipe threads and bore are clean and in good condition
  - all ports are open and free of debris
- 2. Orient the Wash Tool with drill pipe box up. Make up a joint of drill pipe to the tool.
- Carefully lower the Wash Tool through the BOP and land it on top of the 9-5/8" casing hanger, 28.20" below the top flange of the wellhead housing.
- 4. Place a paint mark on the drill pipe level with the rig floor.
- 5. Open the housing lower side outlet valve and drain the BOP stack.
- Using chain tongs, rotate the tool clockwise approximately 6 turns to loosen any debris that may be on top of the hanger flutes.
- 7. Pick up on the tool approximately 1" and attach a high pressure water line or the top drive to the end of the drill pipe and pump water (at approximately 200 to 300 PSI on the rig pump) through the tool and up the BOP stack.
- While flushing, raise and lower the tool the full length of the wellhead and BOP stack. The drill pipe should be slowly rotated (approximately 20 RPM) while raising and lowering to wash the inside of the housing and BOP stack to remove all caked on debris.
- 9. Once washing is complete, land the wash tool on the hanger flutes.
- 10. Shut down pumps and allow the BOP stack to drain.

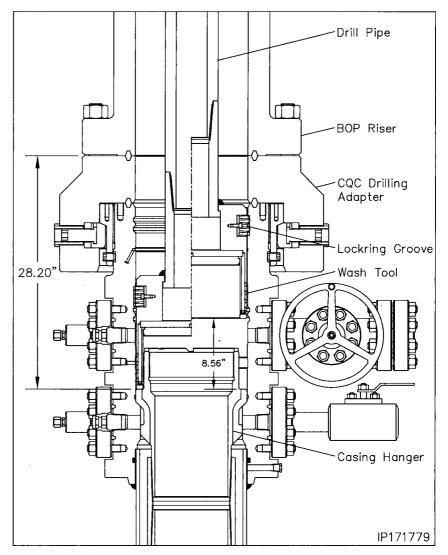

11. Reengage the pump and fully wash the inside of the wellhead and the entire BOP one additional cycle ensuring the stopping point is with the was tool resting on top of the hanger flutes.

**Note:** Observe the returns at the open outlet valve. If returns are not clean, continue flushing until they are.

- Once the returns are clean and free of debris, retrieve the tool to the rig floor.
- 13. Using a bright light, sight through the bore of the BOP stack and observe the top of the hanger neck and flutes. Ensure that there are no dark areas on top of the flutes of the hanger.

**WARNING:** Continue washing until all debris is removed.





Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. 'RODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5A — Hang Off the 9-5/8" Casing (Emergency)

- 1. Cement the hole as required.
- 2. Drain the BOP stack through the housing side outlet valve.
- 3. Locate the actuation screw on the OD of the drilling adapter.
- 4. Using a hex drive, fully retract the actuation screws until they are slightly over flush with the glandnuts.
- Pick up on the BOP stack a minimum of 12" above the housing hub and secure with safety slings.
- 6. Washout as required.
- Examine the 13-5/8" x 9-5/8" MBU-3T Slip Casing Hanger (Item A11a). Verify the following:
  - slips and internal bore are clean and in good condition
  - all screws are in place
- There are two latch screws located in the top of the casing hanger. Using a 5/16" Allen wrench, remove the two latch screws located 180° apart and separate the hanger into two halves.
- 9. Place two boards on the lower adapter against the casing to support the Hanger.
- 10. Pick up one half of the hanger and place it around the casing and on top of the boards.
- 11. Pick up the second hanger half and place it around the casing adjacent the first half.
- 12. Slide the two hanger halves together ensuring the slip alignment pins properly engage the opposing hanger half.
- 13. Reinstall the latch screws and tighten securely.
- 14. Prepare to lower the hanger into the housing bowl.

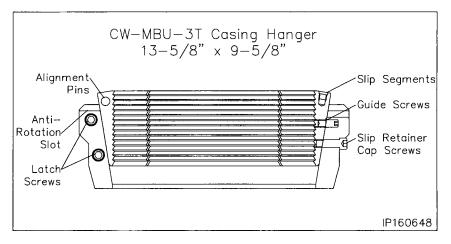

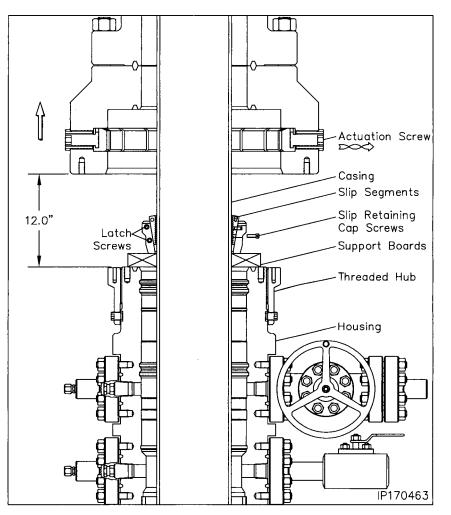

Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head



INFORMATION CONTAINED H. ... IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Stage 5A — Hang Off the 9-5/8" Casing (Emergency)


WARNING: Do Not Drop the Casing Hanger!

- 15. Grease the Casing Hanger's body and remove the slip retaining screws.
- 16. Remove the boards and allow the hanger to slide into the housing bowl. When properly positioned the top of the hanger will be approximately 22.56" below the top of the housing.
- 17. Pull tension on the casing to the desired hanging weight and then slack off.

**Note:** A sharp decrease on the weight indicator will signify that the hanger has taken weight and at what point, If this does not occur, pull tension again and slack off once more.

**WARNING:** Because of the potential fire hazard and the risk of loss of life and property, It is highly recommended to check the casing annulus and pipe bore for gas with an approved sensing device prior to cutting off the casing. If gas is present, do not use an open flame torch to cut the casing. It will be necessary to use a air driven mechanical cutter which is spark free.

- Rough cut the casing approximately
   4" above the top of the housing and move the excess casing out of the way.
- 19. Using the Wach's internal casing cutter, final cut the casing at 17.54"  $\pm$  1/8" below the top of the lower adapter or 5.02"  $\pm$  1/8" above the hanger body.
- 20. Remove the internal casing cutter assembly and reconfigure the assembly to bevel the casing. Reinstall the cutter assembly and then place a 3/16" x 3/8" bevel on the O.D. and a I.D. chamfer to match the minimum bore of the packoff to be installed.

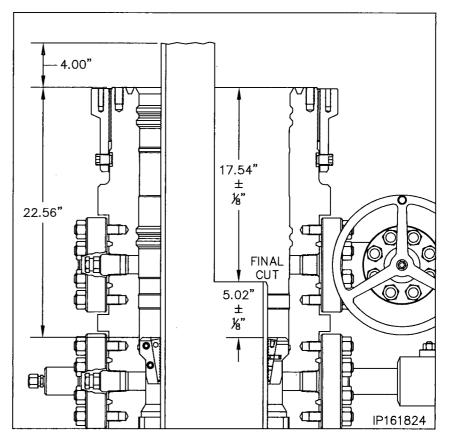

**Note:** There must not be any rough edges on the casing or the seals of the Packoff will be damaged.

- 21. Thoroughly clean the housing bowl, removing all CEMENT AND CUTTING DEBRIS.
- 22. Locate the two anti-rotation notches in the top of the sip bowl.
- 23. Place a straight edge on top of the slip bowl and in line with the center of one of the notches.
- 24. Ensure the straight edge is vertical and then place a paint mark on top of the housing in line with the notch in the slip bow!.




Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6 — Install the MBU-3T Mandrel Hanger Packoff

The following steps detail the installation of the MBU-3T Nested Packoff Assembly for the mandrel hanger. If the casing was landed using the emergency slip hanger, skip this step and proceed with Stage 6A for installing the emergency MBU-3T Nested packoff.

- 1. Examine the 13-5/8" x 11.250" 4 Stub Acme 2G LH box top MBU-3T Mandrel Hanger Nested Packoff Assembly (Item A12). Verify the following:
  - all elastomer seals are in place
     and undamaged
  - internal bore, and ports, are clean and in good condition
  - lockring is fully retracted
  - energizer ring is in its upper most position and retained with shear pins and stop screws are loose
  - anti-rotation plungers are in place, free to move
- 2. Inspect the ID and OD seals for any damage and replace as necessary.
- 3. Examine the 13-5/8" Nominal x 11.250" 4 Stub Acme 2G LH, MBU-3T Nested Packoff Running Tool (Item ST6). Verify the following:
  - Acme threads are clean and in good condition
  - retrieval latch is in position and retained with cap screws
  - Remove seal sleeve protector sleeve
  - seal sleeve is in position and rotates freely
  - seal sleeve o-rings are in place and in good condition
  - reinstall seal sleeve protector
- 4. Remove the retrieval latch and set aside.

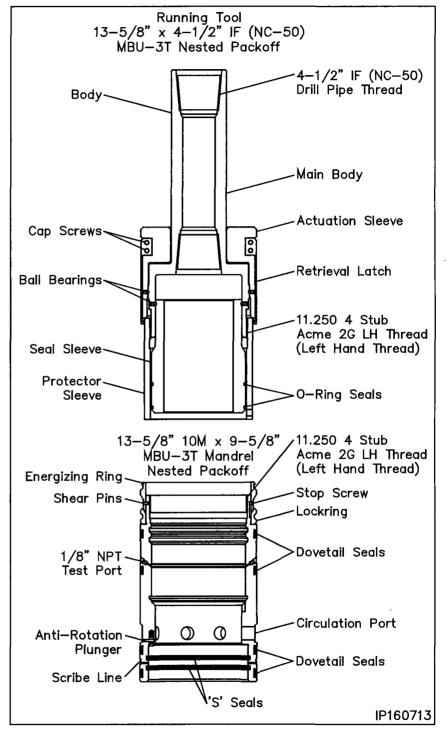




INFORMATION CONTAINED HL \_\_\_\_IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6 — Install the MBU-3T Mandrel Hanger Packoff

- Make up the running tool to 4-1/2" IF (NC-50) drill pipe and torque the connection to optimum make up torque.
- 6. Pick up the Running Tool with landing joint and suspend it above the packoff.
- 7. Remove the tool protector sleeve with counter clockwise rotation and set the sleeve aside.
- 8. Thoroughly clean and lightly lubricate the mating Acme threads of the running tool and packoff with oil or light grease.
- 9. Lightly lubricate the seal sleeve o-rings with oil or a light grease.
- 10. Carefully lower the tool into the packoff and thread them together by first rotating the tool clockwise (RIGHT) to locate the thread start and then counter clockwise (LEFT) until the tool upper body makes contact with the packoff Energizing Ring. Approximately 4 turns.
- 11. Install (1) 1/8" NPT pipe plug in the OD test port of the packoff and tighten securely.
- 12. Attach a test pump to the remaining open port and inject test fluid between the seal sleeve o-rings until a stable test pressure of 5000 psi is achieved.
- 13. If the test fails, remove the tool and replace the leaking o-rings.
- 14. After a satisfactory test is achieved remove the test pump and the 1/8" pipe plug from the opposite test port.

**WARNING:** All 1/8" pipe plugs must be removed prior to installing the packoff

 Pick up the assembly and thoroughly clean and lightly lubricate the packoff ID 'S' seals and the OD dovetail seals with oil or light grease.

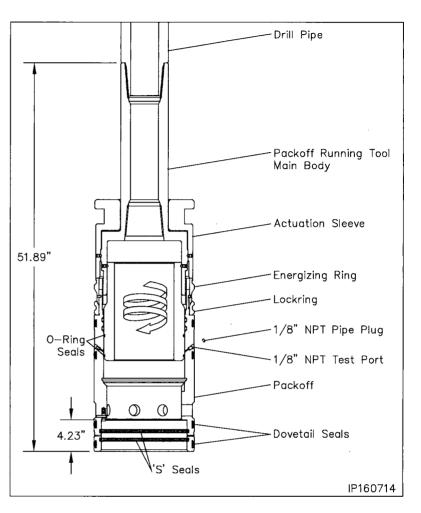




INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6 — Install the MBU-3T Mandrel Hanger Packoff

#### Landing the Packoff

- 16. Remove the hole cover.
- Measure up 5 foot from the paint mark on the OD of the packoff and place a paint mark on the drill pipe.
- Pick up the packoff/running tool assembly and carefully lower the assembly through the BOP marking the landing joint every five feet until the calculated dimension is reached.
- Place a paint mark on the landing joint at that dimension and mark land off. Place an additional mark 1-1/2" above the first one and mark engaged.
- Continue lowering the packoff until it passes over the neck of the hanger and lands on the casing hanger neck, 23.23" below the top of the drilling adapter.
- 21. Locate the upper 1" sight port pipe plug and remove the plug
- 22. Look through the port to verify that the packoff is properly landed. The white paint scribe line will be clearly visible in the center of the open port.
- 23. Reinstall the pipe plug and tighten securely.

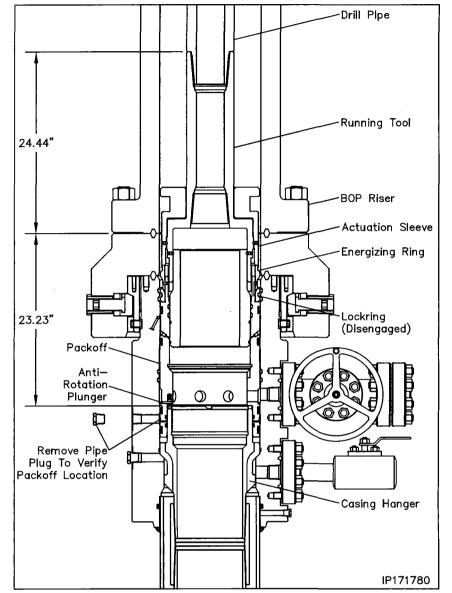



IP 0571 Page 20 INFORMATION CONTAINED H IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6 — Install the MBU-3T Mandrel Hanger Packoff


#### Seal Test

- 24. Locate the upper and lower seal test fittings on the O.D. of the housing and remove the dust cap from the fittings.
- 25. Attach a test pump to the open lower fitting and pump clean test fluid between the seals until a stable test pressure of 5,000 psi is achieved.
- 26. Hold test pressure for 5 minutes.
- 27. If a leak develops, bleed off test pressure, remove the packoff from the wellhead and replace the leaking seals.
- 28. Repeat steps 24 through 27 for the remaining seal test.
- 29. After satisfactory tests are achieved, bleed off the test pressure but leave the test manifolds in place.

#### **Engaging the Lockring**

- 30. Using chain tongs only located 180° apart, slowly rotate the drill pipe counter clockwise until the anti-rotation plungers align with the slots in the top of the hanger. Expect torque of approximately 400 ft lbs. to rotate the packoff.
- Using only chain tongs, rotate the landing joint approximately 6 to 6-1/2 turns counter clockwise to engage the packoff lockring in its mating groove in the bore of the MBU-LR housing.

**Note:** Approximately 800 to 900 ft. lbs. of torque will be required to break over the shear pins in the packoff. The torque will drop off and then increase slightly when the energizing ring pushes the lockring out. A positive stop will be encountered when the lockring is fully engaged.

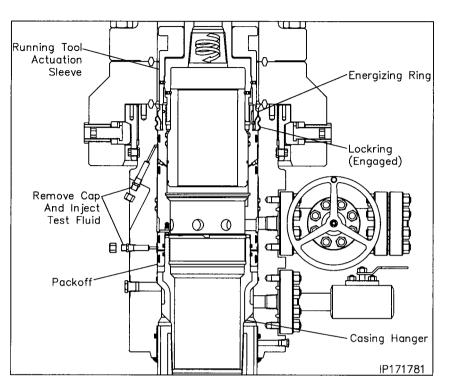

**Note:** When properly engaged the second paint mark on the landing joint will align with the rig floor. VERIFY PAINT MARKS.

WARNING: It is imperative that the landing joint remain concentric with the well bore when rotating to engage the lockring. This can be accomplished with the use of the air hoist.

WARNING: If the required turns to engage the lockring are not achieved or excessive torque is encountered, remove the packoff and first call local branch and then Houston Engineering.

- 32. Back off the landing joint/running tool approximately three turns. Using the top drive, exert a 40,000 lbs. pull on the landing joint.
- 33. Reattach the test pump to the open test manifolds and retest the packoff seals to 5,000 psi for 15 minutes. This will also verify that the packoff is in place.
- 34. After satisfactory test is achieved, bleed off all test pressure, remove test pump and reinstall the dust cap on the open fittings.
- 35. Using only chain tongs, rotate the landing joint clockwise until the tool comes free of the packoff (approximately 9 to 9-1/2 turns) and then retrieve the tool with a straight vertical lift.



INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 6 — Install the MBU-3T Mandrel Hanger Packoff

In the event the packoff is required to be removed after the lockring is engaged the following procedure is to be followed.

#### **Retrieving the Packoff**


- 1. Position the retrieval latch so the latch finger extend from the bottom of the running tool body.
- 2. Reinstall the cap screws and tighten them securely.
- 3. Ensure the retrieval latch freely rotates on the running tool body.
- Carefully lower the running tool through the BOP stack and into the packoff.
- Rotate the drill pipe clockwise (Right) to locate the thread start and then counter clockwise (Left) (approximately 9 to 9-1/2 turns) to a positive stop.

**Note:** At this point the retrieval latches will have passed over the energizing ring and snapped into place.

 Rotate the drill pipe clockwise (right) approximately 6 turns to a positive stop. The drill pipe should rise approximately 1-1/2".

**Warning:** Do not exceed the 6 turns or the packoff may be seriously damaged.

- Carefully pick up on the drill pipe and remove the packoff from the MBU-3T wellhead with a straight vertical lift.
- 8. Rotate the packoff 1 turn clockwise to relax the retrieval latch.
- 9. Remove the (4) 1/2" cap screws and remove the latch assembly.

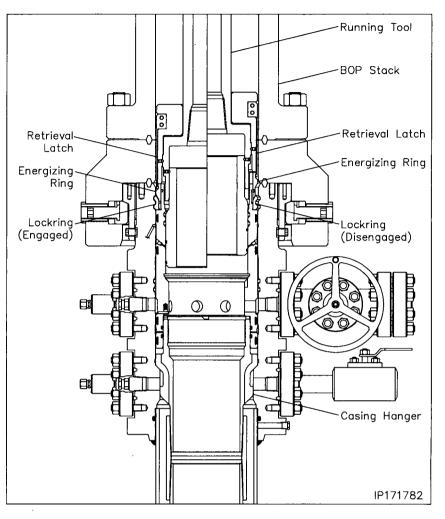

- 10. Redress the Packoff and reset as previously outlined.
- 11. Once the packoff is properly set, reinstall the retrieval latch on the tool.


IP 0571 Page 22



INFORMATION CONTAINED H IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6A — Install the MBU-3T Emergency Packoff

- 1. Examine the 13-5/8" 10M x 9-5/8" x 11.250" 4 Stub Acme 2G LH box top MBU-3T Emergency Nested Packoff Assembly (Item A12a). Verify the following:
  - all elastomer seals are in place and undamaged
  - internal bore, and ports, are clean and in good condition
  - lockring is fully retracted
  - energizer ring is in its upper most position and retained with shear pins
- 2. Inspect the ID and OD seals for any damage and replace as necessary.
- 3. Examine the 13-5/8" Nominal x 11.250" 4 Stub Acme 2G LH, MBU-3T Nested Packoff Running Tool (Item ST6). Verify the following:
  - Acme threads are clean and in good condition
  - retrieval latch is in position and retained with cap screws
  - seal sleeve is in position and rotates freely
  - seal sleeve o-rings are in place and in good condition
  - reinstall seal sleeve protector
- Make up a joint 4-1/2" IF (NC-50) drill pipe to the top of the Running Tool and tighten connection to thread manufacturer's maximum make up torque.
- 5. Run in the hole with two stands of drill pipe and set in floor slips.

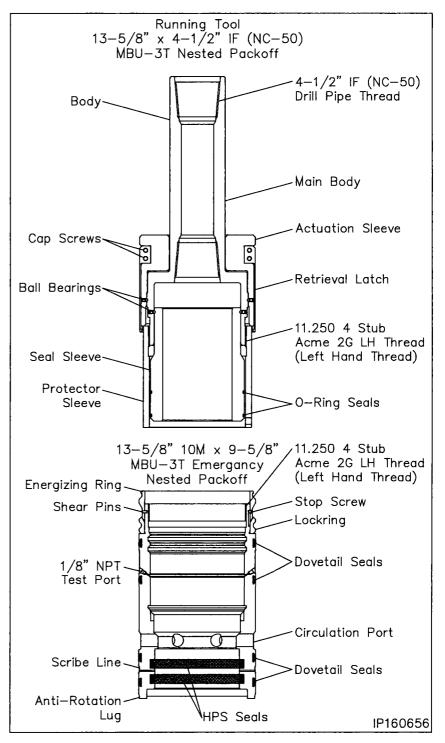




INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6A — Install the MBU-2LR Emergency Packoff

- Pick up the packoff and carefully pass it over the drill pipe and set it on top of the floor slips.
- Pick up the running tool with landing joint and remove the tool protector sleeve with counter clockwise rotation and set the sleeve aside.
- Thoroughly clean and lightly lubricate the mating acme threads of the running tool and packoff with oil or light grease.
- 9. Lightly lubricate the seal sleeve o-rings with oil or a light grease.
- Make up the running tool to the drill pipe in the floor slips using the appropriate length pip x pin sub.
- 11. Pick up the packoff and thread it onto the running tool with clockwise (Right) rotation until the Energizing Ring makes contact with the lower body of the tool. (Approximately 4 turns).
- Install (1) 1/8" NPT pipe plug in the OD test port of the packoff and tighten securely
- 13. Attach a test pump to the remaining open port and inject test fluid between the seal sleeve o-rings until a stable test pressure of 5,000 psi is achieved.
- 14. If the test fails, remove the tool and replace the leaking o-rings.
- After a satisfactory test is achieved remove the test pump and the 1/8" pipe plug from the opposite test port.

**WARNING:** All 1/8" pipe plugs must be removed prior to installing the packoff

16. Thoroughly clean and lightly lubricate the packoff ID 'HPS' seals and the OD dovetail seals with oil or light grease.

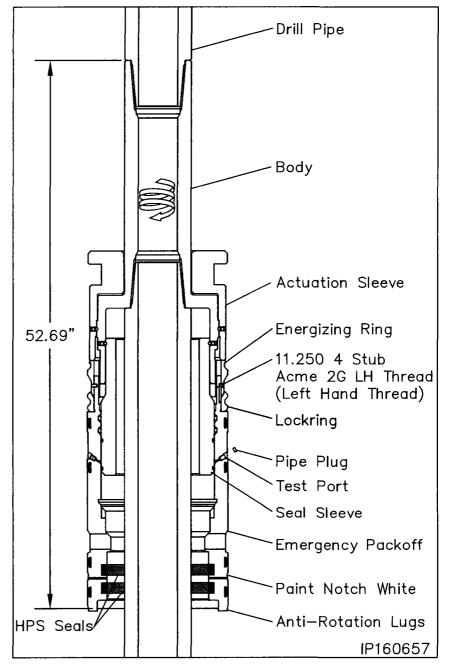

17. Using a straight edge positioned vertically and centered on the anti-rotation lug on the bottom of the packoff, place a white paint mark up the side of the packoff in line with the lug.

**Note:** The line will be used to guide the packoff anti-rotation lug into its mating notch in the slip bowl.



INFORMATION CONTAINED H. ... IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 6A — Install the MBU-2LR Emergency Packoff


#### Landing the Packoff

- 18. Pick up the drill string and remove the floor slips.
- 19. Carefully lower the packoff through the rig floor and position it just above the housing.
- 20. Align the white paint line with the existing paint mark on top of the housing.
- 21. While holding the packoff to maintain alignment, carefully lower the packoff into the housing until it lands on top of the slip hanger.

**Note:** When properly positioned the top of the running tool will be approximately 30.12" above the top of the MBU-3T Housing.

22. Remove the upper 1" LP pipe plug from the sight port to verify the packoff is properly landed. The 5/16" scribe line should be clearly visible in the center of the port.

With landing verified, reinstall the pipe plug and tighten securely.

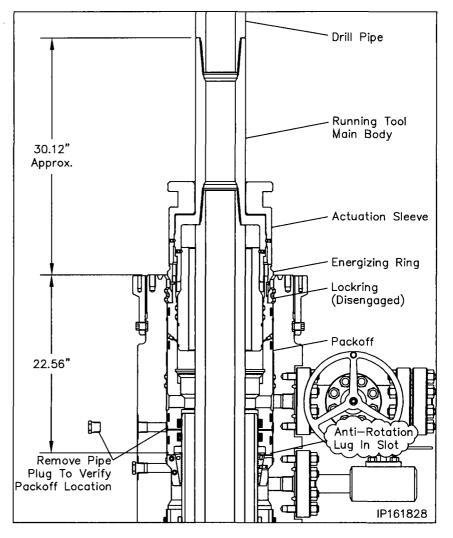



INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. 'RODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 6A — Install the MBU-2LR Emergency Packoff


#### Seal Test

- 1. Locate the upper and lower seal test fittings on the O.D. of the housing and remove the dust cap from the fittings.
- 2. Attach a test pump to the open lower fitting and pump clean test fluid between the seals until a stable test pressure of 5,000 psi is achieved.
- 3. Hold test pressure for 5 minutes.
- If a leak develops, bleed off test pressure, remove the packoff from the wellhead and replace the leaking seals.
- 5. After satisfactory test is achieved, bleed off the test pressure but leave the test manifold in place.
- 6. Repeat steps 1 through 5 for the upper seal test port.

#### **Engaging the Lockring**

 Using only chain tongs, rotate the landing joint approximately 6 to 6-1/2 turns counter clockwise (Left) to engage the packoff lockring in its mating groove in the bore of the MBU-3T housing.

**Note:** Approximately 800 to 900 ft. lbs. of torque will be required to break over the shear pins in the packoff. The torque will drop off and then increase slightly when the energizing ring pushes the lockring out. A positive stop will be encountered when the lockring is fully engaged.

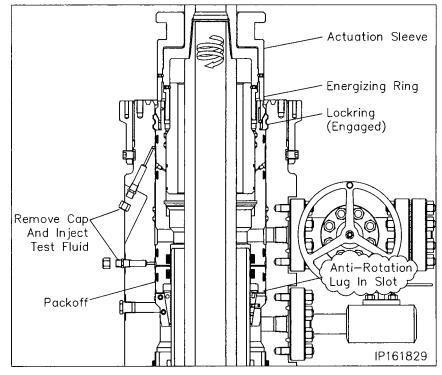

WARNING: It is imperative that the drill pipe landing joint remain concentric with the well bore when rotating to engage the lockring. This can be accomplished with the use of the air hoist.

WARNING: If the required turns to engage the lockring are not achieved or excessive torque is encountered, remove the packoff and first call local branch and then Houston Engineering.

- 8. Back off the landing joint/running tool approximately three turns. Using the top drive, exert a 40,000 lbs. pull on the landing joint.
- Reattach the test pump to the open test manifolds and retest the packoff seals to 5,000 psi for 15 minutes. This will also verify that the packoff is in place.
- 10. After satisfactory test is achieved, bleed off all test pressure, remove test pump and reinstall the dust cap on the open fittings.
- 11. Using only chain tongs, rotate the landing joint clockwise until the tool comes free of the packoff (approximately 9 to 9-1/2 turns) and then retrieve the tool with a straight vertical lift.
- 12. Reinstall and nipple up the BOP stack.



INFORMATION CONTAINED HL ... IN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.


### Stage 7 — Test the BOP Stack

Immediately after making up the BOP stack and periodically during the drilling of the well for the next casing string the BOP stack (connections and rams) must be tested.

- Examine the 11" Nominal x 4-1/2" IF (NC-50) CW Test Plug/ Retrieving Tool (Item ST7). Verify the following:
  - 1-1/4" VR plug and weep hole plug are in place and tightened securely
  - elastomer seal is in place and in good condition
  - retractable lift lugs are in place, clean, and free to move
  - drill pipe threads are clean and in good condition
- Position the test plug with the elastomer seal down and the lift lugs up and make up the tool to a joint of drill pipe.

**WARNING:** Ensure that the lift lugs are up and the elastomer seal is down

- Remove the 1/2" NPT pipe plug from the weep hole if pressure is to be supplied through the drill pipe.
- 4. Open the housing upper side outlet valve.
- 5. Lightly lubricate the test plug seal with oil or light grease.
- Carefully lower the test plug through the BOP and land it on the load shoulder in the packoff, 18.26" below the top of the drilling adapter.
- 7. Close the BOP rams on the pipe and test the BOP to 5,000 psi.

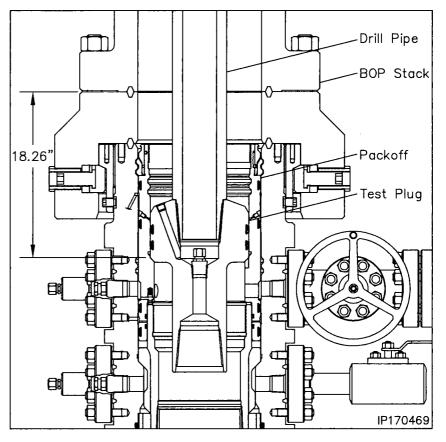

**Note:** Any leakage past the test plug will be clearly visible at the open side outlet valve.

- 8. After a satisfactory test is achieved, release the pressure and open the rams.
- 9. Remove as much fluid as possible from the BOP stack and the retrieve the test plug with a straight vertical lift.

**Note:** When performing the BOP blind ram test it is highly recommended to suspend a stand of drill pipe below the test plug to ensure the plug stays in place while disconnecting from it with the drill pipe.

10. Repeat this procedure as required during the drilling of the hole section.



IP 0571 Page 27

## INFORMATION CONTAINED HEREIN .1E PROPERTY OF CACTUS WELLHEAD, LLC PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 8 — Run the Upper Wear Bushing

Note: Always use a Wear Bushing while drilling to protect the load shoulders from damage by the drill bit or rotating drill pipe. The Wear Bushing **must be retrieved** prior to running the casing.

- 1. Examine the 13-5/8" x 11" x 9.00" ID MBU-3T-UPR Wear Bushing (Item ST8). Verify the following
  - internal bore is clean and in good condition
  - o-ring is in place and in good condition
  - shear o-ring cord is in place and in good condition
  - paint anti-rotation lugs white and allow paint to dry

## Run the Wear Bushing Before Drilling


- Orient the 13-5/8" Nominal x 4-1/2" IF (NC-50) CW Test Plug/ Retrieving Tool (Item ST1) with drill pipe connection up.
- 3. Attach the Retrieving Tool to a joint of drill pipe.


WARNING: Ensure that the lift lugs are down and the elastomer seal is up

 Align the retractable lift lugs of the tool with the retrieval holes of the bushing and carefully lower the tool into the Wear Bushing until the lugs snap into place.

**Note:** If the lugs did not align with the holes, rotate the tool in either direction until they snap into place.

- 5. Apply a heavy coat of grease, not dope, to the OD of the bushing.
- 6. Ensure the BOP stack is drained and free of any debris from previous test.
- 7. Slowly lower the Tool/Bushing Assembly through the BOP stack and land it on the load shoulder in the housing, 18.26" below the top of the drilling adapter.
- Rotate the drill pipe clockwise (right) to locate the stop lugs in their mating notches in the head. When properly aligned the bushing will drop an additional 1/2".

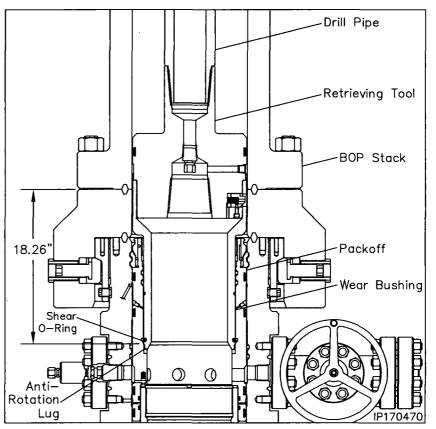



- 9. Remove the tool from the Wear Bushing by rotating the drill pipe counter clockwise (left) 1/4 turn and lifting straight up.
- 10. Drill as required.

**Note:** It is highly recommended to retrieve, clean, inspect, grease, and reset the wear bushing each time the hole is tripped during the drilling of the hole section.

#### **Retrieve the Wear Bushing After Drilling**

- 11. Make up the Retrieving Tool to the drill pipe.
- 12. Drain BOP stack and wash out if necessary.
- 13. Slowly lower the tool into the Wear Bushing.
- 14. Rotate the Retrieving Tool clockwise until a positive stop is felt. This indicates the lugs have snapped into the holes in the bushing.
- 15. Using the top drive, slowly pick up on the landing joint in 1000 lbs increments until the busing starts to rise. This action should take a minimum of 3000 lbs pull. Do Not Exceed 60,000 lbs.
- 16. Retrieve the Wear Bushing, and remove it and the Retrieving Tool from the drill string.

IP 0571 Page 28



INFORMATION CONTAINED HL ... IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 9 — Hang Off the 5-1/2" Casing


- 1. Run and cement the 5-1/2" casing string as required.
- 2. Open the housing upper side outlet valve to drain the BOP stack.
- Clean the ID of the BOP stack and OD of the casing with a high pressure water hose until returns through the open side outlet valve are clean and free of debris.
- 4. Thoroughly inspect the BOP stack to ensure all rams are fully retracted into their respective ram bores, the annular rubber is fully relaxed, all drilling adapters/spools are full opening and there are no casing collars between the rig floor and the wellhead.

**Note:** Side outlet valve to remain open while setting the casing hanger.

- 5. Examine the 11" x 5-1/2" C2 Slip Casing Hanger (Item A13). Verify the following:
  - slips and internal bore are clean and in good condition
  - all screws are in place
  - packoff rubber is in good condition

**Note:** Ensure that the packoff rubber does not protrude beyond the O.D. of the casing hanger body. If it does, loosen the cap screws in the bottom of the hanger.

- 6. Measure the distance from the rig floor to the top of the wellhead flange and record this measurement.
- 7. Pour a light oil through the BOP stack to thoroughly coat the OD of the casing.
- Using a 5/16" Allen wrench, remove the two latch screws located 180° apart on top of the hanger and separate the hanger into two halves.
- 9. Place two boards on the housing flange against the casing to support the hanger.
- 10. Pick up one half of the hanger and place it around the casing and on top of the boards.
- 11. Pick up the second hanger half and place it around the casing adjacent the first half.

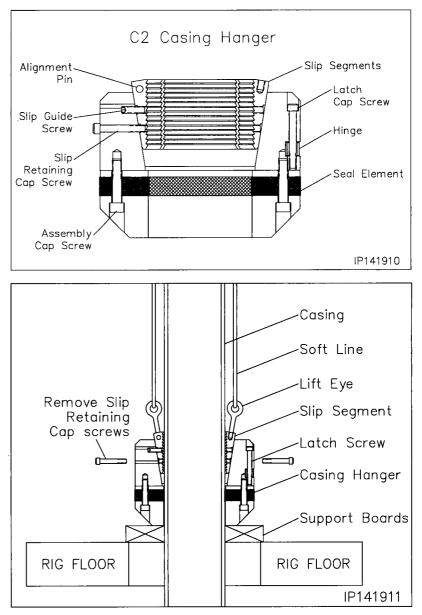

- 12. Slide the two hanger halves together ensuring the slip guide pins properly engage the opposing hanger half.
- 13. Reinstall the latch screws and tighten securely.
- 14. Using a 5/16" allen wrench, remove the slip retainer cap screws and discard them.
- 15. Lubricate the OD of the Casing Hanger liberally with a light grease or oil.
- 16. Prepare to lower the hanger through the BOP stack.



## INFORMATION CONTAINED HEREIN AE PROPERTY OF CACTUS WELLHEAD, LLC. PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 9 — Hang Off the 5-1/2" Casing

**WARNING:** Do not drop or allow the hanger to fall through the BOP stack.


One method commonly used is to loop or tie four lengths of soft line through the hanger eye bolts as shown. Tie a knot in the soft line at the measurement noted in step six (6).


**Note:** The soft line may stretch and give an imprecise indication of the Casing Hanger's location.

- 17. Remove the boards and allow the Casing Hanger to slide through the BOP and into the MBU-3T packoff bowl using the cat line to center that casing if necessary.
- When the Casing Hanger is down as indicated by the knots in the soft line, pull tension to the desired hanging weight and slack off.

**Note:** A sharp decrease on the weight indicator will signify that the Hanger has taken weight and at what point.

- 19. Untie the soft lines and pull them back through the lift eyes or drop them inside the BOP stack.
- 20. Prior to nippling down the BOP the integrity of the slip hanger seal can be verified by closing the BOP annular on the casing string and applying customer specific pressure through the kill line.
- 21. Once a satisfactory test is achieved, bleed off all test pressure, and drain the BOP stack.
- 22. Locate the actuation screws on the OD of the lower drilling adapter.
- 23. Using a hex drive, fully retract the (16) actuation screws until they are slightly over flush with the glandnuts.
- 24. Pick up on the BOP stack a minimum of 12" above the housing and secure with safety slings.
- 25. Remove the four lift eyes.
- 26. Rough cut the casing approximately 8" above the top of the housing and move the excess casing out of the way.
- 27. Final cut the casing at  $5-3/4" \pm 1/8"$  above the top flange of the housing.
- Grind the casing stub level and then place a 3/16" x 3/8" bevel on the O.D. and a I.D. chamfer to match the minimum bore of the tubing head to be installed.

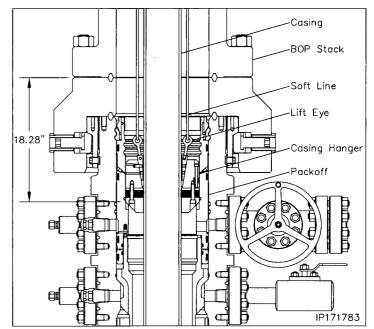

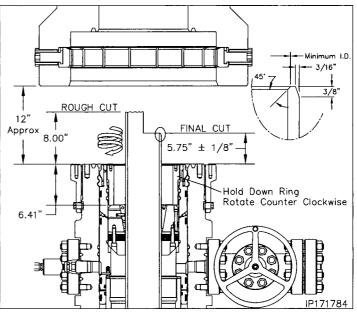


- 29. Thoroughly clean the top of the housing and Casing Hanger. Ensure all cutting debris are removed.
- 30. Thoroughly clean and lightly lubricate the mating acme threads of the MBU-3T packoff and the slip *Hold Down Ring (Item A14)*.
- 31. Thread the ring into the packoff with counter clockwise rotation to a positive stop on top of the slip hanger.
- 32. Re-land the BOP stack and prepare to remove the upper adapter with the BOP stack




INFORMATION CONTAINED HE. ... IN IS THE PROPERTY OF CACTUS WELLHEAD, LC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 10 — Install the 'Quick Connect' TA Cap Assembly

- 1. Examine the 13-5/8" 5M 'Quick Connect' TA Cap Assembly (Item R3). Verify the following:
  - bore is clean and free of debris
  - ring groove is clean and undamaged
  - (16) drive screws and clamp segments are properly installed and fully retracted
  - 5-1/2" HPS seal bushing is in place and properly retained with the square snap wire
- Thoroughly clean the top of the MBU-3T housing, thread hub, and the mating seal surfaces of the TA Cap.
- 3. Install a new **BX-160 Ring Gasket** into the ring groove of the housing.
- Using a suitable lifting devise with weight rated slings, pick up the TA Cap assembly and carefully lower it over the casing stub and land it on the ring gasket.
- 5. Ensure the TA Cap is level and then carefully run in all of the drive screws of the TA Cap to contact point.
- 6. Ensure the assembly remains level, run in one actuation and torque to 100 ft lbs.
- 7. Locate the screw 180° from the first and torque to 100 ft lbs.
- 8. Locate the screws 90° to the right and left and torque to 100 ft lbs.
- 9. Position the second 4 point sequence 90° from the first and torque each screw to 200 ft lbs
- 10. Run in all remaining screws to contact and then torque each screw to 400 ft lbs.
- Make one additional round until a stable torque of 400 ft lbs on all (16) screws is achieved.

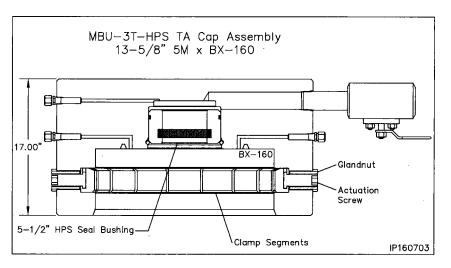

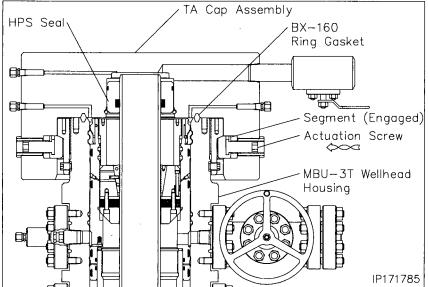




Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

IP 0571 Page 31 INFORMATION CONTAINED HEREIN . . . HE PROPERTY OF CACTUS WELLHEAD, LLC PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 10 — Install the 'Quick Connect' TA Cap Assembly

#### **Connection Test**

- 1. Open the TA Cap ball valve and the housing upper side outlet valve to monitor leakage.
- 2. Locate the two test fittings marked flange test and remove the dust caps from the fittings.
- 3. Attach a bleeder tool to one of the open fitting and open the tool.
- 4. Attach a test pump to the remaining open fitting and pump clean test fluid into the void area until a continuous stream flows from the open bleeder tool.
- Close the tool and continue pumping fluid until a stable test pressure of 5,000 psi or 80% of casing collapse is achieved, whichever is less.
- 6. Hold test pressure for 15 minutes.
- After a satisfactory test is achieved, bleed off the test pressure, drain the fluid, remove the bleeder tool and re install the dust cap on the open fittings.
- 8. Close all open valves.

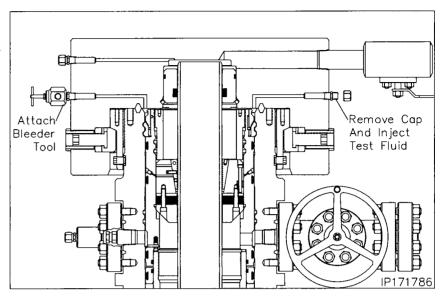





INFORMATION CONTAINED HL IN IS THE PROPERTY OF CACTUS WELLHEAD, LC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 11 — Remove the TA Cap Assembly

- 1. Open the ball valve on the TA cap to check for trapped pressure above the casing hanger.
- 2. Locate the actuation screws on the OD of the TA Cap Assembly.
- Using a hex drive, fully retract the actuation screws until they are slightly over flush with the glandnuts.
- Install a lift eye with pick up sling to the top of the TA Cap and lift the cap free of the wellhead.
- 5. Remove the thread hub set screws.
- 6. Remove the thread hub from the top of the housing with clockwise rotation.

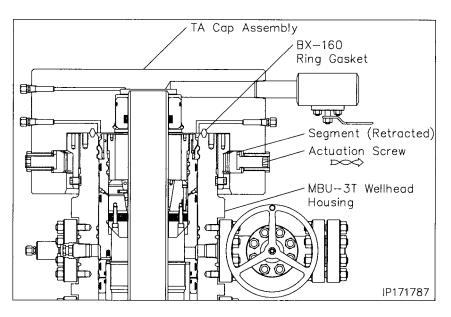

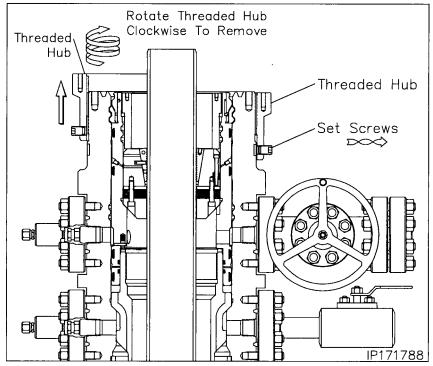




INFORMATION CONTAINED HEREIN HE PROPERTY OF CACTUS WELLHEAD, LLC PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC

### Stage 11 — Remove the TA Cap Assembly

- 7. Examine the 13-5/8" 5M Thread Flange. Verify the following:
  - Acme thread are clean and in good condition
- 8. Thoroughly clean and lightly lubricate the mating threads of the housing and the Thread Flange with Copper Coat or Never Seize.
- 9. Pick up the flange and carefully thread it onto the top of the housing with counter clockwise rotation until the top of the flange is level with the top of the Acme thread of the housing.
- 10. Rotate the flange in either direction to two hole.
- 11. Prepare to install the tubing head.

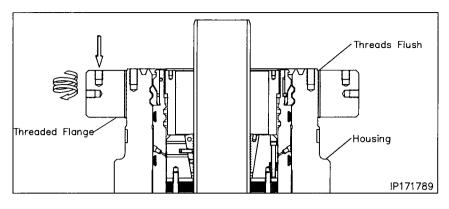





INFORMATION CONTAINED HE. IN IS THE PROPERTY OF CACTUS WELLHEAD, LC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 12 — Install the Tubing Head

**Note:** The tubing head may be shipped to location with the lower frac valve pre installed and tested.

- Examine the 13-5/8" 5M x 7-1/16" 10M CW, CTH-HPS-F MOD Tubing Head With 5-1/2" DBLHPS Bottom (Item B1) Verify the following:
  - seal area and bore are clean and in good condition
  - *HPS-F MOD Secondary Seal Bushing* is in place and properly retained with a square snap wire
  - all peripheral equipment is intact and undamaged
- 2. Clean the mating ring grooves of the MBU-3T Housing and tubing head.
- 3. Lightly lubricate the I.D. of the tubing head 'HPS' seals and the casing stub with a light oil or grease.

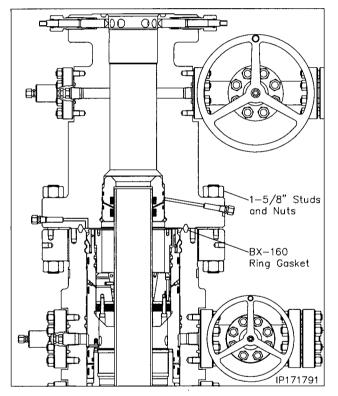

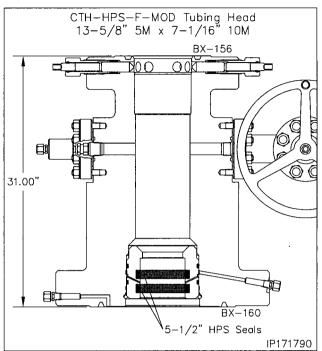

Note: Excessive oil or grease may prevent a good seal from forming!

- 4. Install a new **BX-160 Ring Gasket (Item B12)** in the ring groove of the housing.
- 5. Pick up the tubing head and suspend it above the housing.
- Orient the head so that the outlets properly align with the housing upper outlets and then carefully lower the head over the casing stub and then land it on the ring gasket.

Warning: Do Not damage the 'HPS' seals or their sealing ability will be impaired!

7. Make up the flange connection using the appropriate size *studs and nuts (Item B13)*, tightening them in an alternating cross pattern.




INFORMATION CONTAINED HEREIN ... HE PROPERTY OF CACTUS WELLHEAD, LLC ... PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .

### Stage 12 — Install the Tubing Head

#### Seal Test

- Locate the seal test fitting and one flange test fitting on the Tubing Head lower flange and remove the dust cap from both fittings.
- Attach a Bleeder Tool to one of the open flange test fittings and open the Tool.
- 3. Attach a test pump to the seal test fitting and pump clean test fluid between the HPS Seals until a test pressure of 10,000 psi or 80% of casing collapse Whichever is less.
- 4. Hold test pressure for 15 minutes.
- 5. If pressure drops, a leak has developed. Bleed off test pressure and take the appropriate action in the adjacent table.
- After a satisfactory test is achieved, remove the Test Pump, drain test fluid and reinstall the dust cap on the open seal test fitting.

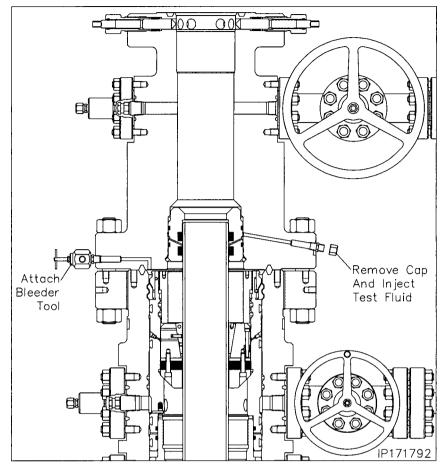

Seal	Test
Leak Location	Appropriate Action
Open bleeder tool - Lower HPS seal is leaking	Remove Tubing Head and replace leaking seals. Re
Into the tubing head bore - Upper HPS seal is leaking	land and retest seals




INFORMATION CONTAINED HEREIN IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

### Stage 12 — Install the Tubing Head

#### **Flange Test**

- Locate the remaining flange test fitting on the Tubing Head lower flange and remove the dust cap from the fitting.
- Attach a test pump to the open flange test fitting and inject test fluid into the flange connection until a continuous stream flows from the opposite flange test bleeder tool.
- 3. Close the bleeder tool and continue to pumping test fluid to 5,000 psi or 80% of casing collapse -Whichever is less..
- 4. Hold test pressure for 15 minutes.
- 5. If pressure drops a leak has developed. Take the appropriate action from the adjacent chart.
- 6. Repeat this procedure until a satisfactory test is achieved.
- 7. Once a satisfactory test is achieved, remove the test pump and bleeder tool, drain all test fluid, and reinstall the dust caps.

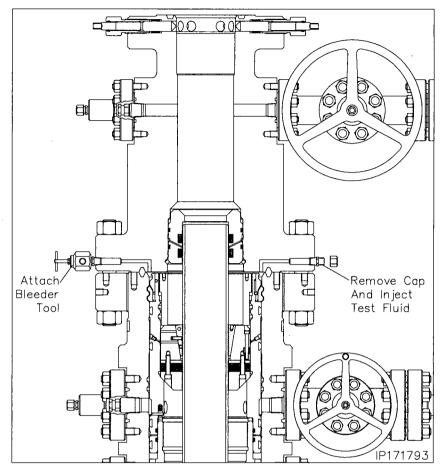

Flange Test							
Leak Location	Appropriate Action						
Between flanges - Ri gasket is leaking	ng Verify flange bolt torque. If correct, remove tubing head to clean, inspect and possibly replace damaged ring gasket.						



INFORMATION CONTAINED HEREIN ... HE PROPERTY OF CACTUS WELLHEAD, LLC ... PRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC ...

# Recommended Procedure for Field Welding Pipe to Wellhead Parts for Pressure Seal

 Introduction and Scope. The following recommended procedure has been prepared with particular regard to attaining pressure-tight weld when attaching casing heads, flanges, etc., to casing. Although most of the high strength casing used (such as N-80) is not normally considered field weldable, some success may be obtained by using the following or similar procedures.

<u>Caution:</u> In some wellheads, the seal weld is also a structural weld and can be subjected to high tensile stresses. Consideration must therefore be given by competent authority to the mechanical properties of the weld and its heat affected zone.

- a. The steels used in wellhead parts and in casing are high strength steels that are susceptible to cracking when welded. It is imperative that the finished weld and adjacent metal be free from cracks. The heat from welding also affects the mechanical properties. This is especially serious if the weld is subjected to service tension stresses.
- b. This procedure is offered only as a recommendation. The responsibility for welding lies with the user and results are largely governed by the welder's skill. Weldability of the several makes and grades of casing varies widely, thus placing added responsibility on the welder. Transporting a qualified welder to the job, rather than using a less-skilled man who may be at hand, will, in most cases, prove economical. The responsible operating representative should ascertain the welder's qualifications and, if necessary, assure himself by instruction or demonstration, that the welder is able to perform the work satisfactorily.
- 2. Welding Conditions. Unfavorable welding conditions must be avoided or minimized in every way possible, as even the most skilled welder cannot successfully weld steels that are susceptible to cracking under adverse working conditions, or when the work is rushed. Work above the welder on the drilling floor should be avoided. The weld should be protected from dripping mud, water, and oil and from wind, rain, or other adverse weather conditions. The drilling mud, water, or other fluids must be lowered in the casing and kept at a low level until the weld has properly cooled. It is the responsibility of the user to provide supervision that will assure favorable working conditions, adequate time, and the necessary cooperation of the rig personnel.

- **3.** Welding. The welding should be done by the shielded metal-arc or other approved process.
- 4. Filler Metal. Filler Metals. For root pass, it's recommended to use E6010, E6011 (AC), E6019 or equivalent electrodes. The E7018 or E7018-A1 electrodes may also be used for root pass operations but has the tendency to trap slag in tight grooves. The E6010, E6011 and E6019 offer good penetration and weld deposit ductility with relatively high intrinsic hydrogen content. Since the E7018 and E7018-A1 are less susceptible to hydrogen induced cracking, it is recommended for use as the filler metal for completion of the weld groove after the root pass is completed. The E6010, E6011 (AC), E6019, E7018 and E7018-A1 are classified under one of the following codes AWS A5.1 (latest edition): Mild Steel covered electrodes or the AWS A5.5 (latest edition): Low Alloy Steel Covered Arc-Welding Electrodes. The low hydrogen electrodes, E7018 and E7018-A1, should not be exposed to the atmosphere until ready for use. It's recommended that hydrogen electrodes remain in their sealed containers. When a job arises, the container shall be opened and all unused remaining electrodes to be stored in heat electrode storage ovens. Low hydrogen electrodes exposed to the atmosphere, except water, for more than two hours should be dried 1 to 2 hours at 600°F to 700 °F (316°C to 371 °C) just before use. It's recommended for any low hydrogen electrode containing water on the surface should be scrapped.
- 5. Preparation of Base Metal. The area to be welded should be dry and free of any paint, grease/oil and dirt. All rust and heat-treat surface scale shall be ground to bright metal before welding.



INFORMATION CONTAINED HE. \_.N IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC.

# Recommended Procedure for Field Welding Pipe to Wellhead Parts for Pressure Seal

- 6. Preheating. Prior to any heating, the wellhead member shall be inspected for the presence of any o-rings or other polymeric seals. If any o-rings or seals are identified then preheating requires close monitoring as noted in paragraph 6a. Before applying preheat, the fluid should be bailed out of the casing to a point several inches (>6" or 150 mm) below the weld joint/location. Preheat both the casing and wellhead member for a minimum distance of three (3) inches on each side of the weld joint using a suitable preheating torch in accordance with the temperatures shown below in a and b. The preheat temperature should be checked by the use of heat sensitive crayons. Special attention must be given to preheating the thick sections of wellhead parts to be welded, to insure uniform heating and expansion with respect to the relatively thin casing.
  - a. Wellhead members containing o-rings and other polymeric seals have tight limits on the preheat and interpass temperatures. Those temperatures must be controlled at 200°F to 325°F or 93 °C to 160°C and closely monitored to prevent damage to the o-ring or seals.
  - b. Wellhead members not containing o-rings and other polymeric seals should be maintained at a preheat and interpass temperature of 400°F to 600°F or 200°C to 300°C.
- 7. Welding Technique. Use a 1/8 or 5/32-inch (3.2 or 4.0 mm) E6010 or E7018 electrode and step weld the first bead (root pass); that, weld approximately 2 to 4 inches (50 to 100 mm) and then move diametrically opposite this point and weld 2 to 4 inches (50 to 100 mm) halfway between the first two welds, move diametrically opposite this weld, and so on until the first pass is completed. This second pass should be made with a 5/32-inch (4.0 mm) low hydrogen electrode of the proper strength and may be continuous. The balance of the welding groove may then be filled with continuous passes without back stepping or lacing, using a 3/16-inch (4.8 mm) low hydrogen electrode. All beads should be no undercutting and weld shall be workmanlike in appearance.
  - **a.** Test ports should be open when welding is performed to prevent pressure buildup within the test cavity.
  - During welding the temperature of the base metal on either side of the weld should be maintained at 200 to 300°F (93 to 149°C).
  - c. Care should be taken to insure that the welding cable is properly grounded to the casing, but ground wire should not be welded to the casing or the wellhead. Ground wire should be firmly clamped to the casing, the wellhead, or fixed in position between pipe slips. Bad contact may cause sparking, with resultant hard spots beneath which incipient cracks may develop. The welding cable should not be grounded to the steel derrick, nor to the rotary-table base.

- 8. Cleaning. All slag or flux remaining on any welding bead should be removed before laying the next bead. This also applies to the completed weld.
- **9. Defects.** Any cracks or blow holes that appear on any bead should be removed to sound metal by chipping or grinding before depositing the next bead.
- **10. Postheating.** Post-heating should be performed at the temperatures shown below and held at that temperature for no less than one hour followed by a slow cooling. The post-heating temperature should be in accordance with the following paragraphs.
  - a. Wellhead members containing o-rings and other polymeric seals have tight limits on the post-heating temperatures. Those temperatures must be controlled at 250°F to 300°F or 120 °C to 150°C and closely monitored to prevent damage to the o-ring or seals.
  - **b.** Wellhead members not containing o-rings and other polymeric seals should be post-heated at a temperature of 400°F to 600°F or 200°C to 300°C.
- **11. Cooling.** *Rapid cooling must be avoided.* To assure slow cooling, welds should be protected from extreme weather conditions (cold, rain, high winds, etc.) by the use of suitable insulating material. (Specially designed insulating blankets are available at many welding supply stores.) Particular attention should be given to maintaining uniform cooling of the thick sections of the wellhead parts and the relatively thin casing, as the relatively thin casing will pull away from the head or hanger if allowed to cool more rapidly. The welds should cool in air to less than 200°F (93°C) (measured with a heat sensitive crayon) prior to permitting the mud to rise in the casing.
- **12.** Test the Weld. After cooling, test the weld. The weld must be cool otherwise the test media will crack the weld. The test pressure should be no more than 80% of the casing collapse pressure.




#### Cactus Speed Head Pressure Testing Statement

Our procedure is to nipple up BOP's to the surface casing, pressure test the BOP's to 5000 psi high and 250 psi low. We do not anticipate breaking any seals on the BOP from that point until rig release, however if we do break any seal, the entire BOP will be retested to 5000 psi high and 250 psi low.



Chisholm Energy 13-3/8" x 9-5/8" x 5-1/2" 5/10M MBU-3T Wellhead, With CTH-HPS-F MOD Tubing Head

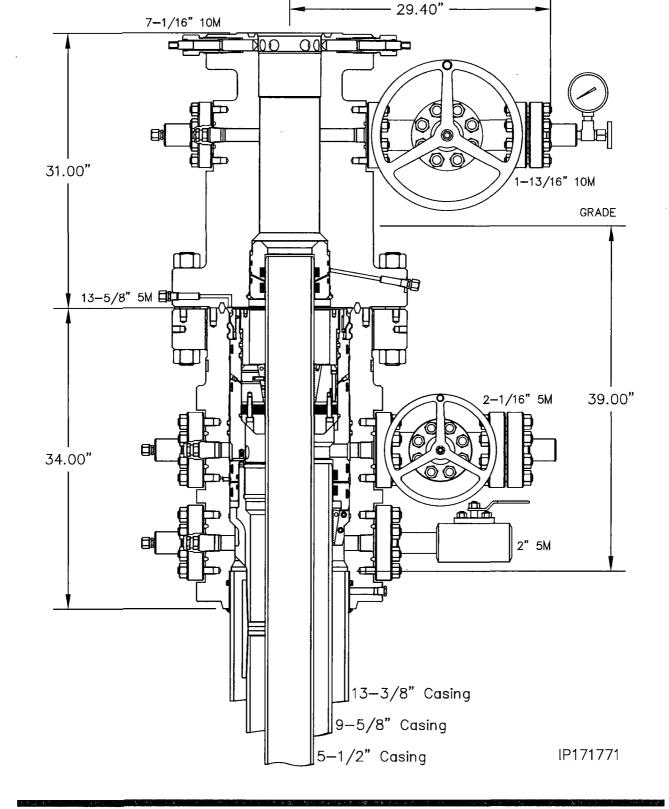

### **System Drawing**

INFORMATION CONTAINED HE. ....N IS THE PROPERTY OF CACTUS WELLHEAD, LLC. REPRODUCTION, DISCLOSURE, OR USE THEREOF IS PERMISSIBLE ONLY AS PROVIDED BY CONTRACT OR AS EXPRESSLY AUTHORIZED BY CACTUS WELLHEAD, LLC .



CONTITECH RUBBER	No:QC-DB- 247/ 2014				
Industrial Kft.	Page: 5 / 68				

10.3

ł

ContiTech

QUALI INSPECTION A	CERT. N	<b>1</b> °:	702					
PURCHASER:		P.O. N°: 45004211		4500421193				
CONTITECH ORDER Nº:	538448	HOSE TYPE:	3" 10	5		Choke &	& Kill Hose	
HOSE SERIAL Nº:	67554	NOMINAL / AC		GTH:		10,67 n	n / 10,66 m	
W.P. 68,9 MPa 1	0000 psi	T.P. 103,4	MPa	1500	0 psi	Duration:	60	min.
See attachment. (1 page) ↑ 10 mm = 10 Min.								
$\rightarrow$ 10 mm = 20 MP COUPLINGS Typ		Serial	N°		0	uality	Heat N°	
3" coupling with		1525	1519		AISI 4130		A0579N	
4 1/16" 10K API Swivel F						14130	035608	
Hub					AIS	1 4130	A1126U	
Not Designed For V	Vell Testin	9				A	PI Spec 16 C	
Tag No.: 66 – 1225						Tem	perature rate:	:"B"
All metal parts are flawless								
WE CERTIFY THAT THE ABOVE INSPECTED AND PRESSURE T						H THE TERM	S OF THE ORDER	
STATEMENT OF CONFORMI conditions and specifications accordance with the referenced	of the above Purc	chaser Order and th	at these iten	ns/equ	ipment we	ere fabricated	inspected and tested	lin
Date:	Inspector				Quality Control ContiTech Rubber Industrial Kft.			
14. April 2014.		Quality Control Destaux					·>	

ContiTech Rubber Industrial Kft. | Budapesti út 10. H-6728 Szeged | H-6701 P.O.Box 152 Szeged, Hungary Phone: +36 62 566 737 | Fax: +36 62 566 738 | e-mail: info@fluid.contitech.hu | Internet: www.contitech-rubber.hu; www.contitech.hu The Court of Csongrad County as Registry Court | Registry Court No: Cg.06-09-002502 | EU VAT No: HU11087209 Bank data Commerzbank Zrt., Budapest | 14220108-26830003

Page: 1/1

.

ţ

EN 1 +22, 42 Cr.	70 Condition Rubb
RD +21.81 90 BL +1054 bd P	17:60 Controi De
RD +21.64 90 BL +1056. bar	
RD +21.71 °C BL +1057. bar	
RD +21.43 °C BL +1058. bar	
RD +21.38 % BL +1060. bar	
CN +22.06 9C RD +21.32 9C BL +1063. bar CN +22.16 9C	
RD +21.31 °C BL +1067. bar	5. 30 6. 10 7. 10
11.04.2014.15:56 67542.67548.67554	
11.04.2014. 15:40 67542,67548,67554 15	



CONTITECH RUBBER	No:QC-DB- 247/ 2014
Industrial Kft.	Page: 6 / 68

ContiTech

#### Hose Data Sheet

CRI Order No.	538448
Customer	ContiTech Oil & Marine Corp.
Customer Order No	CBC5571164500421193
Item No.	1
Hose Type	Flexible Hose
Standard	API SPEC 16 C
Inside dia in inches	3
Length	35 ft
Type of coupling one end	FLANGE 4.1/16" 10KPSI API SPEC 17D SV SWIVEL FLANGE SOURC/W BX155 ST/ST INLAID R.GR.
Type of coupling other end	FLANGE 4.1/16" 10KPSI API SPEC 17D SV SWIVEL FLANGE SOUR C/W BX155 ST/ST INLAID R.GR.
H2S service NACE MR0175	Yes
Working Pressure	10 000 psi
Design Pressure	10 000 psi
Test Pressure	15 000 psi
Safety Factor	2,25
Marking	USUAL PHOENIX
Cover	NOT FIRE RESISTANT
Outside protection	St.steel outer wrap
Internal stripwound tube	No
Lining	OIL + GAS RESISTANT SOUR
Safety clamp	Yes
Lifting collar	Yes
Element C	Yes
Safety chain	Yes
Safety wire rope	No
Max.design temperature [°C]	100
Min.design temperature [°C]	-20
Min. Bend Radius operating [m]	0,90
Min. Bend Radius storage [m]	0,90
Electrical continuity	The Hose is electrically continuous
Type of packing	WOODEN CRATE ISPM-15



CONTITECH RUBBER	No:QC-DB- 248 /2013			
Industrial Kft.	Page:	5 / 68		

,

QUALITY CONTROL INSPECTION AND TEST CERTIFICATE							CERT. N	<b>۱</b> °:	731	ne na en la Sila de La Serie de La		
PURCHASER: ContiTech Oil & Marine Corp.							P.O. N°:		45003	300249		
CONTI	TECH RUE	BBER ord	ler Nº: 53655	5 ноз	E TYPE:	3"	ID	<b></b>	Choke	and Kill H	lose	
HOSE	SERIAL N	<b>1</b> °:	65346	NOM	INAL / AC		ENGTH		7,6	2 m / 7,66	5 m	
W.P.	68,9	MPa	10000 P	si T.P.	103,4	MPa	1500	)0 psi	Duration	n: 6	60	min.
ambie	ambient temperature See attachment. ( 1 page )											
• • •	0 mm ≃ 0 mm =	10 20	Min. MPa									
	COUR	PLINGS	Туре		Serial N	2		Quality		ŀ	leat N°	
	3" c	oupling	with	342	8	3433		AISI 413	30	А	1031U	
4 1/1	16" API 10	)K Swiv	el Flange end					AISI 413	30	034435	549	961
	- <u></u>	Hub						AISI 413	30	A	0462U	
	NOT	DESI	GNED FOR	WELL	TESTIN	IG				API Spe	c 16 C	
	66 –	1042	NBRS	N66104	12				Ten	peratur	e rate:"	В"
All met	al parts ar	e flawles	SS									
			BOVE HOSE HAS						H THE TE	RMS OF THI	E ORDER	
conditio	INSPECTED AND PRESSURE TESTED AS ABOVE WITH SATISFACTORY RESULT. STATEMENT OF CONFORMITY: We hereby certify that the above items/equipment supplied by us are in conformity with the terms, conditions and specifications of the above Purchaser Order and that these items/equipment were fabricated inspected and tested in accordance with the referenced standards, codes and specifications and meet the relevant acceptance criteria and design requirements.											
Date:	)3. May :	2013.	Inspector			Qualit	y Contro	C	ontiTech Industria ality Cont (1)	al Kft.	Cre	>
Contilect	n Rubber Industr	iai Kit.	Phone: +36 62 566	737	The Court	of Csongrad	County as	Bank dat	ta		•	

Contilech Hubber Industrial Kit. Budapesti út 10., Szeged H-6728 P.O.Box 152 Szeged H-6701 Hungary Phone: +36 62 566 737 Fax: +36 62 566 738 e-mail: info@fluid.contitech.hu Internet: www.contitech-rubber.hu The Court of Csongrad County as Registry Court Registry Court No: HU 06-09-002502 EU VAT No: HU11087209

Bank data Commercial and Creditbank Szeged 10402805-28014250-00000000

Page: 1/1

							staur ~	\ \
2							ContilTecia Adube	F
GN	+25.19	ec	18:5	9			Industrial Kft. Quality Control Dep	1Ł
RD		9C   .	18:5				(1)	
BH-	+25.20		18:40	<b> </b>				
RD	+26.46	ec	181 41					
GN 19		bar ac	18:40			++{	++++++	
RD	+26.46	9ē	18:00					
BL	+1049.	bar	18:3	<b>.</b>				
GN		40 40	18:20					
₽₽ ₽₽	+1051	bar	18:20					
GN		9 <u>0</u>	18:10					
RD BL	+1052.	bar	18:10 18:10 18:10					
GN	+25.22	ac	18:00	ř				
	+26.55	°C	18:00					
GN		bait PC	18:00				<u> </u>	
RD -	126 A9	° GOO 40	174	60	70	80	50 100	
BL	+1056	bar	17160	Ļ				
GN		90 90	17:40				36698	
歰	+1059.	bar	17.40				30,943	
GN		90	17:00					
RD BL	F86951N	1435069 bar	17:30		16	5m-a-1(	),5	
177-								
21						1 1		
<u> </u>					<u> </u>	<del></del>		
	8,65309		7:10		· · · · · ·			
02.0	5.13 17	:10		<b>}</b>	· · · · · · · · · · · · · · · · · · ·			
632	8.65389	85346	Zeal					
8H. (	8,65309 5.13 17	:00	$\mathcal{P}$					
		H						
					· , .			
				1			<u>-</u>	
19				11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	· · · .	,		

CONTITECH RUBBER	No:QC-DB- 248 /2013		
Industrial Kft.	Page:	6 / 68	

### Continental · CONTITECH

#### **Hose Data Sheet**

CRI Order No.	536555
Customer	ContiTech Oil & Marine Corp.
Customer Order No	4500300249 CBC384527
Item No.	1
Hose Туре	Flexible Hose
Standard	API SPEC 16 C
Inside dia in inches	3
Length	25 ft
Type of coupling one end	FLANGE 4.1/16" 10KPSI API SPEC 17D SV SWIVEL FLANGEC/W BX155 ST/ST INLAID RING GR
Type of coupling other end	FLANGE 4.1/16" 10KPSI API SPEC 17D SV SWIVEL FLANGE C/W BX155 ST/ST INLAID RING GR
H2S service NACE MR0175	Yes
Working Pressure	10 000 psi
Design Pressure	10 000 psi
Test Pressure	15 000 psi
Safety Factor	2,25
Marking	USUAL PHOENIX
Cover	NOT FIRE RESISTANT
Outside protection	St.steel outer wrap
Internal stripwound tube	No
Lining	OIL RESISTANT
Safety clamp	Yes
Lifting collar	Yes
Element C	Yes
Safety chain	Yes
Safety wire rope	No
Max.design temperature [°C]	100
Min.design temperature [°C]	-20
MBR operating [m]	1,60
MBR storage [m]	1,40
Type of packing	WOODEN CRATE ISPM-15

### **VAFMSS**

U.S. Department of the Interior BUREAU OF LAND MANAGEMENT



ightightad dete Bedistine most

ระเกใหล่อร่างต่อง

Show Final Text

APD ID: 10400026525

Operator Name: CHISHOLM ENERGY OPERATING LLC

Well Name: MESCALERO 6 FED COM 2BS

Well Type: OIL WELL

#### Submission Date: 02/06/2018

Well Number: 4H Well Work Type: Drill

#### **Section 1 - Existing Roads**

Will existing roads be used? YES

Existing Road Map:

Mescalero\_6\_Fed\_Com\_2BS\_4H\_Access\_Route\_Map\_11302017\_20180124134956.pdf Mescalero\_6\_Fed\_Com\_2BS\_4H\_Vicinity\_Map\_11302017\_20180124134957.pdf Existing Road Purpose: ACCESS,FLUID TRANSPORT Row(s) Exist? NO

ROW ID(s)

ID:

Do the existing roads need to be improved? NO

Existing Road Improvement Description:

**Existing Road Improvement Attachment:** 

Section 2 - New or Reconstructed Access Roads

Will new roads be needed? NO

#### Section 3 - Location of Existing Wells

Existing Wells Map? YES

Attach Well map:

Mescalero\_6\_Fed\_Com\_2BS\_4H\_Mile\_Radius\_Map\_11302017\_20180124135015.pdf

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Existing Wells description:

#### Section 4 - Location of Existing and/or Proposed Production Facilities

Submit or defer a Proposed Production Facilities plan? DEFER

**Estimated Production Facilities description:** If well is productive, a tank battery will be installed on well pad. Tank battery construction and instillation plans will be submitted via Sundry Notice.

Section 5 - Location	and Types of Water Su	ıpply
Water Source T	able	
Water source use type: INTERME STIMULATION, SURFACE CASIN Describe type:		6, Water source type: GW WELL
Source latitude:		Source longitude:
Source datum:		
Water source permit type: PRIVA	TE CONTRACT	
Source land ownership: PRIVATE	E	
Water source transport method:	PIPELINE	
Source transportation land owne	ership: PRIVATE	
Water source volume (barrels): 1	20000	Source volume (acre-feet): 15.467172
Source volume (gal): 5040000		
Nater source and transportation ma	ар:	
Mescalero_6_Fed_Com_2BS_4H_Vic MESCALERO_STETSONWATER_		
Vater source comments: ATTACHE	D IS A MAP SHOWING OPTIO	NS FOR WATER SOURCES
New water well? NO		
New Water Well	Info	
Well latitude:	Well Longitude:	Well datum:
Well target aquifer:		
Est. depth to top of aquifer(ft):	Est thickness	of aquifer:

Aquifer comments:

Aquifer documentation:

Well depth (ft):

Well casing type:

Operator Name: CHISHOLM ENERGY OPERATING LLC
Well Name: MESCALERO 6 FED COM 2BS
Well Number: 4H

Well casing outside diameter (in.):Well casing inside diameter (in.):New water well casing?Used casing source:Drilling method:Drill material:Grout material:Grout depth:Casing length (ft.):Casing top depth (ft.):Well Production type:Completion Method:Water well additional information:State appropriation permit:

Additional information attachment:

#### Section 6 - Construction Materials

**Construction Materials description:** Construction materials from the location will be used. No additional needs are anticipated.

**Construction Materials source location attachment:** 

#### Section 7 - Methods for Handling Waste

Waste type: DRILLING

Waste content description: Drilling Fluids and Cuttings

Amount of waste: 6000 barrels

Waste disposal frequency : Daily

Safe containment description: Steel Tanks

Safe containmant attachment:

Waste disposal type: HAUL TO COMMERCIAL Disposal location ownership: COMMERCIAL

FACILITY **Disposal type description:** 

Disposal location description: Trucked to approved disposal facility

Waste type: COMPLETIONS/STIMULATION

Waste content description: Completions Fluids

Amount of waste: 2000 barrels

Waste disposal frequency : Daily

Safe containment description: Steel Tanks

Safe containmant attachment:

Waste disposal type: HAUL TO COMMERCIAL Disposal location ownership: COMMERCIAL FACILITY Disposal type description:

Disposal location description: Trucked to an approved disposal facility

Well Name: MESCALERO 6 FED COM 2BS

Safe containment description: Steel Tanks

Well Number: 4H

	AL
Waste type: FLOWBACK	
Waste content description: Oil	
Amount of waste: 1000 barrels	
Waste disposal frequency : One Time Or	ly
Safe containment description: Frac Tank	s
Safe containmant attachment:	
Waste disposal type: OTHER	<b>Disposal location ownership:</b> PRIVATE
Disposal type description: Private	
Disposal location description: Haul to tar	ık battery
Waste type: SEWAGE	
Waste content description: Human Waste	3
Amount of waste: 50 pounds	
Waste disposal frequency : Weekly	
Safe containment description: Portable T	oilets
Safe containmant attachment:	
Waste disposal type: HAUL TO COMMEF	CIAL <b>Disposal location ownership:</b> COMMERCIAL
Disposal type description:	
Disposal location description: Serviced b	y toilet rental company
Waste type: GARBAGE	
Waste content description: Trash and De	bris
Amount of waste: 200 pounds	
Waste disposal frequency : One Time On	ly
Safe containment description: roll off bin	with netted top
Safe containmant attachment:	
Waste disposal type: HAUL TO COMMER FACILITY	CIAL <b>Disposal location ownership:</b> COMMERCIAL
Disposal type description:	
Disposal location description: Truck to c	ommercial waste facility
Waste type: PRODUCED WATER	
Waste content description: Produced wat	er
Amount of waste: 4000 barrels	
Waste disposal frequency : One Time On	ly
• • · · · · • • • • · · ·	

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Safe containmant attachment:

Waste disposal type: OTHER

**Disposal location ownership: PRIVATE** 

Disposal type description: Private

Disposal location description: Trucked to tank battery

Reserve Pit	

Reserve Pit being used? NO

Temporary disposal of produced water into reserve pit?

Reserve pit length (ft.) Reserve pit width (ft.)

Reserve pit depth (ft.)

Reserve pit volume (cu. yd.)

Is at least 50% of the reserve pit in cut?

**Reserve pit liner** 

Reserve pit liner specifications and installation description

Cuttings Area

Cuttings Area being used? NO

Are you storing cuttings on location? YES

**Description of cuttings location** Stored in steel bin and hauled to disposal site by truck

Cuttings area length (ft.)

Cuttings area depth (ft.)

Cuttings area width (ft.)

Cuttings area volume (cu. yd.)

Is at least 50% of the cuttings area in cut?

WCuttings area liner

Cuttings area liner specifications and installation description

**Section 8 - Ancillary Facilities** 

Are you requesting any Ancillary Facilities?: NO Ancillary Facilities attachment:

Comments:

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

#### Section 9 - Well Site Layout

Well Site Layout Diagram:

Mescalero\_6\_Fed\_Com\_2BS\_4H\_Site\_Map\_11302017\_20180124135107.pdf

Comments:

#### Section 10 - Plans for Surface Reclamation

Type of disturbance: New Surface Disturbance

Multiple Well Pad Name: MESCALERO WEST PAD

Multiple Well Pad Number: 4H,5H,9H,10H,11H

Recontouring attachment:

**Drainage/Erosion control construction:** Drainage systems, if an, will be reshaped to the original configuration with provisions made to alleviate erosion.

**Drainage/Erosion control reclamation:** Any portion of the site that is not needed for future operations will be reclaimed to the original state as much as possible.

Well pad proposed disturbance	Well pad interim reclamation (acres):	
(acres): 0	4.78	(acres): 4.78
•••	Road interim reclamation (acres): 0.76	0.70
Powerline proposed disturbance (acres): 0	Powerline interim reclamation (acres):	Powerline long term disturbance
Pipeline proposed disturbance	Pipeline interim reclamation (acres): 0	(acres): 0
	• • • •	Pipeline long term disturbance
(acres): 0 Other proposed disturbance (acres): 0	Other interim reclamation (acres): 0	(acres): 0
	Total interim reclamation: 5.54	Other long term disturbance (acres): 0
Total proposed disturbance: 0		Total long term disturbance: 5.54

**Disturbance Comments:** 

**Reconstruction method:** No interim reclamation planned due to future development on this pad, as well as tank battery construction if the well is productive.

**Topsoil redistribution:** After the area has been reshaped and contoured, topsoil from the spoil pile will be placed over the disturbed area to the extent possible.

Soil treatment: No treatment necessary

Existing Vegetation at the well pad: mesquite, shinnery oak

Existing Vegetation at the well pad attachment:

Existing Vegetation Community at the road: mesquite, shinnery oak

Existing Vegetation Community at the road attachment:

Existing Vegetation Community at the pipeline: mesquite, shinnery oak

Existing Vegetation Community at the pipeline attachment:

Existing Vegetation Community at other disturbances: no other disturbance

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Existing Vegetation Community at other disturbances attachment:

Non native seed used? NO

Non native seed description:

Seedling transplant description:

Will seedlings be transplanted for this project? NO

Seedling transplant description attachment:

Will seed be harvested for use in site reclamation? NO

Seed harvest description:

Seed harvest description attachment:

#### **Seed Management**

**Seed Table** 

Seed type: PERENNIAL GRASS

Seed name: LPC-Seed Mix 2

Source name:

Source phone:

Seed cultivar:

Seed use location: WELL PAD, WELL PAD

PLS pounds per acre: 5

Seed source: COMMERCIAL

Source address:

Total pounds/Acre: 5

Proposed seeding season: SPRING

Seed S	ummary
Seed Type	Pounds/Acre
PERENNIAL GRASS	5

PERENNIAL GRASS

#### Seed reclamation attachment:

#### **Operator Contact/Responsible Official Contact Info**

First Name: Tim

Last Name: Green

Phone: (432)686-8235

Email: tgreen@chisholmenergy.com

Seedbed prep: Rip and add topsoil

Seed BMP:

Seed method:

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Existing invasive species? NO

Existing invasive species treatment description:

Existing invasive species treatment attachment:

Weed treatment plan description: All areas will be monitored, and weeds will be treated

Weed treatment plan attachment:

Monitoring plan description: Monitoring by lease operators during each visit

Monitoring plan attachment:

Success standards: N/A

Pit closure description: No pit, utilizing closed loop system

Pit closure attachment:

#### Section 11 - Surface Ownership

Disturbance type: WELL PAD

Describe:

Surface Owner: BUREAU OF LAND MANAGEMENT

Other surface owner description:

**BIA Local Office:** 

**BOR Local Office:** 

**COE Local Office:** 

DOD Local Office:

NPS Local Office:

State Local Office:

Military Local Office:

**USFWS Local Office:** 

Other Local Office:

USFS Region:

USFS Forest/Grassland:

**USFS Ranger District:** 

റ	nerator N	lame <sup>.</sup>	CHISHOLM	ENERGY	OPERATING	ПC
<b>U</b>	perator n	ame.	CHICKIN	LINEINOT	OF LIVATING	LLO

Well Name: MESCALERO 6 FED COM 2BS

Well Number: 4H

Disturbance type: NEW ACCESS ROAD	
Describe:	
Surface Owner: BUREAU OF LAND MANAGEMENT	
Other surface owner description:	
BIA Local Office:	
BOR Local Office:	
COE Local Office:	
DOD Local Office:	
NPS Local Office:	
State Local Office:	
Military Local Office:	
USFWS Local Office:	
Other Local Office:	
USFS Region:	
USFS Forest/Grassland:	USFS Ranger District:

#### Section 12 - Other Information

Right of Way needed? YES ROW Type(s): 281001 ROW - ROADS Use APD as ROW? YES

**ROW Applications** 

SUPO Additional Information: APD RECEIPT ATTACHED

Use a previously conducted onsite? YES

Previous Onsite information: Onsite was conducted 10/26/2017 w/J.Robertson & Chisholm Representative T. Green

#### **Other SUPO Attachment**

Mescalero\_6\_Fed\_Com\_2BS\_4H\_Aerial\_Map\_11302017\_20180124135150.pdf Mescalero\_6\_Fed\_Com\_2BS\_4H\_Loc\_Verification\_Map\_11302017\_20180124135151.pdf MESCALERO\_STETSON\_APD\_RECEIPT\_20180206144825.pdf MESCALERO\_6\_FED\_COM\_2BS\_4H\_GCP\_08092018\_20180809135642.pdf



U.S. Department of the Interior BUREAU OF LAND MANAGEMENT

#### **Section 1 - General**

Would you like to address long-term produced water disposal? NO

Section 2 - Lined Pits

Would you like to utilize Lined Pit PWD options? NO. **Produced Water Disposal (PWD) Location: PWD** surface owner: Lined pit PWD on or off channel: Lined pit PWD discharge volume (bbl/day): Lined pit specifications: Pit liner description: Pit liner manufacturers information: Precipitated solids disposal: Decribe precipitated solids disposal: Precipitated solids disposal permit: Lined pit precipitated solids disposal schedule: Lined pit precipitated solids disposal schedule attachment: Lined pit reclamation description: Lined pit reclamation attachment: Leak detection system description: Leak detection system attachment: Lined pit Monitor description: Lined pit Monitor attachment: Lined pit: do you have a reclamation bond for the pit? Is the reclamation bond a rider under the BLM bond? Lined pit bond number: Lined pit bond amount: Additional bond information attachment:

**PWD disturbance (acres):** 

PWD Data Report

0/15/2018

#### Section 3 - Unlined Pits

#### Would you like to utilize Unlined Pit PWD options? NO

Produced Water Disposal (PWD) Location:

PWD surface owner:

Unlined pit PWD on or off channel:

Unlined pit PWD discharge volume (bbl/day):

Unlined pit specifications:

Precipitated solids disposal:

Decribe precipitated solids disposal:

Precipitated solids disposal permit:

Unlined pit precipitated solids disposal schedule:

Unlined pit precipitated solids disposal schedule attachment:

Unlined pit reclamation description:

Unlined pit reclamation attachment:

**Unlined pit Monitor description:** 

Unlined pit Monitor attachment:

Do you propose to put the produced water to beneficial use?

Beneficial use user confirmation:

Estimated depth of the shallowest aquifer (feet):

Does the produced water have an annual average Total Dissolved Solids (TDS) concentration equal to or less than that of the existing water to be protected?

TDS lab results:

Geologic and hydrologic evidence:

State authorization:

**Unlined Produced Water Pit Estimated percolation:** 

Unlined pit: do you have a reclamation bond for the pit?

Is the reclamation bond a rider under the BLM bond?

Unlined pit bond number:

Unlined pit bond amount:

Additional bond information attachment:

**Section 4 - Injection** 

Would you like to utilize Injection PWD options? NO

Produced Water Disposal (PWD) Location:

PWD surface owner:

Injection PWD discharge volume (bbl/day):

Injection well mineral owner:

**PWD disturbance (acres):** 

PWD disturbance (acres):

Injection well type: Injection well number: Assigned injection well API number? Injection well new surface disturbance (acres): Minerals protection information: Mineral protection attachment: Underground Injection Control (UIC) Permit? UIC Permit attachment:

#### Section 5 - Surface Discharge

Would you like to utilize Surface Discharge PWD options? NO

Produced Water Disposal (PWD) Location: PWD surface owner: Surface discharge PWD discharge volume (bbl/day): Surface Discharge NPDES Permit? Surface Discharge NPDES Permit attachment: Surface Discharge site facilities information:

Surface discharge site facilities map:

#### Section 6 - Other

Would you like to utilize Other PWD options? NO

Produced Water Disposal (PWD) Location:

**PWD surface owner:** 

Other PWD discharge volume (bbl/day):

Other PWD type description:

Other PWD type attachment:

Have other regulatory requirements been met?

Other regulatory requirements attachment:

Injection well name:

#### Injection well API number:

PWD disturbance (acres):

PWD disturbance (acres):

### **WAFMSS**

U.S. Department of the Interior BUREAU OF LAND MANAGEMENT

#### **Bond Information**

Federal/Indian APD: FED

BLM Bond number: NMB001468

**BIA Bond number:** 

Do you have a reclamation bond? NO

Is the reclamation bond a rider under the BLM bond?

Bond Info Data Report

5/2018

Is the reclamation bond BLM or Forest Service?

BLM reclamation bond number:

Forest Service reclamation bond number:

Forest Service reclamation bond attachment:

**Reclamation bond number:** 

**Reclamation bond amount:** 

**Reclamation bond rider amount:** 

Additional reclamation bond information attachment:

Well Name: MESCALERO 6 FED COM 2BS

;

Well Number: 4H

	NS-Foot	NS Indicator	EW-Foot	EW Indicator	Twsp	Range	Section	Aliquot/Lot/Tract	Latitude	Longitude	County	State	Meridian	Lease Type	Lease Number	Elevation	MD	DVT
EXIT	330	FNL	530	FWL	19S	34E	6	Lot	32.69603	-	LEA	NEW	NEW	F	NMNM	-	155	100
Leg								4	85	103.6062		MEXI			004314	626	89	40
#1										362		со	со			8		
BHL	330	FNL	530	FWL	19S	34E	6	Lot	32.69603	-	LEA	NEW	NEW	F	NMNM	-	155	100
Leg				1				4	85	103.6062		MEXI			004314	626	89	40
#1										362		co	со			8		



#### Receipt

Your payment is submitted Pay.gov Tracking ID: 267KBH5P Agency Tracking ID: 75418307203 Form Name: Bureau of Land Management (BLM) Application for Permit to Drill (APD) Fee Application Name: BLM Oil and Gas Online Payment

#### **Payment Information**

Payment Type: Bank account (ACH) Payment Amount: \$78,320.00 Transaction Date: 02/06/2018 04:42:18 PM EST Payment Date: 02/07/2018 Company: CHISHOLM ENERGY OPERATING, LLC APD IDs: 10400026525, 10400026526, 10400026527, 10400026528, 10400026529, 10400026530, 10400026531, 10400026533 Lease Numbers: NMNM4314, NMNM4314, NMNM4314, NMNM4314, NMNM24489, NMNM24489, NMNM24489, NMNM24489 Well Numbers: 4H, 5H, 6H, 8H, 2H, 4H, 5H, 6H Note: You will need your Pay.gov Tracking ID to complete your APD transaction in AFMSS II. Please ensure you write this number down upon completion of payment.

#### Account Information

Account Holder Name: CHISHOLM ENERGY OPERATING, LLC Routing Number: 114000093 Account Number: \*

#### **Email Confirmation Receipt**

Confirmation Receipts have been emailed to: jelrod@chisholmenergy.com