Form 3160-3 FORM APPROVED OMB No. 1004-0137 (June 2015) Expires: January 31, 2018 **UNITED STATES** DEPARTMENT OF THE INTERIOR 5. Lease Serial No. BUREAU OF LAND MANAGEMENT APPLICATION FOR PERMIT TO DRILL OR REENTER 6. If Indian, Allotee or Tribe Name 7. If Unit or CA Agreement, Name and No. DRILL REENTER 1a. Type of work: 1b. Type of Well: Oil Well Gas Well Other 8. Lease Name and Well No. 1c. Type of Completion: Hydraulic Fracturing Single Zone Multiple Zone 9. API Well No. 2. Name of Operator 30 015 47998 3a. Address 3b. Phone No. (include area code) 10. Field and Pool, or Exploratory 4. Location of Well (Report location clearly and in accordance with any State requirements.*) 11. Sec., T. R. M. or Blk. and Survey or Area At surface At proposed prod. zone 14. Distance in miles and direction from nearest town or post office* 12. County or Parish 13. State 15. Distance from proposed* 16. No of acres in lease 17. Spacing Unit dedicated to this well location to nearest property or lease line, ft. (Also to nearest drig. unit line, if any) 18. Distance from proposed location* 19. Proposed Depth 20. BLM/BIA Bond No. in file to nearest well, drilling, completed, applied for, on this lease, ft. 21. Elevations (Show whether DF, KDB, RT, GL, etc.) 22. Approximate date work will start* 23. Estimated duration 24. Attachments The following, completed in accordance with the requirements of Onshore Oil and Gas Order No. 1, and the Hydraulic Fracturing rule per 43 CFR 3162.3-3 (as applicable) 1. Well plat certified by a registered surveyor. 4. Bond to cover the operations unless covered by an existing bond on file (see 2. A Drilling Plan. Item 20 above). 3. A Surface Use Plan (if the location is on National Forest System Lands, the 5. Operator certification. 6. Such other site specific information and/or plans as may be requested by the SUPO must be filed with the appropriate Forest Service Office). 25. Signature Name (Printed/Typed) Date Title Approved by (Signature) Date Name (Printed/Typed) Title Office Application approval does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon. Conditions of approval, if any, are attached. Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency

APPROVED WITH CONDITIONS

of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction

(Continued on page 2)

*(Instructions on page 2)

INSTRUCTIONS

GENERAL: This form is designed for submitting proposals to perform certain well operations, as indicated on Federal and Indian lands and leases for action by appropriate Federal agencies, pursuant to applicable Federal laws and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from local Federal offices.

ITEM I: If the proposal is to redrill to the same reservoir at a different subsurface location or to a new reservoir, use this form with appropriate notations. Consult applicable Federal regulations concerning subsequent work proposals or reports on the well.

ITEM 4: Locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local Federal offices for specific instructions.

ITEM 14: Needed only when location of well cannot readily be found by road from the land or lease description. A plat, or plats, separate or on the reverse side, showing the roads to, and the surveyed location of, the wen, and any other required information, should be furnished when required by Federal agency offices.

ITEMS 15 AND 18: If well is to be, or has been directionany drilled, give distances for subsurface location of hole in any present or objective productive zone.

ITEM 22: Consult applicable Federal regulations, or appropriate officials, concerning approval of the proposal before operations are started.

ITEM 24: If the proposal will involve hydraulic fracturing operations, you must comply with 43 CFR 3162.3-3, including providing information about the protection of usable water. Operators should provide the best available information about all formations containing water and their depths. This information could include data and interpretation of resistivity logs run on nearby wells. Information may also be obtained from state or tribal regulatory agencies and from local BLM offices.

NOTICES

The Privacy Act of 1974 and regulation in 43 CFR 2.48(d) provide that you be furnished the following information in connection with information required by this application.

AUTHORITY: 30 U.S.C. 181 et seq., 25 U.S.C. 396; 43 CFR 3160

PRINCIPAL PURPOSES: The information will be used to: (1) process and evaluate your application for a permit to drill a new oil, gas, or service wen or to reenter a plugged and abandoned well; and (2) document, for administrative use, information for the management, disposal and use of National Resource Lands and resources including (a) analyzing your proposal to discover and extract the Federal or Indian resources encountered; (b) reviewing procedures and equipment and the projected impact on the land involved; and (c) evaluating the effects of the proposed operation on the surface and subsurface water and other environmental impacts.

ROUTINE USE: Information from the record and/or the record win be transferred to appropriate Federal, State, and local or foreign agencies, when relevant to civil, criminal or regulatory investigations or prosecution, in connection with congressional inquiries and for regulatory responsibilities.

EFFECT OF NOT PROVIDING INFORMATION: Filing of this application and disclosure of the information is mandatory only if you elect to initiate a drilling or reentry operation on an oil and gas lease.

The Paperwork Reduction Act of 1995 requires us to inform you that:

The BLM conects this information to anow evaluation of the technical, safety, and environmental factors involved with drilling for oil and/or gas on Federal and Indian oil and gas leases. This information will be used to analyze and approve applications. Response to this request is mandatory only if the operator elects to initiate drilling or reentry operations on an oil and gas lease. The BLM would like you to know that you do not have to respond to this or any other Federal agency-sponsored information collection unless it displays a currently valid OMB control number.

BURDEN HOURS STATEMENT: Public reporting burden for this form is estimated to average 8 hours per response, including the time for reviewing instructions, gathering and maintaining data, and completing and reviewing the form. Direct comments regarding the burden estimate or any other aspect of this form to U.S. Department of the Interior, Bureau of Land Management (1004-0137), Bureau Information Conection Clearance Officer (WO-630), 1849 C Street, N.W., Mail Stop 401 LS, Washington, D.C. 20240.

Additional Operator Remarks

Location of Well

0. SHL: SWSW / 1303 FSL / 280 FWL / TWSP: 19S / RANGE: 30E / SECTION: 32 / LAT: 32.6132534 / LONG: -104.0018493 (TVD: 0 feet, MD: 0 feet) PPP: SESE / 1155 FSL / 1321 FEL / TWSP: 19S / RANGE: 30E / SECTION: 33 / LAT: 32.6127935 / LONG: -103.9726986 (TVD: 9759 feet, MD: 18625 feet) PPP: SWSW / 1155 FSL / 0 FWL / TWSP: 19S / RANGE: 30E / SECTION: 33 / LAT: 32.6128179 / LONG: -103.9855788 (TVD: 9720 feet, MD: 14659 feet) PPP: SWSW / 1155 FSL / 100 FWL / TWSP: 19S / RANGE: 30E / SECTION: 32 / LAT: 32.6128479 / LONG: -104.0024346 (TVD: 9517 feet, MD: 9584 feet) BHL: SESE / 1155 FSL / 10 FEL / TWSP: 19S / RANGE: 30E / SECTION: 33 / LAT: 32.6127852 / LONG: -103.9684382 (TVD: 9767 feet, MD: 19937 feet)

BLM Point of Contact

Name: Gavin Mickwee Title: Land Law Examiner Phone: (575) 234-5972 Email: gmickwee@blm.gov

Review and Appeal Rights

A person contesting a decision shall request a State Director review. This request must be filed within 20 working days of receipt of the Notice with the appropriate State Director (see 43 CFR 3165.3). The State Director review decision may be appealed to the Interior Board of Land Appeals, 801 North Quincy Street, Suite 300, Arlington, VA 22203 (see 43 CFR 3165.4). Contact the above listed Bureau of Land Management office for further information.

DISTRICT I
1625 N. French Dr., Hobbs, N.M. 88240
Phone: (575) 393-6161 Fax: (575) 393-0720
DISTRICT II
811 S. First St., Artesia, N.M. 88210
Phone: (575) 748-1283 Fax: (575) 748-9720
DISTRICT III
1000 Rio Brazos Rd., Aztec, N.M. 87410
Phone: (505) 334-6178 Fax: (505) 334-6170

DISTRICT IV 1220 S. St. Francis Dr., Santa Fe, N.M. 87505 Phone: (505) 476-3460 Fax: (505) 476-3462 State of New Mexico Energy, Minerals & Natural Resources Department

OIL CONSERVATION DIVISION 1220 South St. Francis Dr. Santa Fe. N.M. 87505 Form C-102
Revised August 1, 2011
Submit one copy to appropriate
District Office

☐ AMENDED REPORT

WELL LOCATION AND ACREAGE DEDICATION PLAT

¹ API Number		² Pool Code	³ Pool Name				
30-015 479	17998 49622 Parkway; Bone Spri		ring				
⁴Property Code		⁶ Property	⁶ Well Number				
330007		Crazy Horse 32 State Fed Com 203H					
OGRID No.		⁶ Operator	Name	⁹ Elevation			
371449		Colgate Oper	ating, LLC	3260			


¹⁰ Surface Location

UL or lot no.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
М	32	19 S	30 E		1303	South	280	West	Eddy

¹¹ Bottom Hole Location If Different From Surface

UL or lot no.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
Р	33	19 S	30 E		1155	South	10	East	Eddy
12 Dedicated Acre	8		18 Joint or	Infill 14 Cor	solidation Code	15 Order No.			
640									

NO ALLOWABLE WILL BE ASSIGNED TO THIS COMPLETION UNTIL ALL INTERESTS HAVE BEEN CONSOLIDATED OR A NON-STANDARD UNIT HAS BEEN APPROVED BY THE DIVISION

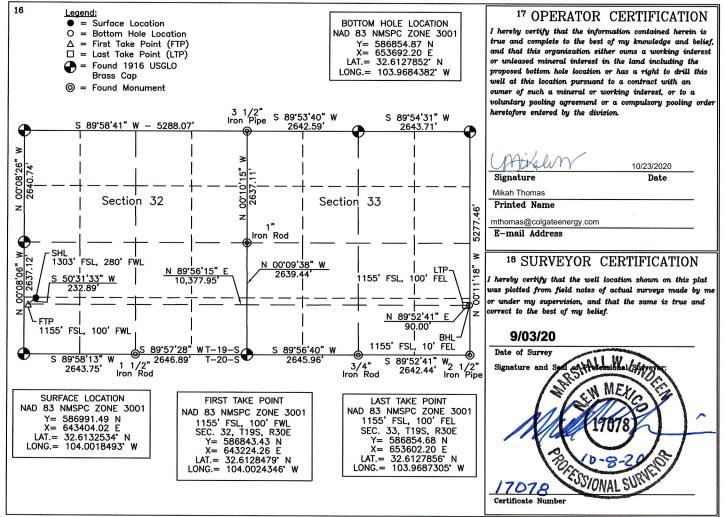

District I
1625 N. French Dr., Hobbs, NM 88240
District II
811 S. First St., Artesia, NM 88210
District III
1000 Rio Brazos Road, Aztec, NM 87410
District IV
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico Energy, Minerals and Natural Resources Department

Submit Original to Appropriate District Office

Oil Conservation Division 1220 South St. Francis Dr. Santa Fe, NM 87505

\sim 1 \sim	\sim .	-		-	
GAS	(:A	PTI	URE	ы	$_{\prime}AN$

Date: <u>08/25/2020</u>	
✓ Original ☐ Amended - Reason for Amendmen	Operator & OGRID No.: Colgate Operating, LLC (371449)
This Gas Capture Plan outlines action new completion (new drill, recomplet	ns to be taken by the Operator to reduce well/production facility flaring/venting for e to new zone, re-frac) activity.
Note: Form C-129 must be submitted and c	approved prior to exceeding 60 days allowed by Rule (Subsection A of 19.15.18.12 NMAC).
Well(s)/Production Facility - Name	of facility
The well(s) that will be located at the	production facility are shown in the table below.

Well Name	API	Well Location (ULSTR)	Footages	Expected MCF/D	Flared or Vented	Comments
 Crazy Horse 32 State Fed Com 203H	30-015	(CESTIC)		WELLE	Venteu	

Gathering System and Pipeline Notification

Well(s) will be connected to a production facility after flowback operations are complete, if gas transporter system is in place. The gas produced from production facility is dedicated to LM Touchdown, LLC and will be connected to LM Touchdown, LLC low/high pressure gathering system located in Eddy County, New Mexico. It will require 10 of pipeline to connect the facility to low/high pressure gathering system. Colgate Operating, LLC provides (periodically) to <a href="LLM Touchdown, LLC a drilling, completion and estimated first production date for wells that are scheduled to be drilled in the foreseeable future. In addition, Colgate Operating, LLC and <a href="LLM Touchdown, LLC have periodic conference calls to discuss changes to drilling and completion schedules. Gas from these wells will be processed at LLM Touchdown, LLC Processing Plant located in Sec. 22, Twn. 198 Rng. 28E Eddy County, New Mexico. The actual flow of the gas will be based on compression operating parameters and gathering system pressures.

Flowback Strategy

After the fracture treatment/completion operations, well(s) will be produced to production facilities. During flowback, the fluids and sand content will be monitored. Gas sales should start as soon as the wells start flowing through the production facilities, unless there are operational issues on <u>LM Touchdown, LLC</u> system at that time. Based on current information, it is <u>Colgate Operating, LLC</u> belief the system can take this gas upon completion of the well(s).

Safety requirements during cleanout operations from the use of underbalanced air cleanout systems may necessitate that sand and non-pipeline quality gas be vented and/or flared rather than sold on a temporary basis.

Alternatives to Reduce Flaring

Below are alternatives considered from a conceptual standpoint to reduce the amount of gas flared.

- Power Generation On lease
 - Only a portion of gas is consumed operating the generator, remainder of gas will be flared
- Compressed Natural Gas On lease
 - O Gas flared would be minimal, but might be uneconomical to operate when gas volume declines

Drilling Program Colgate Energy

Crazy Horse 32 State Fed Com 203H 1,303' FSL & 280' FWL (SHL) Sec 32-T19S-R30E Eddy County, New Mexico

The estimated tops of geologic formations are as follows:

Formation:	TVD	Subsea
Rustler	135	3150
Top of Salt	385	2900
Base of Salt	1285	2000
Yates	1435	1850
Capitan	1820	1465
Delaware Mountain Group	3405	-120
Lower Brushy Canyon*	5875	-2590
Bone Spring Lime	6135	-2850
1st Bone Spring Sand*	7465	-4180
2nd Bone Spring Sand*	8195	-4910
3rd Bone Spring Sand*	9085	-5800
Wolfcamp A*	9585	-6300

Formations anticipated to contain fresh water, oil or gas are as follows:

Water Fresh water is anticipated at 65' and will be protected by setting a water protection string at 340' and cementing to surface.

The Capitan Reef is anticipated to contain usable water and will be protected by setting an intermediate casing string at 3330' and Water

cementing to surface using a stage tool and external casing packer.

Hydrocarbons Oil and gas are anticipated in the above (*) formations. These zones will be protected by casing as necessary.

Proposed casing program is as follows:

<u>Name</u>	Hole Size	Casing Size	Weight & Grade	Thread Collar	Top Csg	Setting Depth	<u>Collapse</u>	<u>Burst</u>	Tension
Surface	24	18.625	87.5# J-55 (new)	BTC	0	340'	1.125	1.2	1.6
Intermediate I	17 1/2	13 3/8	54.5# J-55 (new)	BTC	0	1,640'	1.125	1.2	1.6
Intermediate II	12 1/4	9 5/8	36# J-55 (new)	BTC	0	3,330'	1.125	1.2	1.6
Production	8 3/4	5 1/2	20# HCP-110 (new)	CDC HTQ	0	19,936'	1.125	1.2	1.6

SF Values will meet or exceed

Proposed cementing program is as follows:

<u>Name</u>	Slurry	<u>Sacks</u>	<u>Yield</u>	Weight	Excess	Top Cement	<u>Blend</u>
Surface	Tail	431	1.8	13.5	100%	0'	Class C w/ salt, accelerator, extender and LCM additives
Intermediate I	Lead	732	2.19	12.7	100%	0'	Class C w/ salt, extender and LCM additives
	Tail	214	1.33	14.8	25%	1,312'	Class C w/ accelerator & LCM additives
Intermediate II	Lead	131	4.41	10.6	100%	1,745'	Class C w/ accelerator, extender and LCM additives
	Tail	196	1.33	14.8	25%	2,664'	Class C w/ accelerator & LCM additives
2nd Stage	Lead	103	4.41	10.6	100%	0'	Class C w/ accelerator, extender and LCM additives
	Tail	98	1.33	14.8	25%	1,079'	Class C w/ accelerator & LCM additives
Production	Tail	4329	1.24	14.2	20%	2,050'	Class H w/ Fluid Loss, Dispersant, Retarder & LCM additives

Proposed casing and cementing accessories are as follows: (Casing will be centralized per Onshore Order 2.III.B.1.f)

Surface: 1 centralizer 5' above shoe held in place with stop ring; 1 centralizer per joint for following 2 joints then every other joint to surface

Intermediate I: 2 centralizers on 1st joint, 1 centralizer on 2nd joint, 1 centralizer every 4th joint to surface
Intermediate II: 2 centralizers on 1st joint, 1 centralizer on 2nd joint, 1 centralizer every 4th joint to surface

Stage tool and external casing packer will be placed at approximately 1745' to ensure intermediate casing string is adequately cemented.

Production: 2 centralizers on bottom joint, 1 centralizer on 2nd joint, 1 centralizer every 3rd joint to 2830'

Proposed pressure control equipment is as follows (see schematics below):

Well control equipment with working pressure ratings in excess of anticipated maximum surface pressure will be utilized for well control from drill out of surface casing to TMD. A diverter system will be installed on 18-5/8" casing once set & cemented. A 13-5/8" multi-bowl wellhead will be SOW installed to 13-3/8" casing once set & cemented. A 13-5/8" 10M BOP will be nippled up to the 13-5/8" multi-bowl wellhead through the completion of the drilling operation. A rotating head will also be installed and utilized as needed. All BOPE connections shall be flanged, welded or clamped. All choke lines shall be straight unless targeted with running tees or tee blocks are used, and choke lines shall be anchored to prevent whip and reduce vibrations. All valves in the choke line & the choke manifold shall be full opening as to not cause restrictions and to allow for straight fluid paths to minimize potential erosion. All gauges utilized in the well control system shall be of a type designed for drilling fluid service. A top drive inside BOP valve will be utilized at all times. Subs equipped with full opening valves sized to fit the drill pipe and collars will be available on the rig floor in the open position. The key to operate said valve equipped subs will be on the rig floor at all times. The accumulator system will have sufficient capacity to open the HCR and close all three sets of rams plus the annular preventer while retaining at least 300 psi above precharge on the closing manifold (accumulator system shall be capable of doing so without using the closing unit pumps). The fluid reservoir capacity will be double the usable fluid volume of the accumulator system capacity, and the fluid level will be maintained at the manufacturer's recommended level. Prior to connecting the closing unit to the BOP stack, an accumulator precharge pressure test shall be performed to ensure the precharge pressure is within 100 psi of the desired precharge pressure (only nitrogen gas will be used to precharge). Two independent power sources will be made available at all times to power the closing unit pumps so that the pumps can automatically start when the closing valve manifold pressure has decreased to the pre-set level. Closing unit pumps will be sized to allow opening of HCR and closing of annular preventer on 5" drill pipe achieving at least 200 psi above precharge pressure with the accumulator system isolated from service in less than two minutes. A valve shall be installed in the closing line as close to the annular preventer as possible to act as a locking device; the valve shall be maintained in the open position and shall be closed only when the power source for the accumulator system is inoperative. Remote controls capable of opening and closing all preventers & the HCR shall be readily accessible to the driller; master controls with the same capability will be operable at the accumulator. The wellhead will be a multi-bowl speed head allowing for hang-off of intermediate II casing & isolation of the 13-3/8" x 9-5/8" annulus without breaking the connection between the BOP & wellhead to install an additional casing head. A wear bushing will be installed & inspected frequently to guard against internal wear to wellhead.

A request for variance of pressure control equipment as follows:

- 1. Colgate Energy requests a variance to drill this well using a co-flex line between the BOP and choke manifold. Certification for proposed co-flex hose is attached. The hose is not required by the manufacturer to be anchored. In the event the specific hose is not available, one of equal or higher rating will be used.
- 2. Colgate Energy requests a variance to Onshore Order #2's requirement that a 2M system with annular preventer be installed prior to drilling of the surface casing shoe due to the shallow setting depth of the surface casing. The diverter system adequately meets the requirements for the preferred method for handling a well control event in a situation where the existing casing shoe is not adequate for a hard shut-in due to the likelihood of an underground blowout with the potential to breech surface.

BOPE will be tested per the following procedure:

Once surface casing is set and diverter system installed on 18-5/8" casing, pressure tests will be performed by a third party tester to 500 psi. After intermediate I casing is set and the BOPE installed, pressure tests of BOPE will be performed by a third party tester utilizing water and a test plug to 250 psi low and 10,000 psi high. To deem a pressure test successful, pressure must be maintained for ten minutes without any bleed-off. A valve on the wellhead below seat of test plug will be open at all time during BOPE tests to guard against damage to casing. The BOPE will be re-tested in this manner after any connection breaks or passage of allotted time (25 days). Any BOPE which fails to pass pressure tests after initial install will be replaced prior to drilling out of intermediate I casing shoe. If at any time a BOPE component cannot function to secure the hole, the hole shall be secured utilizing a retrievable packer, and the non-functioning BOPE component shall be repair or replacement, a pressure test of the repaired or replaced component and any connections broken to repair or replace the non-functioning component will be tested in the same manner as described for initial install of BOPE. The annular preventer will be function tested at least weekly, and the ram-type preventers will be function tested on each trip. BOPE pit level drills will be conducted weekly with each drilling crews. All pressure tests performed on BOPE and BOPE pit level drills will be logged in the drilling log. Isolation of 13-3/8" x 9-5/8" casing annulus shall be confirmed by pressure testing of wellhead sealing component after said sealing component is installed.

Each casing string will be tested once installed in the wellbore per the following procedure:

After cement has been allowed to sit undisturbed for eighteen hours and has reached a compressive strength of 600 psi, the 18-5/8" surface casing will be pressured to 1,500 psi and held for 30 minutes. Lab reports with the 500 psi compressive strength time for the cement will be onsite for review. A casing test will be deemed successful if test pressure does not decline more than 10% over the thirty minute period. The casing pressure test will be completed against the cement head. After cement has been allowed to sit undisturbed for eighteen hours and has reached a compressive strength of 500 psi, the 13-3/8" intermediate I casing will be pressured to 1,500 psi and held for 30 minutes. Lab reports with the 500 psi compressive strength time for the cement will be onsite for review. A casing test will be deemed successful if test pressure does not decline more than 10% over the thirty minute period. The casing pressure test will be completed against the blind rams of 13-5/8" 10M BOPE prior to PU tools to drill out. After cement has been allowed to sit undisturbed for eighteen hours and has reached a compressive strength of 500 psi, the 9-5/8" intermediate II casing will be pressured to 2,500 psi and held for 30 minutes. Lab reports with the 500 psi compressive strength time for the cement will be onsite for review. A casing test will be deemed successful if test pressure does not decline more than 10% over the thirty minute period. Casing pressure test will be completed against the lower pipe rams of 13-5/8" 10M BOPE immediately prior to drilling out float equipment. Casing pressure test on 5-1/2" production casing will occur more than 72 hours after cement is placed and reached ultimate compressive strength. Lab reports with the 500 psi compressive strength time for the cement will be onsite for review. A casing test will be deemed successful if test pressure does not decline more than 10% over the thirty minute period. Casing will be tested by pressuring up to 10,000 psi and holding pressure for 30 minutes prio

Each casing string will be cemented per the following cementing procedure:

Cement will be placed on all casing strings utilizing the pump and plug method. A float will be installed in the casing shoe and float collar on all casing strings to hold cement in place once pumping is completed. A top plug will be utilized on all casing strings to prevent contamination of the cement by the displacement fluid. A preflush fluid will be pumped prior to cement to aid in removal of drilling mud from the wellbore, eliminate drilling mud contamination of the cement slurry and prepare the surface of both the wellbore and casing for cement.

Proposed mud system is as follows:

<u>Name</u>	Hole Size	Mud Weight	<u>Viscosity</u>	Fluid Loss	Type Mud
Surface	24"	8.6 - 9.0	28 - 34	NC	FW Spud Mud
Intermediate I	17-1/2"	10.0 - 10.2	30 - 32	NC	Brine Water
Intermediate II	12-1/4"	8.4 - 8.9	28 - 30	NC	Aerated Fresh Water
Production	8-3/4"	9.5 - 10.5	(PV) 20 - 26 cP	8 - 12 cc	Oil Based Mud

All necessary mud products for weight addition and fluid loss control will be on location at all times. Mud program is subject to change due to hole conditions. The mud monitoring system is an electronic Pason system satisfying requirements of Onshore Order #1. Both visual and electronic mud monitoring equipment will be utilized to detect volume changes indicating loss or gain of circulating system fluid volume. Slow pump rates will be taken & recorded tourly in the drilling log. Mud engineer will perform tests and provide written report at least every 12 hours while circulating. A trip tank will be utilized and trip sheet will be recorded to ensure wellbore is taking proper fill or displacing proper fluid volume during all tripping operations. Gas detecting equipment will be utilized to monitor for hydrocarbon gas at the shakers while drilling and/or circulating. H2S monitoring equipment with both visual & auditory alarms will be installed and operational at the shakers, rig floor and cellar while drilling and/or circulating. A flare system with an effective method for ignition & discharge more than 100 feet from the wellbore will be utilized to gather and burn all gas; lines will be straight unless targeted with running tees. A mud gas separator will be installed and operable prior to drill out of surface casing.

Proposed testing, surveying, logging and coring program is as follows:

No open-hole logs are planned at this time. Directional surveys will be collected at no greater than 200' intervals while drilling through the MWD tools. A GR log will be collected while drilling through the MWD tools from intermediate casing to TD. No DSTs or cores are planned at this time. No CBL or temperature logs planned at this time. A formation integrity test (FIT) will be performed on all casing strings after BOPE is installed to at least 1 ppge over planned section mud weight after drilling ten feet of new hole.

Anticipated potential hazards are as follows:

No abnormal pressures or temperatures are expected. In accordance with Onshore Order No. 6, Colgate Energy does not anticipate that there will be enough H₂S from the surface to the Wolfcamp formations to meet the BLM's minimum requirements for the submission of an "H₂S Drilling Operation Plan" or "Public Protection Plan" for the drilling and completion of this well. Since we have an H₂S safety package on all wells, attached is an "H₂S Drilling Operations Plan". Adequate flare lines will be installed off the mud/gas separator where gas may be flared safely. All personnel will be familiar with all aspects of safe operation of equipment being used.

Estimated BHP: 8.9 lbs/gal gradient or less

Estimated BHT: 135° F

Aerate drilling well control plan is as follows:

Should a formation influx occur while aerate drilling, Colgate Energy's protocol will be to immediately remove the air supply from the stand pipe using the air manifold at the rig floor. This would allow the mud pumps to quickly fill the annulus of the wellbore with non-aerated drilling mud in order to significantly increase the hydrostatic barrier between the formation of influx and surface. In the event an additional influx is observed once a full hydrostatic column of drilling mud is in place, all well control practices and procedures will be identical to mud drilling, well control protocols. During BOP drills performed weekly with each rig crew, emphasis will be placed on well control situations occurring while aerate drilling (specifically identifying the steps at the air manifold required to remove the air injection from the standpipe to allow the mud pumps to fill the wellbore with non-aerated drilling mud in order to regain a full hydrostatic column).

Planned commencement of operations is as follows:

Road and location construction will begin after BLM approval of APD. Anticipated spud date as soon as approved. Drilling expected to take 30 days. If production casing is run an additional 60 days will be required to complete and construct surface facilities.



Colgate Energy

Eddy County, NM (N83-NME) Crazy Horse 32 State Fed Com Crazy Horse 32 State Fed Com 203H

Permit

Plan: APD-Rev0-89.94

Standard Planning Report

21 October, 2020



EDM 5000.14 Single User Db Database:

Company: Colgate Energy

Project: Eddy County, NM (N83-NME) Crazy Horse 32 State Fed Com Site:

Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Site

Design: APD-Rev0-89.94 **Local Co-ordinate Reference:**

TVD Reference: MD Reference: North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

Minimum Curvature

Project Eddy County, NM (N83-NME)

US State Plane 1983 Map System: North American Datum 1983 Geo Datum:

New Mexico Eastern Zone Map Zone:

System Datum: Mean Sea Level

Crazy Horse 32 State Fed Com

Northing: 586,991.40 usft 32.61325351 Site Position: Latitude: From: Мар Easting: 643,359.01 usft Longitude: -104.00199549

Position Uncertainty: 0.00 usft Slot Radius: 13-3/16 " **Grid Convergence:** 0.18°

Well Crazy Horse 32 State Fed Com 203H

0.09 usft 586.991.49 usft 32.61325337 **Well Position** +N/-S Northing: Latitude: 45.01 usft 643,404.02 usft +E/-W Easting: Longitude: -104.00184931

Position Uncertainty 0.00 usft Wellhead Elevation: Ground Level: 3,260.00 usft

Wellbore Permit Magnetics **Model Name** Sample Date Declination **Dip Angle** Field Strength (°) (°) (nT) IGRF2020 60.21 47,748.46478750 10/20/2020 6.85

APD-Rev0-89.94 Design Audit Notes: Version: Phase: **PLAN** Tie On Depth: 0.00 Vertical Section: Depth From (TVD) +N/-S +E/-W Direction

(usft) (usft) (usft) (°) 0.00 0.00 0.00 89.94

10/21/2020 Plan Survey Tool Program Date

19,936.59

0.00

Depth From Depth To

(usft) (usft) Survey (Wellbore) **Tool Name** Remarks

OWSG MWD - Standard

APD-Rev0-89.94 (Permit)

OWSG MWD Rev 4



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com
Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

Plan Sections										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Dogleg Rate (°/100usft)	Build Rate (°/100usft)	Turn Rate (°/100usft)	TFO (°)	Target
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	
2,150.00	0.00	0.00	2,150.00	0.00	0.00	0.00	0.00	0.00	0.00	
2,404.58	3.82	237.19	2,404.39	-4.59	-7.13	1.50	1.50	0.00	237.19	
6,254.35	3.82	237.19	6,245.61	-143.52	-222.62	0.00	0.00	0.00	0.00	
6,508.92	0.00	0.00	6,500.00	-148.11	-229.75	1.50	-1.50	0.00	180.00	00-EON (CH32-203H
9,090.92	0.00	0.00	9,082.00	-148.11	-229.75	0.00	0.00	0.00	0.00	
9,982.96	89.20	89.94	9,654.90	-147.49	335.24	10.00	10.00	10.08	89.94	
12,148.08	89.20	89.94	9,685.00	-145.13	2,500.15	0.00	0.00	0.00	0.00	02-V2500-(CH32-203
12,148.36	89.20	89.94	9,685.00	-145.13	2,500.43	2.00	-2.00	-0.01	-179.77	
14,648.32	89.20	89.94	9,720.00	-142.40	5,000.15	0.00	0.00	0.00	0.00	03-V5000-(CH32-203
14,654.06	89.31	89.94	9,720.07	-142.39	5,005.88	2.00	2.00	0.00	0.00	
17,148.51	89.31	89.94	9,750.00	-139.67	7,500.15	0.00	0.00	0.00	0.00	04-V7500-(CH32-203
17,165.75	89.66	89.94	9,750.16	-139.65	7,517.39	2.00	2.00	0.00	-0.04	
19,648.55	89.66	89.94	9,765.00	-136.93	10,000.15	0.00	0.00	0.00	0.00	05-V10000-(CH32-20
19,846.59	89.66	89.94	9,766.18	-136.71	10,198.18	0.00	0.00	0.00	0.00	06-LTP (CH32-203H)
19,936.59	89.66	89.94	9,766.72	-136.61	10,288.18	0.00	0.00	0.00	0.00	07-PBHL (CH32-203I



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com
Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H 3260+25 @ 3285.00usft

3260+25 @ 3285.00usft

Grid

1.	711 D 110 00 00	.0-1							
ned Survey									
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Vertical Section (usft)	Dogleg Rate (°/100usft)	Build Rate (°/100usft)	Turn Rate (°/100usft)
0.00 100.00	0.00	0.00 0.00	0.00 100.00	0.00	0.00	0.00	0.00	0.00	0.00
135.00	0.00 0.00	0.00	135.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00
Rustler									
200.00 300.00	0.00 0.00	0.00 0.00	200.00 300.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00	0.00 0.00
385.00	0.00	0.00	385.00	0.00	0.00	0.00	0.00	0.00	0.00
Top of Salt									
400.00	0.00	0.00	400.00	0.00	0.00	0.00	0.00	0.00	0.00
500.00	0.00	0.00	500.00	0.00	0.00	0.00	0.00	0.00	0.00
600.00	0.00	0.00	600.00	0.00	0.00	0.00	0.00	0.00	0.00
700.00	0.00	0.00	700.00	0.00	0.00	0.00	0.00	0.00	0.00
800.00	0.00	0.00	800.00	0.00	0.00	0.00	0.00	0.00	0.00
900.00	0.00	0.00	900.00	0.00	0.00	0.00	0.00	0.00	0.00
1,000.00	0.00	0.00	1,000.00	0.00	0.00	0.00	0.00	0.00	0.00
1,100.00	0.00	0.00	1,100.00	0.00	0.00	0.00	0.00	0.00	0.00
1,200.00	0.00	0.00	1,200.00	0.00	0.00	0.00	0.00	0.00	0.00
1,285.00	0.00	0.00	1,285.00	0.00	0.00	0.00	0.00	0.00	0.00
Base of Salt									
1,300.00	0.00	0.00	1,300.00	0.00	0.00	0.00	0.00	0.00	0.00
1,400.00	0.00	0.00	1,400.00	0.00	0.00	0.00	0.00	0.00	0.00
1,435.00	0.00	0.00	1,435.00	0.00	0.00	0.00	0.00	0.00	0.00
Yates	0.00	0.00	1,400.00	0.00	0.00	0.00	0.00	0.00	0.00
	0.00	0.00	1 500 00	0.00	0.00	0.00	0.00	0.00	0.00
1,500.00		0.00	1,500.00	0.00			0.00	0.00	
1,600.00	0.00	0.00	1,600.00	0.00	0.00	0.00	0.00	0.00	0.00
1,700.00	0.00	0.00	1,700.00	0.00	0.00	0.00	0.00	0.00	0.00
1,800.00	0.00	0.00	1,800.00	0.00	0.00	0.00	0.00	0.00	0.00
1,820.00	0.00	0.00	1,820.00	0.00	0.00	0.00	0.00	0.00	0.00
Capitan									
1,900.00	0.00	0.00	1,900.00	0.00	0.00	0.00	0.00	0.00	0.00
2,000.00	0.00	0.00	2,000.00	0.00	0.00	0.00	0.00	0.00	0.00
2,100.00	0.00	0.00	2,100.00	0.00	0.00	0.00	0.00	0.00	0.00
2,150.00	0.00	0.00	2,150.00	0.00	0.00	0.00	0.00	0.00	0.00
2,200.00	0.75	237.19	2,200.00	-0.18	-0.28	-0.28	1.50	1.50	0.00
2,300.00	2.25	237.19	2,299.96	-1.60	-2.48	-2.48	1.50	1.50	0.00
2,404.58	3.82	237.19	2.404.39	-4.59	-7.13	-7.13	1.50	1.50	0.00
2,500.00	3.82	237.19	2,499.60	-8.04	-12.47	-12.48	0.00	0.00	0.00
2,600.00	3.82	237.19	2,499.00	-11.65	-12.47	-12.40	0.00	0.00	0.00
			,						
2,700.00 2,800.00	3.82 3.82	237.19 237.19	2,699.16 2,798.93	-15.26 -18.86	-23.66 -29.26	-23.68 -29.28	0.00 0.00	0.00 0.00	0.00 0.00
2,900.00	3.82	237.19	2,898.71	-22.47	-34.86	-34.88	0.00	0.00	0.00
3,000.00	3.82	237.19	2,998.49	-26.08	-40.46	-40.48	0.00	0.00	0.00
3,100.00	3.82	237.19	3,098.27	-29.69	-46.05	-46.09	0.00	0.00	0.00
3,200.00	3.82	237.19	3,198.05	-33.30	-51.65	-51.69	0.00	0.00	0.00
3,300.00	3.82	237.19	3,297.82	-36.91	-57.25	-57.29	0.00	0.00	0.00
3,400.00	3.82	237.19	3,397.60	-40.52	-62.85	-62.89	0.00	0.00	0.00
3,407.42	3.82	237.19	3,405.00	-40.78	-63.26	-63.31	0.00	0.00	0.00
DLWR Mnt. C									
3.500.00	3.82	237.19	3,497.38	-44.12	-68.45	-68.49	0.00	0.00	0.00
3,600.00	3.82	237.19	3,597.16	-47.73	-74.04	-74.09	0.00	0.00	0.00
3,700.00	3.82	237.19	3,696.94	-51.34	-74.04	-74.09	0.00	0.00	0.00
	3.82	237.19	3,796.71	-54.95	-85.24	-85.30	0.00	0.00	0.00
3,800.00 3,900.00	0.02		-,			-90.90			



EDM 5000.14 Single User Db Database:

Company: Colgate Energy

Project: Eddy County, NM (N83-NME) Site: Crazy Horse 32 State Fed Com Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Design: APD-Rev0-89.94

Permit

Local Co-ordinate Reference:

TVD Reference: MD Reference: North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

ed Survey									
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Vertical Section (usft)	Dogleg Rate (°/100usft)	Build Rate (°/100usft)	Turn Rate (°/100usft)
4,000.00	3.82	237.19	3,996.27	-62.17	-96.43	-96.50	0.00	0.00	0.00
4,100.00	3.82	237.19	4,096.05	-65.77	-102.03	-102.10	0.00	0.00	0.00
4,200.00	3.82	237.19	4,195.83	-69.38	-107.63	-107.70	0.00	0.00	0.00
4,300.00	3.82	237.19	4,295.60	-72.99	-113.23	-113.30	0.00	0.00	0.00
4,400.00	3.82	237.19	4,395.38	-76.60	-118.82	-118.90	0.00	0.00	0.00
4,500.00	3.82	237.19	4,495.16	-80.21	-124.42	-124.50	0.00	0.00	0.00
4,600.00	3.82	237.19	4,594.94	-83.82	-130.02	-130.11	0.00	0.00	0.00
4,700.00	3.82	237.19	4,694.72	-87.43	-135.62	-135.71	0.00	0.00	0.00
4 800 00	2 02	227.40	4.704.40	04.02	141.01	141 21	0.00	0.00	0.00
4,800.00 4,900.00	3.82 3.82	237.19 237.19	4,794.49 4,894.27	-91.03 -94.64	-141.21 -146.81	-141.31 -146.91	0.00 0.00	0.00 0.00	0.00 0.00
5,000.00 5,100.00	3.82 3.82	237.19 237.19	4,994.05	-98.25 -101.86	-152.41 -158.01	-152.51 -158.11	0.00 0.00	0.00 0.00	0.00
5,100.00 5,200.00	3.82 3.82	237.19	5,093.83 5,193.61	-101.86 -105.47	-158.01	-158.11	0.00	0.00	0.00 0.00
5,200.00					-103.00				
5,300.00	3.82	237.19	5,293.38	-109.08	-169.20	-169.32	0.00	0.00	0.00
5,400.00	3.82	237.19	5,393.16	-112.69	-174.80	-174.92	0.00	0.00	0.00
5,500.00	3.82	237.19	5,492.94	-116.29	-180.40	-180.52	0.00	0.00	0.00
5,600.00	3.82	237.19	5,592.72	-119.90	-185.99	-186.12	0.00	0.00	0.00
5,700.00	3.82	237.19	5,692.50	-123.51	-191.59	-191.72	0.00	0.00	0.00
5,800.00	3.82	237.19	5,792.27	-127.12	-197.19	-197.32	0.00	0.00	0.00
5.882.91	3.82	237.19	5,875.00	-130.11	-201.83	-201.97	0.00	0.00	0.00
Lower Brush			5,51 2122						
5,900.00	3.82	237.19	5,892.05	-130.73	-202.79	-202.92	0.00	0.00	0.00
6,000.00	3.82	237.19	5,991.83	-134.34	-208.38	-208.53	0.00	0.00	0.00
6,100.00	3.82	237.19	6,091.61	-137.95	-213.98	-214.13	0.00	0.00	0.00
6,143.49	3.82	237.19	6,135.00	-139.51	-216.42	-216.56	0.00	0.00	0.00
Bone Spring									
6,200.00	3.82	237.19	6,191.39	-141.55	-219.58	-219.73	0.00	0.00	0.00
6,254.35	3.82	237.19	6,245.61	-143.52	-222.62	-222.77	0.00	0.00	0.00
6,300.00	3.13	237.19	6,291.18	-145.01	-224.95	-225.10	1.50	-1.50	0.00
6,400.00	1.63	237.19	6,391.09	-147.27	-228.44	-228.60	1.50	-1.50	0.00
6,508.92	0.00	0.00	6,500.00	-148.11	-229.75	-229.90	1.50	-1.50	0.00
00-EON (CH	32-203H)								
6,600.00	0.00	0.00	6,591.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
6,700.00	0.00	0.00	6,691.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
6,800.00	0.00	0.00	6,791.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
6,900.00	0.00	0.00	6,891.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,000.00	0.00	0.00	6.991.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,000.00	0.00	0.00	7,091.08	-148.11 -148.11	-229.75 -229.75	-229.90 -229.90	0.00	0.00	0.00
7,100.00	0.00	0.00	7,091.08	-146.11 -148.11	-229.75 -229.75	-229.90	0.00	0.00	0.00
7,300.00	0.00	0.00	7,191.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,400.00	0.00	0.00	7,391.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,473.92	0.00	0.00	7,465.00	-148.11	-229.75	-229.90	0.00	0.00	0.00
1st Bone Sp									
7,500.00	0.00	0.00	7,491.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,600.00	0.00	0.00	7,591.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,643.92	0.00	0.00	7,635.00	-148.11	-229.75	-229.90	0.00	0.00	0.00
2nd Bone Sp									
7,700.00	0.00	0.00	7,691.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,800.00	0.00	0.00	7,791.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
7,900.00	0.00	0.00	7,891.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,000.00	0.00	0.00	7,991.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,100.00	0.00	0.00	8,091.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,200.00	0.00	0.00	8,191.08	-148.11	-229.75	-229.90	0.00	0.00	0.00



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com
Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

ned Survey									
									_
Measured			Vertical			Vertical	Dogleg	Build	Turn
Depth	Inclination	Azimuth	Depth	+N/-S	+E/-W	Section	Rate	Rate	Rate
(usft)	(°)	(°)	(usft)	(usft)	(usft)	(usft)	(°/100usft)	(°/100usft)	(°/100usft)
8,203.92	0.00	0.00	8,195.00	-148.11	-229.75	-229.90	0.00	0.00	0.00
2nd Bone S			2,122122						
8,300.00	0.00	0.00	8,291.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,400.00	0.00	0.00	8,391.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,500.00	0.00	0.00	8,491.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,543.92	0.00	0.00	8,535.00	-148.11	-229.75	-229.90	0.00	0.00	0.00
3rd Bone S		0.00	0,000.00	110.11	220.70	220.00	0.00	0.00	0.00
8,600.00	0.00	0.00	8,591.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,700.00	0.00	0.00	8,691.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,800.00	0.00	0.00	8,791.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
8,900.00	0.00	0.00	8,891.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
9,000.00	0.00	0.00	8,991.08	-148.11	-229.75	-229.90	0.00	0.00	0.00
9,090.92	0.00	0.00	9,082.00	-148.11	-229.75	-229.90	0.00	0.00	0.00
·	92' MD, -229.90' V								
9,093.92	0.30	89.94	9,085.00	-148.11	-229.74	-229.90	9.99	9.99	0.00
3rd Bone S	pring SD								
9,100.00	0.91	89.94	9,091.08	-148.11	-229.68	-229.83	10.00	10.00	0.00
9,150.00	5.91	89.94	9,140.97	-148.11	-226.71	-226.86	10.00	10.00	0.00
9,200.00	10.91	89.94	9,190.42	-148.10	-219.40	-219.55	10.00	10.00	0.00
		00.04							2.00
9,250.00	15.91	89.94	9,239.04	-148.09	-207.81	-207.96	10.00	10.00	0.00
9,300.00	20.91	89.94	9,286.47	-148.07	-192.02	-192.18	10.00	10.00	0.00
9,350.00	25.91	89.94	9,332.34	-148.05	-172.17	-172.32	10.00	10.00	0.00
9,400.00	30.91	89.94	9,376.30	-148.02	-148.39	-148.54	10.00	10.00	0.00
9,450.00	35.91	89.94	9,418.03	-147.99	-120.87	-121.02	10.00	10.00	0.00
9,500.00	40.91	89.94	9,457.20	-147.96	-89.81	-89.97	10.00	10.00	0.00
9,550.00	45.91	89.94	9,493.51	-147.92	-55.47	-55.62	10.00	10.00	0.00
9,584.17	49.32	89.94	9,516.54	-147.89	-30.23	-30.39	10.00	10.00	0.00
01-FTP (CH	32-203H)								
9,600.00	50.91	89.94	9,526.69	-147.88	-18.08	-18.24	10.00	10.00	0.00
9,650.00	55.91	89.94	9,556.49	-147.84	22.05	21.89	10.00	10.00	0.00
9,700.00	60.91	89.94	9,582.67	-147.79	64.62	64.47	10.00	10.00	0.00
9,704.83	61.39	89.94	9,585.00	-147.78	68.85	68.70	10.00	10.00	0.00
Wolfcamp A									
9,750.00	65.91	89.94	9,605.05	-147.74	109.32	109.17	10.00	10.00	0.00
9,800.00	70.91	89.94	9,623.44	-147.69	155.80	155.64	10.00	10.00	0.00
9,850.00	75.91	89.94	9,637.71	-147.64	203.70	203.55	10.00	10.00	0.00
9,900.00	80.91	89.94	9,647.76	-147.58	252.66	252.51	10.00	10.00	0.00
9,950.00	85.91	89.94	9,653.50	-147.53	302.32	302.16	10.00	10.00	0.00
9,982.96	89.20	89.94	9,654.90	-147.49	335.24	335.09	10.00	10.00	0.00
	96' MD, 335.09' V								
10.000.00	89.20	89.94	9,655.14	-147.47	352.28	352.13	0.00	0.00	0.00
10,100.00	89.20	89.94	9,656.53	-147.37	452.27	452.12	0.00	0.00	0.00
10,200.00	89.20	89.94	9,657.92	-147.26	552.26	552.11	0.00	0.00	0.00
10,300.00	89.20	89.94	9,659.31	-147.15	652.25	652.10	0.00	0.00	0.00
10,400.00	89.20	89.94	9,660.70	-147.04	752.24	752.09	0.00	0.00	0.00
10,500.00	89.20	89.94	9,662.09	-146.93	852.23	852.08	0.00	0.00	0.00
10,600.00	89.20	89.94	9,663.48	-146.82	952.22	952.07	0.00	0.00	0.00
10,700.00	89.20	89.94	9,664.87	-146.71	1,052.21	1,052.06	0.00	0.00	0.00
10,800.00	89.20	89.94	9,666.26	-146.60	1,152.20	1,152.05	0.00	0.00	0.00
10,900.00	89.20	89.94	9,667.65	-146.49	1,152.20	1,152.03	0.00	0.00	0.00
11,000.00	89.20	89.94	9,669.04	-146.38	1,352.18	1,352.03	0.00	0.00	0.00
11,100.00	89.20	89.94	9,670.43	-146.27	1,452.18	1,452.02	0.00	0.00	0.00
11,200.00	89.20	89.94	9,671.82	-146.16	1,552.17	1,552.01	0.00	0.00	0.00



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com
Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

ıyıı.									
nned Survey									
Measured			Vertical			Vertical	Dogleg	Build	Turn
Depth (usft)	Inclination (°)	Azimuth (°)	Depth (usft)	+N/-S (usft)	+E/-W (usft)	Section (usft)	Rate (°/100usft)	Rate (°/100usft)	Rate (°/100usft)
11,300.00	89.20	89.94	9,673.21	-146.06	1,652.16	1,652.00	0.00	0.00	0.00
11,400.00	89.20	89.94	9,674.60	-145.95	1,752.15	1,751.99	0.00	0.00	0.00
11,500.00	89.20	89.94	9,675.99	-145.84	1,852.14	1,851.98	0.00	0.00	0.00
11,600.00	89.20	89.94	9,677.38	-145.73	1,952.13	1,951.97	0.00	0.00	0.00
11,700.00	89.20	89.94	9,678.77	-145.62	2,052.12	2,051.96	0.00	0.00	0.00
11,800.00	89.20	89.94	9,680.16	-145.51	2,152.11	2,151.95	0.00	0.00	0.00
11,900.00	89.20	89.94	9.681.55	-145.40	2,252.10	2,251.94	0.00	0.00	0.00
12,000.00	89.20	89.94	9,682.94	-145.29	2,352.09	2,351.93	0.00	0.00	0.00
12,100.00	89.20	89.94	9,684.33	-145.18	2,452.08	2,451.92	0.00	0.00	0.00
12,148.08	89.20	89.94	9,685.00	-145.13	2,500.15	2,500.00	0.00	0.00	0.00
02-V2500-(C	89.20	89.94	9,685.00	-145.13	2 500 42	2 500 29	2.00	-2.00	-0.01
12,148.36 12,200.00	89.20 89.20	89.94 89.94	9,685.00	-145.13 -145.07	2,500.43 2,552.07	2,500.28 2,551.91	0.00	-2.00 0.00	-0.01 0.00
		89.94	,					0.00	
12,300.00	89.20		9,687.13	-144.96 144.85	2,652.06	2,651.90	0.00		0.00
12,400.00	89.20	89.94	9,688.53	-144.85	2,752.05	2,751.90	0.00	0.00	0.00
12,500.00	89.20	89.94	9,689.93	-144.75	2,852.04	2,851.89	0.00	0.00	0.00
12,600.00	89.20	89.94	9,691.33	-144.64	2,952.03	2,951.88	0.00	0.00	0.00
12,700.00	89.20	89.94	9,692.73	-144.53	3,052.02	3,051.87	0.00	0.00	0.00
12,800.00	89.20	89.94	9,694.13	-144.42	3,152.01	3,151.86	0.00	0.00	0.00
12,900.00	89.20	89.94	9,695.53	-144.31	3,252.00	3,251.85	0.00	0.00	0.00
13,000.00	89.20	89.94	9,696.93	-144.20	3,351.99	3,351.84	0.00	0.00	0.00
13,100.00	89.20	89.94	9,698.33	-144.09	3,451.98	3,451.83	0.00	0.00	0.00
13,200.00	89.20	89.94	9,699.73	-143.98	3,551.97	3,551.82	0.00	0.00	0.00
13,300.00	89.20	89.94	9,701.13	-143.87	3,651.96	3,651.81	0.00	0.00	0.00
13,400.00	89.20	89.94	9,702.53	-143.76	3,751.95	3,751.80	0.00	0.00	0.00
13,500.00	89.20	89.94	9,703.93	-143.65	3,851.94	3,851.79	0.00	0.00	0.00
13,600.00	89.20	89.94	9,705.33	-143.54	3,951.93	3,951.78	0.00	0.00	0.00
13,700.00	89.20	89.94	9,706.72	-143.44	4,051.92	4,051.77	0.00	0.00	0.00
13,800.00	89.20	89.94	9,708.12	-143.33	4,151.91	4,151.76	0.00	0.00	0.00
13,900.00	89.20	89.94	9,709.52	-143.22	4,251.90	4,251.75	0.00	0.00	0.00
14,000.00	89.20	89.94	9,710.92	-143.11	4,351.89	4,351.74	0.00	0.00	0.00
14,100.00	89.20	89.94	9,712.32	-143.00	4,451.88	4,451.73	0.00	0.00	0.00
14,200.00	89.20	89.94	9,713.72	-142.89	4,551.87	4,551.72	0.00	0.00	0.00
14,300.00	89.20	89.94	9,715.12	-142.78	4,651.86	4,651.71	0.00	0.00	0.00
14,400.00	89.20	89.94	9,716.52	-142.67	4,751.85	4,751.70	0.00	0.00	0.00
14,500.00	89.20	89.94	9,717.92	-142.56	4,851.84	4,851.69	0.00	0.00	0.00
14,600.00	89.20	89.94	9,717.92	-142.45	4,951.83	4,851.68	0.00	0.00	0.00
14,648.32	89.20	89.94	9,719.32	-142.40	5,000.15	5,000.00	0.00	0.00	0.00
,	.00 TFO 0.00 - 03			1 12.70	0,000.10	0,000.00	0.00	0.00	0.00
14,654.06	89.31	89.94	9,720.07	-142.39	5,005.88	5,005.73	2.00	2.00	0.00
14,658.52	89.31	89.94	9,720.13	-142.39	5,010.35	5,010.19	0.00	0.00	0.00
	52' MD, 5010.19'	VS,9720.13' TV							
14,700.00	89.31	89.94	9,720.63	-142.34	5,051.82	5,051.67	0.00	0.00	0.00
14,800.00	89.31	89.94	9,721.83	-142.23	5,151.82	5,151.66	0.00	0.00	0.00
14,900.00	89.31	89.94	9,723.03	-142.13	5,251.81	5,251.66	0.00	0.00	0.00
15,000.00	89.31	89.94	9,724.22	-142.02	5,351.80	5,351.65	0.00	0.00	0.00
15,100.00	89.31	89.94	9,725.42	-141.91	5,451.79	5,451.64	0.00	0.00	0.00
15,200.00	89.31	89.94	9,726.62	-141.80	5,551.79	5,551.64	0.00	0.00	0.00
15,300.00	89.31	89.94	9,720.02	-141.69	5,651.79	5,651.63	0.00	0.00	0.00
15,400.00	89.31	89.94	9,727.02	-141.58	5,751.77	5,751.62	0.00	0.00	0.00
15,500.00	89.31	89.94	9,730.22	-141.47	5,851.76	5,851.61	0.00	0.00	0.00
15,600.00	89.31	89.94	9,730.22	-141.36	5,951.76	5,951.61	0.00	0.00	0.00
15,700.00	89.31	89.94	9,732.62	-141.25	6,051.75	6,051.60	0.00	0.00	0.00



EDM 5000.14 Single User Db Database:

Company: Colgate Energy

Project: Eddy County, NM (N83-NME) Site: Crazy Horse 32 State Fed Com Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Design: APD-Rev0-89.94

Permit

Local Co-ordinate Reference:

TVD Reference: MD Reference: North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Vertical Section (usft)	Dogleg Rate (°/100usft)	Build Rate (°/100usft)	Turn Rate (°/100usft)
15,800.00	89.31	89.94	9,733.82	-141.14	6,151.74	6,151.59	0.00	0.00	0.00
15,900.00	89.31	89.94	9,735.02	-141.03	6,251.74	6,251.58	0.00	0.00	0.00
16,000.00	89.31	89.94	9,736.22	-140.92	6,351.73	6,351.58	0.00	0.00	0.00
16,100.00	89.31	89.94	9,737.42	-140.81	6,451.72	6,451.57	0.00	0.00	0.00
16,200.00	89.31	89.94	9,738.62	-140.71	6,551.71	6,551.56	0.00	0.00	0.00
16,300.00	89.31	89.94	9,739.82	-140.60	6,651.71	6,651.56	0.00	0.00	0.00
16,400.00	89.31	89.94	9,741.02	-140.49	6,751.70	6,751.55	0.00	0.00	0.00
16,500.00	89.31	89.94	9,742.22	-140.38	6,851.69	6,851.54	0.00	0.00	0.00
			9,743.42	-140.27			0.00		0.00
16,600.00	89.31	89.94			6,951.69	6,951.53		0.00	
16,700.00	89.31	89.94	9,744.62	-140.16	7,051.68	7,051.53	0.00	0.00	0.00
16,800.00	89.31	89.94	9,745.82	-140.05	7,151.67	7,151.52	0.00	0.00	0.00
16,900.00	89.31	89.94	9,747.02	-139.94	7,251.66	7,251.51	0.00	0.00	0.00
17,000.00	89.31	89.94	9,748.22	-139.83	7,351.66	7,351.51	0.00	0.00	0.00
17,100.00	89.31	89.94	9,749.42	-139.72	7,451.65	7,451.50	0.00	0.00	0.00
17,148.51	89.31	89.94	9,750.00	-139.67	7,500.15	7,500.00	0.00	0.00	0.00
	00 TFO -0.04 - 04	•	,	400.05	7 547 00	7 547 04	0.00	0.00	0.00
17,165.75	89.66	89.94	9,750.16	-139.65	7,517.39	7,517.24	2.00	2.00	0.00
17,200.00	89.66	89.94	9,750.36	-139.61	7,551.64	7,551.49	0.00	0.00	0.00
17,300.00	89.66	89.94	9,750.96	-139.50	7,651.64	7,651.49	0.00	0.00	0.00
17,400.00	89.66	89.94	9,751.56	-139.39	7,751.64	7,751.49	0.00	0.00	0.00
17,500.00	89.66	89.94	9,752.15	-139.28	7,851.64	7,851.49	0.00	0.00	0.00
17,600.00	89.66	89.94	9,752.75	-139.18	7,951.64	7,951.49	0.00	0.00	0.00
17,700.00	89.66	89.94	9,753.35	-139.07	8,051.63	8,051.48	0.00	0.00	0.00
17,800.00	89.66	89.94	9,753.95	-138.96	8,151.63	8,151.48	0.00	0.00	0.00
17,900.00	89.66	89.94	9,754.55	-138.85	8,251.63	8,251.48	0.00	0.00	0.00
18,000.00	89.66	89.94	9,755.14	-138.74	8,351.63	8,351.48	0.00	0.00	0.00
18,100.00	89.66	89.94	9,755.74	-138.63	8,451.63	8,451.48	0.00	0.00	0.00
18,200.00	89.66	89.94	9,756.34	-138.52	8,551.63	8,551.48	0.00	0.00	0.00
18,300.00	89.66	89.94	9,756.94	-138.41	8,651.62	8,651.47	0.00	0.00	0.00
18,400.00	89.66	89.94	9,757.53	-138.30	8,751.62	8,751.47	0.00	0.00	0.00
18,500.00	89.66	89.94	9,758.13	-138.19	8,851.62	8,851.47	0.00	0.00	0.00
18,600.00	89.66	89.94	9,758.73	-138.08	8,951.62	8,951.47	0.00	0.00	0.00
18,624.71	89.66	89.94	9,758.88	-138.05	8,976.33	8,976.18	0.00	0.00	0.00
	18624.71' MD, 89						0.00	0.00	0.00
18,700.00	89.66	89.94	9,759.33	-137.97	9,051.62	9,051.47	0.00	0.00	0.00
18,800.00	89.66	89.94	9,759.93	-137.86	9,151.61	9,151.47	0.00	0.00	0.00
			9.760.52		9.251.61				
18,900.00	89.66	89.94	-,	-137.75	-,	9,251.46	0.00	0.00	0.00
19,000.00	89.66	89.94	9,761.12	-137.64	9,351.61	9,351.46	0.00	0.00	0.00
19,100.00	89.66	89.94	9,761.72	-137.53	9,451.61	9,451.46	0.00	0.00	0.00
19,200.00	89.66	89.94	9,762.32	-137.42	9,551.61	9,551.46	0.00	0.00	0.00
19,300.00	89.66	89.94	9,762.92	-137.31	9,651.61	9,651.46	0.00	0.00	0.00
19,400.00	89.66	89.94	9,763.51	-137.20	9,751.60	9,751.45	0.00	0.00	0.00
19,500.00	89.66	89.94	9,764.11	-137.09	9,851.60	9,851.45	0.00	0.00	0.00
19,600.00	89.66	89.94	9,764.71	-136.98	9,951.60	9,951.45	0.00	0.00	0.00
19,648.55	89.66	89.94	9,765.00	-136.93	10,000.15	10,000.00	0.00	0.00	0.00
05-V10000-(CH32-203H)								
19,700.00	89.66	89.94	9,765.31	-136.87	10,051.60	10,051.45	0.00	0.00	0.00
19,800.00	89.66	89.94	9,765.91	-136.76	10,151.60	10,151.45	0.00	0.00	0.00
19,846.59	89.66	89.94	9,766.18	-136.76	10,198.18	10,131.43	0.00	0.00	0.00
06-LTP (CH3		09.94	5,700.10	150.71	10, 190.10	10, 190.03	0.00	0.00	0.00
19,900.00	89.66	89.94	9,766.50	-136.65	10,251.59	10,251.45	0.00	0.00	0.00
19,936.59	89.66	89.94	9,766.72	-136.61	10,288.18	10,288.03	0.00	0.00	0.00



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com

Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

Design Targets									
Target Name - hit/miss target - Shape	Dip Angle (°)	Dip Dir. (°)	TVD (usft)	+N/-S (usft)	+E/-W (usft)	Northing (usft)	Easting (usft)	Latitude	Longitude
00-EON (CH32-203H) - plan hits target cent - Point	0.00 ter	0.00	6,500.00	-148.11	-229.75	586,843.38	643,174.27	32.61284823	-104.00259696
02-V2500-(CH32-203H) - plan hits target cent - Point	0.00 ter	0.00	9,685.00	-145.13	2,500.15	586,846.36	645,904.17	32.61283276	-103.99373114
01-FTP (CH32-203H) - plan misses target of Point	0.00 center by 225	89.94 .25usft at 95	9,685.00 84.17usft MI	-148.06 D (9516.54 T\	-179.76 /D, -147.89 N,	586,843.43 -30.23 E)	643,224.26	32.61284794	-104.00243461
03-V5000-(CH32-203H) - plan hits target cent - Point	0.00 ter	0.00	9,720.00	-142.40	5,000.15	586,849.09	648,404.17	32.61281805	-103.98561196
04-V7500-(CH32-203H) - plan hits target cent - Point	0.00 ter	0.00	9,750.00	-139.67	7,500.15	586,851.82	650,904.17	32.61280281	-103.97749279
05-V10000-(CH32-203H - plan hits target cent - Point	0.00 ter	0.00	9,765.00	-136.93	10,000.15	586,854.56	653,404.17	32.61278708	-103.96937363
06-LTP (CH32-203H) - plan misses target of Point	0.00 center by 0.10	0.00 Jusft at 1984	9,766.18 6.58usft MD	-136.81 (9766.18 TVI	10,198.18 D, -136.71 N, 1	586,854.68 0198.18 E)	653,602.20	32.61278555	-103.96873050
07-PBHL (CH32-203H) - plan misses target of a Point	0.00 center by 0.01	0.00 usft at 1993	9,766.72 6.59usft MD	-136.62 (9766.72 TVI	10,288.18 D, -136.61 N, 1	586,854.87 0288.18 E)	653,692.20	32.61278522	-103.96843821

Formations						
	Measured Depth (usft)	Vertical Depth (usft)	Name	Lithology	Dip (°)	Dip Direction (°)
	135.00	135.00	Rustler			
	385.00	385.00	Top of Salt			
	1,285.00	1,285.00	Base of Salt			
	1,435.00	1,435.00	Yates			
	1,820.00	1,820.00	Capitan			
	3,407.42	3,405.00	DLWR Mnt. Group			
	5,882.91	5,875.00	Lower Brushy Canyon			
	6,143.49	6,135.00	Bone Spring Lime			
	7,473.92	7,465.00	1st Bone Spring SD			
	7,643.92	7,635.00	2nd Bone Spring LM			
	8,203.92	8,195.00	2nd Bone Spring SD			
	8,543.92	8,535.00	3rd Bone Spring LM			
	9,093.92	9,085.00	3rd Bone Spring SD			
	9,704.83	9,585.00	Wolfcamp A			



Database: EDM 5000.14 Single User Db

Company: Colgate Energy

Project: Eddy County, NM (N83-NME)
Site: Crazy Horse 32 State Fed Com
Well: Crazy Horse 32 State Fed Com 203H

Wellbore: Permit

Design: APD-Rev0-89.94

Local Co-ordinate Reference:

TVD Reference:
MD Reference:
North Reference:

Survey Calculation Method:

Well Crazy Horse 32 State Fed Com 203H

3260+25 @ 3285.00usft 3260+25 @ 3285.00usft

Grid

otations				
Measured Depth (usft)	Vertical Depth (usft)	Local Coord +N/-S (usft)	dinates +E/-W (usft)	Comment
9.090.92	9.082.00	-148.11	-229.75	KOP: 9090.92' MD, -229.90' VS, 9082.00' TVD
9.982.96	9.654.90	-147.49	335.24	EOC: 9982.96' MD, 335.09' VS, 9654.90' TVD
14.648.32	9.720.00	-142.40	5,000.15	Start DLS 2.00 TFO 0.00
14,658.52	9,720.13	-142.39	5,010.35	Sec: 14658.52' MD, 5010.19' VS,9720.13' TVD
14,658.52	9,720.13	-142.39	5,010.35	Sec: 32.61281799, -103.98557885
17,148.50	9,750.00	-139.67	7,500.15	Start DLS 2.00 TFO -0.04
18,624.71	9,758.88	-138.05	8,976.33	Fed Lease: 18624.71' MD, 8976.18' VS,9758.88' TVD
18,624.71	9,758.88	-138.05	8,976.33	Fed Lease: 32.61279359, -103.97269866
19,936.59	9,766.72	-136.61	10,288.18	TD: 19936.59' MD, 10288.03' VS, 9766.72' TVD

PECOS DISTRICT DRILLING CONDITIONS OF APPROVAL

OPERATOR'S NAME: | Colgate Operating LLC

LEASE NO.: NMNM06771A

LOCATION: | Section 32, T.19 S., R.30 E., NMPM

COUNTY: Eddy County, New Mexico

WELL NAME & NO.: Crazy Horse 32 State Fed Com 133H

SURFACE HOLE FOOTAGE: 1303'/S & 190'/W **BOTTOM HOLE FOOTAGE** 1980'/S & 10'/E

WELL NAME & NO.: Crazy Horse 32 State Fed Com 134H

SURFACE HOLE FOOTAGE: 1303'/S & 235'/W **BOTTOM HOLE FOOTAGE** 330'/S & 10'/E

WELL NAME & NO.: Crazy Horse 32 State Fed Com 203H

SURFACE HOLE FOOTAGE: 1303'/S & 280'/W **BOTTOM HOLE FOOTAGE** 1155'/S & 10'/E

COA

H2S	© Yes	⊙ No	
Potash	O None	Secretary	© R-111-P
Cave/Karst Potential	CLow	© Medium	• High
Cave/Karst Potential	Critical Critical		
Variance	O None	• Flex Hose	Other
Wellhead	Conventional	O Multibowl	Both
Other			□WIPP
Other	☐ Fluid Filled	☐ Cement Squeeze	☐ Pilot Hole
Special Requirements	☐ Water Disposal	▼ COM	□ Unit

A. HYDROGEN SULFIDE

Hydrogen Sulfide (H2S) monitors shall be installed prior to drilling out the surface shoe. If H2S is detected in concentrations greater than 100 ppm, the Hydrogen Sulfide area shall meet Onshore Order 6 requirements, which includes equipment and personnel/public protection items. If Hydrogen Sulfide is encountered, provide measured values and formations to the BLM.

B. CASING

- 1. The 18-5/8 inch surface casing shall be set at approximately 330 feet (a minimum of 70 feet (Eddy County) into the Rustler Anhydrite and above the salt) and cemented to the surface.
 - a. If cement does not circulate to the surface, the appropriate BLM office shall be notified and a temperature survey utilizing an electronic type temperature survey with surface log readout will be used or a cement bond log shall be run to verify the top of the cement. Temperature survey will be run a minimum of six hours after pumping cement and ideally between 8-10 hours after completing the cement job.
 - b. Wait on cement (WOC) time for a primary cement job will be a minimum of **24 hours in the Potash Area** or 500 pounds compressive strength, whichever is greater. (This is to include the lead cement)
 - c. Wait on cement (WOC) time for a remedial job will be a minimum of 4 hours after bringing cement to surface or 500 pounds compressive strength, whichever is greater.
 - d. If cement falls back, remedial cementing will be done prior to drilling out that string.
- 2. The minimum required fill of cement behind the 13-3/8 inch intermediate casing shall be set at approximately 1670 feet is:
 - Cement to surface. If cement does not circulate see B.1.a, c-d above.
 Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry due to cave/karst, potash or capitan reef.
 - ❖ In <u>High Cave/Karst Areas</u> if cement does not circulate to surface on the first two casing strings, the cement on the 3rd casing string must come to surface.
 - ❖ In <u>Secretary Potash Areas</u> if cement does not circulate to surface on the first two casing strings, the cement on the 3rd casing string must come to surface.
 - ❖ In <u>Capitan Reef Areas</u> if cement does not circulate to surface on the first two casing strings, the cement on the 3rd casing string must come to surface.
- 3. The minimum required fill of cement behind the 9-5/8 inch intermediate casing is:

Option 1:

Cement should tie-back at least 50 feet on top of Capitan Reef top or 200 feet into the previous casing, whichever is greater. If cement does not circulate see B.1.a, c-d above.

Wait on cement (WOC) time for a primary cement job is to include the lead cement slurry due to cave/karst, potash or capitan reef. Cement excess is less than 25%, more cement might be required.

Option 2:

Operator has proposed a DV tool, the depth may be adjusted as long as the cement is changed proportionally. The DV tool may be cancelled if cement circulates to surface on the first stage.

- a. First stage to DV tool: Cement to circulate. If cement does not circulate off the DV tool, contact the appropriate BLM office before proceeding with second stage cement job.
- b. Second stage above DV tool:
 - Cement should tie-back at least 50 feet on top of Capitan Reef top or 200 feet into the previous casing, whichever is greater. If cement does not circulate see B.1.a, c-d above.
 Wait on cement (WOC) time for a primary cement job is to include

the lead cement (WOC) time for a primary cement job is to include the lead cement slurry due to cave/karst, potash or capitan reef. Cement excess is less than 25%, more cement might be required.

- 4. The minimum required fill of cement behind the **5-1/2** inch production casing is:
 - Cement should tie-back at least 200 feet into previous casing string.
 Operator shall provide method of verification.

C. PRESSURE CONTROL

- 1. Variance approved to use flex line from BOP to choke manifold. Manufacturer's specification to be readily available. No external damage to flex line. Flex line to be installed as straight as possible (no hard bends).'
- 2.
- a. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall be 600 psi. A Diverter system is approved as a variance to drill the 13 3/8 inch casing in a 18 5/8 inch hole.
- a. Operator has proposed a multi-bowl wellhead assembly. This assembly will only be tested when installed on the 13 3/8 inch intermediate casing.
 Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall

be 10,000 (10M) psi. Variance is approved to use a 5000 (5M) Annular which shall be tested to 5000 (5M) psi.

- a. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.
- b. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
- c. Manufacturer representative shall install the test plug for the initial BOP test.
- d. If the cement does not circulate and one inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
- e. Whenever any seal subject to test pressure is broken, all the tests in OOGO2.III.A.2.i must be followed.

D. SPECIAL REQUIREMENT (S)

Communitization Agreement

- The operator will submit a Communitization Agreement to the Santa Fe Office, 301 Dinosaur Trail Santa Fe, New Mexico 87508, at least 90 days before the anticipated date of first production from a well subject to a spacing order issued by the New Mexico Oil Conservation Division. The Communitization Agreement will include the signatures of all working interest owners in all Federal and Indian leases subject to the Communitization Agreement (i.e., operating rights owners and lessees of record), or certification that the operator has obtained the written signatures of all such owners and will make those signatures available to the BLM immediately upon request.
- If the operator does not comply with this condition of approval, the BLM may take enforcement actions that include, but are not limited to, those specified in 43 CFR 3163.1.
- In addition, the well sign shall include the surface and bottom hole lease numbers. When the Communitization Agreement number is known, it shall also be on the sign.

GENERAL REQUIREMENTS

The BLM is to be notified in advance for a representative to witness:

- a. Spudding well (minimum of 24 hours)
- b. Setting and/or Cementing of all casing strings (minimum of 4 hours)
- c. BOPE tests (minimum of 4 hours)
 - ☑ Eddy CountyCall the Carlsbad Field Office, 620 East Greene St., Carlsbad, NM 88220, (575) 361-2822
 - Lea County
 Call the Hobbs Field Station, 414 West Taylor, Hobbs NM 88240, (575)
 393-3612
- 1. Unless the production casing has been run and cemented or the well has been properly plugged, the drilling rig shall not be removed from over the hole without prior approval.
 - a. In the event the operator has proposed to drill multiple wells utilizing a skid/walking rig. Operator shall secure the wellbore on the current well, after installing and testing the wellhead, by installing a blind flange of like pressure rating to the wellhead and a pressure gauge that can be monitored while drilling is performed on the other well(s).
 - b. When the operator proposes to set surface casing with Spudder Rig
 - Notify the BLM when moving in and removing the Spudder Rig.
 - Notify the BLM when moving in the 2nd Rig. Rig to be moved in within 90 days of notification that Spudder Rig has left the location.
 - BOP/BOPE test to be conducted per Onshore Oil and Gas Order No. 2 as soon as 2nd Rig is rigged up on well.
- 2. Floor controls are required for 3M or Greater systems. These controls will be on the rig floor, unobstructed, readily accessible to the driller and will be operational at all times during drilling and/or completion activities. Rig floor is defined as the area immediately around the rotary table; the area immediately above the substructure on which the draw works are located, this does not include the dog house or stairway area.
- 3. The record of the drilling rate along with the GR/N well log run from TD to surface (horizontal well vertical portion of hole) shall be submitted to the BLM office as well as all other logs run on the borehole 30 days from completion. If available, a digital copy of the logs is to be submitted in addition to the paper copies. The Rustler top and top and bottom of Salt are to be recorded on the Completion Report.

A. CASING

- 1. Changes to the approved APD casing program need prior approval if the items substituted are of lesser grade or different casing size or are Non-API. The Operator can exchange the components of the proposal with that of superior strength (i.e. changing from J-55 to N-80, or from 36# to 40#). Changes to the approved cement program need prior approval if the altered cement plan has less volume or strength or if the changes are substantial (i.e. Multistage tool, ECP, etc.). The initial wellhead installed on the well will remain on the well with spools used as needed.
- 2. Wait on cement (WOC) for Potash Areas: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi for all cement blends, 2) until cement has been in place at least 24 hours. WOC time will be recorded in the driller's log. The casing intergrity test can be done (prior to the cement setting up) immediately after bumping the plug.
- 3. Wait on cement (WOC) for Water Basin: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi at the shoe, 2) until cement has been in place at least 8 hours. WOC time will be recorded in the driller's log. See individual casing strings for details regarding lead cement slurry requirements. The casing intergrity test can be done (prior to the cement setting up) immediately after bumping the plug.
- 4. Provide compressive strengths including hours to reach required 500 pounds compressive strength prior to cementing each casing string. Have well specific cement details onsite prior to pumping the cement for each casing string.
- 5. No pea gravel permitted for remedial or fall back remedial without prior authorization from the BLM engineer.
- 6. On that portion of any well approved for a 5M BOPE system or greater, a pressure integrity test of each casing shoe shall be performed. Formation at the shoe shall be tested to a minimum of the mud weight equivalent anticipated to control the formation pressure to the next casing depth or at total depth of the well. This test shall be performed before drilling more than 20 feet of new hole.
- 7. If hardband drill pipe is rotated inside casing, returns will be monitored for metal. If metal is found in samples, drill pipe will be pulled and rubber protectors which have a larger diameter than the tool joints of the drill pipe will be installed prior to continuing drilling operations.
- 8. Whenever a casing string is cemented in the R-111-P potash area, the NMOCD requirements shall be followed.
- B. PRESSURE CONTROL

- 1. All blowout preventer (BOP) and related equipment (BOPE) shall comply with well control requirements as described in Onshore Oil and Gas Order No. 2 and API RP 53 Sec. 17.
- 2. If a variance is approved for a flexible hose to be installed from the BOP to the choke manifold, the following requirements apply: The flex line must meet the requirements of API 16C. Check condition of flexible line from BOP to choke manifold, replace if exterior is damaged or if line fails test. Line to be as straight as possible with no hard bends and is to be anchored according to Manufacturer's requirements. The flexible hose can be exchanged with a hose of equal size and equal or greater pressure rating. Anchor requirements, specification sheet and hydrostatic pressure test certification matching the hose in service, to be onsite for review. These documents shall be posted in the company man's trailer and on the rig floor.
- 3. 5M or higher system requires an HCR valve, remote kill line and annular to match. The remote kill line is to be installed prior to testing the system and tested to stack pressure.
- 4. If the operator has proposed a multi-bowl wellhead assembly in the APD. The following requirements must be met:
 - a. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.
 - b. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
 - c. Manufacturer representative shall install the test plug for the initial BOP test.
 - d. Whenever any seal subject to test pressure is broken, all the tests in OOGO2.III.A.2.i must be followed.
 - e. If the cement does not circulate and one inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
- 5. The appropriate BLM office shall be notified a minimum of 4 hours in advance for a representative to witness the tests.
 - a. In a water basin, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. The casing cut-off and BOP installation can be initiated four hours after installing the slips, which will be approximately six hours after bumping the plug. For those casing strings not using slips, the minimum wait time before cut-off is eight hours after bumping the plug. BOP/BOPE testing can begin after cut-off or once cement reaches 500 psi compressive strength (including lead when specified), whichever is greater. However, if the float does not

- hold, cut-off cannot be initiated until cement reaches 500 psi compressive strength (including lead when specified).
- b. In potash areas, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. For all casing strings, casing cut-off and BOP installation can be initiated at twelve hours after bumping the plug. However, **no tests** shall commence until the cement has had a minimum of 24 hours setup time, except the casing pressure test can be initiated immediately after bumping the plug (only applies to single stage cement jobs).
- c. The tests shall be done by an independent service company utilizing a test plug not a cup or J-packer. The operator also has the option of utilizing an independent tester to test without a plug (i.e. against the casing) pursuant to Onshore Order 2 with the pressure not to exceed 70% of the burst rating for the casing. Any test against the casing must meet the WOC time for water basin (8 hours) or potash (24 hours) or 500 pounds compressive strength, whichever is greater, prior to initiating the test (see casing segment as lead cement may be critical item).
- d. The test shall be run on a 5000 psi chart for a 2-3M BOP/BOP, on a 10000 psi chart for a 5M BOP/BOPE and on a 15000 psi chart for a 10M BOP/BOPE. If a linear chart is used, it shall be a one hour chart. A circular chart shall have a maximum 2 hour clock. If a twelve hour or twenty-four hour chart is used, tester shall make a notation that it is run with a two hour clock.
- e. The results of the test shall be reported to the appropriate BLM office.
- f. All tests are required to be recorded on a calibrated test chart. A copy of the BOP/BOPE test chart and a copy of independent service company test will be submitted to the appropriate BLM office.
- g. The BOP/BOPE test shall include a low pressure test from 250 to 300 psi. The test will be held for a minimum of 10 minutes if test is done with a test plug and 30 minutes without a test plug. This test shall be performed prior to the test at full stack pressure.
- h. BOP/BOPE must be tested by an independent service company within 500 feet of the top of the Wolfcamp formation if the time between the setting of the intermediate casing and reaching this depth exceeds 20 days. This test does not exclude the test prior to drilling out the casing shoe as per Onshore Order No. 2.
- C. DRILLING MUD

Mud system monitoring equipment, with derrick floor indicators and visual and audio alarms, shall be operating before drilling into the Wolfcamp formation, and shall be used until production casing is run and cemented.

D. WASTE MATERIAL AND FLUIDS

All waste (i.e. drilling fluids, trash, salts, chemicals, sewage, gray water, etc.) created as a result of drilling operations and completion operations shall be safely contained and disposed of properly at a waste disposal facility. No waste material or fluid shall be disposed of on the well location or surrounding area.

Porto-johns and trash containers will be on-location during fracturing operations or any other crew-intensive operations.



H₂S Contingency Plan



Table of Contents

I.	EMERGENCY ASSISTANCE TELEPHONE LIST	3
II.	H ₂ S CONTINGENCY PLAN SECTION	5
III.	OPERATING PROCEDURES	7
IV.	OPERATING CONDITIONS	10
V.	EMERGENCY PROCEDURES	11
VI.	POST EMERGENCY ACTIONS	14
VII.	IGNITION PROCEDURES	15
VIII.	TRAINING PROGRAM	16
IX.	EMERGENCY EQUIPMENT	16
Χ.	CHECKLISTS	20
XI.	BRIEFING PROCEDURES	22
XII.	EVACUATION PLAN	23
XIII.	APPENDICES AND GENERAL INFORMATION	24

I. EMERGENCY ASSISTANCE TELEPHONE LIST

PUBLIC SAFETY	911 or
Sheriff's Department:	_
Eddy County Sherriff's Office	(575) 887-7551
Fire Department:	
Carlsbad Fire Department	(575) 885-3125
Artesia Fire Department	(575) 746-5051
Ambulance:	
Elite Medical Transport (Carlsbad)	(915) 542-1144
Trans Aero MedEvac (Artesia)	(970) 657-7449
Hospitals:	
Carlsbad Medical Center	(575) 887-4100
Artesia General Hospital	(575) 748-3333
New Mexico Dept. of Transportation:	
Highway & Transportation Department	(505) 795- 1401
New Mexico Railroad Commission:	
Main Line	(505) 476-3441
OSHA 24 Hr. Reporting	(800) 321-6742
(8 hrs. after death or 24 hrs. after in-patient, amputation, loss of an eye)	

Office Contacts	911 or
Colgate Energy LLC.	(432) 695-4222
Vice President of Operations:	
Casey McCain	(432) 664-6140
Drilling Engineering Supervisor	
Rafael Madrid	(432) 556-6387
Drilling Engineering Technical Adviser	
Steven Segrest	(405) 550-0277
Operations Superintendent	
Rick Lawson	(432) 530- 3188
Drilling Superintendent	()
Daniel Cameron	(405) 933-0435
Onsite Supervision (H&P 481 Rig Managers)	
Juan Gutierrez	(970)394-4768
Jonathan Jackson	(970)394-4768
Onsite Supervision (H&P 481 Company Men)	
Pierre Dupuis	(432)438-0114
Eric Rutherford	(432)438-0114
Rolando Torres	(432)438-0114
Trevor Hein	(432)438-0114
Emergency Accommodations	
Safety Solutions Office	(432) 563-0400
Safety Solutions Dispatch	(432) 556-2002
Craig Strasner	(432) 894-0341 (Cell)

II. H₂S CONTINGENCY PLAN SECTION

Scope:

This contingency plan provides an organized plan of action for alerting and protecting the public within an area of exposure prior to an intentional release or following the accidental release of a potentially hazardous volume of hydrogen sulfide. The plan establishes guidelines for all personnel whose work activity may involve exposure to Hydrogen Sulfide Gas (H_2S).

Objective:

Prevent any and all accidents and prevent the uncontrolled release of H_2S into the atmosphere. Provide proper evacuation procedures to cope with emergencies. Provide immediate and adequate medical attention should an injury occur.

Purpose, Distribution and Updating of Contingency Plan:

The Purpose of this contingency plan is to protect the general public from the harmful effects of H_2S accidentally escaping from the subject producing well. This plan is designed to accomplish its purpose by assuring the preparedness necessary to:

- 1. Minimize the possibility of releasing H₂S into the atmosphere during related operations.
- 2. Provide for the logical, efficient, and safe emergency actions required to protect the general public in the event of an accidental release of a potentially hazardous quantity of H₂S.

Supplemental information is included with this plan and is intended as reference material for anyone needing a more detailed understanding of the many factors pertinent to H_2S drilling operations safety. The release of a potentially hazardous quantity of H_2S is highly unlikely. If such a release should occur however, obviously the exact time, rate, duration, and other pertinent facts will be known in advance thus, this contingency plan must necessarily be somewhat general. The plan does review in detail, as is reasonably possible, the type of accidental release that could possibly endanger the general public, the probable extent of such danger, and the emergency actions generally appropriate. In the event of such an accidental release, the specific actions to be taken will have to be determined at the time of release by the responsible personnel at the drilling location. Complete familiarity with this plan will help such personnel make the proper decisions rapidly. Familiarity with this plan is so required all operators, operator representatives, and drilling contractor supervisory personnel who could possibly be on duty at the drilling location at the time of an H_2S emergency.

IT IS THE RESPONSIBILITY OF THE OPERATOR TO ASSURE SUCH FAMILIARITY BEFORE DRILLING WITHIN 1000' OR THREE DAYS PRIOR TO PENETRATION OF THE SHALLOWEST FORMATION KNOWN OR SUSPECTED TO CONTAIN H₂S IN POTENTIALLY HAZARDOUS QUANTITIES, AND ALSO TO ASSURE THE TIMELY ACCOMPLISHMENT OF ALL THE OTHER ACTION SPECIFIED HERE IN.

As this contingency plan was prepared considerably in advance of the anticipated H₂S operation, the plan must be kept current if it is to effectively serve its purpose. The operators will be responsible for seeing that all copies are updated. Updating the plan is required when any changes to the personnel Call List (Section) including telephone numbers occur or when any pertinent data or plans for the well are altered. The plan must also be updated when any changes in the general public likely to be within the exposure area in the event of an

accidental release from the well bore of a potentially hazardous quantity of H₂S. Two copies of this plan shall be retained at the office of Colgate Energy. Two copies shall be retained at the drilling location.

Discussion of Plan:

Suspected Problem Zones:

Implementation: This plan, with all details, is to be fully implemented 1000' before drilling into the first sour zone.

Emergency Response Procedure: This section outlines the conditions and denotes steps to be taken in the event of an emergency.

Emergency Equipment and Procedure: This section outlines the safety and emergency equipment that will be required for the drilling of this well.

Training Provisions: This section outlines the training provisions that must be adhered to 1000' before drilling into the first sour zone.

Emergency call list: Included are the telephone numbers of all persons that would need to be contacted, should an H₂S emergency occur.

Briefing: This section deals with the briefing of all persons involved with the drilling of this well.

Public Safety: Public Safety Personnel will be made aware of the drilling of this well.

Check Lists: Status check lists and procedural check lists have been included to ensure adherence to the plan.

General Information: A general information section has been included to supply support information.

III. OPERATING PROCEDURES

A. Blowout Preventer Drills

Due to the special piping and Mani folding necessary to handle poisonous gas, particular care will be taken to ensure that all rig personnel are completely familiar with their jobs during the drills. The Drilling Consultant and Tool Pusher (Rig Superintendent) are thoroughly familiar with the additional controls and piping necessary.

B. H₂S Alarm Drills

The Company Man and/ or designee will conduct frequent H₂S alarm drills for each crew by injecting a trace of H₂S where the detector will give an alarm. Under these conditions all personnel on location will put on air equipment and remain masked until all clear is announced.

C. Surface Annular Preventer/ Diverter System Testing

After installation of the surface annular preventer, Hydraulic Control Valve and diverter system, both are to be function tested. They also should be function tested frequently while drilling surface hole.

D. Blowout Preventer

After installation of the Blowout Preventer Stack, the stack will be pressure tested. The Choke manifold is also to be pressure tested at this time. This procedure will be repeated as required by the NMOCD, the BLM, or if any of the stack is nipped down. Also, at this time, the Blind and Pipe Rams are checked for correct operation.

E. Well Control Practice Drills and Safety Meeting for Crew Members

Pit drills are for the purpose of acquainting each member of the drilling crew with his duties in the event of an emergency. Drills will be held with each crew as frequently as required to thoroughly familiarize each man with his duties. Drills are to be held at least weekly from that time forward.

1. BOP Drill while on Bottom Drilling:

- A. Signal will be three or more long blast given by driller on the horn.
- B. Procedure will be as follows:
 - 1. Tool Pusher: Supervises entire operation.
 - 2. Driller
 - a. Gives signal.
 - b. Picks up Kelly.
 - c. Stops pumps.
 - d. Observes flow.
 - e. Signal to close (pipe rams if necessary).
 - f. Check that Choke Manifold is closed.
 - g. Record drill pipe pressure, casing pressure and determine mud volume gain.
 - 3. Motorman
 - a. Go to closing unit and standby for signal to close BOP.
 - b. Close BOP in signal.
 - c. Check on BOP closing.
 - d. Go to floor to assist driller. (NOTE: During test drills the BOP

need not be completely closed at the discretion of the supervisor. Supervisor should make it very clear that it is a test drill only!)

- 4. Derrickman
 - a. Check pumps.
 - b. Go to floor for directions from the driller.
- 5. Floorman
 - a. Go to manifold.
 - b. Observe and record pressure.
 - c. Check manifold and BOP for leaks.
 - d. Check with driller for additional instructions.
- 2. BOP Drill While Making Trip:
 - A. During trip driller will fill hole every five (5) stands and check the pits to be sure hole is taking mud.
 - B. Drill Procedure is as follows:
 - 1. Driller
 - a. Order Safety valve installed.
 - b. Alert those not on the floor.
 - c. Go to stations as described in above drill.
- 3. Safety Meetings
 - A. Every person involved in the operating will be informed of the characteristics of H₂S, its danger and safety procedures to be used when it is encountered, and recommended first-aid procedure for regular rig personnel. This will be done through a series of talks made before spud.
 - B. The Safety Advisor or Drilling Supervisor will conduct these training sessions and will repeat them as deemed necessary by him or as instructed by Colgate Energy. Talks may include the following subjects:
 - 1. Dangers of Hydrogen Sulfide (H₂S).
 - 2. Use and limitations of air equipment.
 - 3. Use of resuscitator.
 - 4. Organize Buddy System.
 - 5. First Aid procedures.
 - 6. Use of H₂S detection devices.
 - 7. Designate responsible people.
 - 8. Explain rig layout and policy to visitors.
 - a. Designate smoking and safety or Muster area.
 - b. Emphasize the importance of wind directions.
 - Describe and explain operation of BOP stack, manifold, separator, and pit piping. Include maximum allowable pressure for casing procedure.
 - 10. Explain functions of Safety Supervisor.
 - 11. Explain organize H₂S Drills.
 - 12. Explain the overall emergency plan with emphasis given to the evacuation phase of the plans.

• Note: The above talks will be attended by every person involved in the operation. When drilling has reached a depth where H₂S is anticipated, temporary service personnel and visitors will be directed to the Drilling Consultant, who will designate the air equipment to be used by them in case of emergency, acquaint them with the dangers involved and be sure of their safety while they are in the area. He will point out the Briefing Areas, Windsocks, and Smoking Areas. He may refuse entrance to anyone, who in his opinion should not be admitted because of lack of safety equipment, special operations in progress or for other reasons involving personnel safety.

F. Outside Service Personnel

All service people such as cementing crews, logging crews, specialist, mechanics, and welders will furnish their own safety equipment. The Company Man/ or designee will be sure that the number of people on location does not exceed the number of masks on location, and they have been briefed regarding safety procedures. He will also be sure each of these people know about smoking and "Briefing Areas" and know what to do in case of an emergency alert or drill. Visitors will be restricted, except with special permission from the Drilling Consultant, when H₂S might be encountered. They will be briefed as to what to do in case of an alert or drill.

G. Onsite/ off shift workers

All workers that are staying on site must be identified as to where they are staying while off tour. If a drill/or emergency takes place related to an H₂S release, each crew must have a designated person(s) that will wake them up and ensure that they are cleared to the appropriate muster area immediately.

H. Simultaneous Operations (SIMOPS)

If work is going on adjacent to the location is the responsibility of the Drilling Consultant or designee to communicate any applicable risks that may affect personnel working on that adjacent location. In the case of an H2S drill or event, there should be a designated crew member that is responsible for contacting personnel on adjacent locations. This could include just communication on potential events or in case of an event, notification to evacuate location. Drilling Consultant or designee are the Point of Contact and oversee all activities at such point of an H₂S event occurrence.

I. <u>Area Residences/ Occupied Locations/ Public Roads</u>

Any occupied residences/ businesses that are within a reasonable perimeter of the location (attached map will identify a 3000' radius around location) should be identified as part of this contingency and a reasonable effort will be made to gain contact information for them. As part of the briefing of the contingency plan, the team reviewing should identify where these potential receptors are and plan on who will contact them in case of a release that may impact that area.

J. Drilling Fluids

<u>Drilling Fluid Monitoring</u> – On Any Hazardous H_2S gas well, the earlier the warning of danger the better chance to control operations. Mud Company will be in daily contact with Colgate Energy Consultant. The Mud Engineer will take samples of the mud, analyze these samples, and make necessary recommendations to prevent H_2S gas from the formation, the pH will be increased as necessary for corrosion control.

<u>pH Control</u> – For normal drilling, pH of 10.5 - 11.5. Would be enough for corrosion protection. If there is an influx of H₂S gas from the formation, the pH will be increased as necessary for corrosion control.

 $\underline{\text{H}_2\text{S} \text{ Scavengers}}$ – If necessary $\underline{\text{H}_2\text{S}}$ scavengers will be added to the drilling mud.

IV. OPERATING CONDITIONS

A. Posting Well Condition Flags

Post the green, yellow or red well condition flag, as appropriate, on the well condition sign at the location entrance, and take necessary precautions as indicated below:

- 1. **Green Flag**: Potential Danger- When Drilling in known H₂S zones or when H₂S has been detected in the drilling fluid atmosphere. Protective breathing equipment shall be inspected, and all personnel on duty shall be alerted to be ready to use this equipment.
- 2. **Yellow Flag**: Potential Danger- When the threshold limit value of H₂S (10 PPM) or of SO₂ (5 PPM) is reached. If the concentration of H₂S or SO₂ reaches 10 PPM, protective breathing equipment shall be worn by all working personnel, and non-working personnel shall go to the upwind Safe Briefing Area.
- 3. **Red Flag**: Extreme danger*- When the ambient concentration of H_2S or SO_2 is reasonably believed or determined to have exceeded the potentially hazardous level. All non-essential personnel shall leave the drilling location taking the route most likely to exposure to escaping gas.

B. Requiring Air Masks Conditions

- Whenever air masks are used, the person must be clean shaven as shown in the APC Guidelines
- 2. When breaking out any line where H₂S can reasonably be expected.
- 3. When sampling air in areas to determine if toxic concentrations of H₂S exist.
- 4. When working in areas where 10 PPM or more of H₂S has been detected.
- 5. At any time, there is doubt as to the H₂S level in the area to be entered.

C. Kick Procedure

- 1. It is very important that the driller be continuously alert, especially when approaching a gas formation.
- 2. Should gas come into the well bore, it is very important to be aware of a kick at the earliest time.
- 3. If a kick is identified, follow appropriate diverter or shut in procedures according to the situation that is presented utilizing appropriate kick procedures.

V. EMERGENCY PROCEDURES

- I. In the event of any evidence of H₂S level above 10ppm, take the following steps immediately:
 - a. Secure breathing apparatus.
 - b. Order non-essential personnel out of the danger zone.
 - c. Take steps to determine if the H₂S level can be corrected or suppressed, and if so, proceed with normal operations.
- II. If uncontrollable conditions occur, proceed with the following:
 - a. Take steps to protect and/or remove any public downwind of the rig, including partial evacuation or isolation. Notify necessary public safety personnel.
 - b. Remove all personnel to the Safe Briefing Area.
 - c. Notify public safety personnel for help with maintaining roadblocks, thus limiting traffic and implementing evacuation.
 - d. Determine and proceed with the best possible plan to regain control of the well. Maintain tight security and safety measures.

III. Responsibility

- a. The Company Approved Supervisor shall be responsible for the total implementation of the plan.
- b. The Company Approved Supervisor shall be in complete command during any emergency.
- c. The Company Approved Supervisor shall designate a backup Supervisor if he/she is not available.

IV. Actions to be taken

- a. Assign specific tasks to drilling location personnel
- b. Evacuate the general public from the exposure area
- c. Cordon off the exposure area to prevent entry by unauthorized persons
- d. Request assistance if and as needed and initiate emergency notifications
- e. Stop the dispersion of H₂S
- f. Complete emergency notifications as required
- g. Return the situation to normal

EMERGENCY PROCEDURE IMPLEMENTATION

I. Drilling or Tripping

a. All Personnel

- i. When alarm sounds, don escape unit and report to upwind Safe Briefing Area.
- ii. Check status of other personnel (buddy system).
- iii. Secure breathing apparatus.
- iv. Wait for orders from supervisor.

b. <u>Drilling Consultant</u>

- i. Report to the upwind Safe Briefing Area.
- ii. Don Breathing Apparatus and return to the point of release with the Tool Pusher or Driller (buddy system).
- iii. Determine the concentration of H₂S.
- iv. Assess the situation and take appropriate control measures.

c. Tool Pusher

- i. Report to the upwind Safe Briefing Area.
- ii. Don Breathing Apparatus and return to the point of release with the Drilling Consultant or the Driller (buddy system).
- iii. Determine the concentration of H₂S.
- iv. Assess the situation and take appropriate control measures.

d. Driller

- i. Check the status of other personnel (in a rescue attempt, always use the buddy system).
- ii. Assign the least essential person to notify the Drilling Consultant and Tool Pusher, in the event of their absence.
- iii. Assume the responsibility of the Drilling Consultant and the Tool Pusher until they arrive, in the event of their absence.

e. Derrick Man and Floor Hands

i. Remain in the upwind Safe Briefing Area until otherwise instructed by a supervisor.

f. <u>Mud Engineer</u>

- i. Report to the upwind Safe Briefing Area.
- ii. When instructed, begin check of mud for pH level and H₂S level.

g. Safety Personnel

- i. Don Breathing Apparatus.
- ii. Check status of personnel.
- iii. Wait for instructions from Drilling Consultant or Tool Pusher.

II. Taking a Kick

- a. All Personnel report to the upwind Safe Briefing Area.
- b. Follow standard BOP/ diverter procedures.

III. Open Hole Logging

- a. All unnecessary personnel should leave the rig floor.
- b. Drilling Consultant and Safety Personnel should monitor the conditions and make necessary safety equipment recommendations.

IV. Running Casing or Plugging

- a. Follow "Drilling or Tripping" procedures.
- **b.** Assure that all personnel have access to protective equipment.

VI. POST EMERGENCY ACTIONS

In the event this plan is activated, the following post emergency actions shall be taken in an effort to reduce the possibility of a reoccurrence of the type of problem that required its activation, and/or assure that any future activation of a similar plan will be as effective as possible.

- A. Review the factors that caused or permitted the emergency occur, and if the need is indicated, modify operating, maintance and/or surveillance procedures.
- B. If the need is indicated, retrain employees in blowout prevention, H₂S emergency procedures and etc.
- C. Clean up, recharge, restock, reapair, and/ or repalce H₂S emergency equipment as necessary, and return it to its proper place. (For whatever rental equipment is used, this will be the resposibility of Rental Company).
- D. See that future H₂S drilling contingency plans are modified accordingly, if the need is indicated.

VII. IGNITION PROCEDURES

Responsibilities:

The decision to ignite the well is the responsibility of the DRILLING CONSULTANT in concurrence with the STATE POLICE. In the event the Drilling Consultant is incapacitated, it becomes the responsibility of the RIG TOOL PUSHER. This decision should be made only as a last resort and in a situation where it is clear that:

- 1. Human life and property are endangered.
- 2. There is no hope of controlling the blowout under the prevailing conditions.

If time permits, notify the main office, but do not delay if human life is in danger. Initiate the first phase of the evacuation plan.

Instructions for Igniting the Well:

- 1. Two people are required for the actual igniting operation. Both men must wear self-contained breathing apparatus and must use a full body harness and attach a retrievable safety line to the D-Ring in the back. One man must monitor the atmosphere for explosive gases with the LEL monitor, while the Drilling Consultant is responsible for igniting the well.
- 2. The primary method to ignite is a 25mm flare gun with a range of approximately 500 feet.
- 3. Ignite from upwind and do not approach any closer than is warranted.
- 4. Select the ignition site best suited for protection and which offers an easy escape route.
- 5. Before igniting, check for the presence of combustible gases.
- 6. After igniting, continue emergency actions and procedures as before.
- 7. All unassigned personnel will limit their actions to those directed by the Drilling Consultant.

Note: After the well is ignited, burning Hydrogen Sulfide will convert to Sulfur Dioxide, which is also highly toxic. Also, both are heavier than air. Do not assume the area is safe even after the well is ignited.

VIII. TRAINING PROGRAM

When working in an area where Hydrogen Sulfide (H_2S) might be encountered, definite training requirements must be carried out. The Company Supervisor will ensure that all personnel, at the well site, have had adequate training in the following:

- **1.** Hazards and characteristics of Hydrogen Sulfide (H₂S).
- **2.** Physicals effects of Hydrogen Sulfide on the human body.
- **3.** Toxicity of Hydrogen Sulfide and Sulfur Dioxide.
- **4.** H₂S detection, Emergency alarm and sensor location.
- **5.** Don and Doff of SCBA and be clean shaven.
- **6.** Emergency rescue.
- **7.** Resuscitators.
- **8.** First aid and artificial resuscitation.
- **9.** The effects of Hydrogen Sulfide on metals.
- **10.** Location safety.

Service company personnel and visiting personnel must be notified if the zone contains H₂S, and each service company must provide adequate training and equipment for their employees before they arrive at the well site.

IX. EMERGENCY EQUIPMENT

Lease Entrance Sign:

Should be located at the lease entrance with the following information:

CAUTION – POTENTIAL POISON GAS
HYDROGEN SULFIDE
NO ADMITTANCE WITHOUT AUTHORIZATION

Respiratory Equipment:

- Fresh air breathing equipment should be placed at the safe briefing areas and should include the following:
- Two SCBA's at each briefing area.
- Enough airline units to operate safely, anytime the H₂S concentration reaches the IDLH level (100 ppm).

 Cascade system with enough breathing air hose and manifolds to reach the rig floor, the derrickman and the other operation areas.

Windsocks or Wind Streamers:

- A minimum of two 10" windsocks located at strategic locations so that they may be seen from any point on location.
- Wind streamers (if preferred) should always be placed at various locations on the well site to ensure wind consciousness. (Corners of location).

Hydrogen Sulfide Detector and Alarms:

- 1 Four channel H₂S monitor with alarms.
- Three (3) sensors located as follows: #1 Rig Floor, #2 Shale Shaker, #3 Cellar.
- Gastec or Draeger pump with tubes.
- Sensor test gas.

Well Condition Sign and Flags:

The Well Condition Sign w/flags should be placed a minimum of 150' before you enter the location. It should have three (3) color coded flags (green, yellow and red) that will be used to denote the following location conditions:

GREEN – Normal Operating Conditions YELLOW – Potential Danger RED – Danger, H₂S Gas Present

Auxiliary Rescue Equipment:

- Stretcher
- 2 100' Rescue lines.
- First Aid kit properly stocked.

Mud Inspection Equipment:

Garret Gas Train or Hach Tester for inspection of Hydrogen Sulfide in the drilling mud system.

Fire Extinguishers:

Adequate fire extinguishers shall be located at strategic locations.

Blowout Preventer:

- The well shall have hydraulic BOP equipment for the anticipated bottom hole pressure (BHP).
- The BOP should be tested upon installation.
- BOP, Choke Line and Kill Line will be tested as specified by Operator.

Confined Space Monitor:

There should be a portable multi-gas monitor with at least 3 sensors (O_2 , LEL H_2S), preferably 4 (O_2 , LEL, H_2S , CO). This instrument should be used to test the atmosphere of any confined space before entering. It should also be used for atmospheric testing for LEL gas before beginning any type of Hot Work. Proper calibration documentation will need to be provided.

Communication Equipment:

- Proper communication equipment such as cell phones or 2-way radios should be available at the rig.
- Radio communication shall be available for communication between the company man's trailer, rig floor and the tool pusher's trailer.
- Communication equipment shall be available on the vehicles.

Special Control Equipment:

- Hydraulic BOP equipment with remote control on the ground.
- Rotating head at the surface casing point.

Evacuation Plan:

- Evacuation routes should be established prior to spudding the well.
- Should be discussed with all rig personnel.

Designated Areas:

Parking and Visitor area:

- All vehicles are to be parked at a pre-determined safe distance from the wellhead.
- Designated smoking area.

Safe Briefing Areas:

- Two Safe Briefing Areas shall be designated on either side of the location at the maximum allowable distance from the well bore so they offset prevailing winds, or they are at a 180-degree angle if wind directions tend to shift in the area.
- Personal protective equipment should be stored at both briefing areas and if a moveable cascade trailer
 is used, it should be kept upwind of existing winds. When wind is from the prevailing direction, both
 briefing areas should be accessible.

Note:

- Additional equipment will be available at the H₂S Provider Safety office.
- Additional personal H₂S monitors are available for all employees on location.
- Automatic Flare Igniters are recommended for installation on the rig.

X. CHECKLISTS

Rig-up & Equipment Status Check List

Note: Initial & Date each item as they are implemented. Multiple wells require additional Columns to be Dated/ Initialed

	Date & Initial	Date & Initial 2 nd Well	Date & Initial 3 rd Well	Date & Initial 4 th Well
Sign at location entrance.				
Two (2) windsocks (in required locations).				
Wind Streamers (if required).				
SCBA's on location (Minimum of 2 @ each Muster Area)				
Air packs (working packs and escape packs), inspected and ready for use.				
Spare bottles for each air pack (if required).				
Cascade system and hose line hook up.				
Choke manifold hooked-up and tested. (before drilling out surface casing.)				
Remote Hydraulic BOP control tested (before drilling out surface casing).				
BOP tested (before drilling out surface casing).				
Safe Briefing Areas set-up				
Well Condition sign and flags on location and ready.				
Hydrogen Sulfide detection/ alarm system hooked-up & tested.				
Stretcher on location				
2 – 100' Lifelines on location.				
1 – 20# Fire Extinguisher in safety trailer.				
Confined Space monitor on location and tested.				
All rig crews and supervisor trained (as required).				
All rig crews and supervision medically qualified and fit tested on proper respirators				
Access restricted for unauthorized personnel.				
Pre-spud meeting held reviewing Contingencies				
Drills on H ₂ S and well control procedures.				
All outside service contractors advised of potential H_2S on the well.				
25mm Flare Gun on location w/flares.				

Procedural Check List

Perform the following on each tour:

- 1. Check fire extinguishers to see that they have the proper charge.
- 2. Check breathing equipment to ensure that they have not been tampered with.
- 3. Check pressure on the supply air bottles to make sure they are capable of recharging.
- 4. Make sure all the Hydrogen Sulfide detection systems are operative.
- 5. Ensure that all BOP/ Surface Annular/ Diverter systems are functioning and operational.

Perform the following each week:

- Check each piece of breathing equipment to make sure that they are fully charged and operational. This
 requires that the air cylinder be opened, and the mask assembly be put on and tested to make sure that
 the regulators and masks are properly working. Negative and Positive pressure should be conducted on
 all masks.
- 2. BOP skills.
- 3. Check supply pressure on BOP accumulator stand-by source.
- 4. Check all breathing air mask assemblies to see that straps are loosened and turned back, ready for use.
- 5. Check pressure on cascade air cylinders to make sure they are fully charged and ready to use for refill purposes if necessary.
- 6. Check all cascade system regulators to make sure they work properly.
- 7. Perform breathing drills with on-site personnel.
- 8. Check the following supplies for availability (may be with H₂S Techs On-call):
 - Stretcher
 - Safety Belts and Ropes
 - Spare air Bottles
 - Spare Oxygen Bottles (if resuscitator required)
 - Gas Detector Pump and Tubes
 - Emergency telephone lists
 - Test the Confined Space Monitor to verify the batteries are good.

XI. BRIEFING PROCEDURES

The following scheduled briefings will be held to ensure the effective drilling and operation of this project:

Pre-Spud Meeting

Date: Prior to spudding the well.

Attendance: Drilling Supervisor

Drilling Engineer Drilling Consultant Rig Tool Pushers Rig Drillers Mud Engineer

All Safety Personnel

Key Service Company Personnel

Purpose: Review and discuss the well program, step-by-step, to insure complete understanding of

assignments and responsibilities.

XII. EVACUATION PLAN

General Plan

The direct lines of action prepared by Colgate Energy to protect the public from hazardous gas situations are as follows:

- 1. When the company approved supervisor (Drilling Consultant, Tool Pusher or Driller) determine that Hydrogen Sulfide gas cannot be limited to the well location, and the public will be involved, he will activate the evacuation plan. Escape routes are noted on the area map.
- 2. Company safety personnel or designee will notify the appropriate local government agency that a hazardous condition exists, and evacuation needs to be implemented.
- 3. Company approved safety personnel that have been trained in the use of the proper emergency equipment will be utilized.
- 4. Law enforcement personnel (State Police, Local Police Department, Fire Department, and the Sheriff's Department) will be called to aid in setting up and maintaining roadblocks. Also, they will aid in evacuation of the public if necessary.

NOTE: Law enforcement personnel will not be asked to come into a contaminated area. Their assistance will be limited to uncontaminated areas. Constant radio contact will be maintained with them.

- 5. After the discharge of gas has been controlled, "Company" personnel will determine when the area is safe for re-entry.
- 6. If a major release is secured, all exposed housing, vehicles, rig buildings, and low-lying areas and other structures downwind must be tested and clear with SCBAs donned to ensure that all residual H₂S is cleared. Fans, or opening of doors is recommended to ensure that areas are cleared out as part of this process.

XIII. APPENDICES AND GENERAL INFORMATION

Radius of Exposure Affected Notification List

(within a 65' radius of exposure @100ppm)

The geologic zones that will be encountered during drilling are known to contain hazardous quantities of H₂S. The accompanying map illustrates the affected areas of the community. The residents within this radius will be notified via a hand delivered written notice describing the activities, potential hazards, conditions of evacuation, evacuation drill siren alarms and other precautionary measures.

Evacuee Description: Residents:

Notification Process:

A continuous siren audible to all residence will be activated, signaling evacuation of previously notified and informed residents.

Evacuation Plan:

All evacuees will migrate lateral to the wind direction.

The Operating Company will identify all home bound or highly susceptible individuals and make special evacuation preparations, interfacing with the local and emergency medical service as necessary.

Toxic Effects of H₂S Poisoning

Hydrogen Sulfide is extremely toxic. The acceptable ceiling concentration for eight-hour exposure is 10 PPM, which is .001% by volume. Hydrogen Sulfide is heavier than air (specific gravity -1.192) and is colorless and transparent. Hydrogen Sulfide is almost as toxic as Hydrogen Cyanide and is 5-6 times more toxic than Carbon Monoxide. Occupational exposure limits for Hydrogen Sulfide and other gases are compared below in Table 1. Toxicity table for H_2S and physical effects are shown in Table 2.

Table 1
Permissible Exposure Limits of Various Gases

Common Name	<u>Symbol</u>	Sp. Gravity	<u>TLV</u>	<u>STEL</u>	<u>IDLH</u>
Hydrogen Cyanide	HCN	.94	4.7 ppm	4.7 ppm	50 ppm
Hydrogen Sulfide	H ₂ S	1.192	10 ppm	15 ppm	100 ppm
Sulfide Dioxide	SO ₂	2.21	2 ppm	5 ppm	100 ppm
Chlorine	CL	2.45	.5 ppm	1 ppm	10 ppm
Carbon Monoxide	СО	.97	25 ppm	200 ppm	1200 ppm
Carbon Dioxide	CO ₂	1.52	5000 ppm	30,000 ppm	40,000 ppm
Methane	CH ₄	.55	5% LEL	15% UEL	

Definitions

- A. TLV Threshold Limit Value is the concentration employees may be exposed based on a TWA (time weighted average) for eight (8) hours in one day for 40 hours in one (1) week. This is set by ACGIH (American Conference of Governmental Hygienists) and regulated by OSHA.
- B. STEL Short Term Exposure Limit is the 15-minute average concentration an employee may be exposed to providing that the highest exposure never exceeds the OEL (Occupational Exposure Limit). The OEL for H₂S is 20 PPM.
- C. IDLH Immediately Dangerous to Life and Health is the concentration that has been determined by the ACGIH to cause serious health problems or death if exposed to this level. The IDLH for H₂S is 100 PPM.
- D. TWA Time Weighted Average is the average concentration of any chemical or gas for an eight (8) hour period. This is the concentration that any employee may be exposed based on a TWA.

Toxicity Table of H₂S

Percent %	<u>PPM</u>	Physical Effects
.0001	1	Can smell less than 1 ppm.
.001	10	TLV for 8 hours of exposure.
.0015	15	STEL for 15 minutes of exposure.
.01	100	Immediately Dangerous to Life & Health.
		Kills sense of smell in 3 to 5 minutes.
.02	200	Kills sense of smell quickly, may burn eyes and throat.
.05	500	Dizziness, cessation of breathing begins in a few minutes.
.07	700	Unconscious quickly, death will result if not rescued promptly.
.10	1000	Death will result unless rescued promptly. Artificial resuscitation may be necessary.

PHYSICAL PROPERTIES OF H₂S

The properties of all gases are usually described in the context of seven major categories:

COLOR

ODOR

VAPOR DENSITY

EXPLOSIVE LIMITS

FLAMMABILITY

SOLUBILITY (IN WATER)

BOILING POINT

Hydrogen Sulfide is no exception. Information from these categories should be considered in order to provide a complete picture of the properties of the gas.

COLOR – TRANSPARENT

Hydrogen Sulfide is colorless, so it is invisible. This fact simply means that you can't rely on your eyes to detect its presence. In fact, that makes this gas extremely dangerous to be around.

ODOR – ROTTEN EGGS

Hydrogen Sulfide has a distinctive offensive smell, like "rotten eggs". For this reason, it earned its common name "sour gas". However, H₂S, even in low concentrations, is so toxic that it attacks and quickly impairs a victim's sense of smell, so it could be fatal to rely on your nose as a detection device.

VAPOR DENSITY - SPECIFIC GRAVITY OF 1.192

Hydrogen Sulfide is heavier than air, so it tends to settle in low-lying areas like pits, cellars or tanks. If you find yourself in a location where H₂S is known to exist, protect yourself. Whenever possible, work in an area upwind and keep to higher ground.

EXPLOSIVE LIMITS – 4.0% TO 44%

Mixed with the right proportion of air or oxygen, H₂S will ignite and burn or explode, producing another alarming element of danger besides poisoning.

FLAMMABILITY

Hydrogen Sulfide will burn readily with a distinctive clear blue flame, producing Sulfur Dioxide (SO₂), another hazardous gas that irritates the eyes and lungs.

SOLUBILITY – 4 TO 1 RATIO WITH WATER

Hydrogen Sulfide can be dissolved in liquids, which means that it can be present in any container or vessel used to carry or hold well fluids including oil, water, emulsion and sludge. The solubility of H_2S is dependent on temperature and pressure, but if conditions are right, simply agitating a fluid containing H_2S may release the gas into the air.

BOILING POINT – (-77° Fahrenheit)

Liquefied Hydrogen Sulfide boils at a very low temperature, so it is usually found as a gas.

RESPIRATOR USE

The Occupational Safety and Health Administration (OSHA) regulate the use of respiratory protection to protect the health of employees. OSHA's requirements are written in the Code of Federal Regulations, Title 29, Part 1910, Section 134, Respiratory Protection. This regulation requires that all employees who might be required to wear respirators, shall complete an OSHA mandated medical evaluation questionnaire. The employee then should be fit tested prior to wearing any respirator while being exposed to hazardous gases.

Written procedures shall be prepared covering safe use of respirators in dangerous atmospheric situations, which might be encountered in normal operations or in emergencies. Personnel shall be familiar with these procedures and the available respirators.

Respirators shall be inspected prior to and after each use to make sure that the respirator has been properly cleaned, disinfected and that the respirator works properly. The unit should be fully charged prior to being used.

Anyone who may use respirators shall be properly trained in how to properly seal the face piece. They shall wear respirators in normal air and then in a test atmosphere. (Note: Such items as facial hair (beard or sideburns) and eyeglass temple pieces will not allow a proper seal.) Anyone who may be expected to wear respirators should have these items removed before entering a toxic atmosphere. A special mask must be obtained for anyone who must wear eyeglasses. Contact lenses should not be allowed.

Respirators shall be worn during the following conditions:

- A. Any employee who works near the top or on the top of any tank unless tests reveal less than 20 ppm of H_2S .
- B. When breaking out any line where H₂S can reasonably be expected.
- C. When sampling air in areas where H₂S may be present.
- D. When working in areas where the concentration of H₂S exceeds the Threshold Limit Value for H₂S (10 ppm).
- E. At any time where there is a doubt as to the H_2S level in the area to be entered.

EMERGENCY RESCUE PROCEDURES


DO NOT PANIC!!!

Remain Calm - Think

- 1. Before attempting any rescue, you must first get out of the hazardous area yourself. Go to a safe briefing area.
- 2. Sound alarm and activate the 911 system.
- 3. Put on breathing apparatus. At least two persons should do this, when available use the buddy system.
- 4. Rescue the victim and return them to a safe briefing area.
- 5. Perform an initial assessment and begin proper First Aid/CPR procedures.
- 6. Keep victim lying down with a blanket or coat, etc.., under the shoulders to keep airway open. Conserve body heat and do not leave unattended.
- 7. If the eyes are affected by H₂S, wash them thoroughly with potable water. For slight irritation, cold compresses are helpful.
- 8. In case a person has only minor exposure and does not lose consciousness totally, it's best if he doesn't return to work until the following day.
- 9. Any personnel overcome by H₂S should always be examined by medical personnel. They should always be transported to a hospital or doctor.

Facial Hair - Clean Shaven Examples

Purpose: To define clean shaven expectations in the field for: 1) Respirator Use, if applicable and 2) First Aid Administration, if situation occurs related to H_2S exposure, having no facial hair can greatly benefit response time and treatment ability.

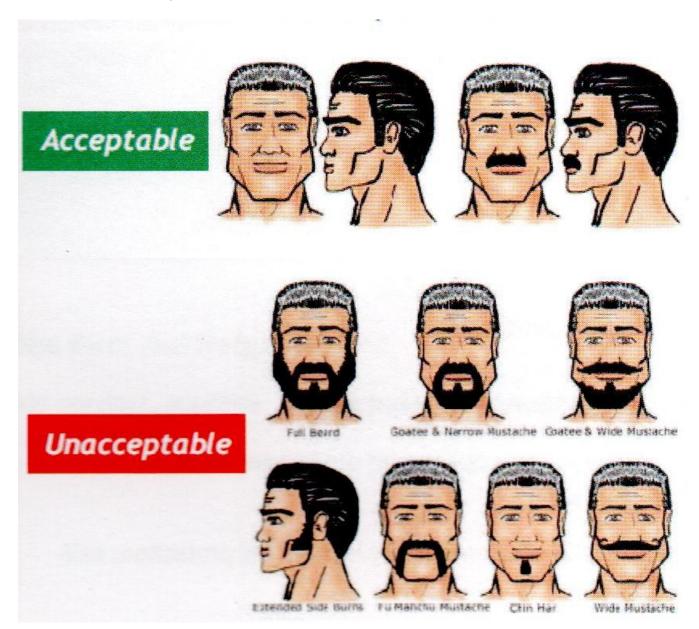

<u>District I</u> 1625 N. French Dr., Hobbs, NM 88240 Phone:(575) 393-6161 Fax:(575) 393-0720

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III
1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. **Santa Fe, NM 87505**

COMMENTS

Action 15621

COMMENTS

Operator:	OGRID:	Action Number:	Action Type:
COLGATE OPERATING, LLC 300 North Marienfeld Street	371449	15621	FORM 3160-3
Suite 1000 Midland, TX79701			

Created By	Comment	Comment Date
kpickford	KP GEO Review 1/27/2021	01/27/2021

<u>District I</u> 1625 N. French Dr., Hobbs, NM 88240 Phone:(575) 393-6161 Fax:(575) 393-0720

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720 District III
1000 Rio Brazos Rd., Aztec, NM 87410

Phone:(505) 334-6178 Fax:(505) 334-6170 1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division 1220 S. St Francis Dr. **Santa Fe, NM 87505**

CONDITIONS

Action 15621

CONDITIONS OF APPROVAL

Operator:			OGRID:	Action Number:	Action Type:
COLGATE	OPERATING, LLC	300 North Marienfeld Street	371449	15621	FORM 3160-3
Suite 1000	Midland, TX79701				

OCD Reviewer	Condition
kpickford	Notify OCD 24 hours prior to casing & cement
kpickford	Will require a File As Drilled C-102 and a Directional Survey with the C-104
kpickford	Once the well is spud, to prevent ground water contamination through whole or partial conduits from the surface, the operator shall drill without interruption through the fresh water zone or zones and shall immediately set in cement the water protection string
kpickford	Oil base muds are not to be used until fresh water zones are cased and cemented providing isolation from the oil or diesel. This includes synthetic oils. Oil based mud, drilling fluids and solids must be contained in a steel closed loop system