

Form 3160-3
(June 2015)FORM APPROVED
OMB No. 1004-0137
Expires: January 31, 2018

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
APPLICATION FOR PERMIT TO DRILL OR REENTER

1a. Type of work: <input type="checkbox"/> DRILL <input type="checkbox"/> REENTER 1b. Type of Well: <input type="checkbox"/> Oil Well <input type="checkbox"/> Gas Well <input type="checkbox"/> Other 1c. Type of Completion: <input type="checkbox"/> Hydraulic Fracturing <input type="checkbox"/> Single Zone <input type="checkbox"/> Multiple Zone		5. Lease Serial No. 6. If Indian, Allottee or Tribe Name 7. If Unit or CA Agreement, Name and No. 8. Lease Name and Well No. <div style="text-align: center; font-weight: bold;">[320524]</div>
2. Name of Operator <div style="text-align: center; font-weight: bold;">[260297]</div>		9. API Well No. <div style="text-align: center; font-weight: bold;">30-025-49917</div>
3a. Address	3b. Phone No. (include area code)	10. Field and Pool, or Exploratory <div style="text-align: center; font-weight: bold;">[51020]</div> XXXXXXXXXXXXXXXXXXXXXXXX
4. Location of Well (Report location clearly and in accordance with any State requirements. *) At surface At proposed prod. zone		11. Sec., T. R. M. or Blk. and Survey or Area
14. Distance in miles and direction from nearest town or post office*		12. County or Parish 13. State
15. Distance from proposed* location to nearest property or lease line, ft. (Also to nearest drig. unit line, if any)	16. No of acres in lease	17. Spacing Unit dedicated to this well
18. Distance from proposed location* to nearest well, drilling, completed, applied for, on this lease, ft.	19. Proposed Depth	20. BLM/BIA Bond No. in file
21. Elevations (Show whether DF, KDB, RT, GL, etc.)	22. Approximate date work will start*	23. Estimated duration
24. Attachments		

The following, completed in accordance with the requirements of Onshore Oil and Gas Order No. 1, and the Hydraulic Fracturing rule per 43 CFR 3162.3-3 (as applicable)

- | | |
|---|---|
| 1. Well plat certified by a registered surveyor.
2. A Drilling Plan.
3. A Surface Use Plan (if the location is on National Forest System Lands, the SUPO must be filed with the appropriate Forest Service Office). | 4. Bond to cover the operations unless covered by an existing bond on file (see Item 20 above).
5. Operator certification.
6. Such other site specific information and/or plans as may be requested by the BLM. |
|---|---|

25. Signature	Name (Printed/Typed)	Date
Title		
Approved by (Signature)	Name (Printed/Typed)	Date
Title		
Office		

Application approval does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.
 Conditions of approval, if any, are attached.

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

NGMP Rec 03/17/2022

SL

(Continued on page 2)



Approval Date: 05/26/2021

KZ
03/24/2022

*(Instructions on page 2)

DISTRICT I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

DISTRICT II
811 S. First St., Artesia, NM 88210
Phone: (575) 748-1283 Fax: (575) 748-9720

DISTRICT III
1000 Rio Brazos Road, Aztec, NM 87410
Phone: (505) 334-6178 Fax: (505) 334-6170

DISTRICT IV
1220 S. St. Francis Dr., Santa Fe, NM 87505
Phone: (505) 476-3460 Fax: (505) 476-3462

State of New Mexico
Energy, Minerals & Natural Resources Department
OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, New Mexico 87505

Form C-102
Revised August 1, 2011
Submit one copy to appropriate
District Office

☐ AMENDED REPORT

WELL LOCATION AND ACREAGE DEDICATION PLAT

API Number 30-025-49917	Pool Code 51020	Pool Name RED HILLS; LOWER BONE SPRING
Property Code 320524	Property Name ROJO 7811 34-27 FEDERAL COM	Well Number 46H
OGRID No. 260297	Operator Name BTA OIL PRODUCERS, LLC	Elevation 3319'

Surface Location

UL or lot No.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
L	34	25-S	33-E		1540	SOUTH	690	WEST	LEA

Bottom Hole Location If Different From Surface

UL or lot No.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
D	27	25-S	33-E		50	NORTH	660	WEST	LEA

Dedicated Acres	Joint or Infill	Consolidation Code	Order No.
280			

NO ALLOWABLE WILL BE ASSIGNED TO THIS COMPLETION UNTIL ALL INTERESTS HAVE BEEN CONSOLIDATED OR A NON-STANDARD UNIT HAS BEEN APPROVED BY THE DIVISION

SCALE: 1"=2000'

BOTTOM HOLE LOCATION
NAD 83 NME
Y= 404107.1 N
X= 778719.3 E
LAT.=32.108649° N
LONG.=103.566661° W

BOTTOM HOLE LOCATION
NAD 27 NME
Y= 404049.4 N
X= 737533.1 E
LAT.=32.108524° N
LONG.=103.566190° W

LAST TAKE POINT
NAD 83 NME
Y= 404057.1 N
X= 778719.8 E
LAT.=32.108512° N
LONG.=103.566660° W

LAST TAKE POINT
NAD 27 NME
Y= 403999.4 N
X= 737533.5 E
LAT.=32.108387° N
LONG.=103.566189° W

CORNER COORDINATES TABLE
NAD 27 NME

A - Y= 393539.6 N, X= 736970.3 E
B - Y= 393546.3 N, X= 738291.6 E
C - Y= 398822.6 N, X= 738243.9 E
D - Y= 398814.0 N, X= 736921.4 E
E - Y= 404095.0 N, X= 736872.7 E
F - Y= 404103.8 N, X= 738199.0 E

CORNER COORDINATES TABLE
NAD 83 NME

A - Y= 393597.0 N, X= 778157.1 E
B - Y= 393603.7 N, X= 779478.4 E
C - Y= 398880.1 N, X= 779430.4 E
D - Y= 398871.6 N, X= 778107.9 E
E - Y= 404152.8 N, X= 778059.0 E
F - Y= 404161.5 N, X= 779385.3 E

FIRST TAKE POINT
NAD 83 NME
Y= 395020.1 N
X= 778803.3 E
LAT.=32.083670° N
LONG.=103.566598° W

FIRST TAKE POINT
NAD 27 NME
Y= 394962.6 N
X= 737616.6 E
LAT.=32.083545° N
LONG.=103.566129° W

GEODEIC COORDINATES
NAD 83 NME
SURFACE LOCATION
Y= 395140.2 N
X= 778832.1 E
LAT.=32.083999° N
LONG.=103.566502° W

GEODEIC COORDINATES
NAD 27 NME
SURFACE LOCATION
Y= 395082.7 N
X= 737645.4 E
LAT.=32.083874° N
LONG.=103.566033° W

OPERATOR CERTIFICATION

I hereby certify that the information herein is true and complete to the best of my knowledge and belief, and that this organization either owns a working interest or unleased mineral interest in the land including the proposed bottom hole location or has a right to drill this well at this location pursuant to a contract with an owner of such mineral or working interest, or to a voluntary pooling agreement or a compulsory pooling order heretofore entered by the division.

Sammy Hajar
Signature

3/10/2020

Date

Printed Name

SHAJAR@BTAOIL.COM


E-mail Address

SURVEYOR CERTIFICATION

I hereby certify that the well location shown on this plat was plotted from field notes of actual surveys made by me or under my supervision, and that the same is true and correct to the best of my belief.

Date of Survey
Signature & Seal of Professional Surveyor

Gary G. Eidson 01/13/2020
Certificate
Gary G. Eidson 12641
Ronald J. Eidson 3239
LSL JWSC W.O.: 19.11.1255

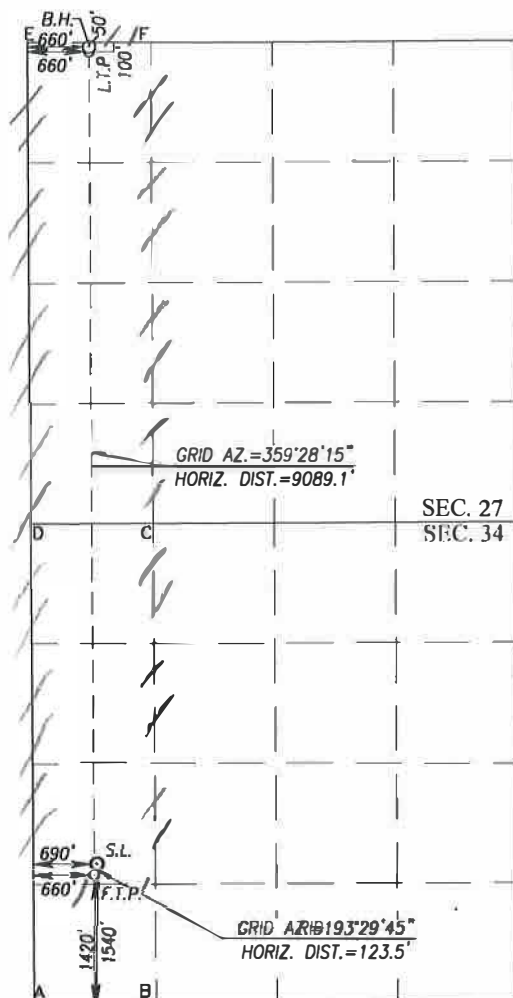

PECOS DISTRICT DRILLING CONDITIONS OF APPROVAL

OPERATOR'S NAME:	BTA OIL PRODUCERS LLC
LEASE NO.:	NMNM0005792
WELL NAME & NO.:	ROJO 7811 34-27 FED COM 46H
SURFACE HOLE FOOTAGE:	1540'S & 690'/W
BOTTOM HOLE FOOTAGE:	50'/N & 660'/W
LOCATION:	Section 34, T.25 S., R.33 E., NMP
COUNTY:	Lea County, New Mexico

COA

H2S	<input type="radio"/> Yes	<input checked="" type="radio"/> No	
Potash	<input checked="" type="radio"/> None	<input type="radio"/> Secretary	<input type="radio"/> R-111-P
Cave/Karst Potential	<input checked="" type="radio"/> Low	<input type="radio"/> Medium	<input type="radio"/> High
Cave/Karst Potential	<input type="radio"/> Critical		
Variance	<input type="radio"/> None	<input checked="" type="radio"/> Flex Hose	<input type="radio"/> Other
Wellhead	<input type="radio"/> Conventional	<input type="radio"/> Multibowl	<input checked="" type="radio"/> Both
Other	<input type="checkbox"/> 4 String Area	<input type="checkbox"/> Capitan Reef	<input type="checkbox"/> WIPP
Other	<input checked="" type="checkbox"/> Fluid Filled	<input type="checkbox"/> Cement Squeeze	<input type="checkbox"/> Pilot Hole
Special Requirements	<input type="checkbox"/> Water Disposal	<input checked="" type="checkbox"/> COM	<input type="checkbox"/> Unit

A. HYDROGEN SULFIDE

Hydrogen Sulfide (H2S) monitors shall be installed prior to drilling out the surface shoe. If H2S is detected in concentrations greater than 100 ppm, the Hydrogen Sulfide area shall meet Onshore Order 6 requirements, which includes equipment and personnel/public protection items. If Hydrogen Sulfide is encountered, provide measured values and formations to the BLM.

B. CASING

Casing Design:

1. The **13-3/8** inch surface casing shall be set at approximately **1,065** feet (a minimum of **25 feet (Lea County)**) into the Rustler Anhydrite and above the salt) and cemented to the surface.
 - a. If cement does not circulate to the surface, the appropriate BLM office shall be notified and a temperature survey utilizing an electronic type temperature survey with surface log readout will be used or a cement bond log shall be run to verify the top of the cement. Temperature survey will be run a minimum of six hours after pumping cement and ideally between 8-10 hours after

- completing the cement job.
- b. Wait on cement (WOC) time for a primary cement job will be a minimum of **8 hours** or 500 pounds compressive strength, whichever is greater. (This is to include the lead cement)
 - c. Wait on cement (WOC) time for a remedial job will be a minimum of 4 hours after bringing cement to surface or 500 pounds compressive strength, whichever is greater.
 - d. If cement falls back, remedial cementing will be done prior to drilling out that string.

Intermediate casing must be kept fluid filled to meet BLM minimum collapse requirement.

2. The minimum required fill of cement behind the **9-5/8** inch intermediate casing, which shall be set at approximately **4,963** feet is:
 - Cement to surface. If cement does not circulate see B.1.a, c-d above.
3. The minimum required fill of cement behind the **5-1/2** inch production casing is:
 - Cement should tie-back at least **200 feet** into previous casing string. Operator shall provide method of verification.

C. PRESSURE CONTROL

1. Variance approved to use flex line from BOP to choke manifold. Manufacturer's specification to be readily available. No external damage to flex line. Flex line to be installed as straight as possible (no hard bends).'
- 2.

Option 1:

- a. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall be **2000 (2M)** psi.

- b. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the intermediate casing shoe shall be **5000 (5M)** psi.

Option 2:

1. Operator has proposed a multi-bowl wellhead assembly. This assembly will only be tested when installed on the surface casing. Minimum working pressure of the blowout preventer (BOP) and related equipment (BOPE) required for drilling below the surface casing shoe shall be **5000 (5M)** psi.
 - a. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.
 - b. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
 - c. Manufacturer representative shall install the test plug for the initial BOP test.
 - d. If the cement does not circulate and one inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
 - e. Whenever any seal subject to test pressure is broken, all the tests in OOGO2.III.A.2.i must be followed.

D. SPECIAL REQUIREMENT (S)

Communitization Agreement

- The operator will submit a Communitization Agreement to the Carlsbad Field Office, 620 E Greene St. Carlsbad, New Mexico 88220, at least 90 days before the anticipated date of first production from a well subject to a spacing order issued by the New Mexico Oil Conservation Division. The Communitization Agreement will include the signatures of all working interest owners in all Federal and Indian leases subject to the Communitization Agreement (i.e., operating rights owners and lessees of record), or certification that the operator has obtained the written signatures of all such owners and will make those signatures available to the BLM immediately upon request.
- If the operator does not comply with this condition of approval, the BLM may take enforcement actions that include, but are not limited to, those specified in 43 CFR 3163.1.
- In addition, the well sign shall include the surface and bottom hole lease numbers. When the Communitization Agreement number is known, it shall also be on the sign.

BOP Break Testing Variance (Note: For 5M BOP or less)

- BOPE Break Testing is ONLY permitted for 5M BOPE or less.
- BOPE Break Testing is NOT permitted to drilling the production hole section.
- While in transfer between wells, the BOPE shall be secured by the hydraulic carrier or cradle.
- Any well control event while drilling require notification to the BLM Petroleum Engineer prior to the commencement of any BOPE Break Testing operations.
- A full BOPE test is required prior to drilling the first deep intermediate hole section. If any subsequent hole interval is deeper than the first, a full BOPE test will be required.
- The BLM is to be contacted (575-361-2822 Eddy County) (575-393-3612 Lea County) 4 hours prior to BOPE tests.
- As a minimum, a full BOPE test shall be performed at 21-day intervals.
- In the event any repairs or replacement of the BOPE is required, the BOPE shall test as per Onshore Oil and Gas Order No. 2.

GENERAL REQUIREMENTS

The BLM is to be notified in advance for a representative to witness:

- a. Spudding well (minimum of 24 hours)
- b. Setting and/or Cementing of all casing strings (minimum of 4 hours)
- c. BOPE tests (minimum of 4 hours)

☒ Eddy County

Call the Carlsbad Field Office, 620 East Greene St., Carlsbad, NM 88220,
(575) 361-2822

☒ Lea County

Call the Hobbs Field Station, 414 West Taylor, Hobbs NM 88240,
(575) 393-3612

1. Unless the production casing has been run and cemented or the well has been properly plugged, the drilling rig shall not be removed from over the hole without prior approval.
 - a. In the event the operator has proposed to drill multiple wells utilizing a skid/walking rig. Operator shall secure the wellbore on the current well, after installing and testing the wellhead, by installing a blind flange of like pressure rating to the wellhead and a pressure gauge that can be monitored while drilling is performed on the other well(s).

- b. When the operator proposes to set surface casing with Spudder Rig
 - Notify the BLM when moving in and removing the Spudder Rig.
 - Notify the BLM when moving in the 2nd Rig. Rig to be moved in within 90 days of notification that Spudder Rig has left the location.
 - BOP/BOPE test to be conducted per Onshore Oil and Gas Order No. 2 as soon as 2nd Rig is rigged up on well.
2. Floor controls are required for 3M or Greater systems. These controls will be on the rig floor, unobstructed, readily accessible to the driller and will be operational at all times during drilling and/or completion activities. Rig floor is defined as the area immediately around the rotary table; the area immediately above the substructure on which the draw works are located, this does not include the dog house or stairway area.
3. The record of the drilling rate along with the GR/N well log run from TD to surface (horizontal well – vertical portion of hole) shall be submitted to the BLM office as well as all other logs run on the borehole 30 days from completion. If available, a digital copy of the logs is to be submitted in addition to the paper copies. The Rustler top and top and bottom of Salt are to be recorded on the Completion Report.

A. CASING

1. Changes to the approved APD casing program need prior approval if the items substituted are of lesser grade or different casing size or are Non-API. The Operator can exchange the components of the proposal with that of superior strength (i.e. changing from J-55 to N-80, or from 36# to 40#). Changes to the approved cement program need prior approval if the altered cement plan has less volume or strength or if the changes are substantial (i.e. Multistage tool, ECP, etc.). The initial wellhead installed on the well will remain on the well with spools used as needed.
2. Wait on cement (WOC) for Potash Areas: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi for all cement blends, 2) until cement has been in place at least 24 hours. WOC time will be recorded in the driller's log. The casing integrity test can be done (prior to the cement setting up) immediately after bumping the plug.
3. Wait on cement (WOC) for Water Basin: After cementing but before commencing any tests, the casing string shall stand cemented under pressure until both of the following conditions have been met: 1) cement reaches a minimum compressive strength of 500 psi at the shoe, 2) until cement has been in place at least 8 hours. WOC time will be recorded in the driller's log. See individual casing strings for details regarding lead cement slurry requirements. The casing integrity test can be done (prior to the cement setting up) immediately after bumping the plug.

4. Provide compressive strengths including hours to reach required 500 pounds compressive strength prior to cementing each casing string. Have well specific cement details onsite prior to pumping the cement for each casing string.
5. No pea gravel permitted for remedial or fall back remedial without prior authorization from the BLM engineer.
6. On that portion of any well approved for a 5M BOPE system or greater, a pressure integrity test of each casing shoe shall be performed. Formation at the shoe shall be tested to a minimum of the mud weight equivalent anticipated to control the formation pressure to the next casing depth or at total depth of the well. This test shall be performed before drilling more than 20 feet of new hole.
7. If hardband drill pipe is rotated inside casing, returns will be monitored for metal. If metal is found in samples, drill pipe will be pulled and rubber protectors which have a larger diameter than the tool joints of the drill pipe will be installed prior to continuing drilling operations.
8. Whenever a casing string is cemented in the R-111-P potash area, the NMOCD requirements shall be followed.

B. PRESSURE CONTROL

1. All blowout preventer (BOP) and related equipment (BOPE) shall comply with well control requirements as described in Onshore Oil and Gas Order No. 2 and API RP 53 Sec. 17.
2. If a variance is approved for a flexible hose to be installed from the BOP to the choke manifold, the following requirements apply: The flex line must meet the requirements of API 16C. Check condition of flexible line from BOP to choke manifold, replace if exterior is damaged or if line fails test. Line to be as straight as possible with no hard bends and is to be anchored according to Manufacturer's requirements. The flexible hose can be exchanged with a hose of equal size and equal or greater pressure rating. Anchor requirements, specification sheet and hydrostatic pressure test certification matching the hose in service, to be onsite for review. These documents shall be posted in the company man's trailer and on the rig floor.
3. 5M or higher system requires an HCR valve, remote kill line and annular to match. The remote kill line is to be installed prior to testing the system and tested to stack pressure.
4. If the operator has proposed a multi-bowl wellhead assembly in the APD. The following requirements must be met:
 - a. Wellhead shall be installed by manufacturer's representatives, submit documentation with subsequent sundry.

- b. If the welding is performed by a third party, the manufacturer's representative shall monitor the temperature to verify that it does not exceed the maximum temperature of the seal.
 - c. Manufacturer representative shall install the test plug for the initial BOP test.
 - d. Whenever any seal subject to test pressure is broken, all the tests in OOGO2.III.A.2.i must be followed.
 - e. If the cement does not circulate and one inch operations would have been possible with a standard wellhead, the well head shall be cut off, cementing operations performed and another wellhead installed.
- 5. The appropriate BLM office shall be notified a minimum of 4 hours in advance for a representative to witness the tests.
 - a. In a water basin, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. The casing cut-off and BOP installation can be initiated four hours after installing the slips, which will be approximately six hours after bumping the plug. For those casing strings not using slips, the minimum wait time before cut-off is eight hours after bumping the plug. BOP/BOPE testing can begin after cut-off or once cement reaches 500 psi compressive strength (including lead when specified), whichever is greater. However, if the float does not hold, cut-off cannot be initiated until cement reaches 500 psi compressive strength (including lead when specified).
 - b. In potash areas, for all casing strings utilizing slips, these are to be set as soon as the crew and rig are ready and any fallback cement remediation has been done. For all casing strings, casing cut-off and BOP installation can be initiated at twelve hours after bumping the plug. However, **no tests** shall commence until the cement has had a minimum of 24 hours setup time, except the casing pressure test can be initiated immediately after bumping the plug (only applies to single stage cement jobs).
 - c. The tests shall be done by an independent service company utilizing a test plug not a cup or J-packer. The operator also has the option of utilizing an independent tester to test without a plug (i.e. against the casing) pursuant to Onshore Order 2 with the pressure not to exceed 70% of the burst rating for the casing. Any test against the casing must meet the WOC time for water basin (8 hours) or potash (24 hours) or 500 pounds compressive strength, whichever is greater, prior to initiating the test (see casing segment as lead cement may be critical item).
 - d. The test shall be run on a 5000 psi chart for a 2-3M BOP/BOP, on a 10000 psi chart for a 5M BOP/BOPE and on a 15000 psi chart for a 10M BOP/BOPE. If a linear chart is used, it shall be a one hour chart. A circular chart shall

have a maximum 2 hour clock. If a twelve hour or twenty-four hour chart is used, tester shall make a notation that it is run with a two hour clock.

- e. The results of the test shall be reported to the appropriate BLM office.
- f. All tests are required to be recorded on a calibrated test chart. A copy of the BOP/BOPE test chart and a copy of independent service company test will be submitted to the appropriate BLM office.
- g. The BOP/BOPE test shall include a low pressure test from 250 to 300 psi. The test will be held for a minimum of 10 minutes if test is done with a test plug and 30 minutes without a test plug. This test shall be performed prior to the test at full stack pressure.
- h. BOP/BOPE must be tested by an independent service company within 500 feet of the top of the Wolfcamp formation if the time between the setting of the intermediate casing and reaching this depth exceeds 20 days. This test does not exclude the test prior to drilling out the casing shoe as per Onshore Order No. 2.

C. DRILLING MUD

Mud system monitoring equipment, with derrick floor indicators and visual and audio alarms, shall be operating before drilling into the Wolfcamp formation, and shall be used until production casing is run and cemented.

D. WASTE MATERIAL AND FLUIDS

All waste (i.e. drilling fluids, trash, salts, chemicals, sewage, gray water, etc.) created as a result of drilling operations and completion operations shall be safely contained and disposed of properly at a waste disposal facility. No waste material or fluid shall be disposed of on the well location or surrounding area.

Porto-johns and trash containers will be on-location during fracturing operations or any other crew-intensive operations.

OTA10082020



U.S. Department of the Interior
BUREAU OF LAND MANAGEMENT

Application Data Report

03/14/2022

APD ID: 10400055295

Submission Date: 03/18/2020

Highlighted data
reflects the most
recent changes

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

[Show Final Text](#)

Well Type: OIL WELL

Well Work Type: Drill

Section 1 - General

APD ID: 10400055295

Tie to previous NOS? N

Submission Date: 03/18/2020

BLM Office: Carlsbad

User: Sammy Hajar

Title: Regulatory Analyst

Federal/Indian APD: FED

Is the first lease penetrated for production Federal or Indian? FED

Lease number: NMNM0005792

Lease Acres:

Surface access agreement in place?

Allotted?

Reservation:

Agreement in place? NO

Federal or Indian agreement:

Agreement number:

Agreement name:

Keep application confidential? Y

Permitting Agent? NO

APD Operator: BTA OIL PRODUCERS LLC

Operator letter of designation:

Operator Info

Operator Organization Name: BTA OIL PRODUCERS LLC

Operator Address: 104 S. Pecos

Zip: 79701

Operator PO Box:

Operator City: Midland

State: TX

Operator Phone: (432)682-3753

Operator Internet Address:

Section 2 - Well Information

Well in Master Development Plan? NO

Master Development Plan name:

Well in Master SUPO? NO

Master SUPO name:

Well in Master Drilling Plan? NO

Master Drilling Plan name:

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

Well API Number:

Field/Pool or Exploratory? Field and Pool

Field Name: PURPLE SAGE;
WOLFCAMP (GAS)

Pool Name: BONESPRING

Is the proposed well in an area containing other mineral resources? NONE

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Is the proposed well in an area containing other mineral resources?** NONE**Is the proposed well in a Helium production area?** N**Use Existing Well Pad?** Y**New surface disturbance?** N**Type of Well Pad:** MULTIPLE WELL**Multiple Well Pad Name:** ROJO **Number:** 46H

7811 34-27 FEDERAL COM

Well Class: HORIZONTAL**Number of Legs:** 1**Well Work Type:** Drill**Well Type:** OIL WELL**Describe Well Type:****Well sub-Type:** INFILL**Describe sub-type:****Distance to town:** 14 Miles**Distance to nearest well:** 1357 FT**Distance to lease line:** 690 FT**Reservoir well spacing assigned acres Measurement:** 280 Acres**Well plat:** Rojo_7811_34_27_Federal_Com_46H_c102_20200318145524.pdf**Well work start Date:** 08/17/2020**Duration:** 30 DAYS**Section 3 - Well Location Table****Survey Type:** RECTANGULAR**Describe Survey Type:****Datum:** NAD83**Vertical Datum:** NGVD29**Survey number:****Reference Datum:** GROUND LEVEL

Wellbore	NS-Foot	NS Indicator	EW-Foot	EW Indicator	Twsp	Range	Section	Aliquot/Lot/Tract	Latitude	Longitude	County	State	Meridian	Lease Type	Lease Number	Elevation	MD	TVD	Will this well produce from this lease?
SHL Leg #1	1540	FSL	690	FWL	25S	33E	34	Aliquot NWS W	32.083999	-103.566502	LEA	NEW MEXI CO	NEW MEXI CO	F	NMNM 0005792	3319	0	0	Y
KOP Leg #1	1420	FSL	660	FWL	25S	33E	34	Aliquot NWS W	32.08367	-103.566598	LEA	NEW MEXI CO	NEW MEXI CO	F	NMNM 0005792	-8288	11648	11607	Y
PPP Leg #1-1	1420	FSL	660	FWL	25S	33E	34	Aliquot NWS W	32.08367	-103.566598	LEA	NEW MEXI CO	NEW MEXI CO	F	NMNM 0005792	-5719	9080	9038	Y

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H

Wellbore	NS-Foot	NS Indicator	EW-Foot	EW Indicator	Twsp	Range	Section	Aliquot/Lot/Tract	Latitude	Longitude	County	State	Meridian	Lease Type	Lease Number	Elevation	MD	TVD	Will this well produce from this lease?
PPP Leg #1-2	40	FSL	660	FW L	25S	33E	27	Aliquot SWS W	32.354596	- 103.45327	LEA	NEW MEXICO	NEW MEXICO	F	NMNM 015091	- 8765	16300	12084	Y
EXIT Leg #1	100	FNL	660	FW L	25S	33E	27	Aliquot NWN W	32.108512	- 103.56666	LEA	NEW MEXICO	NEW MEXICO	F	NMNM 015091	- 8765	21207	12084	Y
BHL Leg #1	50	FNL	660	FW L	25S	33E	27	Aliquot NWN W	32.108649	- 103.566661	LEA	NEW MEXICO	NEW MEXICO	F	NMNM 015091	- 8765	21487	12084	Y



U.S. Department of the Interior
BUREAU OF LAND MANAGEMENT

Drilling Plan Data Report

03/14/2022

APD ID: 10400055295

Submission Date: 03/18/2020

Highlighted data
reflects the most
recent changes

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

[Show Final Text](#)

Well Type: OIL WELL

Well Work Type: Drill

Section 1 - Geologic Formations

Formation ID	Formation Name	Elevation	True Vertical Depth	Measured Depth	Lithologies	Mineral Resources	Producing Formation
692891	QUATERNARY	3328	0	0	ALLUVIUM	NONE	N
692892	RUSTLER	2352	976	976	ANHYDRITE	NONE	N
692893	TOP SALT	1792	1536	1536	SALT	NONE	N
692894	BASE OF SALT	-1425	4753	4753	SALT	NONE	N
692895	DELAWARE	-1624	4952	4952	LIMESTONE	NATURAL GAS, OIL	N
692904	BELL CANYON	-1655	4983	4983	SANDSTONE	NONE	N
692897	CHERRY CANYON	-2908	6236	6236	SANDSTONE	NATURAL GAS, OIL	N
692898	BRUSHY CANYON	-4181	7509	7509	SANDSTONE	NATURAL GAS, OIL	N
692902	BONE SPRING LIME	-5710	9038	9038	LIMESTONE	NATURAL GAS, OIL	N
692905	FIRST BONE SPRING SAND	-6721	10049	10049	SANDSTONE	NATURAL GAS, OIL	Y
692906	BONE SPRING 2ND	-7275	10603	10603	SANDSTONE	NATURAL GAS, OIL	Y
692907	BONE SPRING 3RD	-8372	11700	11700	SANDSTONE	NATURAL GAS, OIL	Y
692908	WOLFCAMP	-8806	12134	12134	SHALE	NATURAL GAS, OIL	Y

Section 2 - Blowout Prevention

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Pressure Rating (PSI):** 5M**Rating Depth:** 11000

Equipment: The blowout preventer equipment (BOP) shown in Exhibit A will consist of a (5M system) double ram type (5,000 psi WP) preventer and a bag-type (Hydril) preventer (5000 psi WP). Both units will be hydraulically operated and the ram type preventer will be equipped with blind rams on top and 5 drill pipe rams on bottom. The BOPs will be installed on the 13-3/8 surface casing and utilized continuously until total depth is reached. A 2 kill line and 3 choke line will be incorporated in the drilling spool below the ram-type BOP. A remote kill line will be used for the 5M system as per onshore order #2. Other accessory BOP equipment will include a Kelly cock, floor safety valve, choke lines, and choke manifold having a 5,000 psi WP rating. The 5M annular will be tested as per BLM drilling Operations Order No. 2.

Requesting Variance? NO**Variance request:**

Testing Procedure: Pipe rams will be operated and checked each 24-hour period and each time the drill pipe is out of the hole. These functional tests will be documented on the daily drillers log. All BOPs and associated equipment will be tested as per BLM drilling Operations Order No. 2.

Choke Diagram Attachment:

5M_choke_mannifold_20200316152112.pdf

Choke_Hose___Test_Chart_and_Specs_20190723082742.pdf

BOP Diagram Attachment:

5M_BOP_diagram_20200316152127.pdf

Section 3 - Casing

Casing ID	String Type	Hole Size	Csg Size	Condition	Standard	Tapered String	Top Set MD	Bottom Set MD	Top Set TVD	Bottom Set TVD	Top Set MSL	Bottom Set MSL	Calculated casing length MD	Grade	Weight	Joint Type	Collapse SF	Burst SF	Joint SF Type	Joint SF	Body SF Type	Body SF
1	SURFACE	17.5	13.375	NEW	API	N	0	975	0	975	3319	2344	975	J-55	54.5	ST&C	2.7	6.5	DRY	9.7	DRY	16.1
2	INTERMEDIATE	12.25	9.625	NEW	API	N	0	4963	0	4932	3328	-1613	4963	J-55	40	LT&C	1.7	1.5	DRY	2.6	DRY	3.2
3	PRODUCTION	8.75	5.5	NEW	API	N	0	21487	0	12084	3328	-8765	21487	P-110	17	BUTT	2.3	1.8	DRY	1.6	DRY	1.5

Casing Attachments

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Casing Attachments**

Casing ID: 1 **String Type:** SURFACE**Inspection Document:****Spec Document:****Tapered String Spec:****Casing Design Assumptions and Worksheet(s):**Rojo_46H_Casing_Assumption_20200318153346.JPG

Casing ID: 2 **String Type:** INTERMEDIATE**Inspection Document:****Spec Document:****Tapered String Spec:****Casing Design Assumptions and Worksheet(s):**Rojo_46H_Casing_Assumption_20200318153453.JPG

Casing ID: 3 **String Type:** PRODUCTION**Inspection Document:****Spec Document:****Tapered String Spec:****Casing Design Assumptions and Worksheet(s):**Rojo_46H_Casing_Assumption_20200318153556.JPG

Section 4 - Cement

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H

String Type	Lead/Tail	Stage Tool Depth	Top MD	Bottom MD	Quantity(sx)	Yield	Density	Cu Ft	Excess%	Cement type	Additives
SURFACE	Lead		0	780	630	1.73	13.5	108.9	100	Class C	2% CaCl2
SURFACE	Tail		780	975	200	1.35	14.8	270	100	Class C	2% CaCl2
INTERMEDIATE	Lead		0	4405	1300	2.46	12.8	3198	100	Class C	0.5% CaCl2
INTERMEDIATE	Tail		4405	4963	200	1.34	14.8	268	25	Class C	1% CaCl2
PRODUCTION	Lead		3963	9910	580	3.9	10.5	2262	60	25% Poz 75% Class C	0.4% Fluid Loss
PRODUCTION	Tail		9910	21487	2925	1.25	14.4	3656.25	25	Class H	0.2% LT Retarder

Section 5 - Circulating Medium

Mud System Type: Closed**Will an air or gas system be Used?** NO**Description of the equipment for the circulating system in accordance with Onshore Order #2:****Diagram of the equipment for the circulating system in accordance with Onshore Order #2:****Describe what will be on location to control well or mitigate other conditions:** Sufficient mud materials to maintain mud properties and meet minimum lost circulation and weight increase requirements will be kept on location at all times.**Describe the mud monitoring system utilized:** PVT/Pason/Visual Monitoring

Circulating Medium Table

Top Depth	Bottom Depth	Mud Type	Min Weight (lbs/gal)	Max Weight (lbs/gal)	Density (lbs/cu ft)	Gel Strength (lbs/100 sqft)	PH	Viscosity (CP)	Salinity (ppm)	Filtration (cc)	Additional Characteristics
0	975	OTHER : FW SPUD	8.3	8.4							
975	4932	OTHER : BRINE	10	10							
4932	12084	OTHER : CUT BRINE	8.7	9.3							

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H

Section 6 - Test, Logging, Coring

List of production tests including testing procedures, equipment and safety measures:

Drill Stem Tests will be based on geological sample shows.

List of open and cased hole logs run in the well:

MUD LOG/GEOLOGICAL LITHOLOGY LOG,GAMMA RAY LOG,CEMENT BOND LOG,

Coring operation description for the well:

None planned

Section 7 - Pressure

Anticipated Bottom Hole Pressure: 5907**Anticipated Surface Pressure:** 3248**Anticipated Bottom Hole Temperature(F):** 178**Anticipated abnormal pressures, temperatures, or potential geologic hazards?** NO**Describe:****Contingency Plans geohazards description:****Contingency Plans geohazards attachment:****Hydrogen Sulfide drilling operations plan required?** YES**Hydrogen sulfide drilling operations plan:**

BTA_Oil_Producers_LLC___EMERGENCY_CALL_LIST_20190723161502.pdf

H2S_Equipment_Schematic_20190723161502.pdf

H2S_Plan_20190723161502.pdf

Section 8 - Other Information

Proposed horizontal/directional/multi-lateral plan submission:

Rojo_46H_wall_plot_20200318153958.pdf

Rojo_46H_directional_plan_20200318153958.pdf


Rojo_46H_Gas_Capture_Plan_20200318154011.pdf

Other proposed operations facets description:**Other proposed operations facets attachment:****Other Variance attachment:**

BOP_Break_Testing_Variance_20200106151949.pdf

Casing_Head_Running_Procedure_20190723163249.pdf

Multi_Bowl_Diagram_13_38_x_9_58_x_5_12_20200317120230.pdf

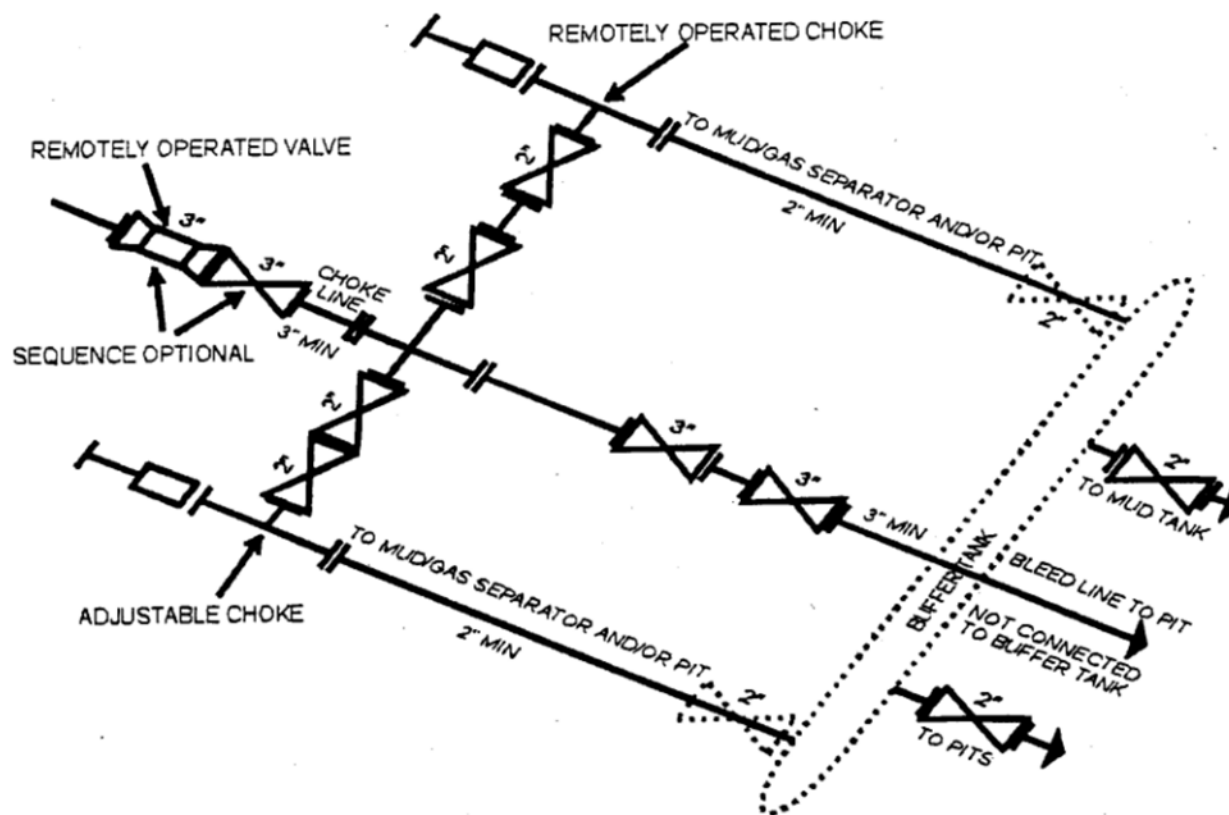

5M CHOKE MANIFOLD EQUIPMENT - CONFIGURATION OF CHOKES MAY VARY

Although not required for any of the choke manifold systems, buffer tanks are sometimes installed downstream of the choke assemblies for the purpose of manifolding the bleed lines together. When buffer tanks are employed, valves shall be installed upstream to isolate a failure or malfunction without interrupting flow control. Though not shown on 2M, 3M, 10M, OR 15M drawings, it would also be applicable to those situations.

[54 FR 39528, Sept. 27, 1989]



ContiTech

CONTITECH RUBBER Industrial Kft.	No:QC-DB- 599/ 2014 Page: 16 / 176
-------------------------------------	---------------------------------------

Rig 94

ASSET 24455


QUALITY CONTROL INSPECTION AND TEST CERTIFICATE				CERT. N°: 1592	
PURCHASER: ContiTech Oil & Marine Corp.				P.O. N°: 4500461753	
CONTITECH ORDER N°: 539225		HOSE TYPE: 3" ID Choke & Kill Hose			
HOSE SERIAL N°: 68547		NOMINAL / ACTUAL LENGTH: 7,62 m / 7,66 m			
W.P. 68,9 MPa 10000 psi		T.P. 103,4 MPa 15000 psi		Duration: 60 min.	
Pressure test with water at ambient temperature					
See attachment. (1 page)					
→ 10 Min.					
↑ 50 MPa					
COUPLINGS Type		Serial N°		Quality	
3" coupling with		2574 5533		AISI 4130	
4 1/16" 10K API Swivel Flange end				AISI 4130	
Hub				AISI 4130	
				A1582N H8672	
				58855	
				A1199N A1423N	
Not Designed For Well Testing				API Spec 16 C	
Fire Rated				Temperature rate:"B"	
All metal parts are flawless					
WE CERTIFY THAT THE ABOVE HOSE HAS BEEN MANUFACTURED IN ACCORDANCE WITH THE TERMS OF THE ORDER INSPECTED AND PRESSURE TESTED AS ABOVE WITH SATISFACTORY RESULT.					
STATEMENT OF CONFORMITY: We hereby certify that the above items/equipment supplied by us are in conformity with the terms, conditions and specifications of the above Purchaser Order and that these items/equipment were fabricated inspected and tested in accordance with the referenced standards, codes and specifications and meet the relevant acceptance criteria and design requirements.					
Date: 04. September 2014.		Inspector		Quality Control	
				ContiTech Rubber Industrial Kft. Quality Control Dept. <i>[Signature]</i>	

ContiTech Rubber Industrial Kft. | Budapest 01 10. H-6728 Szeged | H-6701 P.O.Box 152 Szeged, Hungary
 Phone: +36 62 566 737 | Fax: +36 62 566 738 | e-mail: info@bud.contitech.hu | Internet: www.contitech-rubber.hu, www.contitech.hu
 The Court of Szeged County as Registry Court | Registry Court No. Cg 06 09 002572 | EU VAT No. HU1067296
 Bank code: Commerzbank Zrt., Budapest | 14220100 26831003

File Name : 000220_68543_68545-547.GEV.....000236_68543_68545-547.GEV
File Message : 68543_68545_58547
Device Type : GX10
Serial No. : S3F606399
Data Count : 9046
Print Group :
Print Range :
Comment :
Press-Temp :
2014/09/04 01:53:54.000 - 2014/09/04 04:39:39.000


Sampling Int. : 1.000 sec
Start Time : 2014/09/04 01:53:54.000
Stop Time : 2014/09/04 04:39:39.000

Data No.	Cursor A	Cursor B	Difference
Absolute Time	2014/09/04 02:51:05.000	2014/09/04 03:51:06.000	01:00:01.000
Toy Comment	Value A	Value B	Value B-A
Pressure[bar]	1062.95	1048.57	-14.38
Ambient Temperature[°C]	23.24	23.14	-0.10

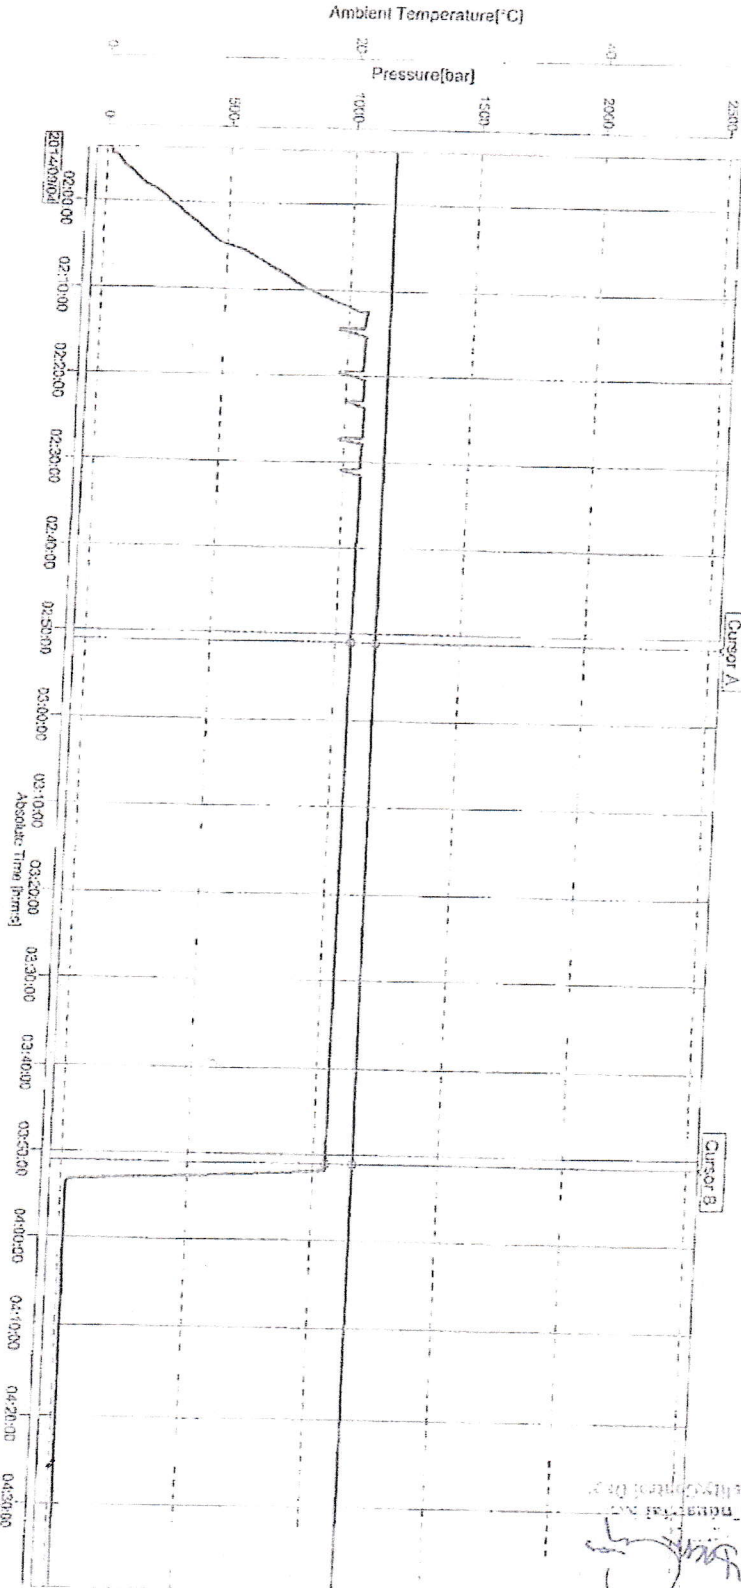

10mm/div

13-5/8" 5,000 PSI BOP

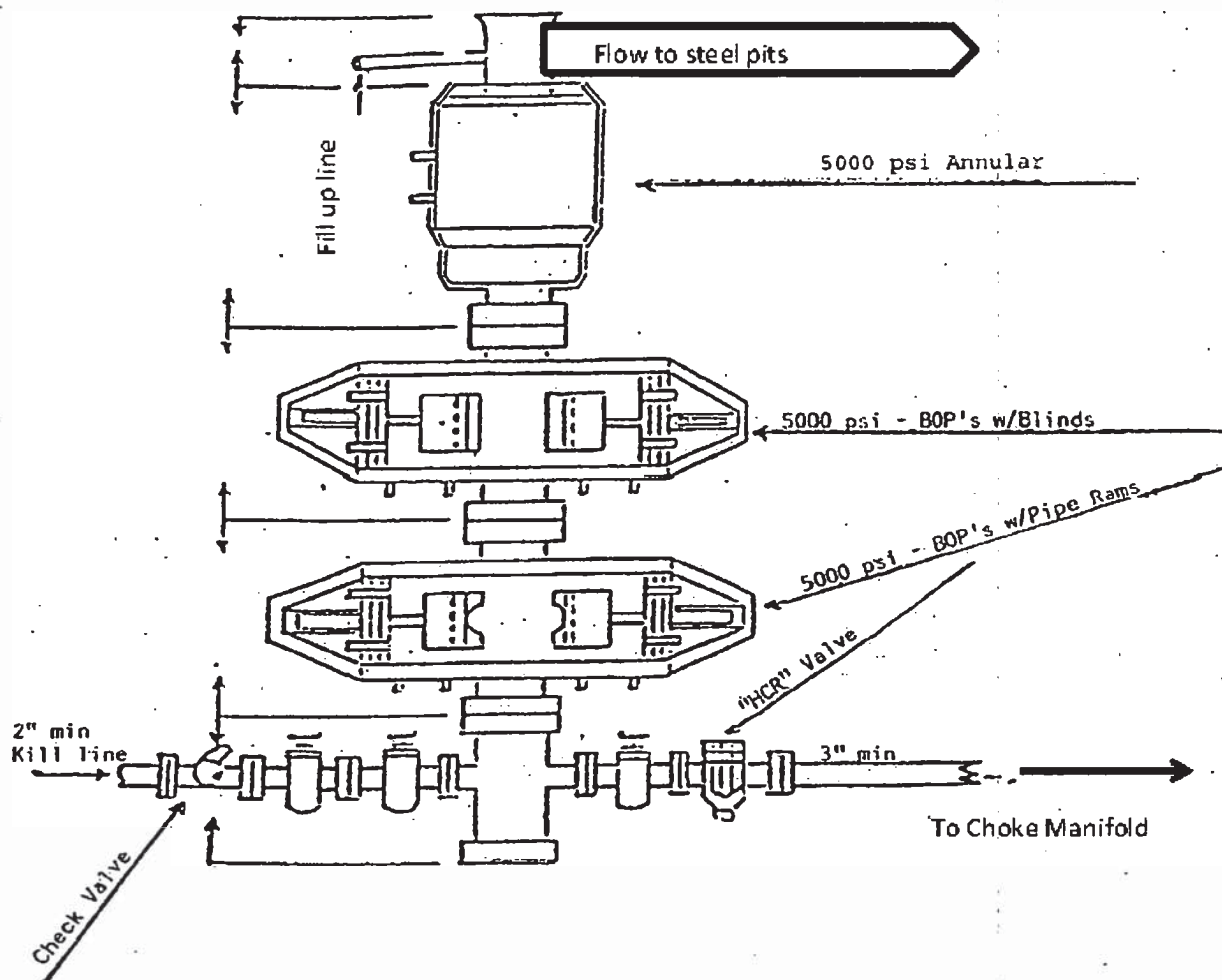


EMERGENCY CALL LIST

	<u>OFFICE</u>	<u>MOBILE</u>
BTA Oil Producers LLC OFFICE	432-682-3753	
BEN GRIMES, Operations	432-682-3753	432-559-4309
NICK EATON, Drilling	432-682-3753	432-260-7841
TRACE WOHLFAHRT, Completions	432-682-3753	

EMERGENCY RESPONSE NUMBERS

	<u>OFFICE</u>
STATE POLICE	575-748-9718
EDDY COUNTY SHERIFF	575-746-2701
EMERGENCY MEDICAL SERVICES (AMBULANCE)	911 or 575-746-2701
EDDY COUNTY EMERGENCY MANAGEMENT (HARRY BURGESS)	575-887-9511
STATE EMERGENCY RESPONSE CENTER (SERC)	575-476-9620
CARLSBAD POLICE DEPARTMENT	575-885-2111
CARLSBAD FIRE DEPARTMENT	575-885-3125
NEW MEXICO OIL CONSERVATION DIVISION	575-748-1283
INDIAN FIRE & SAFETY	800-530-8693
HALLIBURTON SERVICES	800-844-8451

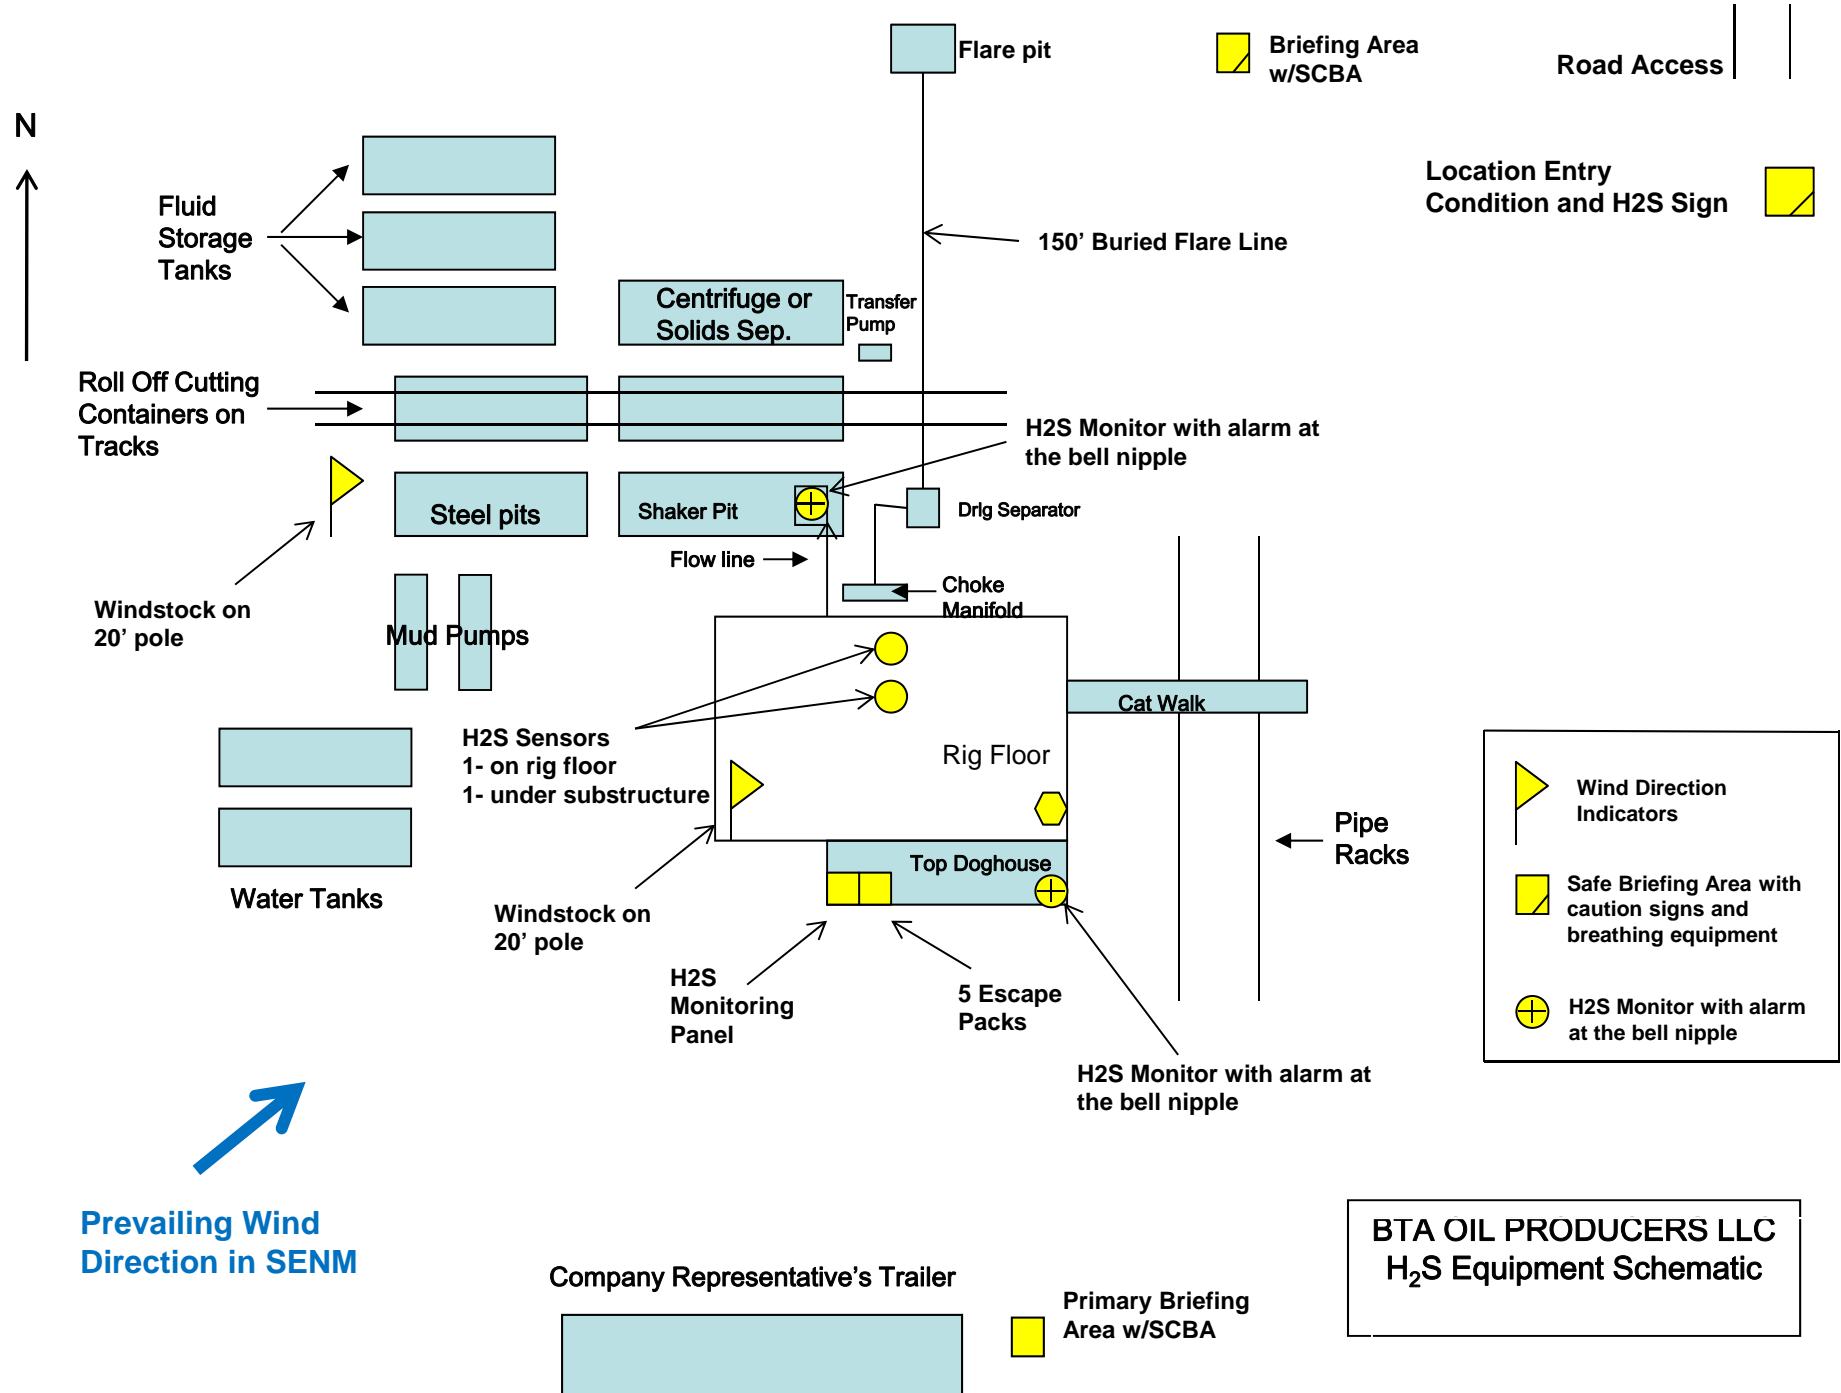

BTA OIL PRODUCERS LLC**HYDROGEN SULFIDE DRILLING OPERATIONS PLAN****1. HYDROGEN SULFIDE TRAINING**

All personnel, whether regularly assigned, contracted, or employed on an unscheduled basis, will receive training from a qualified instructor in the following areas prior to commencing drilling operations on this well:

- a. The hazards and characteristics of hydrogen sulfide (H₂S).
- b. The proper use and maintenance of personal protective equipment and life support systems.
- c. The proper use of H₂S detectors, alarms, warning systems, briefing areas, evacuation procedures, and prevailing winds.
- d. The proper techniques for first aid and rescue procedures.

In addition, supervisory personnel will be trained in the following areas:

- a. The effects of H₂S on metal components. If high tensile tubulars are to be used, personnel will be trained in their special maintenance requirements.
- b. Corrective action and shut-in procedures when drilling or reworking a well and blowout prevention and well control procedures.
- c. The contents and requirements of the H₂S Drilling Operations Plan and the Public Protection Plan.

There will be an initial training session just prior to encountering a known or probable H₂S zone (within 3 days or 500 feet) and weekly H₂S and well control drills for all personnel in each crew. The initial training session shall include a review of the site specific H₂S Drilling Operations Plan and the Public Protection Plan. This plan shall be available at the well site. All personnel will be required to carry documentation that they have received the proper training.

2. H₂S SAFETY EQUIPMENT AND SYSTEMS

Note: All H₂S safety equipment and systems will be installed, tested, and operational when drilling reaches a depth of 500 feet above, or three days prior to penetrating the first zone containing or reasonably expected to contain H₂S. If H₂S greater than 100 ppm is encountered in the gas stream we will shut in and install H₂S equipment.

- a. Well Control Equipment:
 - Flare line.
 - Choke manifold with remotely operated choke.
 - Blind rams and pipe rams to accommodate all pipe sizes with properly sized closing unit.
 - Auxiliary equipment to include: annular preventer, mud-gas separator, rotating head.
- b. Protective equipment for essential personnel:
 - Mark II Surviveair 30-minute units located in the dog house and at briefing areas.
- c. H₂S detection and monitoring equipment:

- 2 - portable H2S monitor positioned on location for best coverage and response. These units have warning lights and audible sirens when H2S levels of 20 ppm are reached.
- d. Visual warning systems:
Caution/Danger signs shall be posted on roads providing direct access to location. Signs will be painted a high visibility yellow with black lettering of sufficient size to be readable at a reasonable distance from the immediate location. Bilingual signs will be used, when appropriate. See example attached.
 - e. Mud Program:
The mud program has been designed to minimize the volume of H2S circulated to the surface.
 - f. Metallurgy:
All drill strings, casings, tubing, wellhead, blowout preventers, drilling spool, kill lines, choke manifold and lines, and valves shall be suitable for H2S service.
 - g. Communication:
Company vehicles equipped with cellular telephone.

W A R N I N G


**YOU ARE ENTERING AN H₂S AREA
AUTHORIZED PERSONNEL ONLY**

- 1. BEARDS OR CONTACT LENSES NOT ALLOWED**
- 2. HARD HATS REQUIRED**
- 3. SMOKING IN DESIGNATED AREAS ONLY**
- 4. BE WIND CONSCIOUS AT ALL TIMES**
- 5. CK WITH BTA OIL PRODUCERS LLC FOREMAN AT MAIN OFFICE**

BTA OIL PRODUCERS LLC

1-432-682-3753

BTA Oil Producers, LLC



Azimuths to Grid North
True North: -0.41°
Magnetic North: 7.33°

Magnetic Field
Strength: 48709.7nT
Dip Angle: 60.11°
Date: 12/31/2009
Model: IGRF200510

WELL DETAILS: Rojo #46H					
+N/-S	+E/-W	Northing	Ground Level Easting	3319.0 Latitude	Longitude
0.0	0.0	395140.20	778832.10	32° 5' 2.398 N	103° 33' 59.408 W

SITE DETAILS: Rojo

Site Centre Northing: 399077.50
Easting: 783078.55

Positional Uncertainty: 0.0
Convergence: 0.41
Local North: Grid



SECTION DETAILS

Sec	MD	Inc	Azi	TVD	+N/-S	+E/-W	Dleg
1	0.0	0.00	0.00	0.0	0.0	0.0	0.00
2	1500.0	0.00	0.00	1500.0	0.0	0.0	0.00
3	1900.0	8.00	188.53	1898.7	-27.6	-4.1	2.00
4	5858.8	8.00	188.53	5818.9	-572.4	-85.9	0.00
5	6258.8	0.00	0.00	6217.6	-600.0	-90.0	2.00
6	11241.1	0.00	0.00	11200.0	-600.0	-90.0	0.00
7	11647.7	0.00	0.00	11606.5	-600.0	-90.0	0.00
8	12397.7	90.00	359.86	12084.0	-122.5	-91.1	12.00
9	21487.4	90.00	359.86	12084.0	8967.1	-112.8	0.00

PROJECT DETAILS: Lea County, NM (NAD 83)

Geodetic System: US State Plane 1983
Datum: North American Datum 1983
Ellipsoid: GRS 1980
Zone: New Mexico Eastern Zone

System Datum: Ground Level

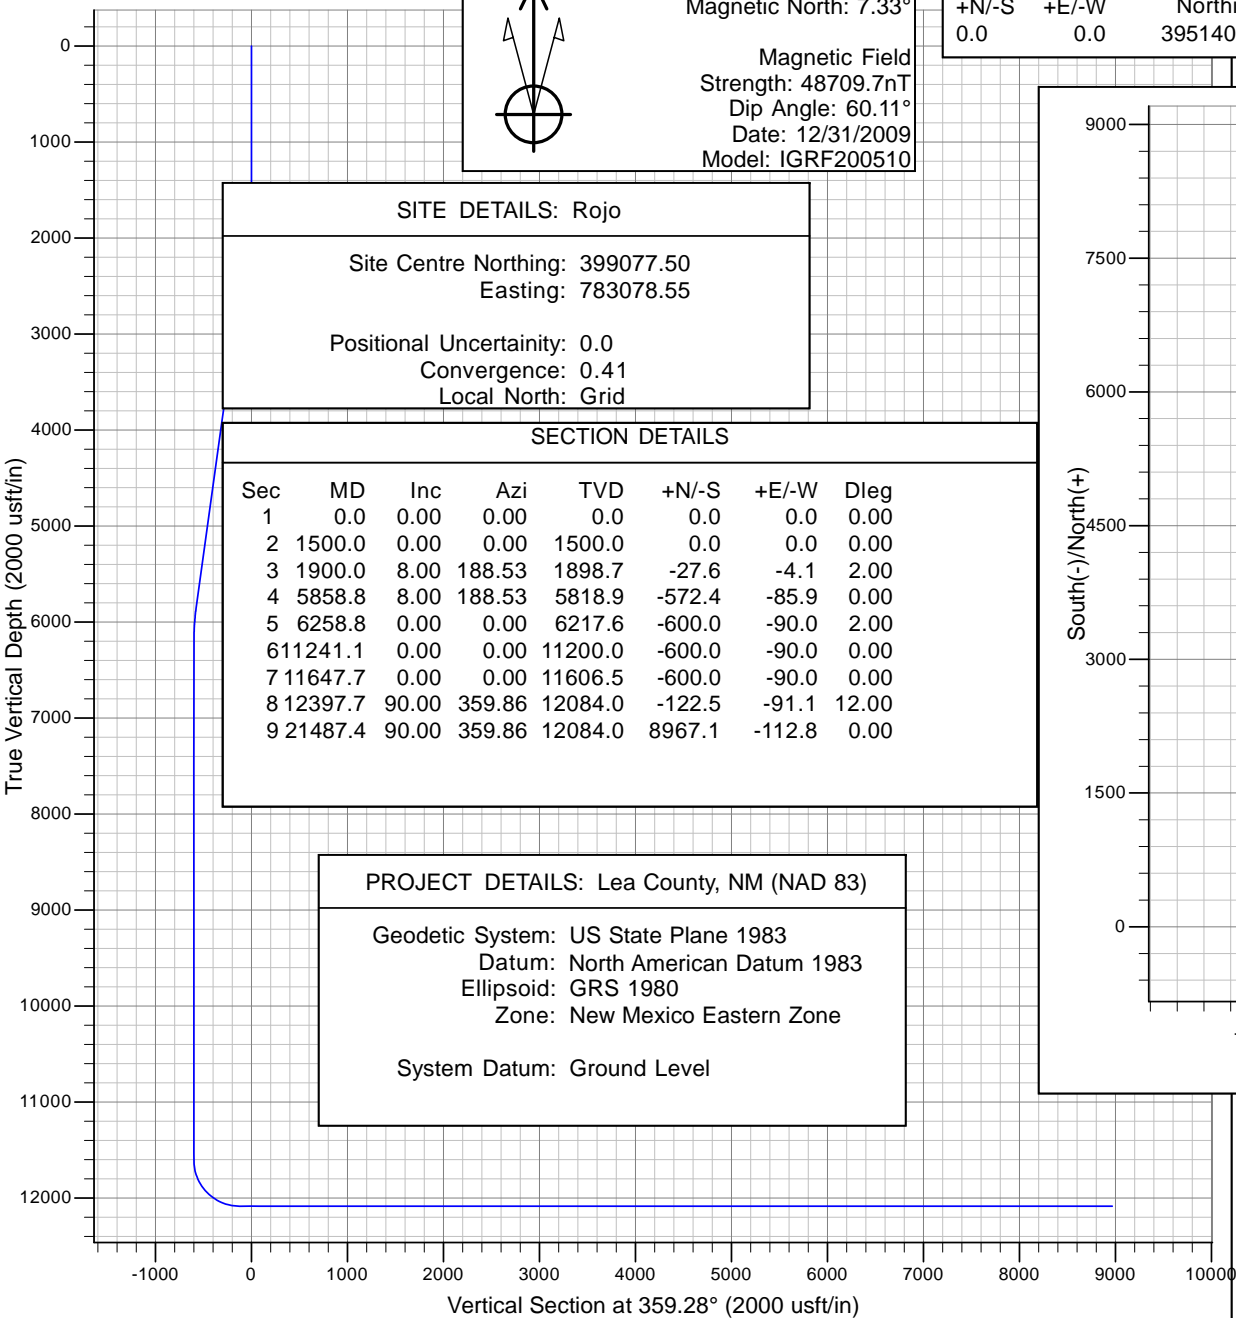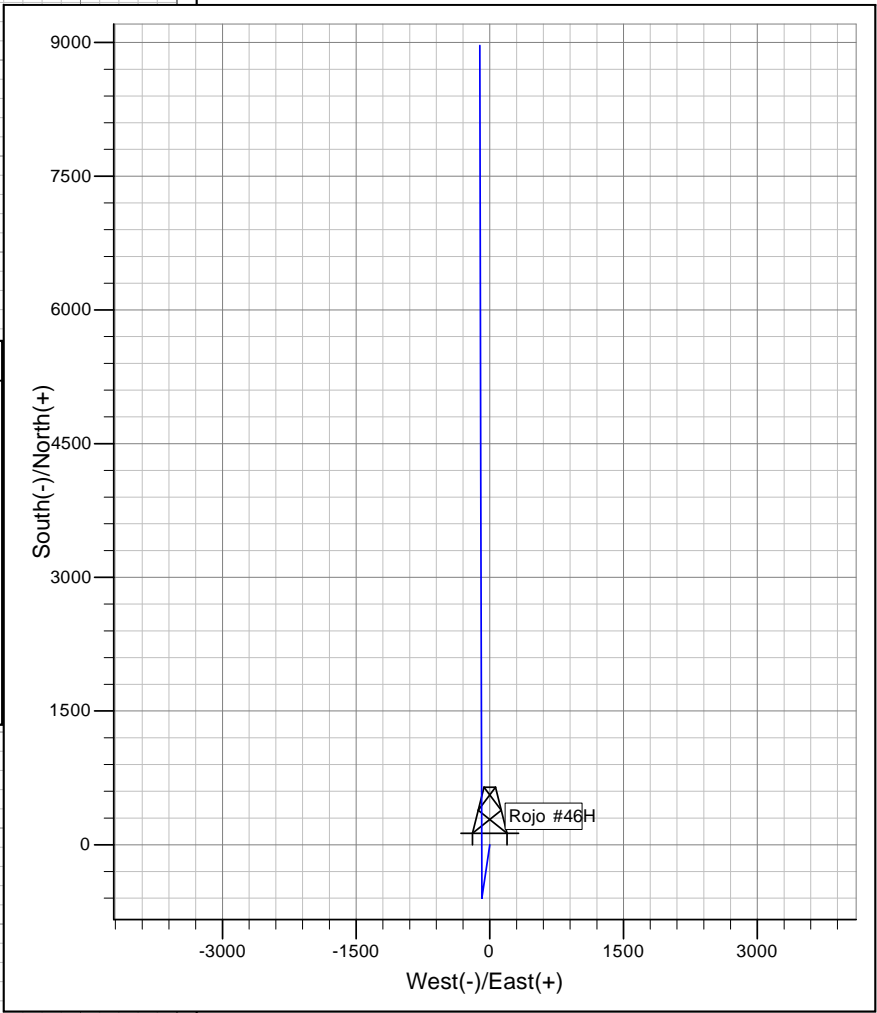

BTA Oil Producers, LLC

Lea County, NM (NAD 83)

Rojo

Rojo #46H

Wellbore #1

Plan: Design #1

Standard Planning Report - Geographic

05 March, 2020

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Project	Lea County, NM (NAD 83), Lea County, NM		
Map System:	US State Plane 1983	System Datum:	Ground Level
Geo Datum:	North American Datum 1983		
Map Zone:	New Mexico Eastern Zone		Using geodetic scale factor

Site	Rojo					
Site Position:		Northing:	399,077.50 usft	Latitude:	32° 5' 41.057 N	
From:	Map	Easting:	783,078.55 usft	Longitude:	103° 33' 9.721 W	
Position Uncertainty:		0.0 usft	Slot Radius:	13-3/16 "	Grid Convergence:	0.41 °

Well	Rojo #46H					
Well Position	+N/-S	0.0 usft	Northing:	395,140.20 usft	Latitude:	32° 5' 2.398 N
	+E/-W	0.0 usft	Easting:	778,832.10 usft	Longitude:	103° 33' 59.408 W
Position Uncertainty		0.0 usft	Wellhead Elevation:		Ground Level:	3,319.0 usft

Wellbore	Wellbore #1				
Magnetics	Model Name	Sample Date	Declination (°)	Dip Angle (°)	Field Strength (nT)
	IGRF200510	12/31/2009	7.74	60.11	48,709.73285505

Design	Design #1			
Audit Notes:				
Version:	Phase:	PROTOTYPE	Tie On Depth:	0.0
Vertical Section:	Depth From (TVD) (usft)	+N/-S (usft)	+E/-W (usft)	Direction (°)
	0.0	0.0	0.0	359.28

Plan Survey Tool Program	Date	3/5/2020			
Depth From (usft)	Depth To (usft)	Survey (Wellbore)	Tool Name	Remarks	
1	0.0	21,487.4	Design #1 (Wellbore #1)		

Plan Sections										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Dogleg Rate (°/100usft)	Build Rate (°/100usft)	Turn Rate (°/100usft)	TFO (°)	Target
0.0	0.00	0.00	0.0	0.0	0.0	0.00	0.00	0.00	0.00	
1,500.0	0.00	0.00	1,500.0	0.0	0.0	0.00	0.00	0.00	0.00	
1,900.0	8.00	188.53	1,898.7	-27.6	-4.1	2.00	2.00	0.00	188.53	
5,858.8	8.00	188.53	5,818.9	-572.4	-85.9	0.00	0.00	0.00	0.00	
6,258.8	0.00	0.00	6,217.6	-600.0	-90.0	2.00	-2.00	0.00	180.00	
11,241.1	0.00	0.00	11,200.0	-600.0	-90.0	0.00	0.00	0.00	0.00	
11,647.7	0.00	0.00	11,606.5	-600.0	-90.0	0.00	0.00	0.00	0.00	
12,397.7	90.00	359.86	12,084.0	-122.5	-91.1	12.00	12.00	0.00	359.86	
21,487.4	90.00	359.86	12,084.0	8,967.1	-112.8	0.00	0.00	0.00	0.00	Rojo #46H BHL

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Planned Survey									
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Map Northing (usft)	Map Easting (usft)	Latitude	Longitude
0.0	0.00	0.00	0.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
100.0	0.00	0.00	100.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
200.0	0.00	0.00	200.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
300.0	0.00	0.00	300.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
400.0	0.00	0.00	400.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
500.0	0.00	0.00	500.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
600.0	0.00	0.00	600.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
700.0	0.00	0.00	700.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
800.0	0.00	0.00	800.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
900.0	0.00	0.00	900.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,000.0	0.00	0.00	1,000.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,100.0	0.00	0.00	1,100.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,200.0	0.00	0.00	1,200.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,300.0	0.00	0.00	1,300.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,400.0	0.00	0.00	1,400.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,500.0	0.00	0.00	1,500.0	0.0	0.0	395,140.20	778,832.10	32° 5' 2.398 N	103° 33' 59.408 W
1,600.0	2.00	188.53	1,600.0	-1.7	-0.3	395,138.47	778,831.84	32° 5' 2.380 N	103° 33' 59.412 W
1,700.0	4.00	188.53	1,699.8	-6.9	-1.0	395,133.30	778,831.06	32° 5' 2.329 N	103° 33' 59.421 W
1,800.0	6.00	188.53	1,799.5	-15.5	-2.3	395,124.68	778,829.77	32° 5' 2.244 N	103° 33' 59.437 W
1,900.0	8.00	188.53	1,898.7	-27.6	-4.1	395,112.63	778,827.96	32° 5' 2.125 N	103° 33' 59.459 W
2,000.0	8.00	188.53	1,997.7	-41.3	-6.2	395,098.87	778,825.90	32° 5' 1.989 N	103° 33' 59.484 W
2,100.0	8.00	188.53	2,096.8	-55.1	-8.3	395,085.10	778,823.83	32° 5' 1.853 N	103° 33' 59.509 W
2,200.0	8.00	188.53	2,195.8	-68.9	-10.3	395,071.34	778,821.77	32° 5' 1.717 N	103° 33' 59.534 W
2,300.0	8.00	188.53	2,294.8	-82.6	-12.4	395,057.58	778,819.70	32° 5' 1.581 N	103° 33' 59.559 W
2,400.0	8.00	188.53	2,393.8	-96.4	-14.5	395,043.81	778,817.64	32° 5' 1.445 N	103° 33' 59.584 W
2,500.0	8.00	188.53	2,492.9	-110.2	-16.5	395,030.05	778,815.58	32° 5' 1.309 N	103° 33' 59.610 W
2,600.0	8.00	188.53	2,591.9	-123.9	-18.6	395,016.29	778,813.51	32° 5' 1.173 N	103° 33' 59.635 W
2,700.0	8.00	188.53	2,690.9	-137.7	-20.7	395,002.52	778,811.45	32° 5' 1.037 N	103° 33' 59.660 W
2,800.0	8.00	188.53	2,789.9	-151.4	-22.7	394,988.76	778,809.38	32° 5' 0.901 N	103° 33' 59.685 W
2,900.0	8.00	188.53	2,889.0	-165.2	-24.8	394,975.00	778,807.32	32° 5' 0.765 N	103° 33' 59.710 W
3,000.0	8.00	188.53	2,988.0	-179.0	-26.8	394,961.24	778,805.25	32° 5' 0.629 N	103° 33' 59.735 W
3,100.0	8.00	188.53	3,087.0	-192.7	-28.9	394,947.47	778,803.19	32° 5' 0.492 N	103° 33' 59.760 W
3,200.0	8.00	188.53	3,186.1	-206.5	-31.0	394,933.71	778,801.12	32° 5' 0.356 N	103° 33' 59.785 W
3,300.0	8.00	188.53	3,285.1	-220.3	-33.0	394,919.95	778,799.06	32° 5' 0.220 N	103° 33' 59.811 W
3,400.0	8.00	188.53	3,384.1	-234.0	-35.1	394,906.18	778,797.00	32° 5' 0.084 N	103° 33' 59.836 W
3,500.0	8.00	188.53	3,483.1	-247.8	-37.2	394,892.42	778,794.93	32° 4' 59.948 N	103° 33' 59.861 W
3,600.0	8.00	188.53	3,582.2	-261.5	-39.2	394,878.66	778,792.87	32° 4' 59.812 N	103° 33' 59.886 W
3,700.0	8.00	188.53	3,681.2	-275.3	-41.3	394,864.89	778,790.80	32° 4' 59.676 N	103° 33' 59.911 W
3,800.0	8.00	188.53	3,780.2	-289.1	-43.4	394,851.13	778,788.74	32° 4' 59.540 N	103° 33' 59.936 W
3,900.0	8.00	188.53	3,879.2	-302.8	-45.4	394,837.37	778,786.67	32° 4' 59.404 N	103° 33' 59.961 W
4,000.0	8.00	188.53	3,978.3	-316.6	-47.5	394,823.61	778,784.61	32° 4' 59.268 N	103° 33' 59.987 W
4,100.0	8.00	188.53	4,077.3	-330.4	-49.6	394,809.84	778,782.54	32° 4' 59.132 N	103° 34' 0.012 W
4,200.0	8.00	188.53	4,176.3	-344.1	-51.6	394,796.08	778,780.48	32° 4' 58.996 N	103° 34' 0.037 W
4,300.0	8.00	188.53	4,275.3	-357.9	-53.7	394,782.32	778,778.42	32° 4' 58.860 N	103° 34' 0.062 W
4,400.0	8.00	188.53	4,374.4	-371.7	-55.7	394,768.55	778,776.35	32° 4' 58.724 N	103° 34' 0.087 W
4,500.0	8.00	188.53	4,473.4	-385.4	-57.8	394,754.79	778,774.29	32° 4' 58.588 N	103° 34' 0.112 W
4,600.0	8.00	188.53	4,572.4	-399.2	-59.9	394,741.03	778,772.22	32° 4' 58.452 N	103° 34' 0.137 W
4,700.0	8.00	188.53	4,671.5	-412.9	-61.9	394,727.26	778,770.16	32° 4' 58.316 N	103° 34' 0.162 W
4,800.0	8.00	188.53	4,770.5	-426.7	-64.0	394,713.50	778,768.09	32° 4' 58.180 N	103° 34' 0.188 W
4,900.0	8.00	188.53	4,869.5	-440.5	-66.1	394,699.74	778,766.03	32° 4' 58.044 N	103° 34' 0.213 W
5,000.0	8.00	188.53	4,968.5	-454.2	-68.1	394,685.98	778,763.96	32° 4' 57.908 N	103° 34' 0.238 W
5,100.0	8.00	188.53	5,067.6	-468.0	-70.2	394,672.21	778,761.90	32° 4' 57.772 N	103° 34' 0.263 W
5,200.0	8.00	188.53	5,166.6	-481.8	-72.3	394,658.45	778,759.84	32° 4' 57.636 N	103° 34' 0.288 W
5,300.0	8.00	188.53	5,265.6	-495.5	-74.3	394,644.69	778,757.77	32° 4' 57.499 N	103° 34' 0.313 W
5,400.0	8.00	188.53	5,364.6	-509.3	-76.4	394,630.92	778,755.71	32° 4' 57.363 N	103° 34' 0.338 W

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Planned Survey										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Map Northing (usft)	Map Easting (usft)	Latitude	Longitude	
5,500.0	8.00	188.53	5,463.7	-523.1	-78.5	394,617.16	778,753.64	32° 4' 57.227 N	103° 34' 0.364 W	
5,600.0	8.00	188.53	5,562.7	-536.8	-80.5	394,603.40	778,751.58	32° 4' 57.091 N	103° 34' 0.389 W	
5,700.0	8.00	188.53	5,661.7	-550.6	-82.6	394,589.64	778,749.51	32° 4' 56.955 N	103° 34' 0.414 W	
5,800.0	8.00	188.53	5,760.7	-564.3	-84.7	394,575.87	778,747.45	32° 4' 56.819 N	103° 34' 0.439 W	
5,858.8	8.00	188.53	5,818.9	-572.4	-85.9	394,567.79	778,746.24	32° 4' 56.739 N	103° 34' 0.454 W	
5,900.0	7.18	188.53	5,859.8	-577.8	-86.7	394,562.40	778,745.43	32° 4' 56.686 N	103° 34' 0.464 W	
6,000.0	5.18	188.53	5,959.2	-588.5	-88.3	394,551.76	778,743.83	32° 4' 56.581 N	103° 34' 0.483 W	
6,100.0	3.18	188.53	6,059.0	-595.7	-89.3	394,544.56	778,742.75	32° 4' 56.510 N	103° 34' 0.496 W	
6,200.0	1.18	188.53	6,158.9	-599.4	-89.9	394,540.81	778,742.19	32° 4' 56.473 N	103° 34' 0.503 W	
6,258.8	0.00	0.00	6,217.6	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,300.0	0.00	0.00	6,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,400.0	0.00	0.00	6,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,500.0	0.00	0.00	6,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,600.0	0.00	0.00	6,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,700.0	0.00	0.00	6,658.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,800.0	0.00	0.00	6,758.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
6,900.0	0.00	0.00	6,858.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,000.0	0.00	0.00	6,958.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,100.0	0.00	0.00	7,058.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,200.0	0.00	0.00	7,158.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,300.0	0.00	0.00	7,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,400.0	0.00	0.00	7,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,500.0	0.00	0.00	7,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,600.0	0.00	0.00	7,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,700.0	0.00	0.00	7,658.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,800.0	0.00	0.00	7,758.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
7,900.0	0.00	0.00	7,858.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,000.0	0.00	0.00	7,958.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,100.0	0.00	0.00	8,058.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,200.0	0.00	0.00	8,158.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,300.0	0.00	0.00	8,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,400.0	0.00	0.00	8,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,500.0	0.00	0.00	8,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,600.0	0.00	0.00	8,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,700.0	0.00	0.00	8,658.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,800.0	0.00	0.00	8,758.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
8,900.0	0.00	0.00	8,858.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,000.0	0.00	0.00	8,958.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,100.0	0.00	0.00	9,058.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,200.0	0.00	0.00	9,158.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,300.0	0.00	0.00	9,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,400.0	0.00	0.00	9,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,500.0	0.00	0.00	9,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,600.0	0.00	0.00	9,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,700.0	0.00	0.00	9,658.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,800.0	0.00	0.00	9,758.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
9,900.0	0.00	0.00	9,858.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,000.0	0.00	0.00	9,958.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,100.0	0.00	0.00	10,058.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,200.0	0.00	0.00	10,158.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,300.0	0.00	0.00	10,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,400.0	0.00	0.00	10,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,500.0	0.00	0.00	10,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,600.0	0.00	0.00	10,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,700.0	0.00	0.00	10,658.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Planned Survey										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Map Northing (usft)	Map Easting (usft)	Latitude	Longitude	
10,800.0	0.00	0.00	10,758.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
10,900.0	0.00	0.00	10,858.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,000.0	0.00	0.00	10,958.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,100.0	0.00	0.00	11,058.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,200.0	0.00	0.00	11,158.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,241.1	0.00	0.00	11,200.0	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,300.0	0.00	0.00	11,258.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,400.0	0.00	0.00	11,358.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,500.0	0.00	0.00	11,458.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,600.0	0.00	0.00	11,558.9	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,647.7	0.00	0.00	11,606.5	-600.0	-90.0	394,540.21	778,742.10	32° 4' 56.467 N	103° 34' 0.504 W	
11,700.0	6.28	359.86	11,658.8	-597.1	-90.0	394,543.08	778,742.09	32° 4' 56.495 N	103° 34' 0.504 W	
11,800.0	18.28	359.86	11,756.3	-575.9	-90.1	394,564.31	778,742.04	32° 4' 56.705 N	103° 34' 0.503 W	
11,900.0	30.28	359.86	11,847.3	-534.9	-90.2	394,605.36	778,741.94	32° 4' 57.111 N	103° 34' 0.500 W	
12,000.0	42.28	359.86	11,927.8	-475.8	-90.3	394,664.42	778,741.80	32° 4' 57.696 N	103° 34' 0.497 W	
12,100.0	54.28	359.86	11,994.2	-401.3	-90.5	394,738.92	778,741.63	32° 4' 58.433 N	103° 34' 0.493 W	
12,200.0	66.28	359.86	12,043.7	-314.6	-90.7	394,825.61	778,741.42	32° 4' 59.291 N	103° 34' 0.488 W	
12,300.0	78.28	359.86	12,074.0	-219.5	-90.9	394,920.69	778,741.19	32° 5' 0.232 N	103° 34' 0.483 W	
12,397.7	90.00	359.86	12,084.0	-122.5	-91.1	395,017.67	778,740.96	32° 5' 1.191 N	103° 34' 0.478 W	
12,400.0	90.00	359.86	12,084.0	-120.2	-91.1	395,020.01	778,740.96	32° 5' 1.215 N	103° 34' 0.478 W	
12,500.0	90.00	359.86	12,084.0	-20.2	-91.4	395,120.00	778,740.72	32° 5' 2.204 N	103° 34' 0.472 W	
12,600.0	90.00	359.86	12,084.0	79.8	-91.6	395,220.00	778,740.48	32° 5' 3.194 N	103° 34' 0.467 W	
12,700.0	90.00	359.86	12,084.0	179.8	-91.9	395,320.00	778,740.24	32° 5' 4.183 N	103° 34' 0.461 W	
12,800.0	90.00	359.86	12,084.0	279.8	-92.1	395,420.00	778,740.00	32° 5' 5.173 N	103° 34' 0.456 W	
12,900.0	90.00	359.86	12,084.0	379.8	-92.3	395,519.99	778,739.76	32° 5' 6.162 N	103° 34' 0.450 W	
13,000.0	90.00	359.86	12,084.0	479.8	-92.6	395,619.99	778,739.53	32° 5' 7.152 N	103° 34' 0.445 W	
13,100.0	90.00	359.86	12,084.0	579.8	-92.8	395,719.99	778,739.29	32° 5' 8.141 N	103° 34' 0.439 W	
13,200.0	90.00	359.86	12,084.0	679.8	-93.1	395,819.98	778,739.05	32° 5' 9.131 N	103° 34' 0.434 W	
13,300.0	90.00	359.86	12,084.0	779.8	-93.3	395,919.98	778,738.81	32° 5' 10.120 N	103° 34' 0.428 W	
13,400.0	90.00	359.86	12,084.0	879.8	-93.5	396,019.98	778,738.57	32° 5' 11.110 N	103° 34' 0.423 W	
13,500.0	90.00	359.86	12,084.0	979.8	-93.8	396,119.98	778,738.33	32° 5' 12.099 N	103° 34' 0.417 W	
13,600.0	90.00	359.86	12,084.0	1,079.8	-94.0	396,219.97	778,738.10	32° 5' 13.089 N	103° 34' 0.412 W	
13,700.0	90.00	359.86	12,084.0	1,179.8	-94.2	396,319.97	778,737.86	32° 5' 14.078 N	103° 34' 0.406 W	
13,800.0	90.00	359.86	12,084.0	1,279.8	-94.5	396,419.97	778,737.62	32° 5' 15.068 N	103° 34' 0.401 W	
13,900.0	90.00	359.86	12,084.0	1,379.8	-94.7	396,519.96	778,737.38	32° 5' 16.058 N	103° 34' 0.395 W	
14,000.0	90.00	359.86	12,084.0	1,479.8	-95.0	396,619.96	778,737.14	32° 5' 17.047 N	103° 34' 0.390 W	
14,100.0	90.00	359.86	12,084.0	1,579.8	-95.2	396,719.96	778,736.90	32° 5' 18.037 N	103° 34' 0.384 W	
14,200.0	90.00	359.86	12,084.0	1,679.8	-95.4	396,819.95	778,736.67	32° 5' 19.026 N	103° 34' 0.379 W	
14,300.0	90.00	359.86	12,084.0	1,779.8	-95.7	396,919.95	778,736.43	32° 5' 20.016 N	103° 34' 0.373 W	
14,400.0	90.00	359.86	12,084.0	1,879.8	-95.9	397,019.95	778,736.19	32° 5' 21.005 N	103° 34' 0.368 W	
14,500.0	90.00	359.86	12,084.0	1,979.8	-96.1	397,119.95	778,735.95	32° 5' 21.995 N	103° 34' 0.362 W	
14,600.0	90.00	359.86	12,084.0	2,079.8	-96.4	397,219.94	778,735.71	32° 5' 22.984 N	103° 34' 0.357 W	
14,700.0	90.00	359.86	12,084.0	2,179.8	-96.6	397,319.94	778,735.47	32° 5' 23.974 N	103° 34' 0.351 W	
14,800.0	90.00	359.86	12,084.0	2,279.8	-96.9	397,419.94	778,735.24	32° 5' 24.963 N	103° 34' 0.346 W	
14,900.0	90.00	359.86	12,084.0	2,379.8	-97.1	397,519.93	778,735.00	32° 5' 25.953 N	103° 34' 0.340 W	
15,000.0	90.00	359.86	12,084.0	2,479.8	-97.3	397,619.93	778,734.76	32° 5' 26.942 N	103° 34' 0.335 W	
15,100.0	90.00	359.86	12,084.0	2,579.8	-97.6	397,719.93	778,734.52	32° 5' 27.932 N	103° 34' 0.329 W	
15,200.0	90.00	359.86	12,084.0	2,679.8	-97.8	397,819.93	778,734.28	32° 5' 28.921 N	103° 34' 0.324 W	
15,300.0	90.00	359.86	12,084.0	2,779.8	-98.1	397,919.92	778,734.04	32° 5' 29.911 N	103° 34' 0.318 W	
15,400.0	90.00	359.86	12,084.0	2,879.8	-98.3	398,019.92	778,733.81	32° 5' 30.900 N	103° 34' 0.313 W	
15,500.0	90.00	359.86	12,084.0	2,979.8	-98.5	398,119.92	778,733.57	32° 5' 31.890 N	103° 34' 0.307 W	
15,600.0	90.00	359.86	12,084.0	3,079.8	-98.8	398,219.91	778,733.33	32° 5' 32.879 N	103° 34' 0.302 W	
15,700.0	90.00	359.86	12,084.0	3,179.8	-99.0	398,319.91	778,733.09	32° 5' 33.869 N	103° 34' 0.296 W	
15,800.0	90.00	359.86	12,084.0	3,279.8	-99.2	398,419.91	778,732.85	32° 5' 34.859 N	103° 34' 0.291 W	
15,900.0	90.00	359.86	12,084.0	3,379.8	-99.5	398,519.91	778,732.61	32° 5' 35.848 N	103° 34' 0.286 W	

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Planned Survey										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Map Northing (usft)	Map Easting (usft)	Latitude	Longitude	
16,000.0	90.00	359.86	12,084.0	3,479.8	-99.7	398,619.90	778,732.38	32° 5' 36.838 N	103° 34' 0.280 W	
16,100.0	90.00	359.86	12,084.0	3,579.8	-100.0	398,719.90	778,732.14	32° 5' 37.827 N	103° 34' 0.275 W	
16,200.0	90.00	359.86	12,084.0	3,679.8	-100.2	398,819.90	778,731.90	32° 5' 38.817 N	103° 34' 0.269 W	
16,300.0	90.00	359.86	12,084.0	3,779.8	-100.4	398,919.89	778,731.66	32° 5' 39.806 N	103° 34' 0.264 W	
16,400.0	90.00	359.86	12,084.0	3,879.8	-100.7	399,019.89	778,731.42	32° 5' 40.796 N	103° 34' 0.258 W	
16,500.0	90.00	359.86	12,084.0	3,979.8	-100.9	399,119.89	778,731.18	32° 5' 41.785 N	103° 34' 0.253 W	
16,600.0	90.00	359.86	12,084.0	4,079.8	-101.2	399,219.88	778,730.95	32° 5' 42.775 N	103° 34' 0.247 W	
16,700.0	90.00	359.86	12,084.0	4,179.8	-101.4	399,319.88	778,730.71	32° 5' 43.764 N	103° 34' 0.242 W	
16,800.0	90.00	359.86	12,084.0	4,279.8	-101.6	399,419.88	778,730.47	32° 5' 44.754 N	103° 34' 0.236 W	
16,900.0	90.00	359.86	12,084.0	4,379.8	-101.9	399,519.88	778,730.23	32° 5' 45.743 N	103° 34' 0.231 W	
17,000.0	90.00	359.86	12,084.0	4,479.8	-102.1	399,619.87	778,729.99	32° 5' 46.733 N	103° 34' 0.225 W	
17,100.0	90.00	359.86	12,084.0	4,579.8	-102.3	399,719.87	778,729.75	32° 5' 47.722 N	103° 34' 0.220 W	
17,200.0	90.00	359.86	12,084.0	4,679.8	-102.6	399,819.87	778,729.52	32° 5' 48.712 N	103° 34' 0.214 W	
17,300.0	90.00	359.86	12,084.0	4,779.8	-102.8	399,919.86	778,729.28	32° 5' 49.701 N	103° 34' 0.209 W	
17,400.0	90.00	359.86	12,084.0	4,879.8	-103.1	400,019.86	778,729.04	32° 5' 50.691 N	103° 34' 0.203 W	
17,500.0	90.00	359.86	12,084.0	4,979.8	-103.3	400,119.86	778,728.80	32° 5' 51.680 N	103° 34' 0.198 W	
17,600.0	90.00	359.86	12,084.0	5,079.8	-103.5	400,219.86	778,728.56	32° 5' 52.670 N	103° 34' 0.192 W	
17,700.0	90.00	359.86	12,084.0	5,179.8	-103.8	400,319.85	778,728.32	32° 5' 53.660 N	103° 34' 0.187 W	
17,800.0	90.00	359.86	12,084.0	5,279.8	-104.0	400,419.85	778,728.09	32° 5' 54.649 N	103° 34' 0.181 W	
17,900.0	90.00	359.86	12,084.0	5,379.8	-104.3	400,519.85	778,727.85	32° 5' 55.639 N	103° 34' 0.176 W	
18,000.0	90.00	359.86	12,084.0	5,479.8	-104.5	400,619.84	778,727.61	32° 5' 56.628 N	103° 34' 0.170 W	
18,100.0	90.00	359.86	12,084.0	5,579.8	-104.7	400,719.84	778,727.37	32° 5' 57.618 N	103° 34' 0.165 W	
18,200.0	90.00	359.86	12,084.0	5,679.8	-105.0	400,819.84	778,727.13	32° 5' 58.607 N	103° 34' 0.159 W	
18,300.0	90.00	359.86	12,084.0	5,779.8	-105.2	400,919.84	778,726.89	32° 5' 59.597 N	103° 34' 0.154 W	
18,400.0	90.00	359.86	12,084.0	5,879.8	-105.4	401,019.83	778,726.66	32° 6' 0.586 N	103° 34' 0.148 W	
18,500.0	90.00	359.86	12,084.0	5,979.8	-105.7	401,119.83	778,726.42	32° 6' 1.576 N	103° 34' 0.143 W	
18,600.0	90.00	359.86	12,084.0	6,079.8	-105.9	401,219.83	778,726.18	32° 6' 2.565 N	103° 34' 0.137 W	
18,700.0	90.00	359.86	12,084.0	6,179.8	-106.2	401,319.82	778,725.94	32° 6' 3.555 N	103° 34' 0.132 W	
18,800.0	90.00	359.86	12,084.0	6,279.8	-106.4	401,419.82	778,725.70	32° 6' 4.544 N	103° 34' 0.126 W	
18,900.0	90.00	359.86	12,084.0	6,379.8	-106.6	401,519.82	778,725.46	32° 6' 5.534 N	103° 34' 0.121 W	
19,000.0	90.00	359.86	12,084.0	6,479.8	-106.9	401,619.81	778,725.23	32° 6' 6.523 N	103° 34' 0.115 W	
19,100.0	90.00	359.86	12,084.0	6,579.8	-107.1	401,719.81	778,724.99	32° 6' 7.513 N	103° 34' 0.110 W	
19,200.0	90.00	359.86	12,084.0	6,679.8	-107.4	401,819.81	778,724.75	32° 6' 8.502 N	103° 34' 0.104 W	
19,300.0	90.00	359.86	12,084.0	6,779.8	-107.6	401,919.81	778,724.51	32° 6' 9.492 N	103° 34' 0.099 W	
19,400.0	90.00	359.86	12,084.0	6,879.8	-107.8	402,019.80	778,724.27	32° 6' 10.481 N	103° 34' 0.093 W	
19,500.0	90.00	359.86	12,084.0	6,979.8	-108.1	402,119.80	778,724.03	32° 6' 11.471 N	103° 34' 0.088 W	
19,600.0	90.00	359.86	12,084.0	7,079.8	-108.3	402,219.80	778,723.80	32° 6' 12.460 N	103° 34' 0.082 W	
19,700.0	90.00	359.86	12,084.0	7,179.8	-108.5	402,319.79	778,723.56	32° 6' 13.450 N	103° 34' 0.077 W	
19,800.0	90.00	359.86	12,084.0	7,279.8	-108.8	402,419.79	778,723.32	32° 6' 14.440 N	103° 34' 0.071 W	
19,900.0	90.00	359.86	12,084.0	7,379.8	-109.0	402,519.79	778,723.08	32° 6' 15.429 N	103° 34' 0.066 W	
20,000.0	90.00	359.86	12,084.0	7,479.8	-109.3	402,619.79	778,722.84	32° 6' 16.419 N	103° 34' 0.060 W	
20,100.0	90.00	359.86	12,084.0	7,579.8	-109.5	402,719.78	778,722.60	32° 6' 17.408 N	103° 34' 0.055 W	
20,200.0	90.00	359.86	12,084.0	7,679.8	-109.7	402,819.78	778,722.37	32° 6' 18.398 N	103° 34' 0.049 W	
20,300.0	90.00	359.86	12,084.0	7,779.8	-110.0	402,919.78	778,722.13	32° 6' 19.387 N	103° 34' 0.044 W	
20,400.0	90.00	359.86	12,084.0	7,879.8	-110.2	403,019.77	778,721.89	32° 6' 20.377 N	103° 34' 0.038 W	
20,500.0	90.00	359.86	12,084.0	7,979.8	-110.4	403,119.77	778,721.65	32° 6' 21.366 N	103° 34' 0.033 W	
20,600.0	90.00	359.86	12,084.0	8,079.8	-110.7	403,219.77	778,721.41	32° 6' 22.356 N	103° 34' 0.027 W	
20,700.0	90.00	359.86	12,084.0	8,179.8	-110.9	403,319.77	778,721.17	32° 6' 23.345 N	103° 34' 0.022 W	
20,800.0	90.00	359.86	12,084.0	8,279.8	-111.2	403,419.76	778,720.94	32° 6' 24.335 N	103° 34' 0.016 W	
20,900.0	90.00	359.86	12,084.0	8,379.8	-111.4	403,519.76	778,720.70	32° 6' 25.324 N	103° 34' 0.011 W	
21,000.0	90.00	359.86	12,084.0	8,479.8	-111.6	403,619.76	778,720.46	32° 6' 26.314 N	103° 34' 0.005 W	
21,100.0	90.00	359.86	12,084.0	8,579.8	-111.9	403,719.75	778,720.22	32° 6' 27.303 N	103° 34' 0.000 W	
21,200.0	90.00	359.86	12,084.0	8,679.8	-112.1	403,819.75	778,719.98	32° 6' 28.293 N	103° 33' 59.994 W	
21,300.0	90.00	359.86	12,084.0	8,779.8	-112.4	403,919.75	778,719.74	32° 6' 29.282 N	103° 33' 59.989 W	
21,400.0	90.00	359.86	12,084.0	8,879.8	-112.6	404,019.74	778,719.51	32° 6' 30.272 N	103° 33' 59.983 W	

Microsoft
Planning Report - Geographic

Database:	Old	Local Co-ordinate Reference:	Well Rojo #46H
Company:	BTA Oil Producers, LLC	TVD Reference:	GL @ 3319.0usft
Project:	Lea County, NM (NAD 83)	MD Reference:	GL @ 3319.0usft
Site:	Rojo	North Reference:	Grid
Well:	Rojo #46H	Survey Calculation Method:	Minimum Curvature
Wellbore:	Wellbore #1		
Design:	Design #1		

Planned Survey										
Measured Depth (usft)	Inclination (°)	Azimuth (°)	Vertical Depth (usft)	+N/-S (usft)	+E/-W (usft)	Map Northing (usft)	Map Easting (usft)	Latitude		Longitude
21,487.4	90.00	359.86	12,084.0	8,967.1	-112.8	404,107.10	778,719.30	32° 6' 31.136 N		103° 33' 59.978 W

Design Targets										
Target Name	Dip Angle (°)	Dip Dir. (°)	TVD (usft)	+N/-S (usft)	+E/-W (usft)	Northing (usft)	Easting (usft)	Latitude		Longitude
- hit/miss target										
- Shape										
Rojo #46H BHL	0.00	0.00	12,084.0	8,967.1	-112.8	404,107.10	778,719.30	32° 6' 31.136 N		103° 33' 59.978 W
- plan hits target center										
- Point										






Weatherford®

**WFT Casing Head (Slip on Weld
with O-Ring) Running Procedure**

Publication RP-001

October 21, 2010

© 2010 Weatherford International Inc. All rights reserved

 Weatherford 5-2-GL-GL-WES-00052	WFT Casing Head (Slip on Weld with O-Ring) Running Procedure	Approved By:	Reviewed By:	RP-001
				Rev 0
		Date: Oct 21, 2010	Date: Oct 21, 2010	

Install the Casing Head



1. Examine the **WFT Casing Head**. Verify the following:
 - bore is clean and free of debris
 - seal areas, threads and ring grooves are clean and undamaged
 - o-ring is properly installed, clean and undamaged
 - all peripheral equipment is intact and undamaged
2. Measure the pocket depth of the Casing Head and record this dimension.
3. Run the surface casing and cement as required.
4. Determine the required elevation of the Casing Head as required by the Drilling Supervisor.
5. Use the following calculation to determine the correct final cut location of the surface casing.

X = Pocket Depth

Y = Overall Casing Head Height

Y - X = Distance from correct elevation point to surface casing cutoff height.

6. Lift the riser assembly high enough to rough cut the surface casing a minimum of 12" above the anticipated final cut location, if applicable.
7. Remove the spent portion of surface casing and the riser assembly and set aside.
8. Determine the correct elevation for the wellhead assembly.
9. Rough cut the surface casing a minimum of 12" above the final cut location.
10. Cut the conductor pipe a comfortable level below the final cut location of the surface casing.

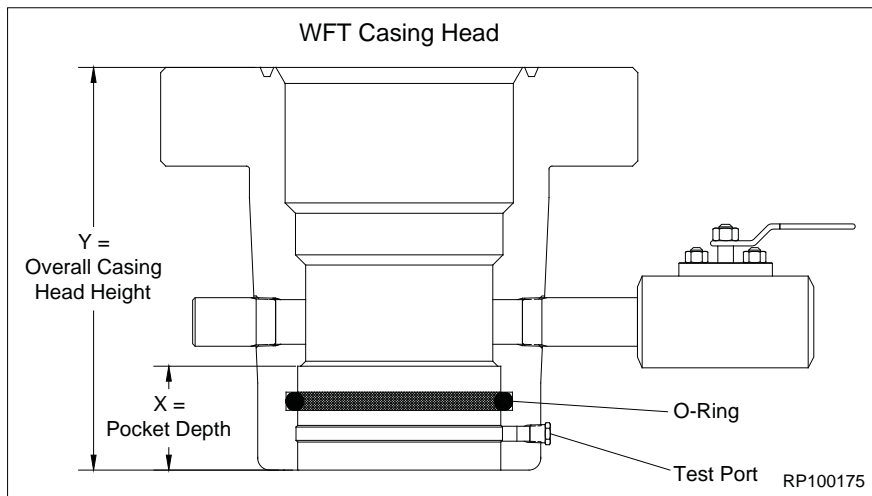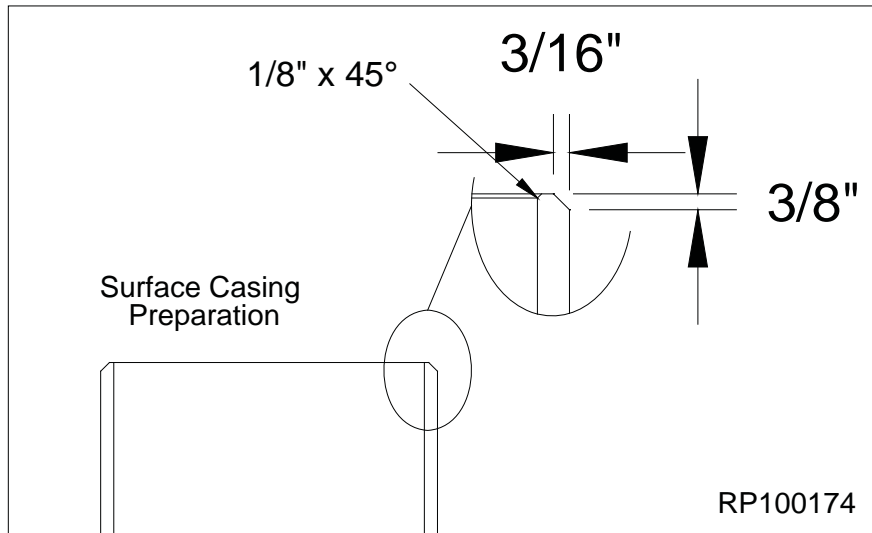

11. Final cut the surface casing at the correct elevation.

NOTE: Ensure the cut on the surface casing is level as this will determine the orientation of the remainder of the wellhead equipment.

12. Bevel the surface casing with a 3/16" x 3/8" bevel and remove any sharp edges from the OD of the casing.
13. Break a 1/8" x 45° bevel on the ID of the surface casing.



WFT Casing Head (Slip on Weld with O-Ring) Running Procedure

Approved By:

Reviewed By:

RP-001

BO

Bruce J. Ross

Rev 0

Date:
Oct 21, 2010

Date:
Oct 21, 2010


Page 1




Install the Casing Head

14. Wipe the ID of the o-ring of the Casing Head with a light coat of oil or grease.

NOTE: Excessive oil or grease will prevent a positive seal from forming.

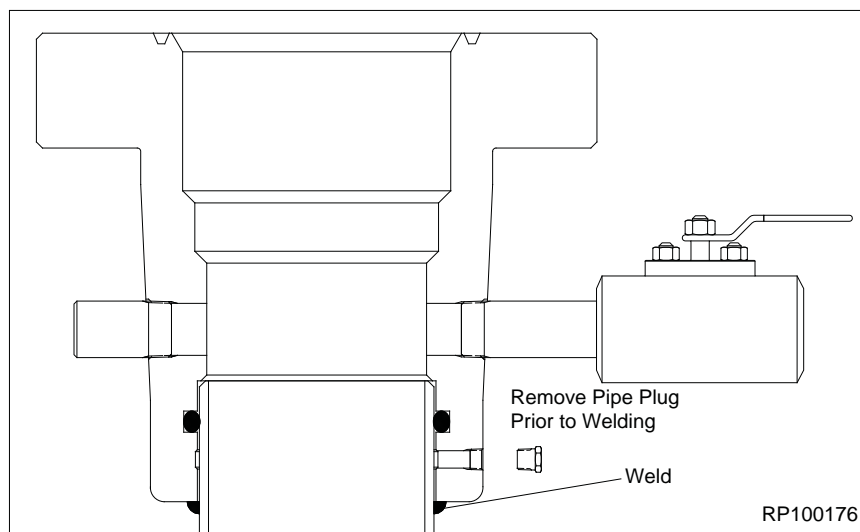15. Lower the Casing Head over the surface casing stub to a positive stop.
16. Remove the fitting from the test port and set aside.
17. Orient the Casing Head as per the Drilling Superintendents instructions ensuring the face of the Casing Head is level and two holed to the drilling rig substructure.
18. Weld and test the surface casing to the Casing Head as per the **RECOMMENDED FIELD WELDING PROCEDURE** located in the back of this manual.
19. Once all welding and testing is completed, replace the fitting into the open port and close the valve on the Casing Head.






RP-001	Reviewed By:	Approved By:	WFT Casing Head (Slip on Weld with O-Ring) Running Procedure	 Weatherford
Rev 0				
Page 2	Date: Oct 21, 2010	Date: Oct 21, 2010		
Released to Imaging: 3/24/2022 3:43:09 PM			5-2-GL-GL-WES-00052	

Recommended Procedure for Field Welding Pipe to Wellhead Parts for Pressure Seal

1. **Introduction and Scope.** The following recommended procedure has been prepared with particular regard to attaining pressure-tight weld when attaching casing heads, flanges, etc., to casing. Although most of the high strength casing used (such as N-80) is not normally considered field weldable, some success may be obtained by using the following or similar procedures.

Caution: In some wellheads, the seal weld is also a structural weld and can be subjected to high tensile stresses. Consideration must therefore be given by competent authority to the mechanical properties of the weld and its heat affected zone.


 - a. The steels used in wellhead parts and in casing are high strength steels that are susceptible to cracking when welded. It is imperative that the finished weld and adjacent metal be free from cracks. The heat from welding also affects the mechanical properties. This is especially serious if the weld is subjected to service tension stresses.
 - b. This procedure is offered only as a recommendation. The responsibility for welding lies with the user and results are largely governed by the welder's skill. Weldability of the several makes and grades of casing varies widely, thus placing added responsibility on the welder. Transporting a qualified welder to the job, rather than using a less-skilled man who may be at hand, will, in most cases, prove economical. The responsible operating representative should ascertain the welder's qualifications and, if necessary, assure himself by instruction or demonstration, that the welder is able to perform the work satisfactorily.
2. **Welding Conditions.** Unfavorable welding conditions must be avoided or minimized in every way possible, as even the most skilled welder cannot successfully weld steels that are susceptible to cracking under adverse working conditions, or when the work is rushed. Work above the welder on the drilling floor should be avoided. The weld should be protected from dripping mud, water, and oil and from wind, rain, or other adverse weather conditions. The drilling mud, water, or other fluids must be lowered in the casing and kept at a low level until the weld has properly cooled. It is the responsibility of the user to provide supervision that will assure favorable working conditions, adequate time, and the necessary cooperation of the rig personnel.
3. **Welding.** The welding should be done by the shielded metal-arc or other approved process.
4. **Filler Metal.** Filler Metals. For root pass, it's recommended to use E6010, E6011 (AC), E6019 or equivalent electrodes. The E7018 or E7018-A1 electrodes may also be used for root pass operations but has the tendency to trap slag in tight grooves. The E6010, E6011 and E6019 offer good penetration and weld deposit ductility with relatively high intrinsic hydrogen content. Since the E7018 and E7018-A1 are less susceptible to hydrogen induced cracking, it is recommended for use as the filler metal for completion of the weld groove after the root pass is completed. The E6010, E6011 (AC), E6019, E7018 and E7018-A1 are classified under one of the following codes AWS A5.1 (latest edition): Mild Steel covered electrodes or the AWS A5.5 (latest edition): Low Alloy Steel Covered Arc-Welding Electrodes. The low hydrogen electrodes, E7018 and E7018-A1, should not be exposed to the atmosphere until ready for use. It's recommended that hydrogen electrodes remain in their sealed containers. When a job arises, the container shall be opened and all unused remaining electrodes to be stored in heat electrode storage ovens. Low hydrogen electrodes exposed to the atmosphere, except water, for more than two hours should be dried 1 to 2 hours at 600°F to 700 °F (316°C to 371 °C) just before use. It's recommended for any low hydrogen electrode containing water on the surface should be scrapped.
5. **Preparation of Base Metal.** The area to be welded should be dry and free of any paint, grease/oil and dirt. All rust and heat-treat surface scale shall be ground to bright metal before welding.
6. **Preheating.** Prior to any heating, the wellhead member shall be inspected for the presence of any o-rings or other polymeric seals. If any o-rings or seals are identified then preheating requires close monitoring as noted in paragraph 6a. Before applying preheat, the fluid should be bailed out of the casing to a point several inches (>6" or 150 mm) below the weld joint/location. Preheat both the casing and wellhead member for a minimum distance of three (3) inches on each side of the weld joint using a suitable preheating torch in accordance with the temperatures shown below in a and b. The preheat temperature should be checked by the use of heat sensitive crayons. Special attention must be given to preheating the thick sections of wellhead parts to be welded, to insure uniform heating and expansion with respect to the relatively thin casing.
 - a. Wellhead members containing o-rings and other polymeric seals have tight limits on the preheat and interpass temperatures. Those temperatures must be controlled at 200°F to 325°F or 93 °C to 160°C and closely monitored to prevent damage to the o-ring or seals.
 - b. Wellhead members not containing o-rings and other polymeric seals should be maintained at a preheat and interpass temperature of 400°F to 600°F or 200°C to 300°C.

 5-2-GL-GL-WES-00052	WFT Casing Head (Slip on Weld with O-Ring) Running Procedure	Approved By:	Reviewed By:	RP-001
				Rev 0
		Date: Oct 21, 2010	Date: Oct 21, 2010	Page 3

Recommended Procedure for Field Welding Pipe to Well-head Parts for Pressure Seal (continued)

- 7. Welding Technique.** Use a 1/8 or 5/32-inch (3.2 or 4.0 mm) E6010 or E7018 electrode and step weld the first bead (root pass); that, weld approximately 2 to 4 inches (50 to 100 mm) and then move diametrically opposite this point and weld 2 to 4 inches (50 to 100 mm) halfway between the first two welds, move diametrically opposite this weld, and so on until the first pass is completed. This second pass should be made with a 5/32-inch (4.0 mm) low hydrogen electrode of the proper strength and may be continuous. The balance of the welding groove may then be filled with continuous passes without back stepping or lacing, using a 3/16-inch (4.8 mm) low hydrogen electrode. All beads should be stringer beads with good penetration. There should be no undercutting and weld shall be workmanlike in appearance.
- a.** Test ports should be open when welding is performed to prevent pressure buildup within the test cavity.
- b.** During welding the temperature of the base metal on either side of the weld should be maintained at 200 to 300°F (93 to 149°C).
- c.** Care should be taken to insure that the welding cable is properly grounded to the casing, but ground wire should not be welded to the casing or the wellhead. Ground wire should be firmly clamped to the casing, the wellhead, or fixed in position between pipe slips. Bad contact may cause sparking, with resultant hard spots beneath which incipient cracks may develop. The welding cable should not be grounded to the steel derrick, nor to the rotary-table base.
- 8. Cleaning.** All slag or flux remaining on any welding bead should be removed before laying the next bead. This also applies to the completed weld.
- 9. Defects.** Any cracks or blow holes that appear on any bead should be removed to sound metal by chipping or grinding before depositing the next bead.
- 10. Postheating.** Post-heating should be performed at the temperatures shown below and held at that temperature for no less than one hour followed by a slow cooling. The post-heating temperature should be in accordance with the following paragraphs.
- a.** Wellhead members containing o-rings and other polymeric seals have tight limits on the post-heating temperatures. Those temperatures must be controlled at 250°F to 300°F or 120 °C to 150°C and closely monitored to prevent damage to the o-ring or seals.
- b.** Wellhead members not containing o-rings and other polymeric seals should be post-heated at a temperature of 400°F to 600°F or 200°C to 300°C.
- 11. Cooling.** **Rapid cooling must be avoided.** To assure slow cooling, welds should be protected from extreme weather conditions (cold, rain, high winds, etc.) by the use of suitable insulating material. (Specially designed insulating blankets are available at many welding supply stores.) Particular attention should be given to maintaining uniform cooling of the thick sections of the wellhead parts and the relatively thin casing, as the relatively thin casing will pull away from the head or hanger if allowed to cool more rapidly. The welds should cool in air to less than 200°F (93°C) (measured with a heat sensitive crayon) prior to permitting the mud to rise in the casing.
- 12. Test the Weld.** After cooling, test the weld. The weld must be cool otherwise the test media will crack the weld. The test pressure should be no more than 80% of the casing collapse pressure.

Test Media	
Acceptable Medias	Unacceptable Medias
Water Water Soluable Oil Inert Gas <ul style="list-style-type: none"> •Nitrogen •Argon Gas 	Oxygen Acetylene Hydraulic Oil Motor Oil Brake Fluid

RP-001	Reviewed By:	Approved By:	WFT Casing Head (Slip on Weld with O-Ring) Running Procedure	 Weatherford
Rev 0	<i>Bruce J. Ross</i>	<i>BO</i>		
Page 4	Date: Oct 21, 2010	Date: Oct 21, 2010		
			5-2-GL-GL-WES-00052	



Weatherford®




Wellhead Field Service Manual

WFT-SB Wellhead System Running Procedure

Publication: SM-11-1

Release Date: December 2014

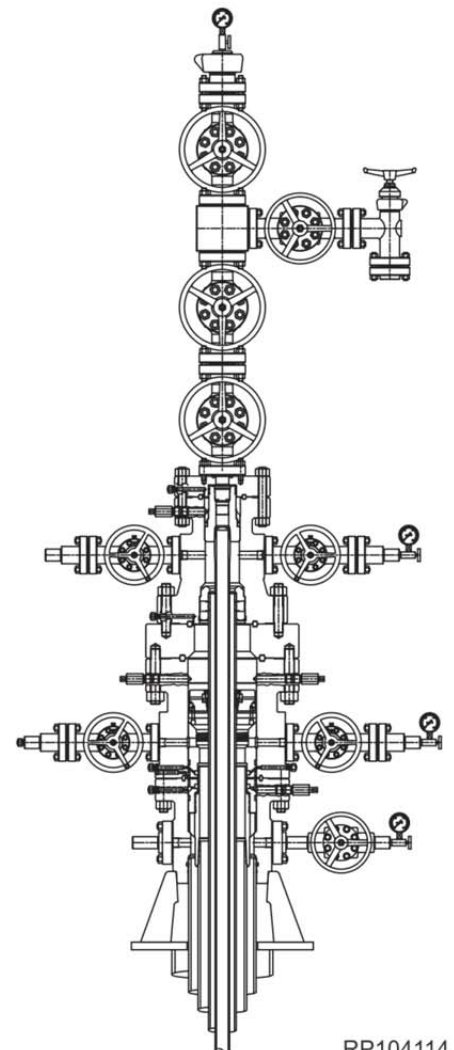

RP104114

©2014 Weatherford International Ltd. All Rights Reserved


 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-11-1
		<i>Marion Robertson</i>	<i>Bruce Ross</i>	<i>Manuel Zaragoza</i>	Rev WIP
		Marion Robertson Dec 2014	Bruce Ross Dec 2014	Manuel Zaragoza Dec 2014	Page 1 of 24


Table of Content

WFT-Split Bowl (SB) Wellhead System


Wellhead System Assembly Drawing	3
---	----------


Running Procedure

Casing Head/Spool Assembly Rig-Up and Installation	4
Testing the BOP	5
Running and Retrieving the Long Bowl Protector.....	3
Running the Bowl Protector Prior to Drilling	6
Retrieving the Bowl Protector After Drilling	7
Hanging Off the Intermediate Casing.....	7
Hanging Off the Intermediate Casing- Contingency Completion.....	9
Installation of the Pack-Off Bushing and Energizing the Seals	10
Installation	10
Energizing the Seal	12
Retesting the BOP Stack.....	14
Running and Retrieving the Short Bowl Protector	15
Running Short Bowl Protector	15
Retrieving the Short Bowl Protector	16
Running the Production Casing	16
Installation of the Slip-Type Casing Hanger Under the BOP Stack	16
Installation of the Slip-Type Casing Hanger Through the BOP Stack.....	17
Hanging Off the Production Casing	18
Installation and Testing the Tubing Spool Assembly	20
Installation	20
Testing the Secondary Seal and Flange Connection	20
Testing the BOP	21
Hanging Off the Production Tubing String.....	22
Installing and Testing of the Production Tree.....	23
Installation	23
Testing	24

 Weatherford 5-3-GL-GL-WES-00XXX	Field Services Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		Dec 2014	Dec 2014	Dec 2014	Page 2 of 24

WFT Split Bowl (SB) Wellhead System

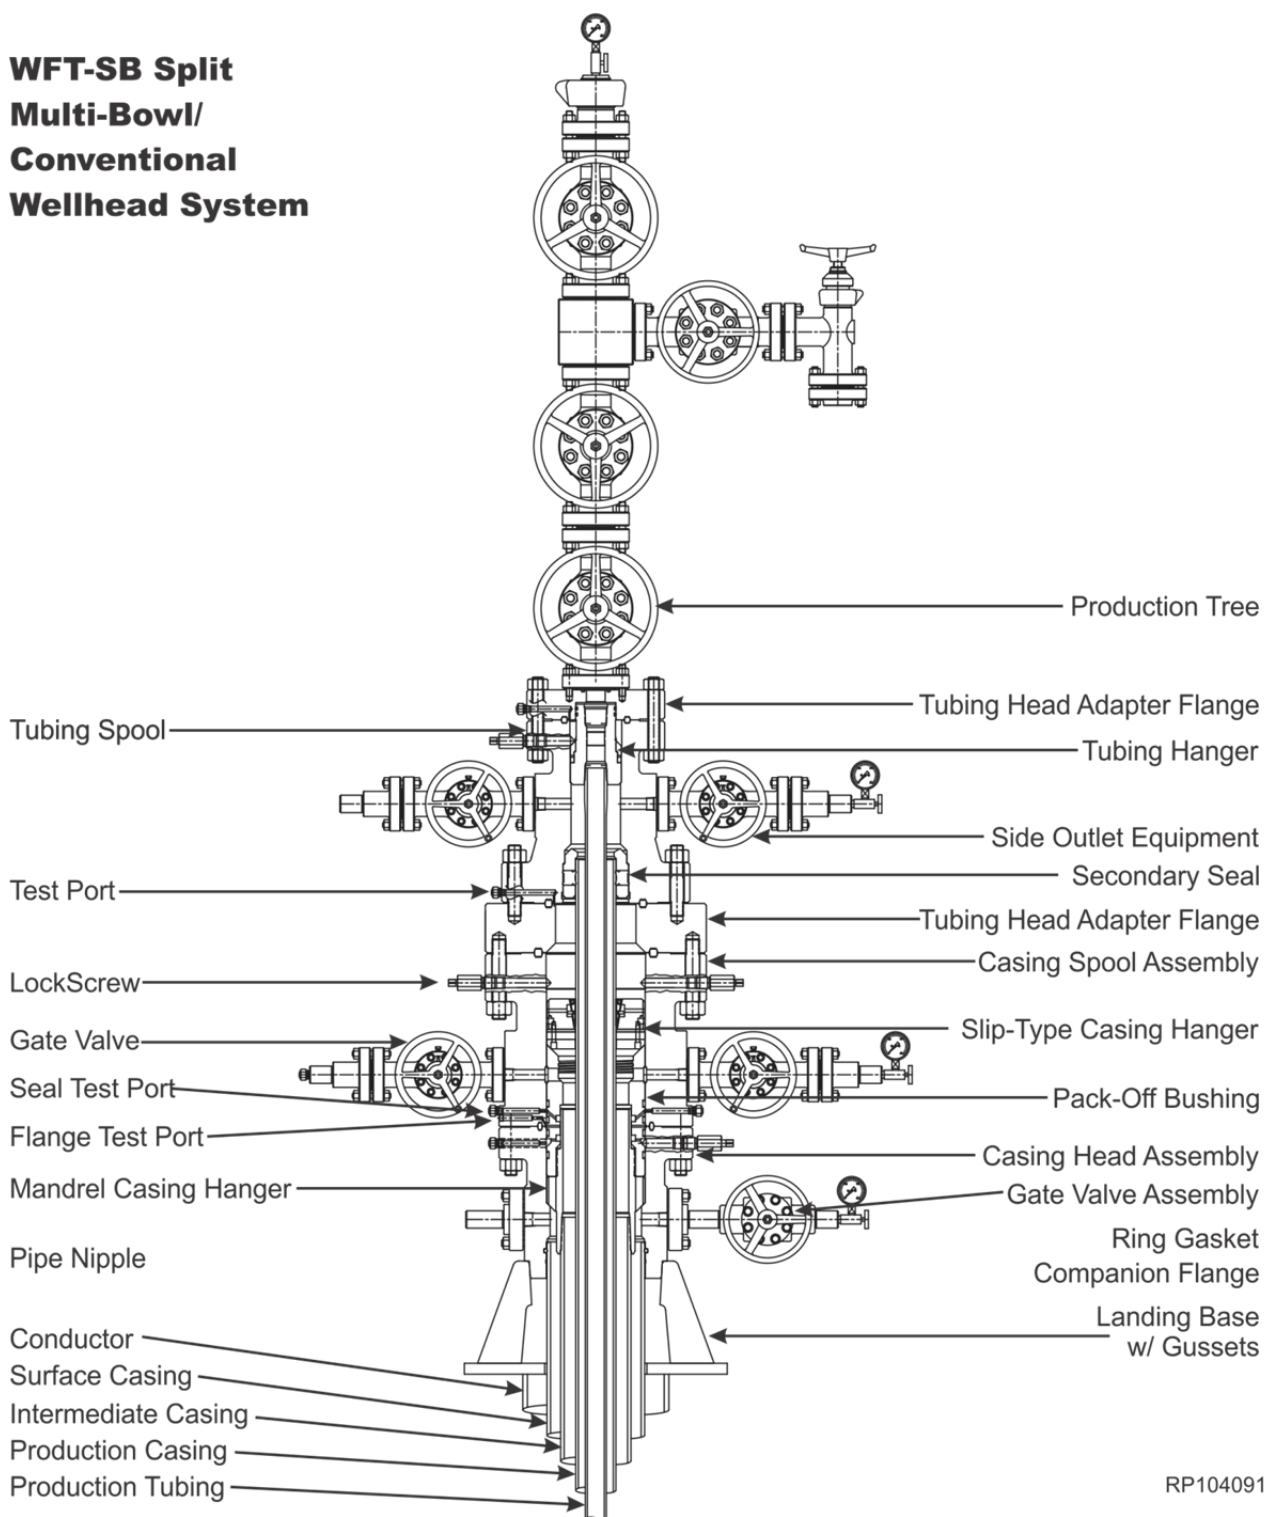**WFT-SB Split
Multi-Bowl/
Conventional
Wellhead System**

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 3 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Multi-Bowl/Conventional Wellhead System (Continued)

WFT-SB Casing Head/Spool Assembly Rig Up and Installation


1. Determine the correct elevation for the wellhead system, and cut the conductor pipe at a comfortable elevation, below the surface casing final cut.

NOTE

Ensure that the cut on the conductor is level, as this will determine the orientation of all remaining wellhead equipment.

2. Remove any excess conductor pipe and set aside.
3. Grind the conductor pipe and remove any sharp edges, ensuring that the conductor pipe cut is level.
4. Run the surface casing to the required depth and cement casing in place. Allow the cement to set.
5. Lift the blow-out preventer (BOP) or diverter and prepare to cut off the surface casing at a sufficient height above the cellar deck to facilitate the installation of the WFT-SB Casing Head/Spool Assembly with Base Plate.
6. Once the surface casing is released from the rig floor, cut it approximately 12 inches (or more) above the final cut location.
7. Remove the excess surface casing, and the BOP or diverter, and set aside.
8. Bevel the surface casing outer diameter (3/16" x 3/8") and inner diameter (1/8" x 45 degrees). Remove any sharp edges.

9. Examine the Casing Head with Slip-On Weld (SOW) bottom prep. Verify the following:
 - O-ring seal, bore, ports and exposed ring grooves are clean and in good condition.
 - Test fittings, studs and nuts, valves, flanges and bull plugs are intact and in good condition.

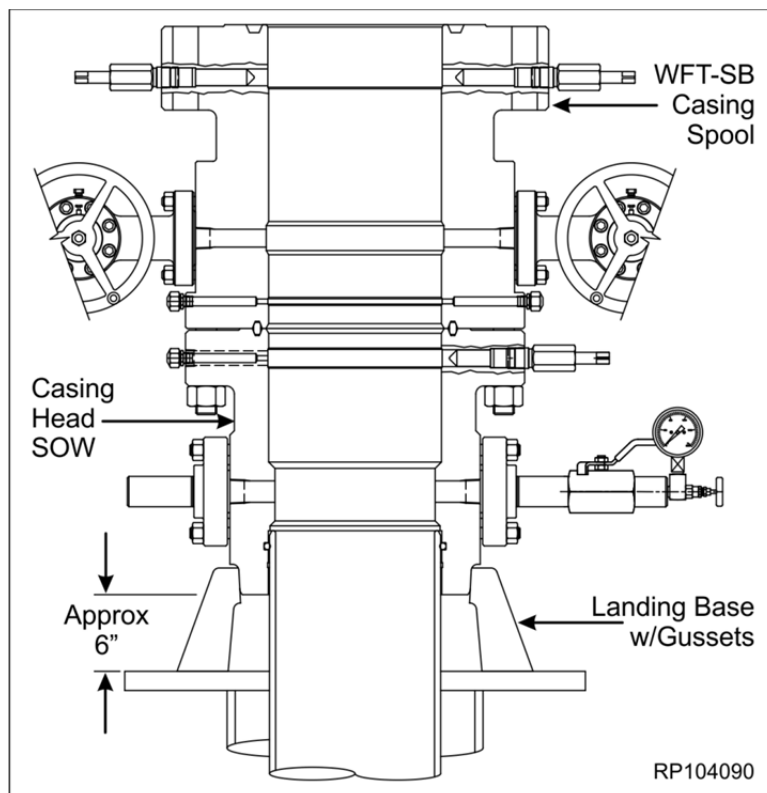


10. Determine the correct elevation for the wellhead assembly. Measure depth of the surface casing socket in SOW with O-ring bottom prep.
11. Lightly lubricate the casing stub with an oil or light grease.



Excessive oil or grease will prevent a positive seal from forming.

12. Align and level the WFT-SB Casing Head/Spool Assembly over the casing stub, orienting the outlets to drilling equipment, per the drilling supervisor's direction.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		December 2014	December 2014	December 2014	Page 4 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

14. Slowly and carefully lower the assembly over the casing stub until the stub bottoms in the casing socket.
15. Remove the test fitting from the casing head test port, and set aside.
16. Ensure that the WFT-SB Casing Head/Spool Assembly is plumb and level.
17. Weld and test the surface casing using the recommended welding procedure located in the Appendices Section of this manual.

Testing the BOP Stack

1. Examine the Test Plug/Running & Retrieval Tool. Verify the following:
 - Elastomer seals, threads and plugs are intact and in good condition.
 - Drill pipe threads are correct size, clean and in good condition.
2. Install a new, appropriately sized ring gasket in the ring groove of the WFT-SB Spool and make up the BOP stack.

NOTE

Immediately after make-up of the BOP stack and periodically during drilling of hole for the casing string, the BOP stack (flanged connections and rams) must be tested.

3. Orient the test plug with elastomer down/ACME threads up, and make up a joint of drill pipe to the test plug.


NOTE


If pressure is to be supplied through the drill pipe, remove the pipe plug from the weep port.



Ensure that the test plug elastomer is down and Acme threads are up when testing.

4. Fully retract all lockscrews in the entire WFT-SB casing head/spool assembly.
5. Lubricate the test plug elastomer seal with a light oil or grease.
6. Lower the test plug through the BOP stack into the WFT-SB assembly, until it lands on the casing head load shoulder.

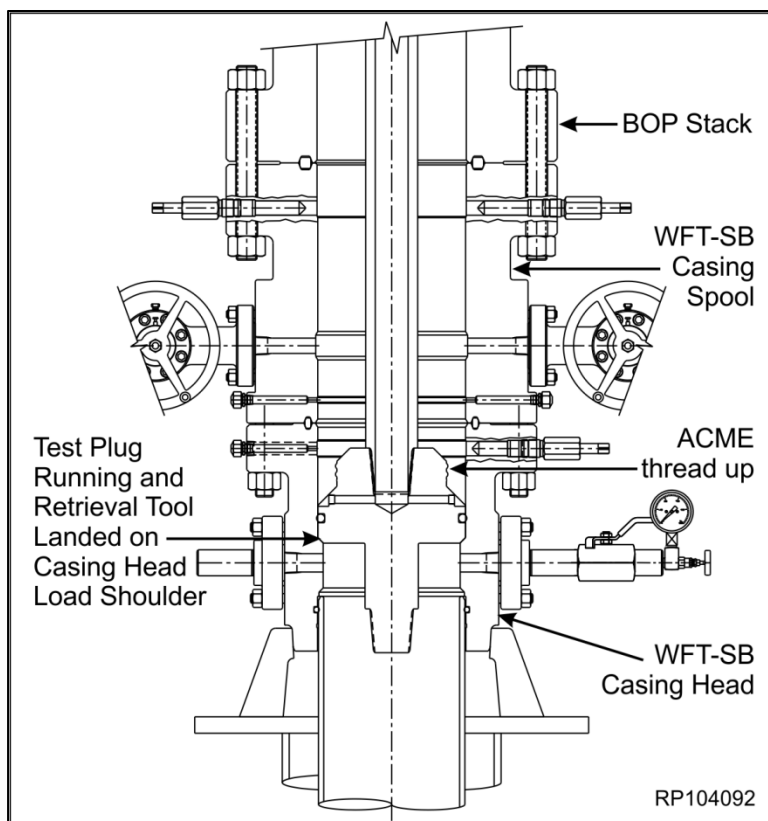

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 5 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

7. Open lower casing head side outlet valve. Monitor any leakage past the test plug seal.
 8. Close the BOP rams on the drill pipe, and test to **5,000 psi or as required by the drilling supervisor**.
 9. After a satisfactory test is achieved, release pressure and open the rams.
 10. Remove as much fluid from the BOP stack as possible.
 11. Retrieve the test plug assembly slowly to avoid damage to the seal.
 12. Close all outlet valves on WFT-SB Casing Head/Spool Assembly.
 13. Repeat Steps 1 thru 12, as required during drilling of the hole.
2. Examine the Bowl Protector Running/Retrieval Tool. Verify the following:
 - Threads are clean, undamaged and free of debris
 - Ports are clean and unobstructed.
 - Drill Pipe threads are correct size, clean and in good condition.
 3. Orient the Bowl Protector Running Tool with Acme threads down.



Ensure that the left hand (LH) Acme threads are down prior to engaging Bowl Protector Running Tool into Long Bowl Protector.


Running and Retrieval of the Long Bowl Protector

NOTE


Always use a bowl protector while drilling to protect wellhead load shoulders from damage by drill bit or rotating drill pipe. The bowl protector must be retrieved prior to running the casing string.

Running in the Bowl Protector prior to Drilling

1. Examine the Long Bowl Protector. Verify the following:
 - Bore drift is correct size, clean, in good condition, and free of debris
 - Threads are clean and undamaged
 - O-ring seals are properly installed, clean, and undamaged.

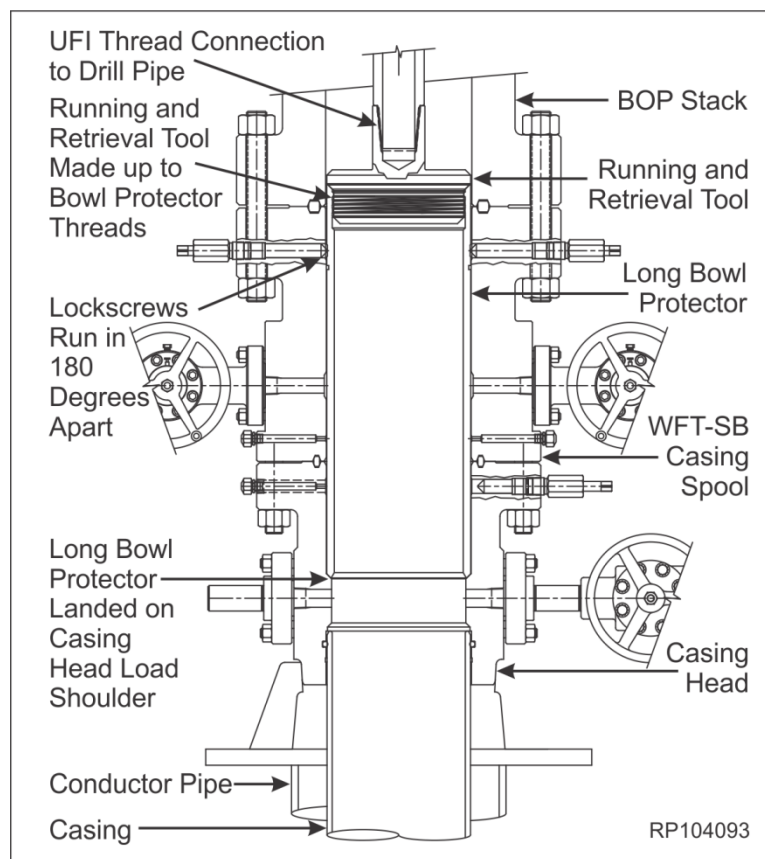

RP104093

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 6 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

4. Make-up a drill pipe joint to the Running Tool.
5. Thread Running Tool into the Long Bowl Protector, rotating two turns counterclockwise.
6. Verify that all lockscrews in the WFT-SB Casing Head/Spool Assembly are fully retracted.
7. Slowly lower the Running Tool/Bowl Protector Assembly through the BOP stack and into the WFT-SB Casing Head/Spool Assembly, until it lands securely on the casing head load shoulder.
8. On WFT-SB Casing Spool, run in two Lockscrews ("snug" tight **ONLY**), 180 degrees apart, to hold Bowl Protector in place.



Do NOT over tighten the lockscrews, as this will cause damage to the Bowl Protector and the lockscrews.

9. Remove the running tool from the bowl protector, by rotating the drill pipe clockwise two turns while lifting straight up.
10. Drill out and prepare to run the casing string per the drilling supervisor's instruction.

Retrieving the Bowl Protector after Drilling

1. Make-up the retrieval tool to the drill pipe, with Acme threads down.
2. Slowly lower the retrieval tool through the BOP Stack into the Bowl Protector.
3. Rotate the retrieval Tool counterclockwise, two turns, to engage with bowl protector Acme threads.

4. Fully retract both lockscrews on the WFT-SB casing spool, and retrieve the bowl protector.

NOTE

Ensure that all lockscrews in both the upper flange (casing spool) and lower flange (casing head) of the wellhead Assembly are fully retracted from well bore.

5. Remove the bowl protector and the running and retrieval tool from the drill floor.

Hanging off the Intermediate Casing

1. Run the intermediate casing as required and space out appropriately for the mandrel casing hanger.


NOTE

If the intermediate casing becomes stuck and the mandrel casing hanger cannot be landed, refer to STAGE 4B.

2. Examine the WFT-SBD-SN Mandrel Casing Hanger. Verify the following:
 - Bore drift is correct size, clean and free of debris
 - All threads are clean and undamaged.
 - Flow-By flutes are clear and unobstructed.
 - Slick Neck seal area is clean and undamaged.
3. Examine the Mandrel Casing Hanger Running Tool. Verify the following:
 - Threads are clean and in good condition.
 - O-ring seals are clean and undamaged.
4. Thread the mandrel hanger onto the last joint of casing to be run. Torque the connection thread to manufacturer's optimum "make-up" torque value.
5. Make up a landing joint to the top of the running tool. Torque the connection to thread manufacturer's maximum "make-up" torque valve.



If Steps 4 and 5 were performed prior to being shipped to location, the hanger running tool should be backed off and made back up to ensure it will back off freely.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 7 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

6. Liberally lubricate the outer diameter of the hanger neck and inner diameter of the running tool O-ring seals with a light oil or grease.



Do NOT use pipe dope or other metal based compounds. This will cause galling.


7. Maintaining a neutral weight, rotate the hanger running tool with chain tongs, first clockwise until a thread "jump" can be felt, then counterclockwise, approximately eight turns, to a positive stop, and then back off (clockwise) one quarter (1/4) turn.




Do NOT torque the running tool to the casing hanger connection. Do NOT back off more than one quarter (1/4) turn.

8. Remove the flush fitting hex head pipe plug from the outer diameter of the running tool and attach a test pump.
9. Apply hydraulic test pressure to **5,000 psi and hold for 15 minutes or as required by the drilling supervisor.**
10. Upon completion of a successful test, bleed off test pressure through the test pump and remove the pump. Replace the pipe plug.
11. Locate indicator groove machined in outer diameter of Running Tool, coat with white paint.

12. Verify that all lockscrews in the WFT-SB casing head/casing spool assembly are fully retracted.
13. Slowly and carefully lower the mandrel hanger through the BOP stack, and land the hanger onto the casing head load shoulder.
14. Slack off weight on the casing.
15. Check that the well is stable and no pressure buildup or mud flow is occurring.

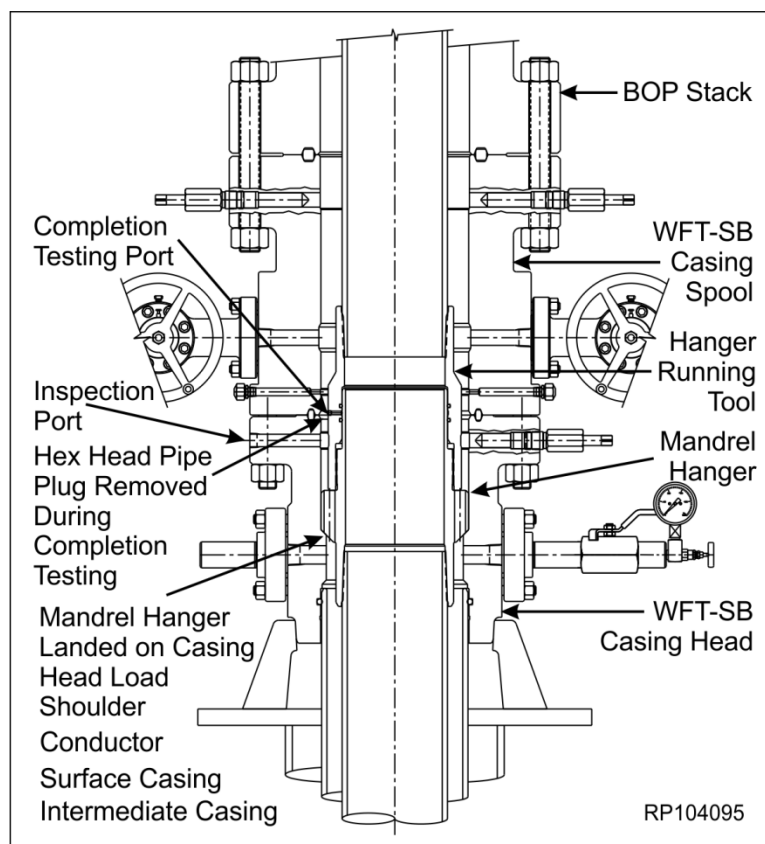

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 8 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

16. Drain the BOP stack through the casing head side outlet valves.
17. Remove the pipe plug from the casing head flange port marked "Inspection Port."
18. Visually verify that the running tool groove is in the center of the inspection port, and that the mandrel hanger has landed properly.
19. Reinstall the pipe plug and tighten securely.
20. Place a paint mark on the landing joint level with the rig floor, and cement casing as required.

NOTE



If the casing is to be reciprocated during cementing, it is advisable to pick up the mandrel hanger a minimum of eight feet above the landing point. Place a mark on the landing joint, level with the rig floor, and then reciprocate above that point. If at any time resistance is felt, land the mandrel casing hanger immediately.

21. Retrieve the hanger running tool and landing joint by rotating landing joint clockwise (to the right), fourteen full turns.

Hanging off Intermediate Casing – Contingency Completion**NOTE**

The following procedure should **ONLY** be followed if the intermediate casing should become stuck in the hole. If the casing did **NOT** get stuck and is successfully hung off with the mandrel casing hanger, skip this stage.

1. Cement the intermediate casing in accordance with the program, taking returns through the flow-by flutes of the mandrel casing hanger as required.
2. Drain the casing head bowl through the side outlet.
3. Separate the WFT-SB casing spool from the casing head.
4. Pull up on WFT-SB casing spool and suspend it above casing head, high enough to install a WFT-21 Slip Type Casing Hanger.
5. Wash out as required.
6. Examine the WFT-21 slip type casing hanger. Verify the following:
 - Hanger is correct size, clean and undamaged.
 - Slip segments are sharp and in proper position.
 - All screws are in place.
7. Remove the latch screw to open the slip type hanger.
8. Place two boards on the casing head flange, against the casing, to support the hanger.
9. Wrap the hanger around the casing and replace the latch screw.
10. Prepare to lower the hanger into the casing head bowl.
11. Grease the WFT-21 slip type casing hanger body and remove the slip retaining cap screws.
12. Remove the boards and allow the hanger to slide down into the casing head.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		 Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		December 2014	December 2014	December 2014	Page 9 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

13. Once the hanger has landed securely on the casing head bowl load shoulder, pull tension on the casing to the desired hanging weight, and then slack off.

NOTE

A sharp decrease on weight indicator will signify that the hanger has taken weight. If this does not occur, pull tension again and slack once more.

14. Rough cut the casing approximately eight inches, or more, above the top of the casing head flange. Remove the excess casing.
15. Final cut the casing at $2\frac{1}{2}" \pm 1/8"$ above casing head flange.
16. Bevel the casing outer diameter ($1/4" \times 30$ degrees) and inner diameter ($1/8" \times 30$ degrees).
17. Remove and discard the used gasket ring from the casing head.
18. Clean the mating ring grooves on the WFT-SB casing spool and casing head. Lightly wipe with oil or grease.




Excessive oil or grease will prevent a positive seal from forming.

19. Install a new appropriately sized ring gasket into the casing head groove.
20. Loosely reconnect or make up the WFT-SB casing spool to the casing head.

NOTE

The casing spool to casing head connection will be fully tightened after the pack-off bushing is run and proper setting is verified.

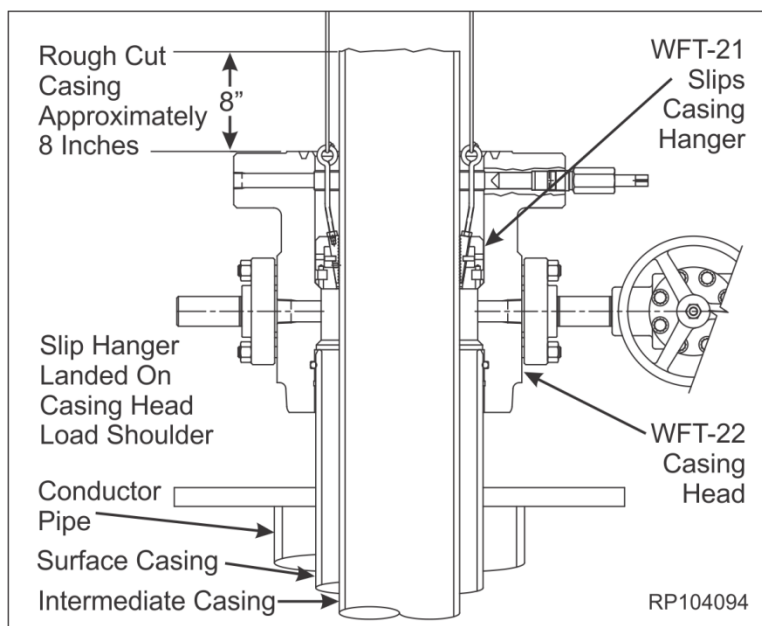


Installation of the Pack-Off Bushing and Energizing the P-Seals

WFT-SB Pack-Off Bushing Installation

NOTE

Installation procedure is identical for both Standard and Emergency WFT-SB Pack-Off Bushings.

- Determine which pack-off bushing to use:
 - If casing has been run normally and is hung off with a mandrel casing hanger, use a standard packoff bushing.
- Examine the appropriate pack-off bushing. Verify the following:
 - All elastomer seals are in place and undamaged.
 - Bore, ports and alignment lugs are clean and in good condition.
 - Coat the lockscrew relief groove with white paint.
- Liberal lubricate the inner diameter of the double P-seal grooves and outer diameter of dovetail seals with a light oil or grease.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 10 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

4. Examine the pack-off bushing running tool. Verify the following:
 - All elastomer seals are properly installed, clean and undamaged
 - Threads are clean, undamaged and free of debris
 - Bore and ports are clean and unobstructed.
5. Make-up a landing joint to the running tool and rack back assembly.
6. Run two or three stands of heavy weight drill pipe or collars in the hole and set floor slips.

NOTE


Use heavy weight drill pipe or drill collars. Weight required to push Pack-Off Bushing into Casing Head, over Mandrel Hanger slick neck, is approximately 14,000 lbs.




When lowering the drill pipe into the well, extreme caution must be taken to not damage the top of the mandrel hanger with the end of the drill pipe. It is recommended that the drill pipe be centralized to the hanger inner diameter, as closely as possible, when entering the hanger.

7. Carefully lower the bushing over the drill pipe and set it on top of floor slips.
8. Make up the landing joint/running tool assembly to the drill pipe suspended in floor slips.
9. Carefully pick up the pack-off bushing, thread the bushing into the running tool, then rotate the bushing approximately two turns counterclockwise (to the left), coming to a positive stop.

10. Lower the assembly through the BOP Stack and the WFT-SB spool assembly until the pack-off bushing lands on the casing hanger.

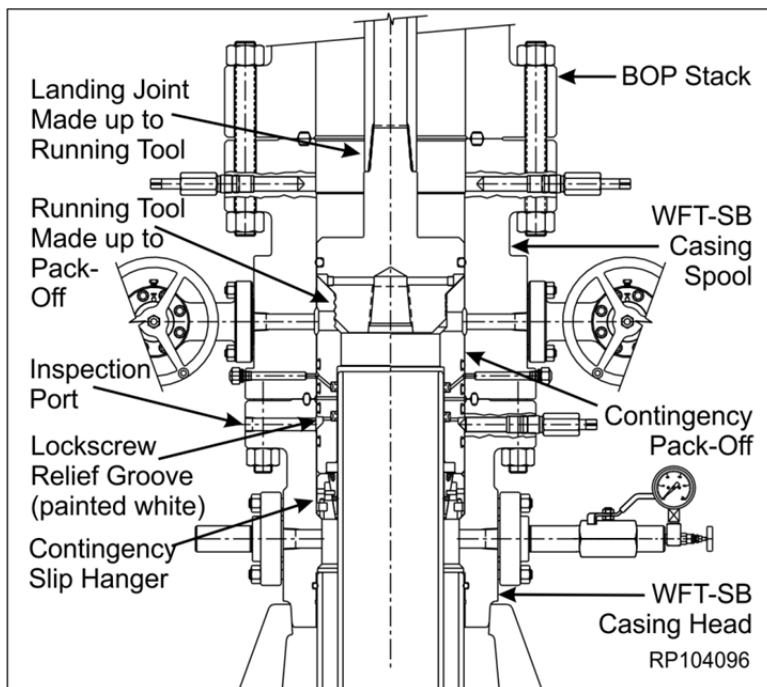

11. Verify, through inspection port that the pack-off bushing has landed properly after:
 - ensuring well is stable and no pressure buildup or mud flow is occurring.
 - drain BOP Stack through Casing Head side outlet valves.
 - remove Pipe Plug (1"-NPT) from Casing Head flange port marked "Inspection Port".
 - Check, to ensure, bottom of Lockscrew relief groove (painted white) on Support Bushing is at bottom of inspection port.
 - Reinstall Pipe Plug and tighten securely.
12. Fully run in all Casing Head Lockscrews (lower flange), in an alternating cross pattern.
13. Using two chain tongs, 180° apart, rotate Landing Joint/Running Tool approximately 2 turns clockwise (to the

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 11 of 24
		December 2014	December 2014	December 2014	


right), coming to a stop and carefully lift tool to Drill Floor, set aside.

NOTE

If the Contingency Pack-Off Bushing is being installed, it is now necessary to make up the Speed Head Casing Head/Casing Spool connection. Tighten all studs in an alternating cross pattern until the flange bolting is fully made up.

Energizing the P-Seals


1. Locate the two lower injection fittings ("INJ"), located 180 degrees apart on the casing head. Remove the dust cap from one fitting and remove the second fitting entirely.
2. Attach a bleeder tool to the injection fitting without the dust cap, in the casing head. Open the bleeder tool.
3. Attach a plastic injection tool to the open port and inject plastic packing into the port until a continuous stream flows from the bleeder tool. Close the bleeder tool.
4. Remove the injection tool. Reinstall the injection fitting into the open port and remove the dust cap. Reattach the injection tool.
5. Continue injecting plastic packing to **5,000 psi. or to 80% of casing collapse pressure, whichever is less.**

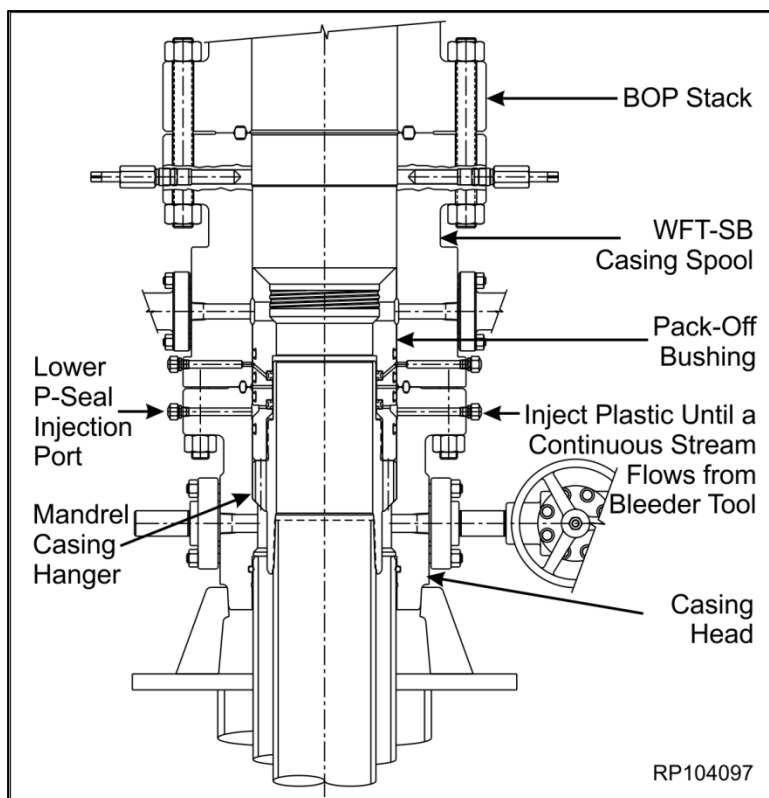

NOTE

The strength of a mandrel casing hanger slick neck is equivalent to P110 Grade casing with the same weight as run in the casing string.

6. Hold and monitor pressure for 15 minutes or as required by the drilling supervisor.
7. If pressure drops, the plastic packing has not filled the seal area completely. Open the bleeder tool, bleed off the pressure and repeat Steps 5 and 6, until pressure is stabilized.
8. Remove the plastic injection tool and bleeder tool. Reinstall the dust caps on both injection fittings.
9. Repeat Steps 1 thru 8 to pack off and energize the upper P-Seal.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson December 2014	Brad Franks December 2014	Manual Zaragoza December 2014	Page 12 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

10. Locate the "SEAL TEST" fitting, slightly below and 90 degrees from the injection fittings. Remove the dust cap from this fitting.
11. Attach a test pump to the fitting.
12. Pump clean test fluid between the P-Seals until a test pressure of **5,000 psi or 80% of casing collapse pressure is attained, whichever is lower.**



Do NOT exceed 80% of casing collapse pressure when a slip type casing hanger and contingency pack-off bushing are utilized.

13. Hold test pressure for **15 minutes or as required by the drilling supervisor.**
14. If pressure drops, a leak has developed. Take the appropriate action per the following table:


Leak Location	Cause	Action
Into the bore of the casing head	Upper P-seal leaking	Bleed off pressure and re-inject plastic packing into leaking upper P-seal port.
Around the casing	Lower P-Seal leaking	Bleed off pressure and re-inject plastic packing into lower P-seal port.


15. Repeat Steps 12 thru 14 until a satisfactory test is achieved.
16. Once a satisfactory test is achieved, carefully bleed off pressure and remove Test Pump.
17. Attach the bleeder tool to the test port fitting and open the tool to vent any remaining trapped pressure.



Always direct the bleeder tool port away from people and property.

18. Remove the bleeder tool and reinstall dust cap in Test Port Fitting.

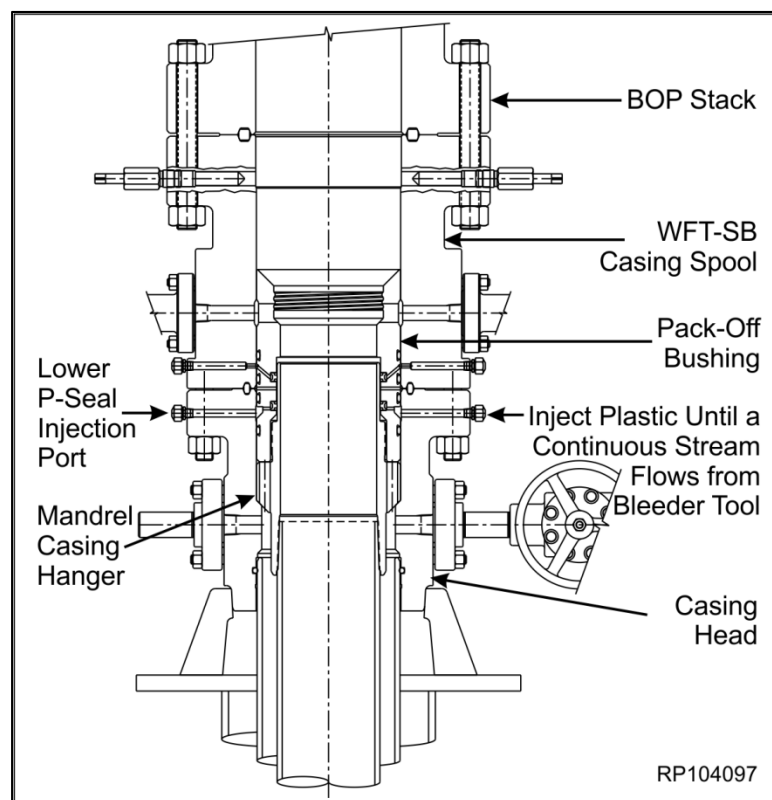

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 13 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

Retesting the BOP Stack

1. Examine the Test Plug/Running Tool. Verify the following:

- Elastomer seals are intact and in good condition.
- Drill pipe threads are clean and in good condition.

NOTE

Immediately after testing the support bushing seals and periodically during conditioning of the hole prior to running tubing, the BOP stack (flanged connections and rams) must be tested.

2. Orient the test plug with elastomer down/ACME threads up. Make up a joint of drill pipe to the test plug.

NOTE

Remove the pipe plug from the weep port if pressure is to be supplied through the drill pipe.




Make sure the elastomer is down and ACME threads are up when testing.

3. Fully retract all lockscrews in the upper WFT-SB Spool Assembly.




Do NOT retract the lockscrews located in the casing head (lower flange). Doing so could allow the pack-off support bushing to rise out of position.

4. Lubricate the test plug elastomer seal with light oil or grease.

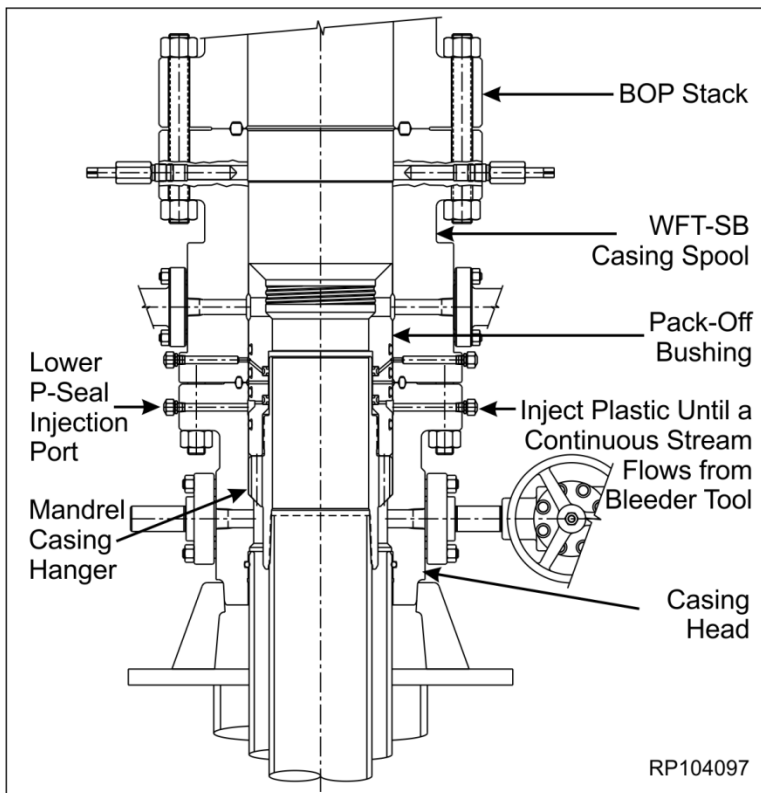

5. Lower the test plug through the BOP stack into the WFT-SB spool assembly until it lands on top of the pack-off bushing.
6. Open the upper WFT-SB casing spool side outlet valves. Monitor for any leakage past the test plug seal.
7. Close the BOP rams on the drill pipe and test to **10,000 psi or as required by the drilling supervisor**.
8. After a satisfactory test is achieved, release all pressure and open the rams.
9. Remove as much fluid from the BOP stack as possible.
10. Retrieve the test plug assembly slowly to avoid damage to the seal.
11. Close all outlet valves on the WFT-SB casing head/spool assembly.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 14 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

Running and Retrieving the Short Bowl Protector

NOTE

Always use a bowl protector while drilling to protect the wellhead load shoulders from damage by the drill bit or rotating drill pipe. The bowl protector must be retrieved prior to running the casing string!

Running the Bowl Protector Prior to Drilling

- Examine the short bowl protector. Verify the following:
 - Bore drift is correct size, is clean, in good condition, and free of debris.
 - Threads are correct size and type.
 - Threads are clean and in good condition.
- Orient the bowl protector running tool with ACME threads down.

NOTE

The running tool is the same tool used for handling the long bowl protector.

CAUTION

Make sure that the left hand (LH) ACME threads are down prior to engaging the bowl protector running tool into the short bowl protector.

- Make-up a drill pipe joint to the running tool.
- Thread the running tool into the short bowl protector, rotating two turns counterclockwise (to the left).
- Verify that all upper lockscrews in the WFT-SB spool assembly are fully retracted. Slowly lower the running

tool/bowl protector assembly through the BOP stack into the WFT-SB spool assembly until it lands on top of the pack-off bushing.

WARNING


Do NOT retract the lower lockscrews located in the WFT-SB casing head, as this could allow the pack-off bushing to rise out of position.


- On the upper WFT-SB spool assembly, run in two lockscrews ("snug" tight ONLY), 180 degrees apart, to hold the bowl protector in place.

WARNING

Do NOT over tighten the lockscrews, as this will cause damage to both the bowl protector and lockscrews.

- Remove the running tool from the bowl protector, by rotating the drill pipe clockwise two turns while lifting straight up.
- Drill out and prepare to the production casing string per the drilling supervisor's instructions.

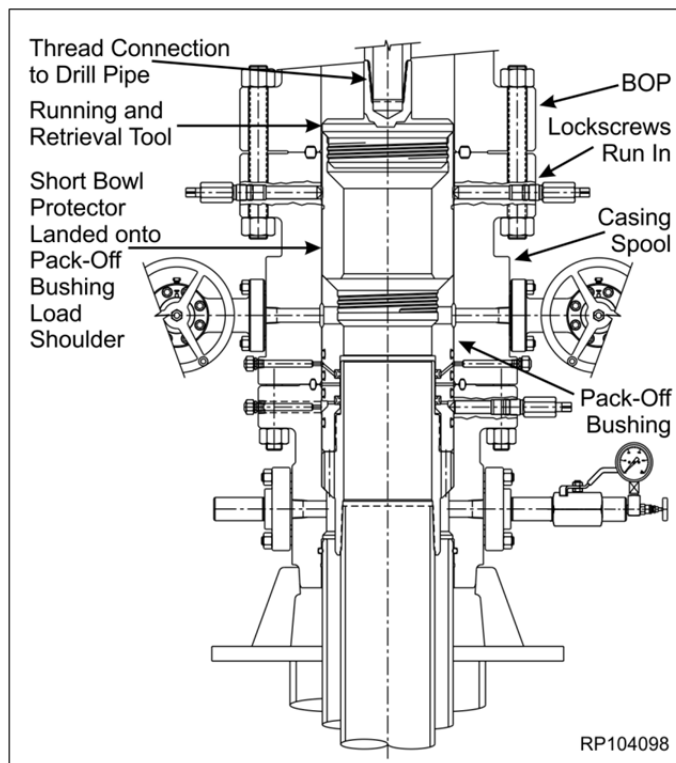

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		December 2014	December 2014	December 2014	Page 15 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

Retrieval of the Short Bowl Protector After Drilling

1. Make up the retrieval tool to the drill pipe with ACME threads down.
2. Slowly lower the retrieval tool into the bowl protector.
3. Rotate the retrieval tool counterclockwise, two turns, to engage with the bowl protector ACME threads.
4. Fully retract both lockscrews on the casing spool (upper flange), and retrieve the bowl protector.
5. Remove the bowl protector and retrieval tool from the drill string.

Running the Production Casing

1. Run the production casing to necessary depth and cement as required.

NOTE

There are two methods for installing WFT-22 Slip Type Casing Hangers:

- Under the BOP stack.
- Through the BOP stack.

Installation of the Slip-Type Casing Hanger Under the BOP Stack

1. Drain the casing head through the uppermost side outlet valve.
2. Lift and suspend the BOP stack above the WFT-SB spool assembly to a minimum of 18 inches.
3. Wash out the WFT-SB casing head/spool assembly as required.
4. Confirm that ONLY the lockscrews in the casing spool (upper flange) are fully retracted.

5. Examine the WFT-22 slip-type casing hanger. Verify the following:

- Slip segments are clean and undamaged.
- All screws are in place.
- Packing element is clean and undamaged.





The packing element should not protrude past the casing hanger outer diameter. If the packing element does extend past the outer diameter, loosen the cap screws in the bottom of the hanger.

6. Place two boards across the casing spool face, against the casing, to support the hanger.
7. Disengage the spring loaded latch, open the hanger and wrap the hanger around the casing, allowing the support boards to carry weight.
8. Re-engage the casing hanger spring loaded latch.
9. Remove the slip retaining cap screws from the outer diameter of the hanger body, allowing the slip segments to settle around the casing.
10. Supporting the weight of the casing hanger, remove the support boards and lower the hanger into the WFT-SB casing head/spool assembly until it lands on the pack-off bushing load shoulder.



Do NOT drop the hanger; lower it carefully.

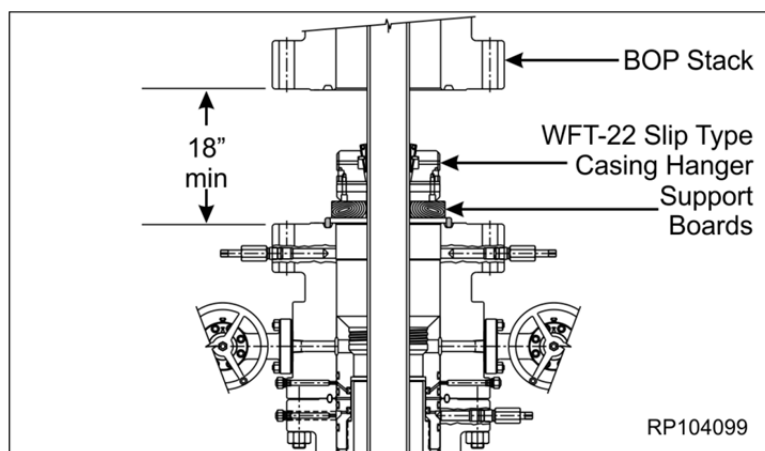

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 16 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

Installation of the Slip-Type Casing Hanger through the BOP Stack

1. Drain the WFT-SB casing head/spool assembly and BOP stack through the side outlet valves on the spool assembly.
2. Wash out the wellhead assembly until clean returns are seen.
3. Examine the slip type casing hanger. Verify the following:
 - slip segments are clean and undamaged
 - all screws are in place
 - Packing Element is clean and undamaged.



The packing element should not protrude past the casing hanger outer diameter. If the packing element does extend past the outer diameter, loosen the cap screws in the bottom of the hanger.


4. Place two boards across the rotary table, against the casing, to support the hanger.
5. Disengage the spring loaded latch, open the hanger and wrap it around the casing, allowing the support boards to carry the weight.
6. Re-engage the casing hanger's spring loaded latch.
7. Measure the distance from the top flange of the WFT-SB casing spool to the drilling rig floor (RKB).
8. Measure out two lengths of soft-line cord (rope) to the same length as the


RKB measurement, and adding an additional 10 feet to each line.

9. Mark the soft line cord at the required length.
10. Install two eyebolts into the tapped holes in the top of the casing hanger slip segments, 180 degrees apart.
11. Securely tie the soft-line cord to the eyebolts.

NOTE

Measuring the soft-line cord and installing the eyebolts into the hanger segments should be done offline.

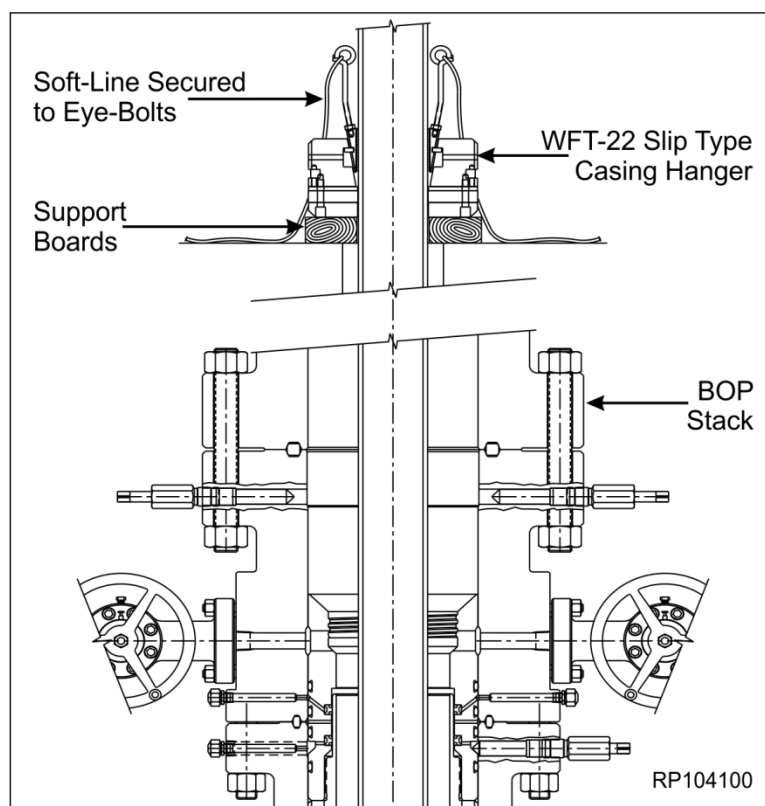

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		December 2014	December 2014	December 2014	Page 17 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

12. Remove the slip retaining cap screws from the outer diameter of the hanger body, allowing the slip segments to settle around the casing.
13. Supporting the weight of the casing hanger, remove the support boards and carefully lower the hanger through the BOP stack into the WFT-SB casing head/spool assembly, until it securely lands on the pack-off bushing load shoulder.



Do NOT drop hanger; lower it carefully.



Hanging off the Production Casing


1. With the casing hanger now landed onto the pack-off bushing load shoulder, pull tension on the casing to the desired hanging weight, and then slack off.

NOTE

A sharp decrease on the weight indicator will signify that the hanger has taken weight. If this does not occur, pull tension again and slack off once more.

2. Rough cut casing approximately 16" above top of WFT-SB Spool top flange. Remove excess casing.
3. Carefully remove BOP stack, set aside.
4. Final cut the casing at about 12 7/8" +/- 1/8" above the face of the WFT-SB spool, which will allow room for the double studded adapter flange.
5. Grind the casing stub level and bevel the casing outer diameter (1/4" x 1/8") and inner diameter (1/8" x 45 degrees).

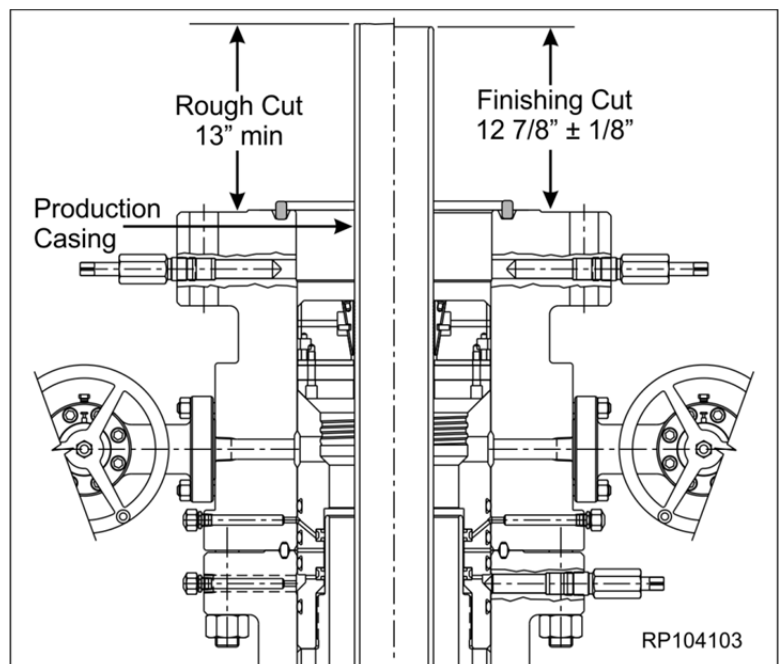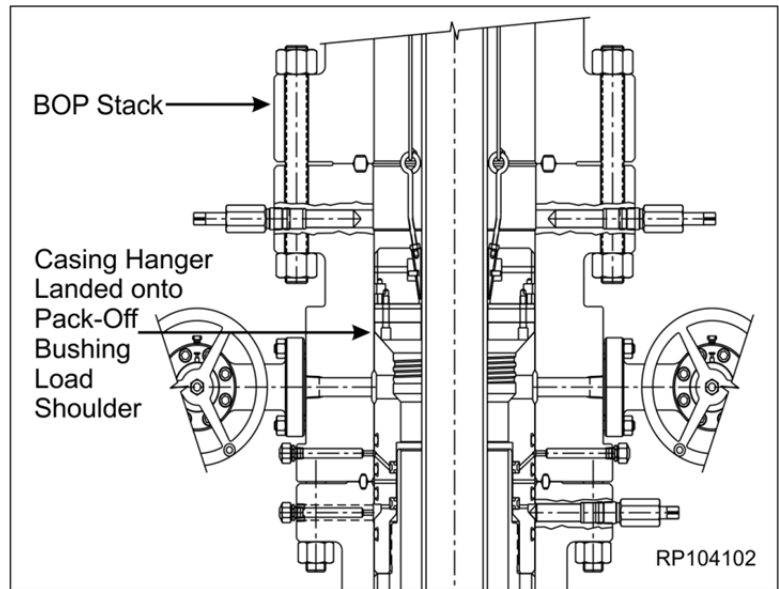

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 18 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

Installation of the Double-Studded Adapter (DSA) Flange

1. Examine the double studded adapter (DSA) Flange. Verify the following:
 - Ring grooves are clean and undamaged.
 - Stud threads are clean and undamaged.
2. Orient the DSA flange with the 10M side down.
3. Thoroughly clean the mating grooves of the DSA flange and the WFT-SB spool assembly. Wipe lightly with oil or grease.






Excessive oil or grease will prevent a positive seal from forming.

4. Install a new appropriately sized ring gasket into the WFT-SB spool assembly groove.
5. Lift, while holding level, and carefully lower the DSA over the production casing stub until it lands on the ring gasket.
6. Make-up the flange connection with appropriate nuts, tightening in alternate cross pattern, as required by API 6A.
7. Fill the void area in the DSA around the production casing with a light weight oil.
8. Continue filling with a light weight oil to the top of the DSA.

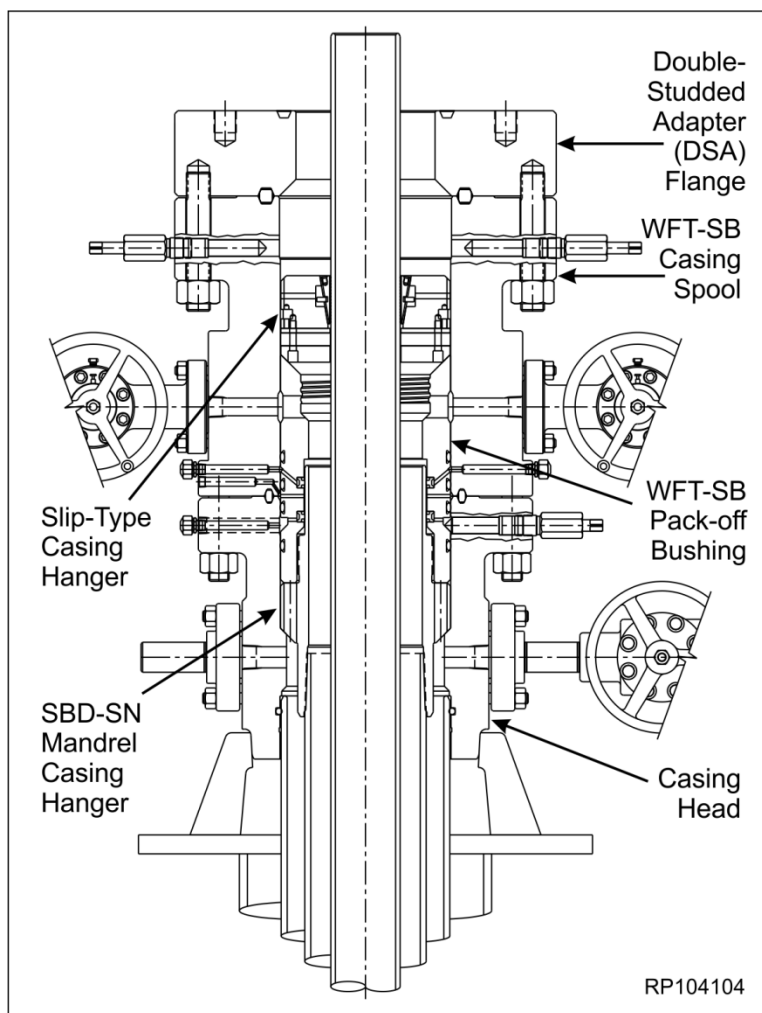

Do NOT allow oil to run into the ring groove. This may prevent a positive seal from forming.



 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		 Marion Robertson	Brad Franks	Manual Zaragoza	Rev WIP
		December 2014	December 2014	December 2014	Page 19 of 24

WFT Split Bowl (SB) Wellhead System (Continued)

Installation and Testing of the Tubing Spool Assembly

Installation of the TCM Tubing Spool Assembly

- Examine the tubing spool assembly. Verify the following:
 - bore is clean and free of debris
 - ring grooves and seals are clean and undamaged
 - PE-seal assembly is properly installed, clean and undamaged.
- Thoroughly clean the mating ring grooves of the WFT-TCM Tubing Spool and WFT-SB Casing Spool.
- Lightly lubricate the inner diameter of the PE-seal and outer diameter of the casing stub with oil or grease.



Excessive oil or grease will prevent a positive seal from forming.

- Install a new appropriately sized ring gasket into the WFT-SB casing spool assembly groove.
- Orient the tubing spool assembly as required and carefully lower it over the casing stub, until it lands on the ring gasket.
- Make up the flange connection with the appropriate studs and nuts, tightening in an alternating cross pattern, as required by API 6A.

Testing the Secondary Seal and Flange Connection Test


- Locate the test port fitting on the OD of the tubing spool lower flange. Remove the dust cap from the fitting.
- Attach a test pump to the test port fitting.


- Pump clean test fluid into the void area between the flanges until a test pressure of **10,000 psi or 80% of casing collapse pressure is attained**, whichever is lower.
- Hold and monitor pressure for 15 minutes or as required by the drilling supervisor.
- Once a satisfactory test is achieved, carefully bleed off pressure and remove the test pump
- Attach a bleeder tool to the test port fitting and open the tool to vent any remaining trapped pressure.



Always direct the bleeder tool port away from people and property.

- Remove the bleeder tool and reinstall the dust cap on the test port fitting.
- Install a new appropriately sized ring gasket into the tubing spool groove.

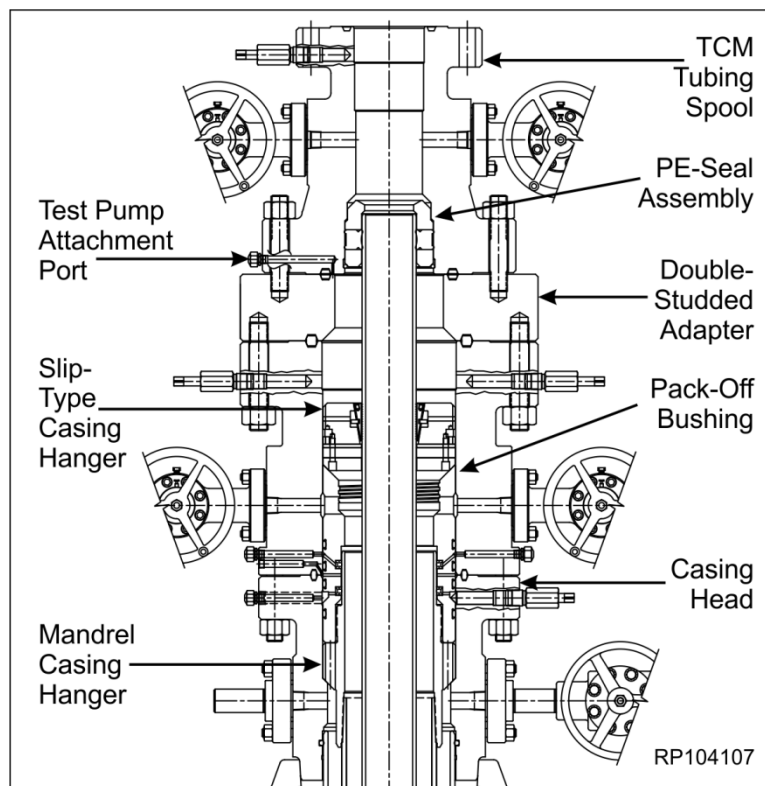

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 20 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

Testing the BOP

NOTE

Immediately after the make-up of the BOP Stack and periodically during drilling of hole for the next string, the BOP stack (flanged connections and rams) must be tested.


- Examine the test plug. Verify that:
 - O-ring seals and plugs are properly installed, clean and undamaged.
 - All threads are clean and undamaged.
- Orient the test plug with O-ring seals up and drill pipe pin connection down.
- Make up a joint of drill pipe to the top of the test plug.


NOTE

If pressure is to be supplied through the drill pipe, the pipe plug should be removed from the weep port.

- Fully retract all lockscrews on the WFT-TCM tubing spool assembly.
- Open the side outlet valves on the tubing spool.
- Wipe the test plug O-ring seals with a light oil or grease.
- Lower the test plug through the BOP until it lands on the tubing spool load shoulder.
- Close the BOP rams on the drill pipe and test to **10,000 psi maximum**.
- Monitor the open outlets for signs of leakage past the test plug.

- Once a satisfactory test is achieved, release pressure and open the rams.
- Close the side outlet valves.
- Remove as much fluid from the BOP stack as possible.
- Slowly retrieve the test plug, avoiding damage to the seals.
- Repeat this procedure, as required, during drilling or conditioning of the hole.

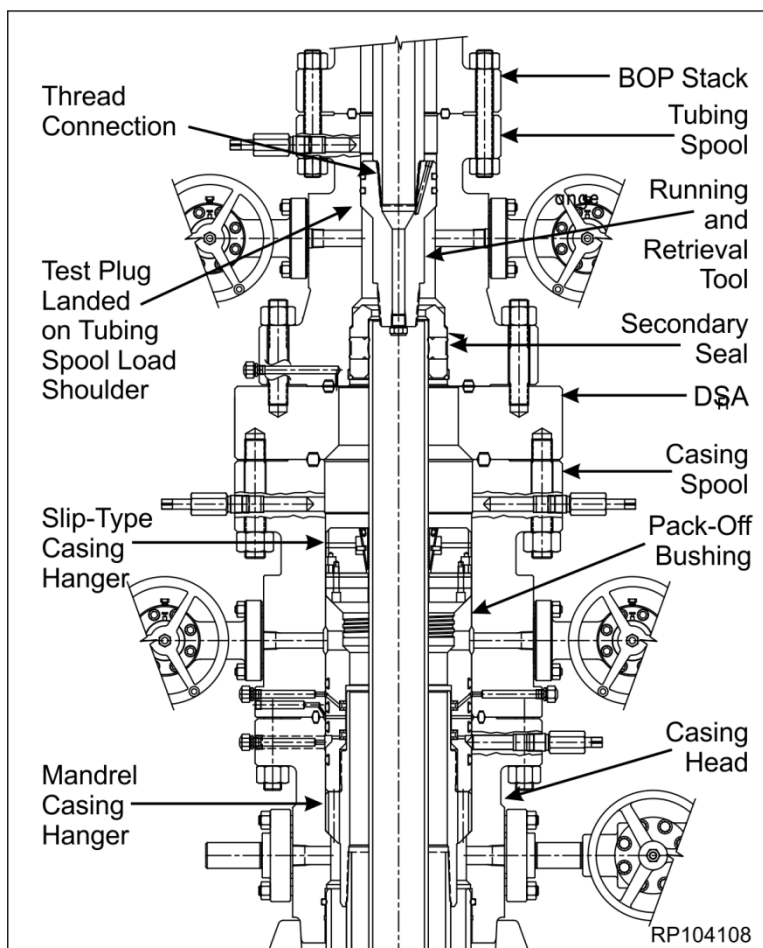


 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 21 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)


Hanging off the Production Tubing String

1. Run the production tubing and space out appropriately for the tubing hanger.
2. Examine the TC1AEN Tubing Hanger. Verify the following;
 - Packing element is clean and undamaged.
 - S-seals are properly installed.
 - S-seals are clean and undamaged.
 - All threads are clean and undamaged.
3. Make-up a short handling joint to the top of the tubing hanger.
4. Pick up the tubing hanger and make it up to the tubing string, tightening the connection to the thread manufacturer's recommended optimum torque value.
5. Remove the short handling joint from the top of the hanger. Make up the landing joint to the top of the tubing hanger, tightening the connection to the thread manufacturer's recommended minimum torque values.
6. Ensure that all tubing spool lockscrews are fully retracted from the bore and open side outlet valves. Drain the BOP stack.
7. Calculate the distance from the tubing spool load shoulder to the rig floor. Measure from the face of the tubing spool.
8. Carefully lower the tubing hanger into the well, tallying the tubing every five feet, until the tubing hanger lands securely on the tubing spool load shoulder.
9. Run in all tubing spool lockscrews, in an alternating cross pattern, to 300 ft-lbs, in 75 ft-lb increments.
10. Remove the landing joint from the tubing hanger, and set it aside.

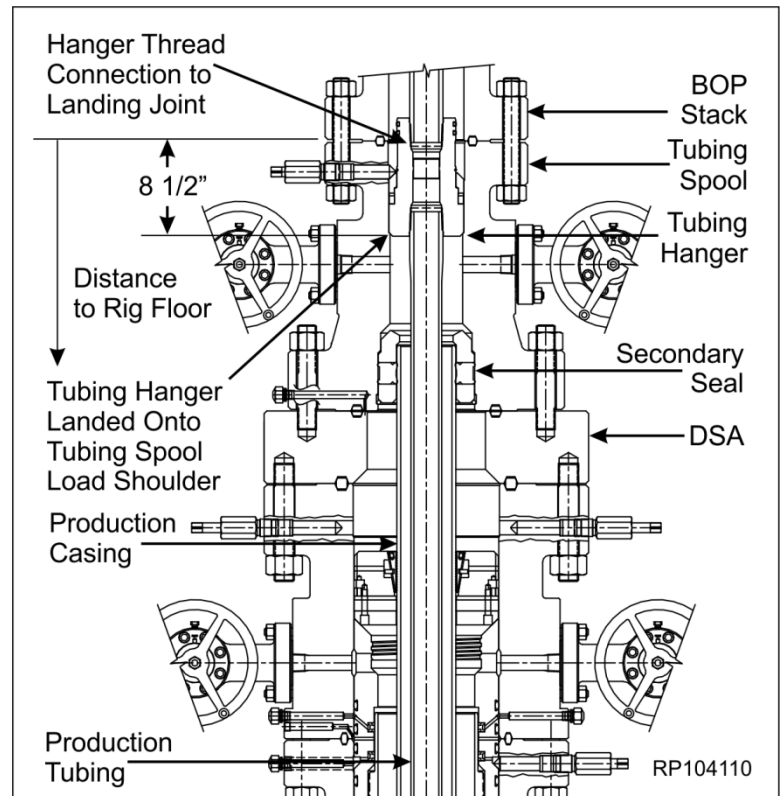

NOTE

The side outlet valves should remain open while landing the tubing hanger.

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 22 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

11. Install the Type H Back Pressure Valve, carefully lowering the BPV through the BOP stack into the tubing hanger. Rotate the BPV counterclockwise (to the left) until it bottoms out in the tubing hanger BPV prep. Continue rotating counterclockwise, approximately 7 turns, to retrieve the running tool.
12. With the well safe and under control, the BOP stack may be removed.

Installation and Testing of the Production Tree

Installation

1. Examine the production tree assembly. Verify the following:
 - Bore is clean and free of debris.
 - All valves are in the fully open position.
 - All threads and seal areas are clean and undamaged.
 - All fittings, nuts and handwheels are intact and undamaged.
2. Thoroughly clean all exposed portions of the tubing hanger, tubing head adapter flange and bottom prep of the tubing head adapter.
3. Thoroughly clean mating ring grooves of the tubing head adapter flange and WFT-TCM tubing spool.
4. Lightly lubricate the tubing hanger neck outer diameter and tubing head adapter flange bottom prep with oil or grease.





Excessive oil or grease will prevent a positive seal from forming.


5. Install a new appropriately sized ring gasket into the WFT-TCM tubing spool groove.

6. Fill the void area around the hanger with hydraulic fluid, to the top of the tubing spool assembly.



Do NOT overfill the void area, allowing oil to run into the ring groove. This may prevent a positive seal from forming.

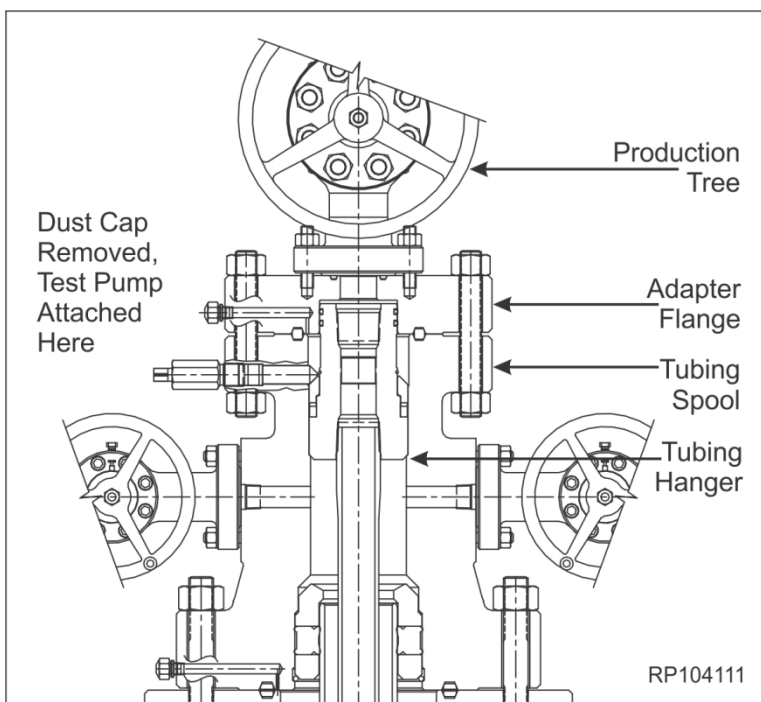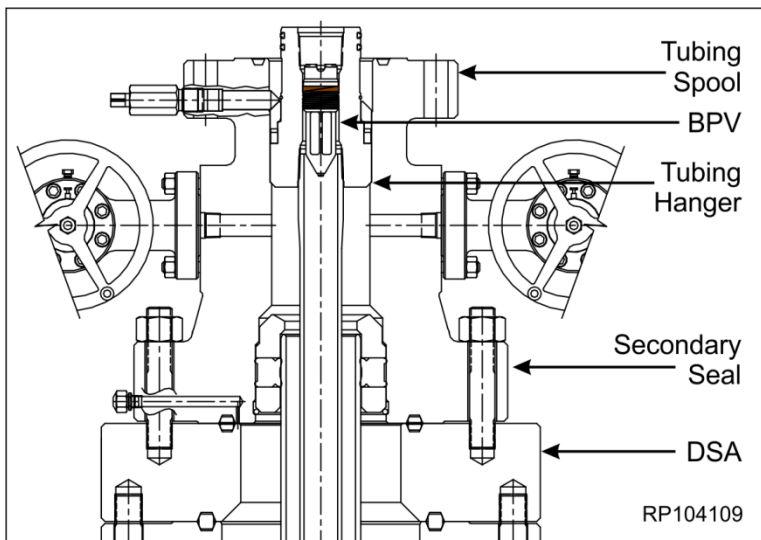

 Weatherford 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 23 of 24
		December 2014	December 2014	December 2014	

WFT Split Bowl (SB) Wellhead System (Continued)

- Align and level the production tree above the tubing hanger and carefully lower it over the tubing hanger neck, landing it on the ring gasket.



Do NOT damage the hanger neck seals, as this will impair their sealing ability.

- Make up the connection using the appropriate studs and nuts, and tightening in an alternating cross pattern, as required by API 6A.

Testing the Production Tree Connection


- Locate the test port fitting on the outer diameter of the tubing head adapter flange. Remove the dust cap from the fitting.
- Attach a test pump to test port fitting, and open the pump.
- Pump clean test fluid into void area between flanges, test to 10,000 psi maximum.
- Hold and monitor pressure for **15 minutes or as required by the production supervisor**.
- Once a satisfactory test is achieved, carefully bleed off test pressure and remove the test pump.
- Attach a bleeder tool to the test port fitting, and open the tool to vent any remaining trapped pressure.




Always direct the bleeder tool away from people and property.

- Remove the bleeder tool and reinstall the dust cap on the test port fitting.

- Remove the type 'H' back pressure valve (BPV) through the production tree.
- Ensure that the well is safe and secure by closing all gate valves.

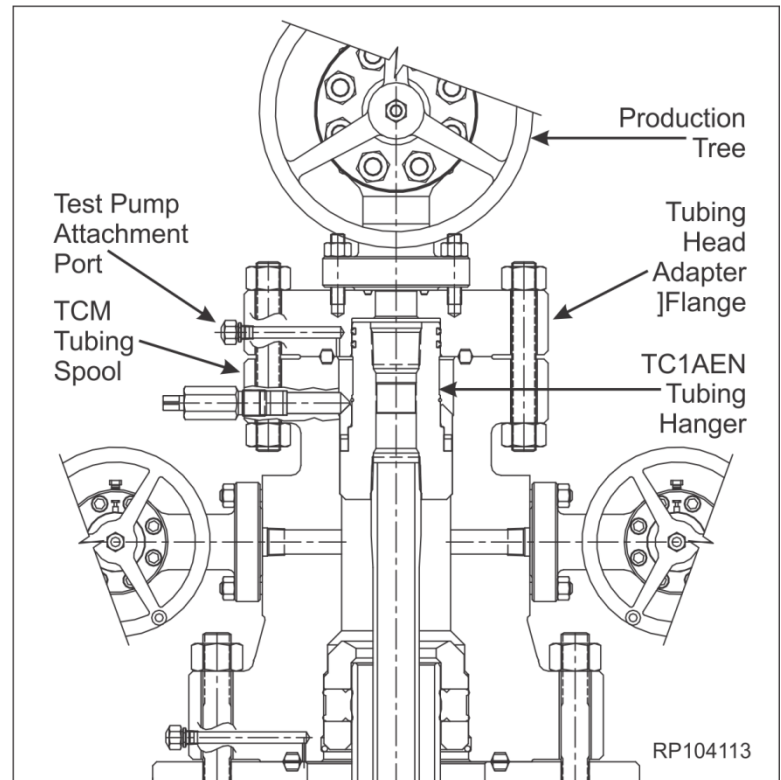

 5-3-GL-GL-WES-00XXX	Field Service Manual	Prepared By:	Reviewed By:	Approved By:	SM-13-1
		<i>Marion Robertson</i>	Brad Franks	Manual Zaragoza	Rev WIP
		Marion Robertson	Brad Franks	Manual Zaragoza	Page 24 of 24
		December 2014	December 2014	December 2014	



Multi-Bowl System

13-3/8" X 9-5/8" X 5-1/2"

Tubing Head-TCM-PP

13-5/8" - M X 7-1/16" - M
w/(2) 1-13/16" - M Gate Valves

7-1/16" - M

Casing Spool- MBS

13-5/8"-5M X 13-5/8"- M
w/(2) 1-13/16" - M SSO

13-5/8" - M

7" Dbl P Seal

13-5/8" X 7" C-22
Casing Hanger

Casing Head- MBS

13-5/8"-5M X 13-3/8" SOW
w/36" Base Plate

13-5/8"-5M

13-5/8" X 9-5/8" MBS
Packoff Assembly

13-5/8" X 9-5/8" Mandrel
Casing Hanger

13-3/8" SOW



SYENERGY
WELLHEAD & FRAC



U.S. Department of the Interior
BUREAU OF LAND MANAGEMENT

SUPO Data Report

03/14/2022

APD ID: 10400055295**Submission Date:** 03/18/2020

Highlighted data
reflects the most
recent changes

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H[Show Final Text](#)**Well Type:** OIL WELL**Well Work Type:** Drill

Section 1 - Existing Roads

Will existing roads be used? YES**Existing Road Map:**

1255_Topographical___Access_Rd_20200318154038.pdf

Existing Road Purpose: ACCESS,FLUID TRANSPORT**Row(s) Exist?** NO**ROW ID(s)****ID:****Do the existing roads need to be improved?** NO**Existing Road Improvement Description:****Existing Road Improvement Attachment:**

Section 2 - New or Reconstructed Access Roads

Will new roads be needed? NO

Section 3 - Location of Existing Wells

Existing Wells Map? YES**Attach Well map:**

1255_1_Mile_Radius_20200318154112.pdf

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H

Section 4 - Location of Existing and/or Proposed Production Facilities

Submit or defer a Proposed Production Facilities plan? DEFER**Estimated Production Facilities description:** This well will tie into existing production facilities in the same area.

Section 5 - Location and Types of Water Supply

Water Source Table

Water source type: OTHER**Describe type:** PIT

Water source use type:	SURFACE CASING
	STIMULATION
	DUST CONTROL
	INTERMEDIATE/PRODUCTION CASING

Source latitude:**Source longitude:****Source datum:**

Water source permit type:	PRIVATE CONTRACT
----------------------------------	------------------

Water source transport method:	TRUCKING
---------------------------------------	----------

Source land ownership: FEDERAL**Source transportation land ownership:** PRIVATE**Water source volume (barrels):** 100000**Source volume (acre-feet):** 12.88930963**Source volume (gal):** 4200000**Water source and transportation map:**

Rojo_7811_34_27_Federal_Com_46H_Water_Transportation_Map_20200318154153.pdf

Water source comments: Water Pit is in NWNW Quarter Quarter of SEC 3 ; T26S ; R33E of Lea County, NM**New water well?** N

New Water Well Info

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Well latitude:****Well Longitude:****Well datum:****Well target aquifer:****Est. depth to top of aquifer(ft):****Est thickness of aquifer:****Aquifer comments:****Aquifer documentation:****Well depth (ft):****Well casing type:****Well casing outside diameter (in.):****Well casing inside diameter (in.):****New water well casing?****Used casing source:****Drilling method:****Drill material:****Grout material:****Grout depth:****Casing length (ft.):****Casing top depth (ft.):****Well Production type:****Completion Method:****Water well additional information:****State appropriation permit:****Additional information attachment:**

Section 6 - Construction Materials

Using any construction materials: YES

Construction Materials description: Caliche used for construction of the drilling pad and access road will be obtained from the closest existing caliche pit as approved by the BLM or from prevailing deposits found under the location. If there is not sufficient material available, caliche will be purchased from the nearest caliche pit located in the SWSW Quarter Quarter of Section 3 T26S R33E Lea County, NM.

Construction Materials source location attachment:

Section 7 - Methods for Handling Waste

Waste type: DRILLING**Waste content description:** Drilling fluids and cuttings.**Amount of waste:** 4164 barrels**Waste disposal frequency :** One Time Only**Safe containment description:** All drilling fluids will be stored safely and disposed of properly.**Safe containmant attachment:****Waste disposal type:** HAUL TO COMMERCIAL FACILITY**Disposal location ownership:** COMMERCIAL**Disposal type description:****Disposal location description:** Trucked to a state approved disposal facility.

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Waste type:** SEWAGE**Waste content description:** Human waste and grey water.**Amount of waste:** 1000 gallons**Waste disposal frequency :** One Time Only**Safe containment description:** Waste material will be stored safely and disposed of properly.**Safe containmant attachment:****Waste disposal type:** HAUL TO COMMERCIAL FACILITY**Disposal location ownership:** COMMERCIAL**Disposal type description:****Disposal location description:** Trucked to a state approved disposal facility.**Waste type:** GARBAGE**Waste content description:** Trash**Amount of waste:** 500 pounds**Waste disposal frequency :** One Time Only**Safe containment description:** Trash produced during drilling and completion operations will be collected in a trash container and disposed of properly.**Safe containmant attachment:****Waste disposal type:** HAUL TO COMMERCIAL FACILITY**Disposal location ownership:** COMMERCIAL**Disposal type description:****Disposal location description:** Trucked to a state approved disposal facility.

Reserve Pit

Reserve Pit being used? NO**Temporary disposal of produced water into reserve pit?** NO**Reserve pit length (ft.)** **Reserve pit width (ft.)****Reserve pit depth (ft.)** **Reserve pit volume (cu. yd.)****Is at least 50% of the reserve pit in cut?****Reserve pit liner****Reserve pit liner specifications and installation description**

Cuttings Area

Cuttings Area being used? NO**Are you storing cuttings on location?** N

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

Description of cuttings location

Cuttings area length (ft.)

Cuttings area width (ft.)

Cuttings area depth (ft.)

Cuttings area volume (cu. yd.)

Is at least 50% of the cuttings area in cut?

WCuttings area liner

Cuttings area liner specifications and installation description

Section 8 - Ancillary Facilities

Are you requesting any Ancillary Facilities?: N

Ancillary Facilities attachment:

Comments:

Section 9 - Well Site Layout**Well Site Layout Diagram:**

Rig_Layout_20190930140859.pdf

1255_Well_Site_Plan_20200318154423.pdf

Comments: This pad already exists, from a previous permitted well that was capped. No new surface disturbance.**Section 10 - Plans for Surface Reclamation****Type of disturbance:** No New Surface Disturbance **Multiple Well Pad Name:** ROJO 7811 34-27 FEDERAL COM**Multiple Well Pad Number:** 46H**Recontouring attachment:****Drainage/Erosion control construction:** During construction proper erosion control methods will be used to control erosion, runoff, and siltation of the surrounding area.**Drainage/Erosion control reclamation:** Proper erosion control methods will be used on the area to control erosion, runoff, and siltation of the surrounding area.**Well pad proposed disturbance (acres):****Road proposed disturbance (acres):****Powerline proposed disturbance (acres):****Pipeline proposed disturbance (acres):****Other proposed disturbance (acres):****Well pad interim reclamation (acres): 0****Road interim reclamation (acres): 0****Powerline interim reclamation (acres): 0****Pipeline interim reclamation (acres): 0****Other interim reclamation (acres): 0****Total interim reclamation: 0****Well pad long term disturbance (acres): 0****Road long term disturbance (acres): 0****Powerline long term disturbance (acres): 0****Pipeline long term disturbance (acres): 0****Other long term disturbance (acres): 0**

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Total proposed disturbance:** 0**Total long term disturbance:** 0**Disturbance Comments:** This pad will be on the same, previously constructed pad, as the MESA 8105 JV P #31H.

Reconstruction method: The areas planned for interim reclamation will then be recontoured to the original contour if feasible, or if not feasible, to an interim contour that blends with the surrounding topography as much as possible. Where applicable, the fill material of the well pad will be backfilled into the cut to bring the area back to the original contour. The interim cut and fill slopes prior to re-seeding will not be steeper than a 3:1 ratio, unless the adjacent native topography is steeper. Note: Constructed slopes may be much steeper during drilling, but will be recontoured to the above ratios during interim reclamation.

Topsoil redistribution: Topsoil will be evenly respread and aggressively revegetated over the entire disturbed area not needed for all-weather operations.

Soil treatment: To seed the area, the proper BLM seed mixture, free of noxious weeds, will be used. Final seedbed preparation will consist of contour cultivating to a depth of 4 to 6 inches within 24 hours prior to seeding, dozer tracking, or other imprinting in order to break the soil crust and create seed germination micro-sites.

Existing Vegetation at the well pad: The historic climax plant community is a grassland dominated by black grama, dropseeds, and blue stems with sand sage and shinnery oak distributed evenly throughout. Current landscape displays mesquite, shinnery oak, yucca, desert sage, fourwing saltbush, snakeweed, and bunch grasses.

Existing Vegetation at the well pad attachment:

Existing Vegetation Community at the road: Refer to "Existing Vegetation at the well pad"

Existing Vegetation Community at the road attachment:

Existing Vegetation Community at the pipeline: Refer to "Existing Vegetation at the well pad"

Existing Vegetation Community at the pipeline attachment:

Existing Vegetation Community at other disturbances: Refer to "Existing Vegetation at the well pad"

Existing Vegetation Community at other disturbances attachment:

Non native seed used? N

Non native seed description:

Seedling transplant description:

Will seedlings be transplanted for this project? N

Seedling transplant description attachment:

Will seed be harvested for use in site reclamation?

Seed harvest description:

Seed harvest description attachment:

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Seed Management****Seed Table****Seed Summary****Total pounds/Acre:****Seed Type****Pounds/Acre****Seed reclamation attachment:****Operator Contact/Responsible Official Contact Info****First Name:****Last Name:****Phone:****Email:****Seedbed prep:****Seed BMP:****Seed method:****Existing invasive species?** N**Existing invasive species treatment description:****Existing invasive species treatment attachment:****Weed treatment plan description:** No invasive species present. Standard regular maintenance to maintain a clear location and road.**Weed treatment plan attachment:****Monitoring plan description:** Identify areas supporting weeds prior to construction; prevent the introduction and spread of weeds from construction equipment during construction; and contain weed seeds and propagules by preventing segregated topsoil from being spread to adjacent areas. No invasive species present. Standard regular maintenance to maintain a clear location and road.**Monitoring plan attachment:****Success standards:** To maintain all disturbed areas as per Gold Book standards.**Pit closure description:** N/A**Pit closure attachment:****Section 11 - Surface Ownership**

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Disturbance type:** WELL PAD**Describe:****Surface Owner:** BUREAU OF LAND MANAGEMENT**Other surface owner description:****BIA Local Office:****BOR Local Office:****COE Local Office:****DOD Local Office:****NPS Local Office:****State Local Office:****Military Local Office:****USFWS Local Office:****Other Local Office:****USFS Region:****USFS Forest/Grassland:****USFS Ranger District:**

Section 12 - Other Information


Right of Way needed? N**Use APD as ROW?****ROW Type(s):**

ROW Applications

SUPO Additional Information:**Use a previously conducted onsite?** Y**Previous Onsite information:** Onsite conducted on 1/29/2020 by McKenna Ryder BLM

Other SUPO Attachment

VICINITY, TOPOGRAPHIC AND ACCESS ROAD MAP

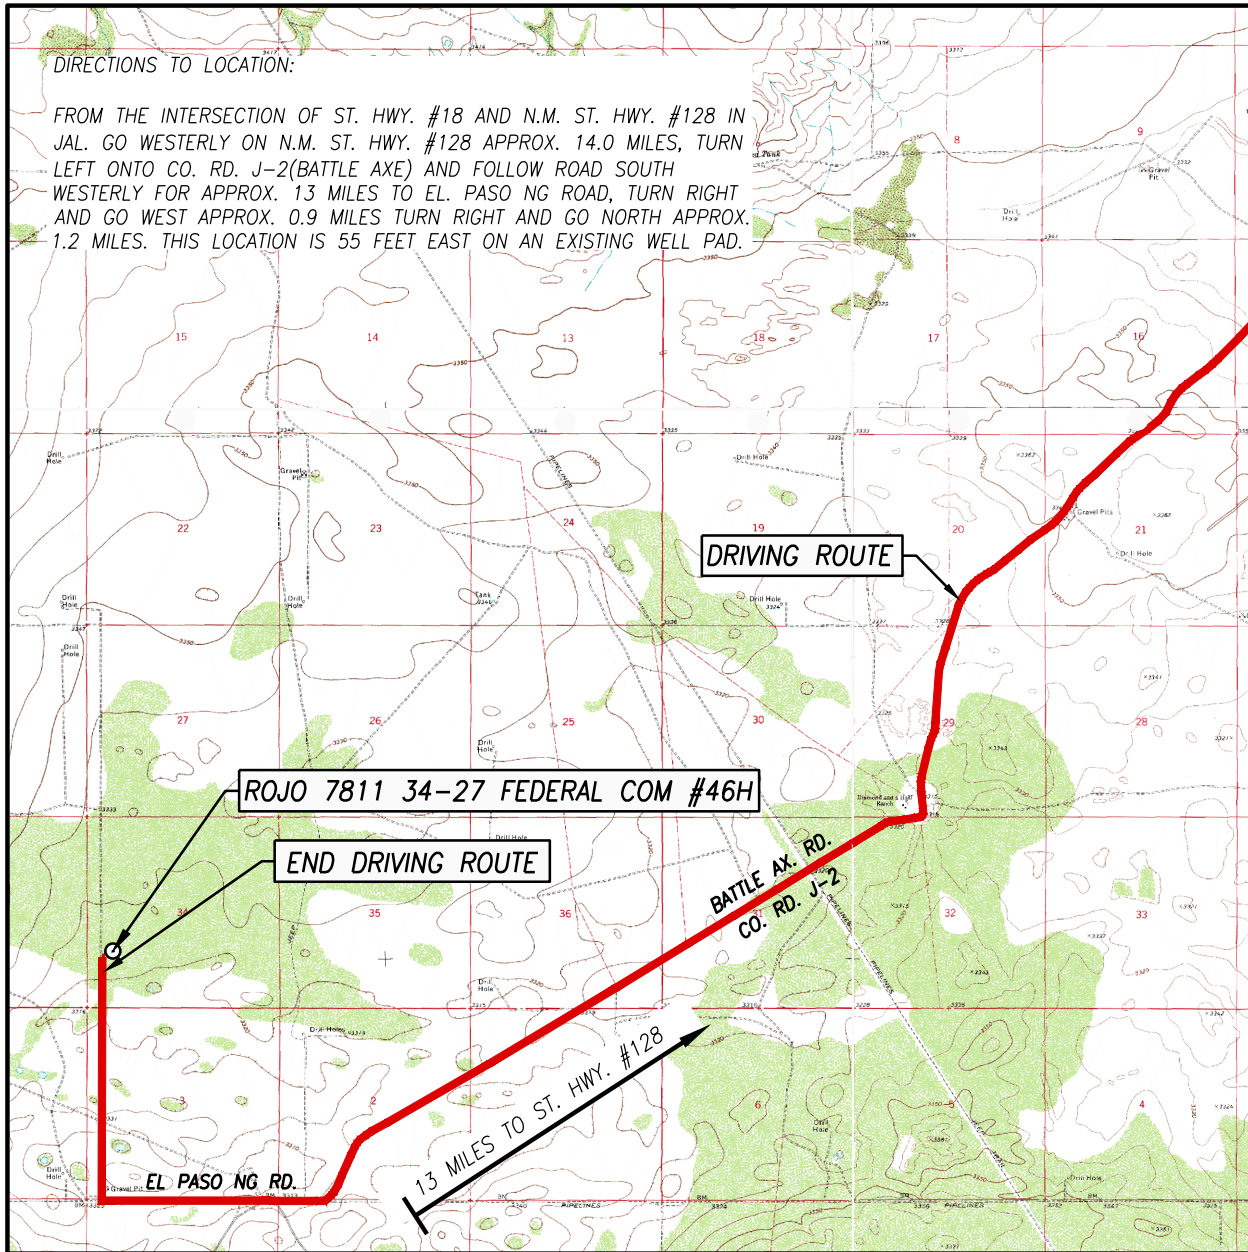

CONTOUR INTERVAL: BELL LAKE, N.M. - 10'

SCALE: 1" = 5280'

SEC. 34 TWP. 25-S RGE. 33-E

SURVEY _____ N.M.P.M.

COUNTY LEA STATE NEW MEXICO

DESCRIPTION 1540' FSL & 690' FWL

ELEVATION 3319'

OPERATOR BTA OIL PRODUCERS, LLC

LEASE ROJO 7811 34-27 FEDERAL COM

U.S.G.S. TOPOGRAPHIC MAP

Released to Imaging: 3/24/2022 3:43:09 PM

I, GARY G. EIDSON, NEW MEXICO PROFESSIONAL SURVEYOR No. 12641, DO HEREBY CERTIFY THAT THIS SURVEY PLAT AND THE ACTUAL SURVEY ON THE GROUND UPON WHICH IT IS BASED, WERE PERFORMED BY ME OR UNDER MY DIRECT SUPERVISION, THAT I AM RESPONSIBLE FOR THIS SURVEY; THAT THIS SURVEY MEETS THE MINIMUM STANDARDS FOR SURVEYING IN NEW MEXICO; AND THAT IT IS TRUE AND CORRECT TO THE BEST OF MY KNOWLEDGE AND BELIEF.

GARY G. EIDSON

DATE: 01/13/2020

PROVIDING SURVEYING SERVICES
SINCE 1946

JOHN WEST SURVEYING COMPANY

412 N. DAL PASO HOBBS, N.M. 88240

(575) 393-3117 www.jwsc.biz

TBPLS# 10021000



DISTRICT I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

DISTRICT II
811 S. First St., Artesia, NM 88210
Phone: (575) 748-1283 Fax: (575) 748-9720

DISTRICT III
1000 Rio Brazos Road, Aztec, NM 87410
Phone: (505) 334-6178 Fax: (505) 334-6170

DISTRICT IV
1220 S. St. Francis Dr., Santa Fe, NM 87505
Phone: (505) 476-3460 Fax: (505) 476-3462

State of New Mexico
Energy, Minerals & Natural Resources Department
OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, New Mexico 87505

Form C-102
Revised August 1, 2011
Submit one copy to appropriate
District Office

☐ AMENDED REPORT

WELL LOCATION AND ACREAGE DEDICATION PLAT

API Number		Pool Code		Pool Name RED HILLS ; BONE SRPING	
Property Code		Property Name ROJO 7811 34-27 FEDERAL COM			Well Number 46H
OGRID No. 260297		Operator Name BTA OIL PRODUCERS, LLC			Elevation 3319'

Surface Location


UL or lot No.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
L	34	25-S	33-E		1540	SOUTH	690	WEST	LEA


Bottom Hole Location If Different From Surface


UL or lot No.	Section	Township	Range	Lot Idn	Feet from the	North/South line	Feet from the	East/West line	County
D	27	25-S	33-E		50	NORTH	660	WEST	LEA

Dedicated Acres 280	Joint or Infill	Consolidation Code	Order No.
-------------------------------	-----------------	--------------------	-----------


NO ALLOWABLE WILL BE ASSIGNED TO THIS COMPLETION UNTIL ALL INTERESTS HAVE BEEN CONSOLIDATED OR A NON-STANDARD UNIT HAS BEEN APPROVED BY THE DIVISION

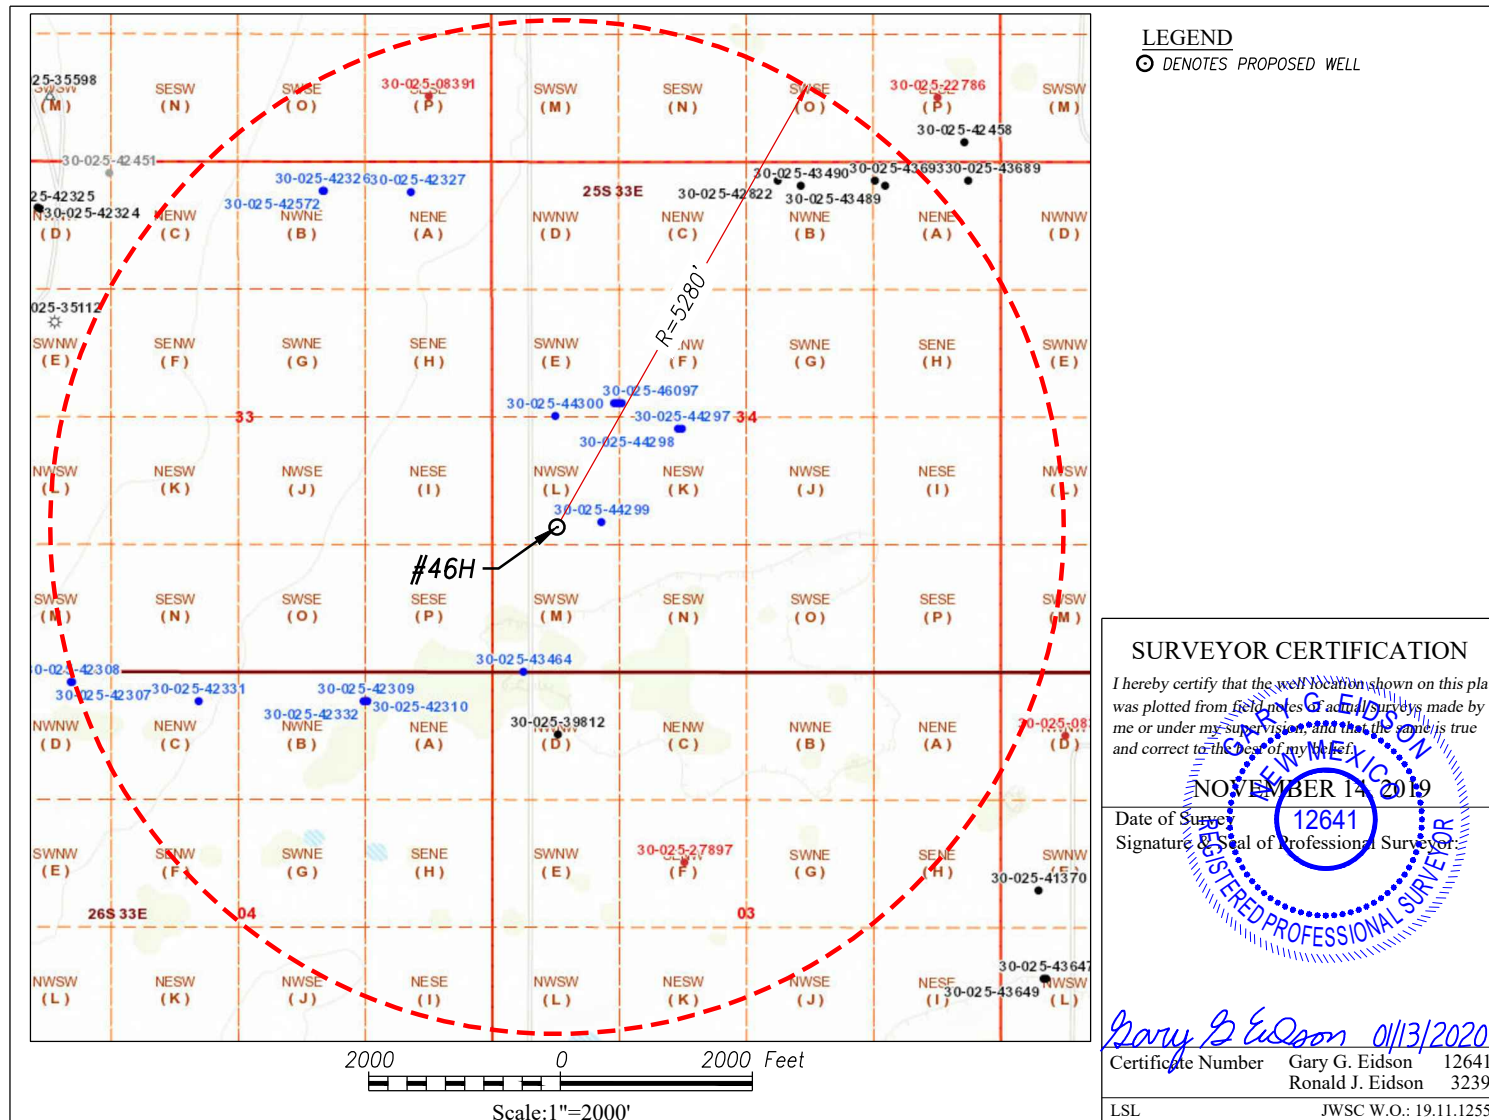

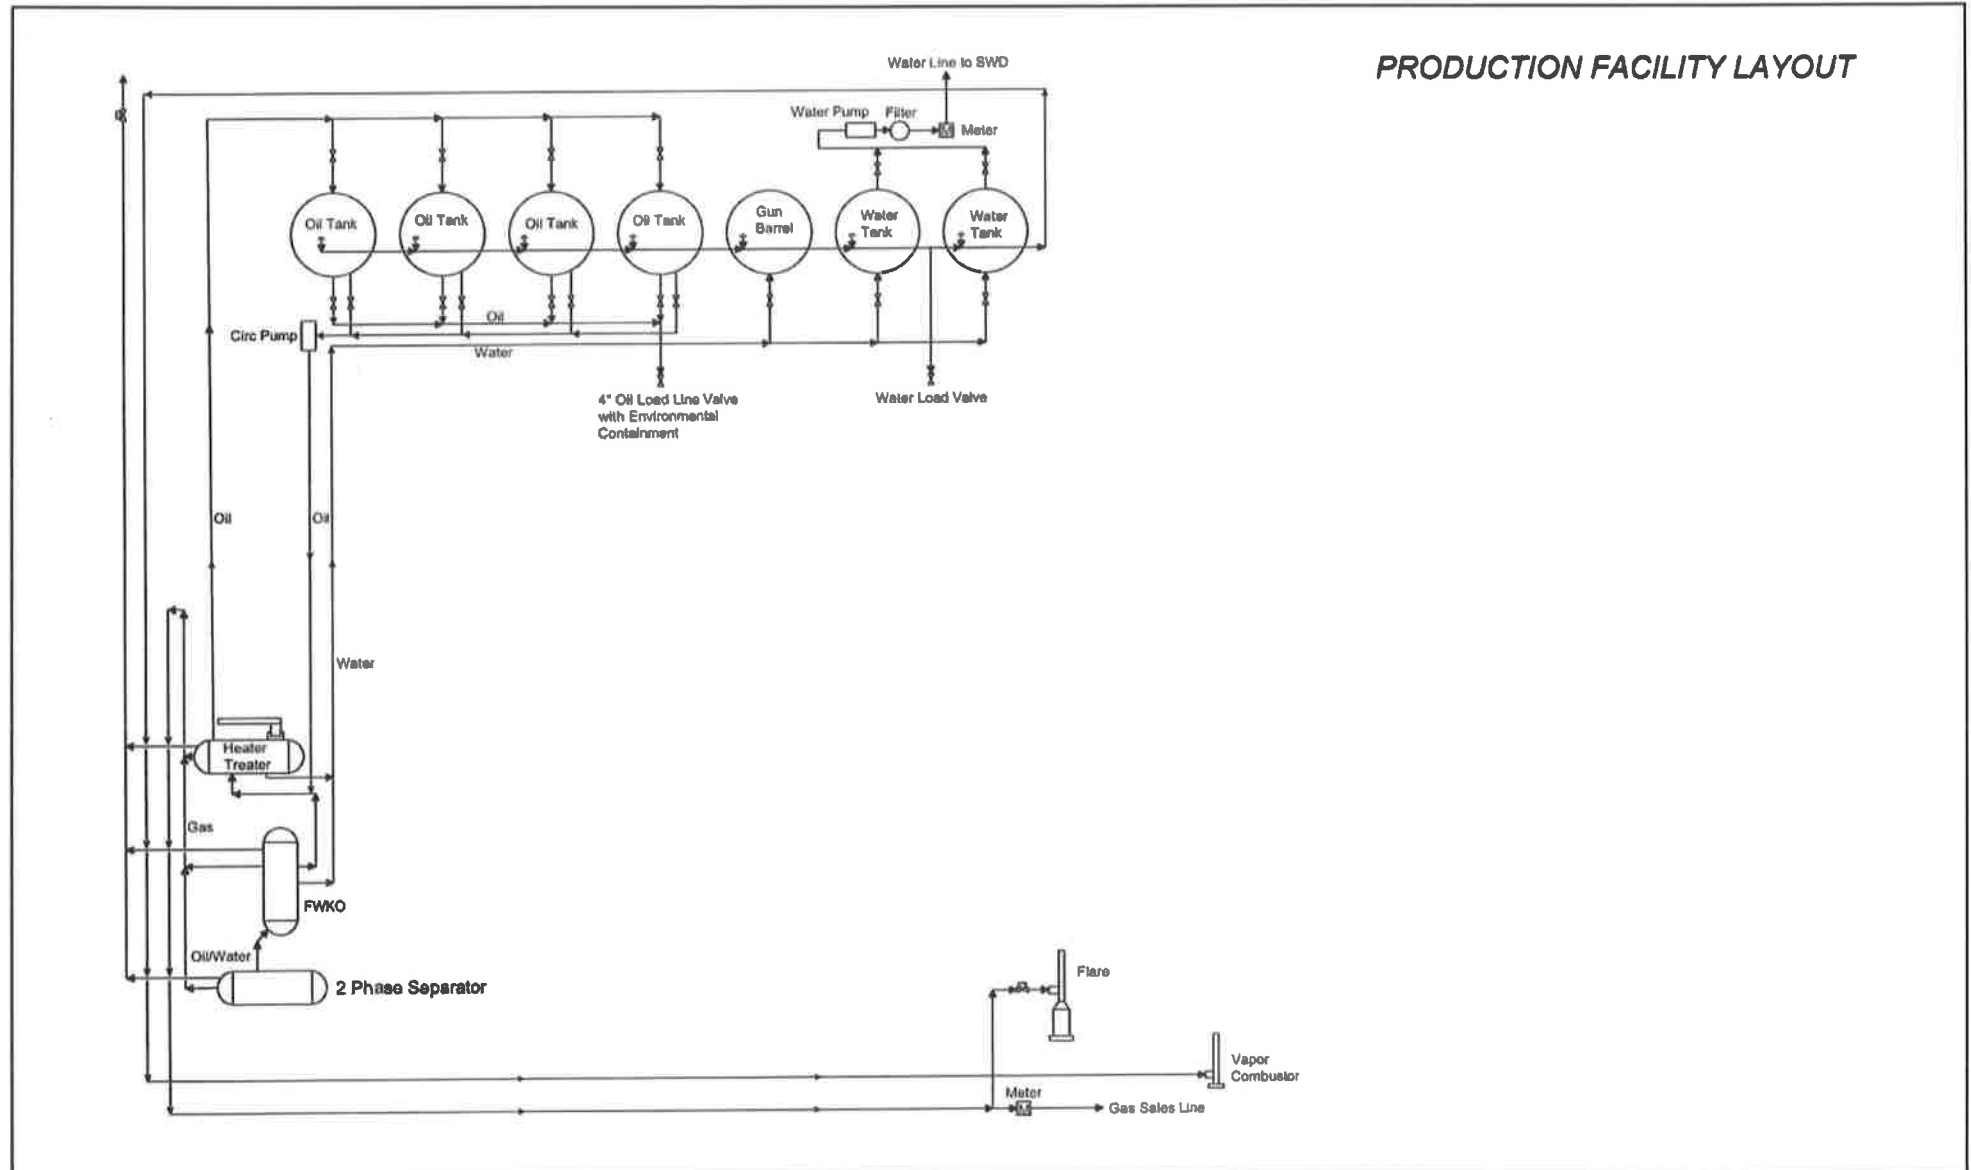

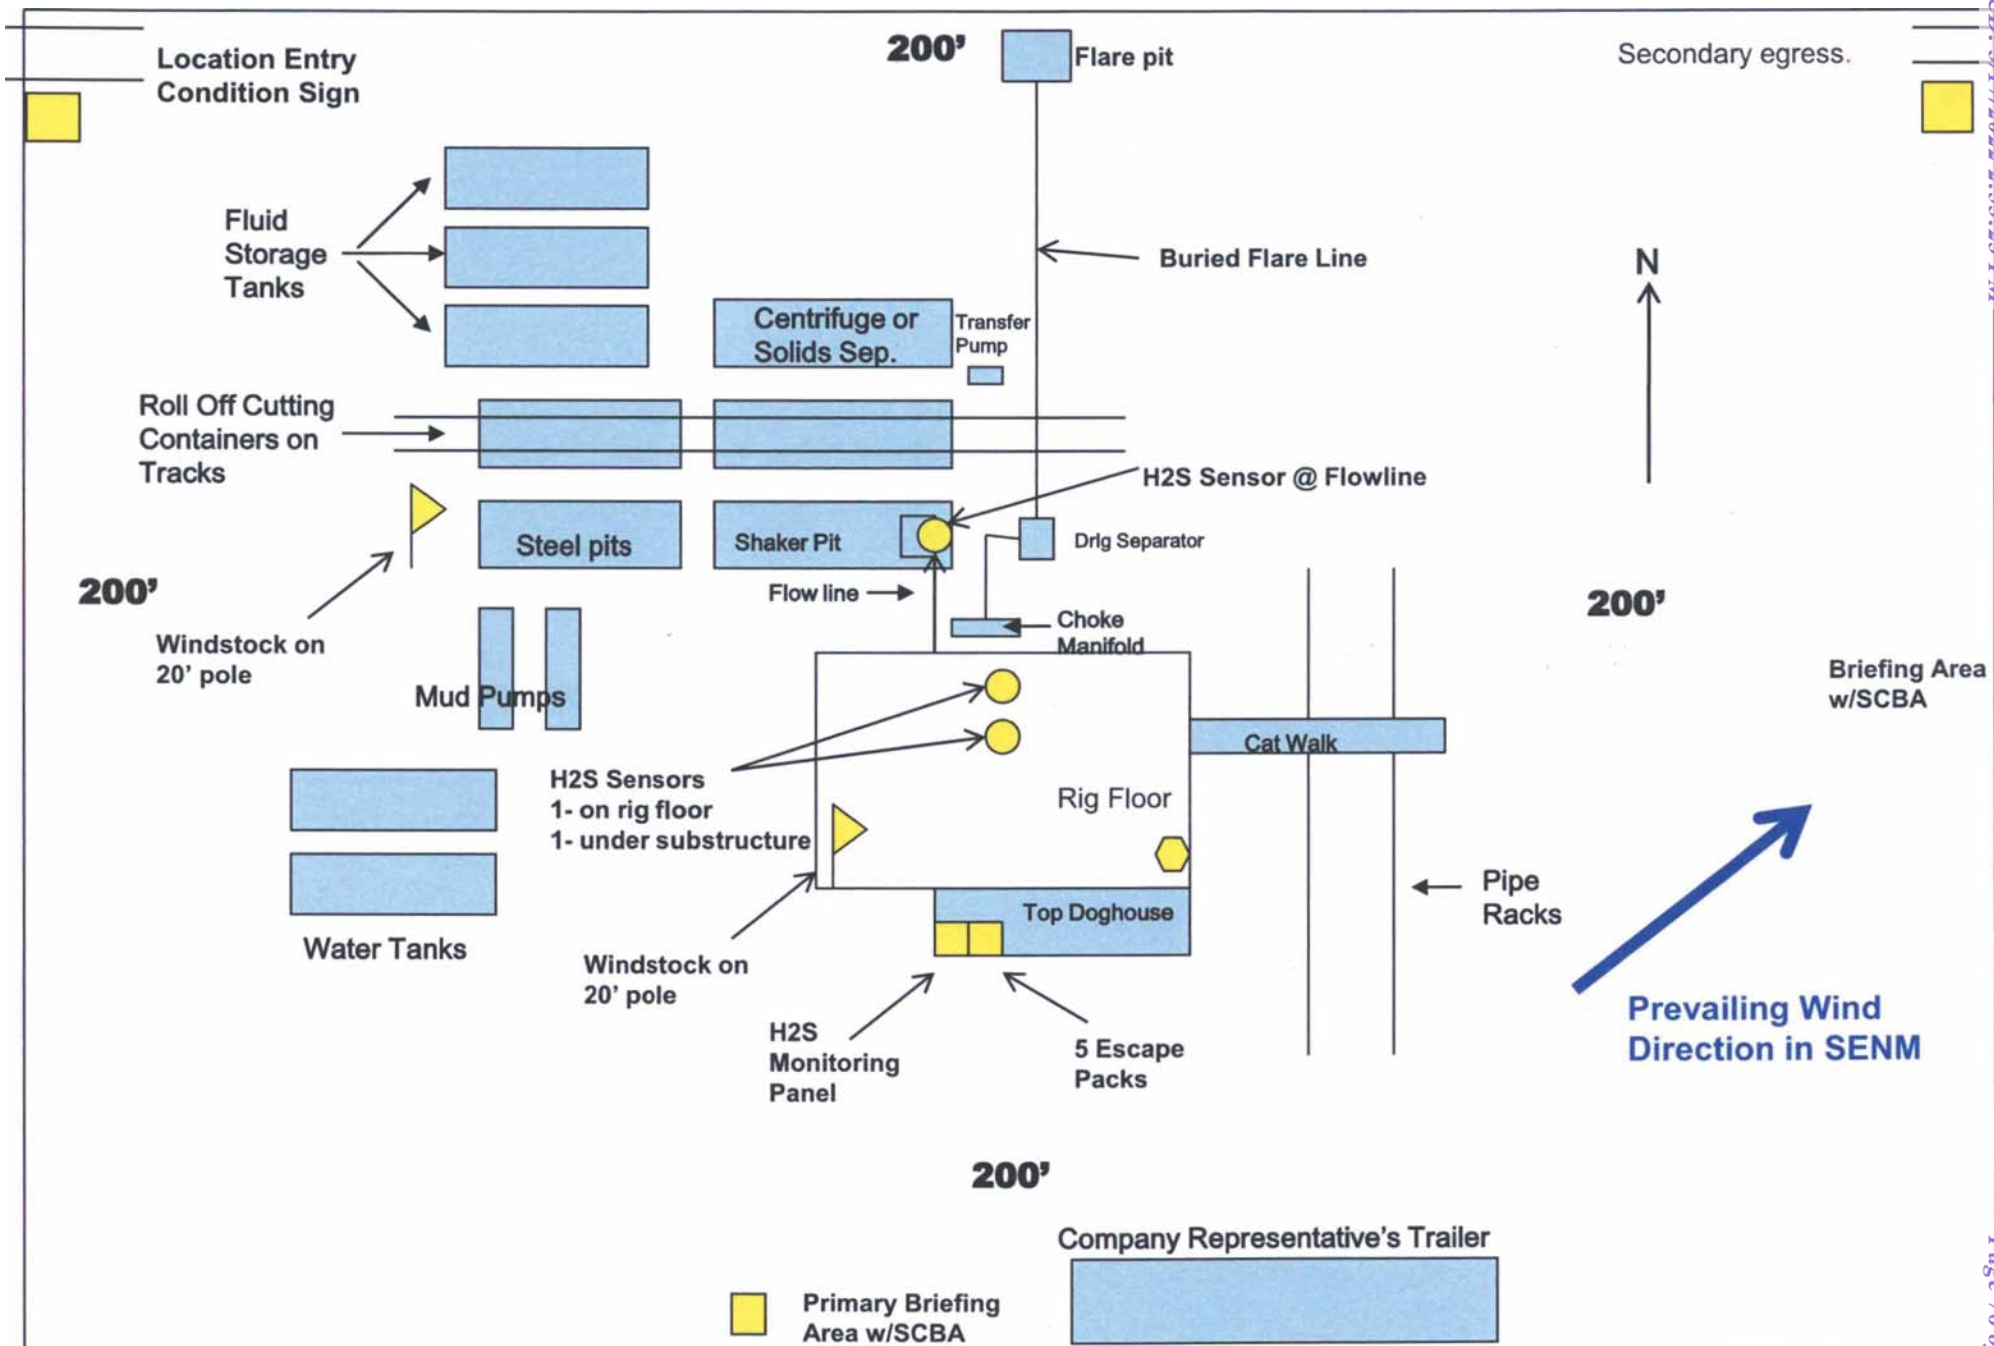

WELL SITE PLAN

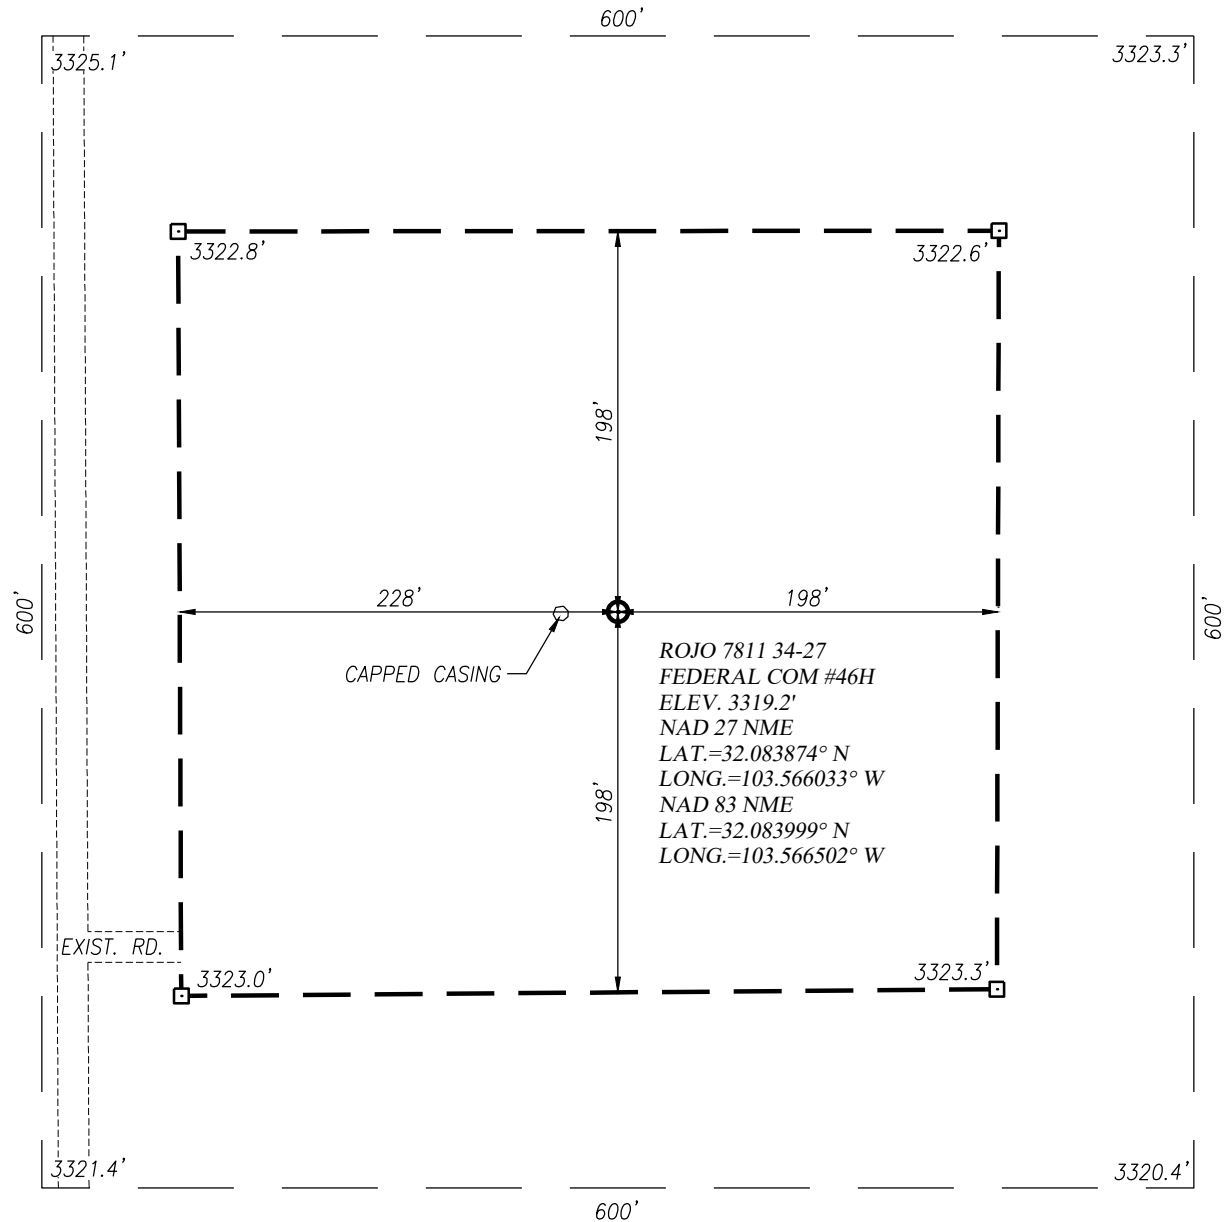

NOTE:

1) SEE "TOPOGRAPHICAL AND ACCESS ROAD MAP" FOR ACCESS ROAD LOCATION.

I, GARY G. EIDSON, NEW MEXICO PROFESSIONAL SURVEYOR No. 12641, DO HEREBY CERTIFY THAT THIS SURVEY PLAN AND THE ACTUAL SURVEY ON THE GROUND UPON WHICH IT IS BASED WERE PERFORMED BY ME OR UNDER MY DIRECT SUPERVISION; THAT I AM RESPONSIBLE FOR THIS SURVEY; THAT THIS SURVEY MEETS THE MINIMUM STANDARDS FOR SURVEYING IN NEW MEXICO; AND THAT IT IS TRUE AND CORRECT TO THE BEST OF MY KNOWLEDGE AND BELIEF.

GARY G. EIDSON

DATE: 01/13/2020

100 0 100 200 Feet
Scale: 1"=100'

BTA OIL PRODUCERS, LLC

ROJO 7811 34-27 FEDERAL COM #46H WELL LOCATED 1540 FEET FROM THE SOUTH LINE AND 690 FEET FROM THE WEST LINE OF SECTION 34, TOWNSHIP 25 SOUTH, RANGE 33 EAST, N.M.P.M., LEA COUNTY, NEW MEXICO

Survey Date: 11/14/19

CAD Date: 01/10/20

Drawn By: LSL

W.O. No.: 19111255

Rev: .

Rel. W.O.:

Sheet 1 of 1



PROVIDING SURVEYING SERVICES
SINCE 1946
JOHN WEST SURVEYING COMPANY

412 N. DAL PASO HOBBS, N.M. 88240

(575) 393-3117 www.jwsc.biz

TBPLS# 10021000



U.S. Department of the Interior
BUREAU OF LAND MANAGEMENT

PWD Data Report

03/14/2022

APD ID: 10400055295

Submission Date: 03/18/2020

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

Well Type: OIL WELL

Well Work Type: Drill

Section 1 - General

Would you like to address long-term produced water disposal? NO

Section 2 - Lined Pits

Would you like to utilize Lined Pit PWD options? N

Produced Water Disposal (PWD) Location:

PWD surface owner:

PWD disturbance (acres):

Lined pit PWD on or off channel:

Lined pit PWD discharge volume (bbl/day):

Lined pit specifications:

Pit liner description:

Pit liner manufacturers information:

Precipitated solids disposal:

Describe precipitated solids disposal:

Precipitated solids disposal permit:

Lined pit precipitated solids disposal schedule:

Lined pit precipitated solids disposal schedule attachment:

Lined pit reclamation description:

Lined pit reclamation attachment:

Leak detection system description:

Leak detection system attachment:

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

Lined pit Monitor description:

Lined pit Monitor attachment:

Lined pit: do you have a reclamation bond for the pit?

Is the reclamation bond a rider under the BLM bond?

Lined pit bond number:

Lined pit bond amount:

Additional bond information attachment:

Section 3 - Unlined Pits

Would you like to utilize Unlined Pit PWD options? N

Produced Water Disposal (PWD) Location:

PWD disturbance (acres):

PWD surface owner:

Unlined pit PWD on or off channel:

Unlined pit PWD discharge volume (bbl/day):

Unlined pit specifications:

Precipitated solids disposal:

Describe precipitated solids disposal:

Precipitated solids disposal permit:

Unlined pit precipitated solids disposal schedule:

Unlined pit precipitated solids disposal schedule attachment:

Unlined pit reclamation description:

Unlined pit reclamation attachment:

Unlined pit Monitor description:

Unlined pit Monitor attachment:

Do you propose to put the produced water to beneficial use?

Beneficial use user confirmation:

Estimated depth of the shallowest aquifer (feet):

Does the produced water have an annual average Total Dissolved Solids (TDS) concentration equal to or less than that of the existing water to be protected?

TDS lab results:

Geologic and hydrologic evidence:

State authorization:

Unlined Produced Water Pit Estimated percolation:

Unlined pit: do you have a reclamation bond for the pit?

Operator Name: BTA OIL PRODUCERS LLC**Well Name:** ROJO 7811 34-27 FEDERAL COM**Well Number:** 46H**Is the reclamation bond a rider under the BLM bond?****Unlined pit bond number:****Unlined pit bond amount:****Additional bond information attachment:**

Section 4 - Injection

Would you like to utilize Injection PWD options? N**Produced Water Disposal (PWD) Location:****PWD surface owner:****PWD disturbance (acres):****Injection PWD discharge volume (bbl/day):****Injection well mineral owner:****Injection well type:****Injection well number:****Injection well name:****Assigned injection well API number?****Injection well API number:****Injection well new surface disturbance (acres):****Minerals protection information:****Mineral protection attachment:****Underground Injection Control (UIC) Permit?****UIC Permit attachment:**

Section 5 - Surface Discharge

Would you like to utilize Surface Discharge PWD options? N**Produced Water Disposal (PWD) Location:****PWD surface owner:****PWD disturbance (acres):****Surface discharge PWD discharge volume (bbl/day):****Surface Discharge NPDES Permit?****Surface Discharge NPDES Permit attachment:****Surface Discharge site facilities information:****Surface discharge site facilities map:**

Section 6 - Other

Would you like to utilize Other PWD options? N**Produced Water Disposal (PWD) Location:****PWD surface owner:****PWD disturbance (acres):****Other PWD discharge volume (bbl/day):**

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

Other PWD type description:

Other PWD type attachment:

Have other regulatory requirements been met?

Other regulatory requirements attachment:



U.S. Department of the Interior
BUREAU OF LAND MANAGEMENT

Bond Info Data Report

03/14/2022

APD ID: 10400055295

Submission Date: 03/18/2020

Highlighted data
reflects the most
recent changes

Operator Name: BTA OIL PRODUCERS LLC

Well Name: ROJO 7811 34-27 FEDERAL COM

Well Number: 46H

[Show Final Text](#)

Well Type: OIL WELL

Well Work Type: Drill

Bond Information

Federal/Indian APD: FED

BLM Bond number: NMB001711

BIA Bond number:

Do you have a reclamation bond? NO

Is the reclamation bond a rider under the BLM bond?

Is the reclamation bond BLM or Forest Service?

BLM reclamation bond number:

Forest Service reclamation bond number:

Forest Service reclamation bond attachment:

Reclamation bond number:

Reclamation bond amount:

Reclamation bond rider amount:

Additional reclamation bond information attachment:

State of New Mexico
Energy, Minerals and Natural Resources Department

Submit Electronically
Via E-permitting

Oil Conservation Division
1220 South St. Francis Dr.
Santa Fe, NM 87505

NATURAL GAS MANAGEMENT PLAN

This Natural Gas Management Plan must be submitted with each Application for Permit to Drill (APD) for a new or recompleted well.

Section 1 – Plan Description

Effective May 25, 2021

I. Operator: BTA Oil Producers, LLC **OGRID:** 260297 **Date:** 3 / 15 / 2022

II. Type: ☒ Original ☐ Amendment due to ☐ 19.15.27.9.D(6)(a) NMAC ☐ 19.15.27.9.D(6)(b) NMAC ☐ Other.

If Other, please describe: _____

III. Well(s): Provide the following information for each new or recompleted well or set of wells proposed to be drilled or proposed to be recompleted from a single well pad or connected to a central delivery point.

Well Name	API	ULSTR	Footages	Anticipated Oil BBL/D	Anticipated Gas MCF/D	Anticipated Produced Water BBL/D
ROJO 7811 34-27		L-34-25S-33E	1540 FSL, 690 FWL	+/- 800	+/- 2000	+/- 1200
FEDERAL COM 46H						

IV. Central Delivery Point Name: Rojo CTB [See 19.15.27.9(D)(1) NMAC]

V. Anticipated Schedule: Provide the following information for each new or recompleted well or set of wells proposed to be drilled or proposed to be recompleted from a single well pad or connected to a central delivery point.

Well Name	API	Spud Date	TD Reached Date	Completion Commencement Date	Initial Flow Back Date	First Production Date
ROJO 7811 34-27		8/15/2022	9/4/2022	9/18/2022	10/9/2022	11/8/2022
FEDERAL COM 46H						

VI. Separation Equipment: ☒ Attach a complete description of how Operator will size separation equipment to optimize gas capture.

VII. Operational Practices: ☒ Attach a complete description of the actions Operator will take to comply with the requirements of Subsection A through F of 19.15.27.8 NMAC.

VIII. Best Management Practices: ☒ Attach a complete description of Operator's best management practices to minimize venting during active and planned maintenance.

Section 2 – Enhanced Plan

EFFECTIVE APRIL 1, 2022

Beginning April 1, 2022, an operator that is not in compliance with its statewide natural gas capture requirement for the applicable reporting area must complete this section.

☐ Operator certifies that it is not required to complete this section because Operator is in compliance with its statewide natural gas capture requirement for the applicable reporting area.

IX. Anticipated Natural Gas Production:

Well	API	Anticipated Average Natural Gas Rate MCF/D	Anticipated Volume of Natural Gas for the First Year MCF

X. Natural Gas Gathering System (NGGS):

Operator	System	ULSTR of Tie-in	Anticipated Gathering Start Date	Available Maximum Daily Capacity of System Segment Tie-in

XI. Map. ☐ Attach an accurate and legible map depicting the location of the well(s), the anticipated pipeline route(s) connecting the production operations to the existing or planned interconnect of the natural gas gathering system(s), and the maximum daily capacity of the segment or portion of the natural gas gathering system(s) to which the well(s) will be connected.

XII. Line Capacity. The natural gas gathering system ☐ will ☐ will not have capacity to gather 100% of the anticipated natural gas production volume from the well prior to the date of first production.

XIII. Line Pressure. Operator ☐ does ☐ does not anticipate that its existing well(s) connected to the same segment, or portion, of the natural gas gathering system(s) described above will continue to meet anticipated increases in line pressure caused by the new well(s).

☐ Attach Operator's plan to manage production in response to the increased line pressure.

XIV. Confidentiality: ☐ Operator asserts confidentiality pursuant to Section 71-2-8 NMSA 1978 for the information provided in Section 2 as provided in Paragraph (2) of Subsection D of 19.15.27.9 NMAC, and attaches a full description of the specific information for which confidentiality is asserted and the basis for such assertion.

Section 3 - Certifications

Effective May 25, 2021

Operator certifies that, after reasonable inquiry and based on the available information at the time of submittal:

☒ Operator will be able to connect the well(s) to a natural gas gathering system in the general area with sufficient capacity to transport one hundred percent of the anticipated volume of natural gas produced from the well(s) commencing on the date of first production, taking into account the current and anticipated volumes of produced natural gas from other wells connected to the pipeline gathering system; or

☐ Operator will not be able to connect to a natural gas gathering system in the general area with sufficient capacity to transport one hundred percent of the anticipated volume of natural gas produced from the well(s) commencing on the date of first production, taking into account the current and anticipated volumes of produced natural gas from other wells connected to the pipeline gathering system.

If Operator checks this box, Operator will select one of the following:

Well Shut-In. ☐ Operator will shut-in and not produce the well until it submits the certification required by Paragraph (4) of Subsection D of 19.15.27.9 NMAC; or

Venting and Flaring Plan. ☐ Operator has attached a venting and flaring plan that evaluates and selects one or more of the potential alternative beneficial uses for the natural gas until a natural gas gathering system is available, including:

- (a) power generation on lease;
- (b) power generation for grid;
- (c) compression on lease;
- (d) liquids removal on lease;
- (e) reinjection for underground storage;
- (f) reinjection for temporary storage;
- (g) reinjection for enhanced oil recovery;
- (h) fuel cell production; and
- (i) other alternative beneficial uses approved by the division.

Section 4 - Notices


1. If, at any time after Operator submits this Natural Gas Management Plan and before the well is spud:

(a) Operator becomes aware that the natural gas gathering system it planned to connect the well(s) to has become unavailable or will not have capacity to transport one hundred percent of the production from the well(s), no later than 20 days after becoming aware of such information, Operator shall submit for OCD's approval a new or revised venting and flaring plan containing the information specified in Paragraph (5) of Subsection D of 19.15.27.9 NMAC; or

(b) Operator becomes aware that it has, cumulatively for the year, become out of compliance with its baseline natural gas capture rate or natural gas capture requirement, no later than 20 days after becoming aware of such information, Operator shall submit for OCD's approval a new or revised Natural Gas Management Plan for each well it plans to spud during the next 90 days containing the information specified in Paragraph (2) of Subsection D of 19.15.27.9 NMAC, and shall file an update for each Natural Gas Management Plan until Operator is back in compliance with its baseline natural gas capture rate or natural gas capture requirement.

2. OCD may deny or conditionally approve an APD if Operator does not make a certification, fails to submit an adequate venting and flaring plan which includes alternative beneficial uses for the anticipated volume of natural gas produced, or if OCD determines that Operator will not have adequate natural gas takeaway capacity at the time a well will be spud.

I certify that, after reasonable inquiry, the statements in and attached to this Natural Gas Management Plan are true and correct to the best of my knowledge and acknowledge that a false statement may be subject to civil and criminal penalties under the Oil and Gas Act.

Signature: 
Printed Name: Sammy Hajar
Title: Regulatory Analyst
E-mail Address: SHAJAR@BTAOIL.COM
Date: 3/15/2022
Phone: 432-682-3753

OIL CONSERVATION DIVISION
(Only applicable when submitted as a standalone form)

Approved By:
Title:
Approval Date:
Conditions of Approval:

VI. Separation Equipment: Attach a complete description of how Operator will size separation equipment to optimize gas capture.

- Separation equipment will be sized to provide adequate separation for anticipated rates.
- Separation equipment will allow for adequate retention time to allow gas and liquids to separate.
- Separation equipment will separate all three phases (Oil, Water, and Gas).
- Collection systems are appropriately sized to handle facility production rates on all (3) phases.
- Ancillary equipment and metering is selected to be serviced without flow interruptions or the need to release gas from the well.

VII. Operational Practices: Attach a complete description of the actions Operator will take to comply with the requirements of Subsection A through F 19.15.27.8 NMAC.

Drilling Operations

- All flare stacks will be properly sized. The flare stacks will be located at a minimum 100' from the nearest surface hole location on the pad.
- All natural gas produced during drilling operations will be flared, unless there is an equipment malfunction and/or to avoid risk of an immediate and substantial adverse impact on safety and the environment, at which point the gas will be vented.

Completions/Recompletions Operations

- New wells will not be flowed back until they are connected to a properly sized gathering system.
- The facility will be built/sized for maximum anticipated flowrates and pressures to minimize waste.
- For flowback operations, multiple stages of separation will be used as well as VRU and blowers to make sure waste is minimized off the storage tanks and facility.
- During initial flowback, the well stream will be routed to separation equipment.
- At an existing facility, when necessary, post separation natural gas will be flared until it meets pipeline specifications, at which point it will be turned into a collection system.
- At a new facility, post separation natural gas will be vented until storage tanks can safely function, at which point it will be flared until it meets pipeline spec.

Production Operations

- Weekly AVOs will be performed on all facilities that produce more than 60 MCFD.
- Leaking thief hatches and pressure safety valves found during AVOs will be cleaned and properly re-sealed.
- All flares will be equipped with auto-ignition systems and continuous pilot operations.
- After a well is stabilized from liquid unloading, the well will be turned back into the collection system.
- All gas lift systems will be optimized to limit the amount of waste.
- All tanks will have automatic gauging equipment installed.

Performance Standards

- Production equipment will be designed to handle maximum anticipated rates and pressure.
- All flared gas will be combusted in a flare stack that is properly sized and designed to ensure proper combustion.
- All gas will have multiple points of separation to ensure no liquids enter flares, combustors, or gas sales line.
- Weekly AVOs will be performed on all wells and facilities that produce more than 60 MCFD.
- All OOOOa facilities will be filmed with an Optical Gas Imaging Thermographer camera once per month to check for fugitive emissions.

Measurement & Estimation

- All volume that is flared and vented that is not measured will be estimated.
- All measurement equipment for flared volumes will conform to API 14.10.
- All meters will be calibrated at regular intervals according to meter manufacturer recommendations.
- When metering is not practical due to low pressure/low rate, the vented or flared volume will be estimated.

VIII. Best Management Practices: Attach a complete description of Operator's best management practices to minimize venting during active and planned maintenance.

- During downhole well maintenance, BTA will use best management practices to vent as minimally as possible.
- Prior to the commencement of any maintenance, the tank or vessel will be isolated from the rest of the facilities.
- All valves upstream of the equipment will be closed and isolated.
- After equipment has been isolated, the equipment will be blown down to as low a pressure as possible into the collection system.
- If the equipment being maintained cannot be relieved into the collection system, it shall be released to a tank where the vapor can either be captured or combusted if possible.
- After downhole well maintenance, natural gas will be flared until it reaches pipeline specification.

District I

1625 N. French Dr., Hobbs, NM 88240
Phone:(575) 393-6161 Fax:(575) 393-0720

District II

811 S. First St., Artesia, NM 88210
Phone:(575) 748-1283 Fax:(575) 748-9720

District III

1000 Rio Brazos Rd., Aztec, NM 87410
Phone:(505) 334-6178 Fax:(505) 334-6170

District IV

1220 S. St Francis Dr., Santa Fe, NM 87505
Phone:(505) 476-3470 Fax:(505) 476-3462

State of New Mexico
Energy, Minerals and Natural Resources
Oil Conservation Division
1220 S. St Francis Dr.
Santa Fe, NM 87505

CONDITIONS

Action 91142

CONDITIONS

Operator: BTA OIL PRODUCERS, LLC 104 S Pecos Midland, TX 79701	OGRID: 260297
	Action Number: 91142
	Action Type: [C-101] BLM - Federal/Indian Land Lease (Form 3160-3)

CONDITIONS

Created By	Condition	Condition Date
pkautz	Will require a File As Drilled C-102 and a Directional Survey with the C-104	3/24/2022
pkautz	Once the well is spud, to prevent ground water contamination through whole or partial conduits from the surface, the operator shall drill without interruption through the fresh water zone or zones and shall immediately set in cement the water protection string	3/24/2022
pkautz	Oil base muds are not to be used until fresh water zones are cased and cemented providing isolation from the oil or diesel. This includes synthetic oils. Oil based mud, drilling fluids and solids must be contained in a steel closed loop system	3/24/2022
pkautz	Cement is required to circulate on both surface and intermediate1 strings of casing	3/24/2022