

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

OCD-HOBBS

FORM APPROVED
OMB NO. 1004-0137
Expires: January 31, 2018

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to re-enter an abandoned well. Use form 3160-3 (APD) for such proposals.

5. Lease Serial No.
NMNM92189 **33455 120908**

6. If Indian, Allottee or Tribe Name

SUBMIT IN TRIPLICATE - Other instructions on page 2

7. If Unit or CA/Agreement, Name and/or No.

1. Type of Well

Oil Well Gas Well Other: **UNKNOWN OTH WDW**

8. Well Name and No.
TURQUOISE "30" FEDERAL 1 ✓

2. Name of Operator
COG OPERATING, LLC ✓

Contact: ABIGAIL MONTGOMERY
E-Mail: Abbym@bcmmandassociates.com

9. API Well No.
30-025-33455 ✓

3a. Address
600 W. ILLINOIS
MIDLAND, TX 79701

3b. Phone No. (include area code)
Ph: 432-580-7161

10. Field and Pool or Exploratory Area
WILDCAT DELAWARE

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

Sec 30 T24S R32E 1930FNL 1850FWL
32.190284 N Lat, 103.716598 W Lon

11. County or Parish, State

LEA CO COUNTY, NM

HOBBS OCD
JAN 16 2018

12. CHECK THE APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION		
<input checked="" type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (S)
<input type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Hydraulic Fracturing	<input type="checkbox"/> Reclamation
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Dispos

INT TO PA **AM**
P&A NR _____
P&A R _____

13. Describe Proposed or Completed Operation: Clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleat horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports must be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleat in a new interval, a Form 3160-4 must be filed once testing has been completed. Final Abandonment Notices must be filed only after all requirements, including reclamation, have been completed and the operator has determined that the site is ready for final inspection.

1. RIH & tag plug @ 7042'. Circulate hole w/ MLF.
2. Set CIBP @ 4675 w/ 30 sx @ 4675-4375. Tag
3. Spot 25 sx @ 3370-3120. Tag
4. Spot 25 sx @ 1050-800.
5. Spot 25 sx @ 675-425. Tag
6. Spot 15 sx @ 100-0.
7. Cut off wellhead and weld on Dry Hole Marker.

Use COA procedure.

APPROVED

**SEE ATTACHED FOR
CONDITIONS OF APPROVAL**

**SUBJECT TO LIKE
APPROVAL BY STATE**

WITNESS

14. I hereby certify that the foregoing is true and correct.

Electronic Submission #382207 verified by the BLM Well Information System
For COG OPERATING, LLC, sent to the Hobbs
Committed to AFMS for processing by PRISCILLA PEREZ on 08/09/2017 ()

Name (Printed/Typed) ABIGAIL MONTGOMERY

Title AGENT

Signature (Electronic Submission)

Date 07/23/2017

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved By

PR Swartz 01/05/18

Title

TPET

Date

Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.

Office

**BUREAU OF LAND MANAGEMENT
CARLSBAD FIELD OFFICE**

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions on page 2)

**** OPERATOR-SUBMITTED ** OPERATOR-SUBMITTED ** OPERATOR-SUBMITTED ****

FOR RECORD ONLY

MW/OCD 1/16/18


Operator: COG Operating, LLC
 Surface Lease: NM120908
 Case No: NM120908
 Subsurface Concerns for Casing Designs: KFC

Well Status: NOI-abd
 Spud date: 6/21/1996
 Plug'd Date: 6/21/2002
 Reentry Date: 3/12/2010
 Last Disposal Report: 05/2017

BHL: NM120908
 Lease Agreement

Well: TURQUOISE 30 FEDERAL SWD-1
 API: 3002533455
 @ Srfce: T24S-R32E,30.1930n1980w
 @ M TD: T24S-R32E,30.1930n1980w

KB: 3547
 GL: 3534
 Corr: 13
 Estate: FIF
 CWDW, R of W:
 OCD Admn Order, date: SWD-1203, 01/27/2010
 Frmntn, Depths, psig: Delaware, 4700-5975, 940psig

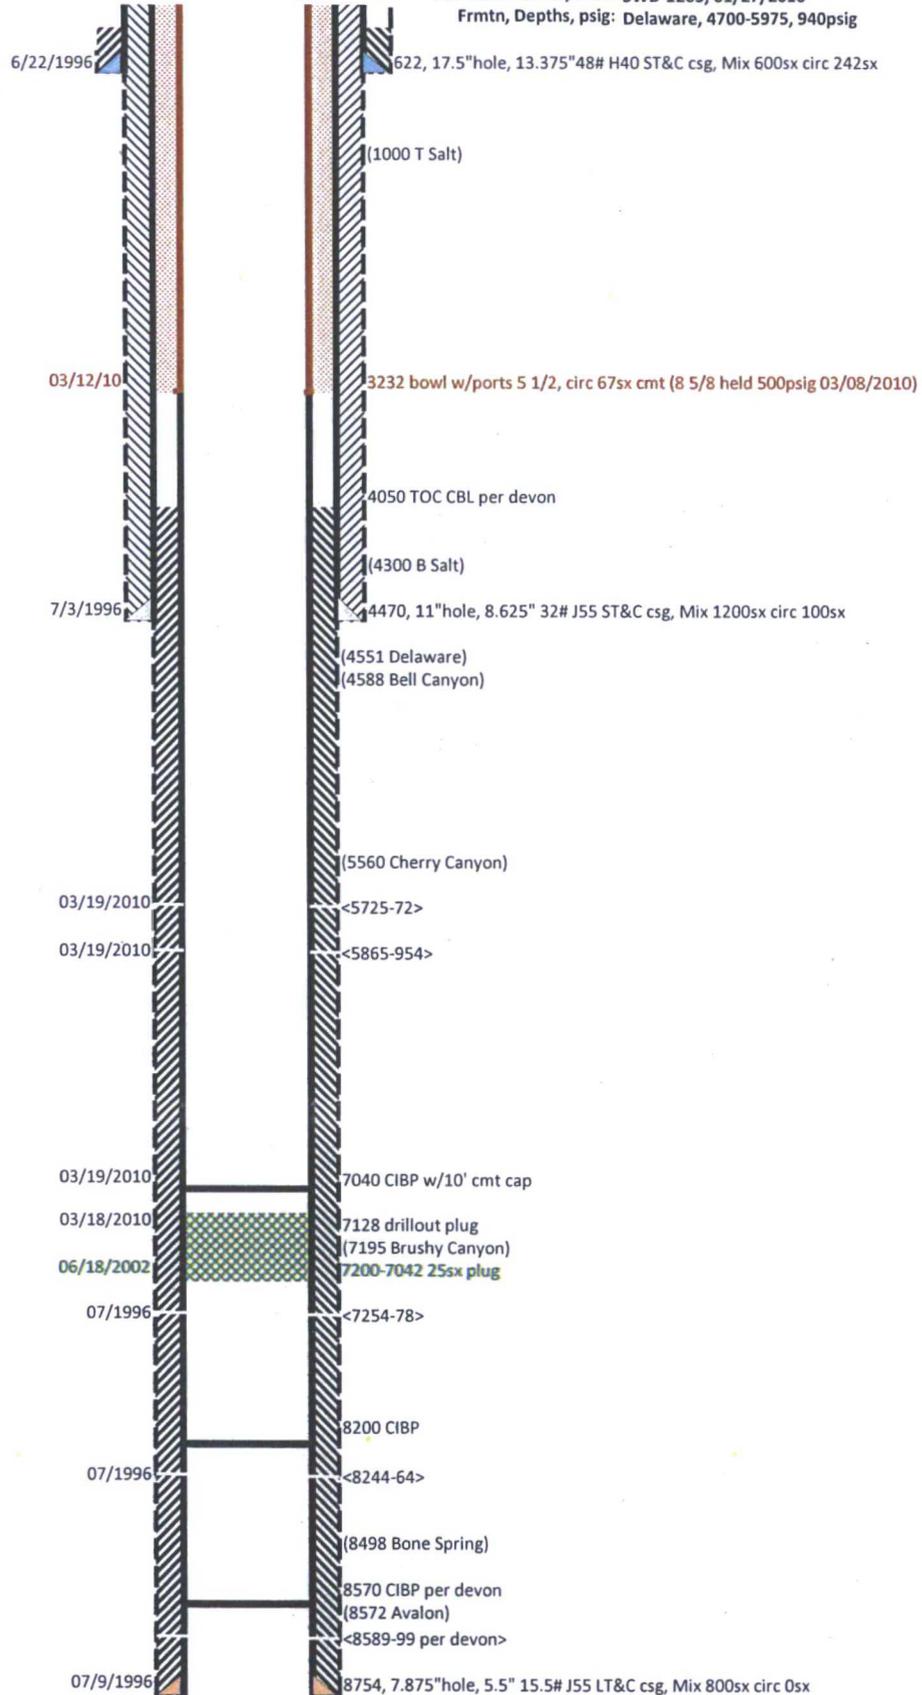

03/24/2010 convert to injector
 04/14/2010 MIT held 520psig 45m
 04/01/2016 MIT held 560psig 30m

last updated: 01/04/2018

Conditions of Approval

COG Operating, LLC
Turquoise - 01, API 3002533455
T24S-R32E, Sec 30, 1930'FNL & 1980'FWL
January 5, 2018

1. **Within 90 days of these conditions of approval for the processed Electronic Submission #382207 notice of intent begin wellbore operations or request an extension.**
2. **Operator is required to have the BLM approved NOI procedure with applicable conditions of approval on location during this workover operation.**
3. **Conditions of Approval reflect a procedure based on available documentation for this wellbore. The BLM workover witness and NOI approver may adjust operations so as not to hinder achievable abandonment requirements.**
4. Due to being within the Lesser Prairie Chicken habitat, this workover activity will be restricted to the hours of 9:00am through 3:00am for the period of March 1 through June 15.
5. Subject to like approval by the New Mexico Oil Conservation Division.
6. Notify 575-393-3612 Lea Co as work begins. If there is no response leave a voice mail with the API#, workover purpose, and a call back phone number.
7. Surface disturbance beyond the existing pad must have prior approval.
8. A closed loop system is required. The operator shall properly dispose of drilling/circulating contents at an authorized disposal site. Tanks are required for all operations, no excavated pits.
9. Functional H₂S monitoring equipment shall be on location.
10. Blow Out Prevention Equipment 3000 (3M) to be used. All BOPE and workover procedures shall establish fail safe well control. Ram(s) for the work string(s) used is required equipment. Manual BOP closure system including a blind ram and pipe ram(s) designed to close on all (hand wheels or automatic locking devices) equipment installed regardless of BOP design. Function test the installed BOPE to 500psig when well conditions allow. Related equipment, (choke manifolds, kill trucks, gas vent or flare lines, etc.) employed when needed for reasonable well control requirements.
11. Created operation waste (i.e. trash, salts, chemicals, sewage, gray water, etc.) shall be safely contained and disposed of properly at a waste disposal facility. No waste material or fluid shall be disposed of on the well location or surrounding area. Porto-johns and trash containers will be on-location during any other crew-intensive operations.
12. The BLM PET is to run tbg tally and agree to cement volumes and placement. Sample each plug for cement curing time and tag and/or pressure test as requested by BLM PET witness.
13. **Cementing procedure is subject to the next three numbered paragraphs.**
14. Mix cement plugs to cover a minimum of 100ft plus 10ft for every 1,000ft to the bottom of the plug, rounding the number of necessary sacks up to the nearest 5 sacks. Never use less than 25sx. Examples: A cement plug set at 8000 in 7" casing would require a min of 35sx. A 25sx plug in 5 ½" casing should cover 250ft, which may exceed 100ft plus 10ft per 1000ft.

15. Use Class H > 7500ft & C < 7500ft) neat cement plugs(s). For any plug that requires a tag or pressure test a minimum WOC time of 4 hours(C) & 8 hours(H) is recommended. Isolation plugs of Class "C" neat cement to be mixed 14.8#/gal, 1.32 ft³/sx, 6.3gal/sx water and Class "H" neat cement to be mixed 16.4#/gal, 1.06ft³/sx, 4.3gal/sx water.
16. Minimum requirement for mud placed between plugs is 25 sacks of saltwater gel per 100 barrels in 9 lb/gal brine.
17. Clean out wellbore and tag the CIBP at 8570'.
18. Set a min 25sx balanced "H" cmt plug on the CIBP set within 100' of the top perf 8589'. WOC, and tag the plug with tbg at 8350' or above covering the Bone Spring formation top of 8498'.
19. Set a CIBP set within 100' of the top perf 7254'.
20. Set a min 25sx balanced "C" cmt plug on the CIBP set within 100' of the top perf 7254'. WOC, and tag the plug with tbg at 7000' or above covering the Brushy Canyon formation top of 7195'.
21. Pressure test the casing to 500psig after a CIBP is set within 100' of the top perf 5725'.
22. Set a min 25sx balanced "C" cmt plug on the CIBP set within 100' of the top perf 5725'. WOC, and tag the plug with tbg at 5480' or above covering the Cherry Canyon formation top of 5560'.
23. Set a min 45sx balanced "C" cmt plug from 4660'. WOC, and tag the plug with tbg at 4230' or above to cover Bell Canyon formation top, the 8 5/8" csg shoe, and Base of Salt.
24. Set a min 25sx balanced "C" cmt plug from 1120'. WOC, and tag the plug with tbg at 860' or above to cover the Top of Salt.
25. Perf at 60' or below. Establish circulation through the 8 5/8" x 13 3/8" annulus. Fill with (± 20 sx) balanced "C" cmt plug and verify the 8 5/8" x 13 3/8" annulus and 8 5/8" csg from 60' cemented to surface.
26. File subsequent sundry Form 3160-5 within 30 days of workover procedures. Include (dated daily) descriptions of the well work, i.e. procedure descriptions and setting depths of each plug in the subsequent sundry.

NEED PLUG
ACROSS
13 3/8" shoe
@ 622'
mwp/ced

Lesser Prairie Chicken Habitat Area Dry Hole Markers

Stamp or engrave (3/8" letters) information for the plugged well on 8"x 8" aluminum plate of 1/8", 12 gauge, or .080 sign material similar to this example:

Ajax Operating Company

Tailspin - 22

1980FNL & 660FWL - Sec 16 - T22S-R31E

Lease LC029567

API 3001534567

Plugged July 17, 2017

1. Center a 3 to 4 foot pipe at a right angles on a 8"x8"x 1/8" or 3/16" steel plate and weld the pipe to the plate.
2. Cement the pipe vertically inside the abandoned surface casing. Leave the steel plate about 2" above and horizontal to ground level.
3. Fix the well information plate to the steel plate with 1/4 inch bolts and locking nuts or self-tapping fine threaded screws (one in each corner).
4. On the BLM Form 3160-5 subsequent report of abandonment state that a ground level dry hole marker installed as required by BLM and NMOCD Order No. R-12965.

Reclamation Objectives and Procedures

In Reply Refer To: 1310

Reclamation Objective: At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its pre-disturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, re-distribute the native soils, provide erosion control as needed, rip and seed as needed. This will apply to well pads, facilities, and access roads. Barricade all access road(s) at the starting point. If reserve pits have not been adequately reclaimed due to salts or other contaminants, propose a plan for BLM approval to provide restoration of the pit area.

1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations should have included adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.
2. For locations and/or access roads not having an approved plan, or an inadequate plan for surface reclamation the operator must submit a proposal describing the procedures for reclamation. The appropriate time for submittal would be when filing the Notice of Intent, or with the Subsequent Sundry Report of Abandonment on Form 3160-5. The final reclamation goal is to be completed within 6 months of wellbore abandonment.
3. With an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It may be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation equipment to ensure that it meets BLM objectives.
4. Upon reclamation conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a BLM specialist to inspect the location to verify work was completed as per approved plans.
5. The BLM approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been tentatively reestablished. If the objectives have not been met BLM will be notify the operator of the required corrective actions.

6. It is the responsibility of the operator to monitor these locations and/or access roads until such time the full BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the full BLM objectives have been met, submit a Final Abandonment Notice (FAN) Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
7. At this time a BLM specialist will again inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability for the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos
Supervisory Environmental Protection Specialist
575-234-5909, 575-361-2648 (Cell)

Robertson, Jeffery
Natural Resource Specialist
575-234-2230, 575-706-1920 (Cell)

Trishia Bad Bear
Natural Resource Specialist
575-393-3612, 575-390-2258 (Cell)

Vance Wolf
Natural Resource Specialist
575-234-5979

Jesse Bassett
Natural Resource Specialist
575-234-5913, 575-499-5114 (Cell)

Brooke Wilson
Natural Resource Specialist
575-234-6237

Paul Murphy
Natural Resource Specialist
575-234-5975, 575-885-9264 (Cell)

Arthur Arias
Environmental Protection Specialist
575-234-6230, 575-499-3378 (Cell)

Henryetta Price
Environmental Protection Specialist
575-234-5951, 575-706-2780 (Cell)

Shelly Tucker
Environmental Protection Specialist
575-234-5905, 575-361-0084 (Cell)