
Submit I Copy To Appropriate District Office	State of New Mexico			Form C-103	
District I- (575) 393-6161	Energy, Min	nerals and Natu	ral Resources	WELL API NO.	Revised July 18, 2013
1625 N. French Dr., Hobbs, NM 88240 District II- (575) 748-1283	OH CONGERNAL MICH DAVIOUS			30-015-32750	
1301 W. Grand Ave., Artesia, NM 8821 0	OIL CONSERVATION DIVISION			5. Indicate Type	of Lease
<u>District III</u> - (505) 334-6178 1 000 Rio Brazos Rd., Aztec, NM 8741 0	1220 South St. Francis Dr.			STATE	⊠ FEE □
District IV- (505) 476-3460	Santa Fe, NM 87505			6. State Oil & G	as Lease No.
1220 S. St. Francis Dr., Santa Fe, NM 87505				V-6501	
SUNDRY NOTICES AND REPORTS ON WELLS				7. Lease Name o	r Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR, USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH				Tigan State	
PROPOSALS.)				Tiger State 8. Well Number 2	
1. Type of Well: Oil Well Gas Well Other				3	
2. Name of Operator Mack Energy Corporation				9. OGRID Number 013837	
3. Address of Operator				10. Pool Name or Wildcat	
P.O. Box 960 Artesia, NM 88210				Runyan Ranch Morrow	
4. Well Location					
Unit Letter K	2310 feet fro	m the South	line and	1780 feet fro	om the West line
Section 8	 Townsl		nge 23E	NMPM	County Eddy, NM
11. Elevation (Show whether DR, RKB, RT, GR etc.)					
4001' GR					
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data					
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:					
PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☑ REMEDIALWORK ☐ ALTERING CASING ☐					
TEMPORARILY ABANDON					
PULL OR ALTER CASING	MULTIPLE COM	PL 🔲	CASING/CEMEN	Т ЈОВ	
DOWNHOLE COMMINGLE					
CLOSED-LOOP SYSTEM			OTHED:		[
OTHER: 13. Describe proposed or comp	leted operations. (C	learly state all p	OTHER: ertinent details, an	d give pertinent dat	es including estimated date
13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion					
offrecompletion.					
Mack Energy Corporation proposes to Plug and Abandon the Tiger State #3 as follows: 25 5 Ks City					
Notify NMOCD 24 hrs before MIRU CIBP(2)570 NMOLL CONSERVATION					
1. RIH with tubing. Set 65sx cement plug from 7520-6869. WOC and tag plug ARTESIA DISTRICT 2. Set 25sy compart plug from 6230, 61801					
2. Set 25sx cement plug from 6330-6180'. 3. Set 25sx cement plug from 4550-4400'. FEB 2 2 2018					
4. Set 25sx cement plug from 3450-3300'. WOC and tag plug.					
5. Set 25sx cement plug from 1675-1525'. WOC and tag plug. Perf @ 1665' Sq z					
6. Set 35sx cement plug from 260-0'. Perf @ 310 Sez Approved for plugging of well bore only.					
7. Install Dry Hole Marker.		•	1	bond is retained pendi	
Note: Mud laden fluids mixed at 25 sacks of gel per 100 barrel of 9.5 par be found at OCI Web Page under water shall be placed between all plugs.					
Note: Mud laden fluids mixed	at 25 sacks of get	per 100 barrei o	19.3 ppg Brine W	nrd.state.nm.us/ocd.	d between all plugs.
					
Spud Date:		Rig Release Da	te:		
	// / /	6			
* See ATTAChed	COAS		Must be	= Plugged	64 2-22-19
I hereby certify that the information above is true slid complete to the best of my knowledge and belief.					
None Allegan					
SIGNATURE L WILLIAM	DINHI	TITLE Product	ion Clark	т.	ATE 2/21/18
SIGNATURE JUM W	CVCVCV	_ HILE Floader	IOH CIEIK	D	ATE <u>2/21/18</u>
Type or print name Deana Weaver		E-mail address	dweaver@mec.	com p	HONE: 575-748-1288
For State Use Only		-			

APPROVED BY: DATE 2-22-18
Conditions of Approval (if any):

Mack Energy Corporation Tiger State #3 Sec. 8 T19S R23E 30-015-32750

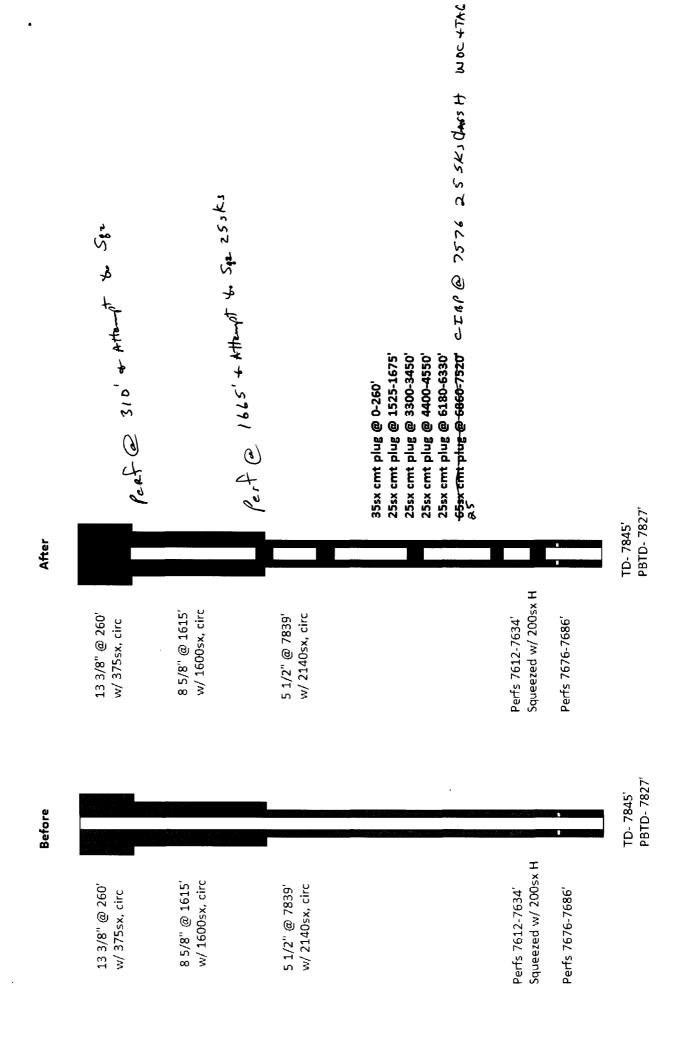

CONDITIONS FOR PLUGGING AND ABANDONMENT

District II / Artesia N.M.

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office II at (575)-748-1283 at least 24 hours before beginning work.

- 1. A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs.
- 2. Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- 3. Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- 5. A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can be released.
- 6. If the well is not plugged within 1
- 7. If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 8. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- 9. Produced water will not be used during any part of the plugging operation.
- 10. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- 11. All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 12. Class 'C' cement will be used above 7500 feet.
- 13. Class 'H' cement will be used below 7500 feet.
- 14. A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- 15. All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing

- 16. When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- 18. A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).
- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
 - A) Fusselman
 - B) Devonian
 - C) Morrow
 - D) Wolfcamp
 - E) Bone Springs
 - F) Delaware
 - G) Any salt sections
 - H) Abo
 - I) Glorieta
 - J) Yates.
 - K) Potash--- (In the R-111-P Area (Potash Mine Area), a solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.
- 21. If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing

DRY HOLE MARKER REQUIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

1. Operator name 2. Lease and Well Number 3.API Number 4. Unit Letter 5. Quarter Section (feet from the North, South, East or West) 6. Section, Township and Range 7. Plugging Date 8. County (SPECIAL CASES)------AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)