Form 3160-5 (August 2007)

DEPARTMENT OF THE INTERIOROCD-ARTESIA **UNITED STATES**

BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

FORM APPROVED OMB NO. 1004-0137 Expires July 31, 2010

5. Lease Serial No.

NMNM1.722:

6. If Indian, Allottee or Tribe Name

SUBMIT IN TRIPLICATE	E - Other instructio	ns on page 2		7. If Unit of C	A/Agreement, Name and/or No
1. Type of Well X Oil Well Gas Well Other				8. Well Name Oreo 25 Fe	and No.
2. Name of Operator				O160 25 F6	xi Cum #1
EOG Resources Inc.	· · · · · · · · · · · · · · · · · · ·			9. API Well N	0.
3a. Address		3b. Phone No. (include are	a code)	30-015-317	183
P.O. Box 2267 Midland, Texas 79702		432-686-3689		10. Field and	Pool, or Exploratory Area
4. Location of Well (Footage, Sec., T., R., M., or Survey De	escription)			Turkey Tra	act; Atoka, North
1980 FSL & 1980 FEL					
Sec 25, T18S, R29E				11. County or	Parish, State
				Eddy	<u>NM</u>
12. CHECK APPROPRIATE	BOX(ES) TO IND	DICATE NATURE OF N	OTICE, REPO	RT, OR OTHE	ER DATA
TYPE OF SUBMISSION		ТҮР	E OF ACTION		
Notice of Intent	Acidize	Deepen	Production	(Start/Resume)	Water Shut-Off
Subsequent Report	Alter Casing	Fracture Treat	Reclamation	n	Well Integrity
Subsequent Report	Casing Repair	New Construction	Recomple	te	Other
Final Abandonment Notice	Change Plans	X Plug and Abandon	Temporari	ly Abandon	
NN	Convert to Injection	n Plug Back	Water Disp	oosal	
Subsequent Report Subsequent Report	ete horizontally, give so tormed or provide the B the operation results in tices shall be filed on	ubsurface locations and meas Bond No. on file with BLM/B I a multiple completion or rec	ured and true ver BIA. Required st completion in a r	tical depths of a ubsequent report new interval, a F	Il pertinent markers and zones. ts shall be filed within 30 days orm 3160-4 shall be filed once

SEE ATTACHED FOR

CONDITIONS OF APPROVAL

Proposed procedure to P&A:

- 1. Set CIBP @ 4000' + 35' cement cap
- 2. Cut and pull 5 1/2" casing @ +/- 3350'.
- 3. Spot 60 sx cement plug across top of stub. Tag.
- 4. Spot 55 sx plug from 2050' to 2250'.
- 5. Spot 55 sx plug from 1000' to 1200'.
- 6. Spot 135 sx surface plug 0' to 500'.
- 7. Cut off wellhead, weld on P&A marker. Clean and restore location. Pump 9.5 ppg mud between all plugs.

RECLAMATION PROCEDURE ATTACHED


RECEIVED JAN 18 2011 NMOCD ARTESIA

14. I hereby certify that the foregoing is true and correct Name (Printed Typed)		
Stan Wagner /	Title 1	Regulatory Analyst
Signature Stan Wan	Date 0	-/06/20
THIS SPASE FOR FEDERA	L OR STA	TE OFFICE USE
Approved by Amh M.—hh	Title	JAN 1 2 2011 Date
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.	Office	/s/ Dustin Winkler

Seogresources

Oreo "25" Federal Com No. 1

1980' FSL & 1980' FEL Section 25-T18S-R29E Eddy County, NM API # 3001531783 Current Schematic

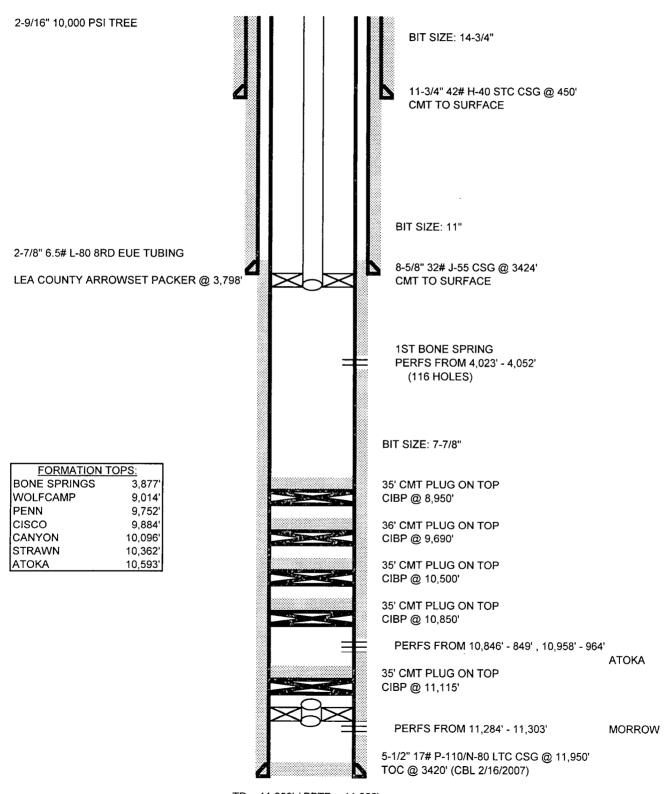

TD = 11,950' / PBTD = 11,855'

Oreo "25" Federal Com No. 1

1980' FSL & 1980' FEL Section 25-T18S-R29E Eddy County, NM API # 30-015-31783

Seog resources

Pump 9.5 ppg mud between all plugs

Cmt Plug 135sx, 0'-500'

Cmt Plug 55sx, 1,000'-1,200"

Cmt Plug 55sx, 2,050'-2,250"

Cut and remove 5-1/2" 17# P-110 csg @ 3,350' Cmt plug 60 sx, 3,300'-3,500

> 35' CMT PLUG ON TOP CIBP @ 4,000'

FORMATION TOPS:				
BONE SPRINGS	3,877'			
WOLFCAMP	9,014'			
PENN	9,752'			
CISCO	9,884'			
CANYON	10,096'			
STRAWN	10,362'			
АТОКА	10,593'			

BIT SIZE: 14-3/4"

11-3/4" 42# H-40 STC CSG @ 450'
CMT TO SURFACE

BIT SIZE: 11"

. .

8-5/8" 32# J-55 CSG @ 3424' CMT TO SURFACE

1ST BONE SPRING PERFS FROM 4,023' - 4,052' (116 HOLES)

BIT SIZE: 7-7/8"

35' CMT PLUG ON TOP CIBP @ 8,950'

36' CMT PLUG ON TOP CIBP @ 9,690'

35' CMT PLUG ON TOP CIBP @ 10,500'

35' CMT PLUG ON TOP CIBP @ 10,850'

PERFS FROM 10,846' - 849' , 10,958' - 964' ATOKA

35' CMT PLUG ON TOP CIBP @ 11,115'

PERFS FROM 11,284' - 11,303'

MORROW,

5-1/2" 17# P-110/N-80 LTC CSG @ 11,950' TOC @ 3420' (CBL 2/16/2007)

TD = 11,950' / PBTD = 11,855'

EOG Resources Inc.

NM-96781: West Corbin Federal #31

API: 30-025-32125

Lea County, New Mexico

RE: Plugging and Abandonment Requirements, Conditions of Approval

- 0. Tag to verify depth of CIBP and cement at 8915' or shallower.
- 0a. Spot a plug (minimum 25sx) from 5950'-5790'. (Spacer)
- 1. Move: CIBP to be set 50'-100' above top perf Otherwise OK (Perfs)
- 1a. Spot a plug (minimum 25sx) from 3925'-3785'. (Bone Spring)
- 2. OK
- 3. Spot from 3475' to 50' above the stub. Tag to verify 50' above stub Otherwise OK (Casing shoe Stub)
- 4. OK (Spacer)
- 5. Move: Spot plug from 1015'-905'. Tag at 905' or shallower Otherwise OK (Yates BOS)
- 6. OK (Casing shoe TOS Surface)
- 7. Verify that all annuluses have cement to surface and fill in as required Otherwise OK
- 8. Submit a subsequent report to the BLM.

H₂S monitoring equipment shall be on location.

See attached standard COAs.

DHW 011211

BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90th day provide this office, prior to the 90th day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification:</u> Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of **brine** water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. Any plug that requires a tag will have a minimum WOC time of 4 hours.

In lieu of a cement plug across perforations in a cased hole (not for any other plugs), a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Before pumping or bailing cement on top of CIBP, tag will be required to verify depth. Based on depth, a tag of the cement may be deemed necessary.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

6. Dry Hole Marker: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The BLM is to be notified a minimum of 4 hours prior to the wellhead being cut off to verify that cement is to surface in the casing and all annuluses. Wellhead cut off shall commence within ten (10) calendar days of the well being plugged. If the cut off cannot be done by the 10th day, the BLM is to be contacted with justification to receive an extension for completing the cut off.

The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement, unless otherwise noted in COA (requirements will be attached). The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).

- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and three copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash</u>: All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation procedure.

DHW 122010



United States Department of the Interior

BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its pre-disturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, re-distribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.

- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.
- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Environmental Protection Specialist 575-234-5909, 575-361-2648 (Cell)

Terry Gregston Environmental Protection Specialist 575-234-5958

Bobby Ballard Environmental Protection Specialist 575-234-2230

Randy Rust Natural Resource Specialist 575-234-5943

Linda Denniston Environmental Protection Specialist 575-234-5974

Jennifer Van Curen Environmental Protection Specialist 575-234-5905

Justin Frye Environmental Protection Specialist 575-234-5922 Cody Layton Natural Resource Specialist 575-234-5959

Trishia Bad Bear Natural Resource Specialist 575-393-3612

Todd Suter Surface Protection Specialist 575-234-5987

Doug Hoag Civil Engineering Technician 575-234-5979

Tanner Nygren Natural Resource Specialist 575-234-5975

John Fast Natural Resource Specialist 575-2345996