

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

N.M. Oil & Gas Division

811 S. 1st Street
Artesia, NM 88210-2834

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

5. Lease Designation and Serial No.
LCO28784C

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation
NM88525X

8. Well Name and No.
Burch Keely Unit # 185

9. API Well No.
30-015-25714

10. Field and Pool, or Exploratory Area
Grbg Jackson SR Q Grbg SA

11. County or Parish, State

Eddy County, NM

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT-" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator


Marbob Energy Corporation

3. Address and Telephone No.

P.O. Drawer 217, Artesia, NM 88210

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1331 FSL, 1331 FEL, Sec. 25, T17S, R29E, Unit J

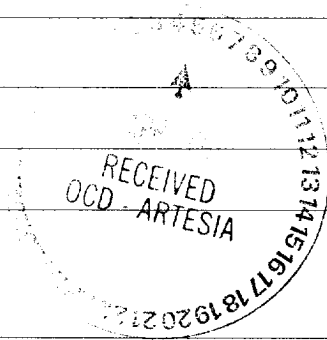

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☐ Other _____
- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Notify BLM 24Hr Before Starting

1. POH w/ rods & tubing *
2. RHT spot 100' plug @ 2500 (perf. 2589 to 3382) 925'
3. Spot 100' plug in 5 1/2 @ 840 to 740 (base salt 788") WOC TAG
4. Spot 100' plug in 5 1/2 @ 428 to 328 (8 5/8 shoe @ 378 top salt 385) woc TAG
5. Spot 60' cmt. from 60' to surface
6. Cut off well head install dry hole marker 975-875'
475-375'

* ***Set CIBP within 50 to 100 feet above the open perforations and cap with 35 feet of cement;
or
***Set a cement plug which extends to a minimum of 50 feet below to 50 feet above the perforated interval.
TAG

**SEE ATTACHED FOR
CONDITIONS OF APPROVAL**

14. I hereby certify that the foregoing is true and correct

Signed Wagner Title Agent

Date 03/06/01

(This space for federal or state office use)

(ORIG. SGD.) ALEXIS C. SWOBODA

PETROLEUM ENGINEER

Approved by _____ Title _____
Conditions of approval, if any:

Date APR 03 2001

RECEIVED
2001 MAR 28 AM 8:47
BUREAU OF LAND MGMT
ROSWELL OFFICE