

NO. OF COPIES RECEIVED	4
DISTRIBUTION	
SANTA FE	1
FILE	1 ✓
U.S.G.S.	
LAND OFFICE	
OPERATOR	2

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

## SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.  
USE "APPLICATION FOR PERMIT - A" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- <b>Dry Hole</b>	5a. Indicate Type of Lease State <input type="checkbox"/> Fee <input checked="" type="checkbox"/>
2. Name of Operator <b>Skelly Oil Company</b>	5. State Oil & Gas Lease No. *****
3. Address of Operator <b>P. O. Box 730 - Hobbs, New Mexico</b>	7. Unit Agreement Name *****
4. Location of Well UNIT LETTER <b>"E"</b> , <b>2070</b> FEET FROM THE <b>South</b> LINE AND <b>2050</b> FEET FROM THE <b>West</b> LINE, SECTION <b>1</b> TOWNSHIP <b>17-N</b> RANGE <b>8-W</b> NMPM.	8. Farm or Lease Name <b>Santa Fe "A"</b>
	9. Well No. <b>1</b>
	10. Field and Pool, or Wildcat <b>Hospah Gallup</b>
15. Elevation (Show whether DF, RT, GR, etc.) <b>6725 GR</b>	12. County <b>McKinley</b>

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>
OTHER <input type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input checked="" type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>

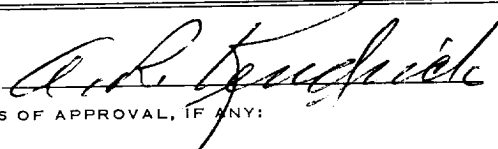
17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

**This well has been drilled to a total depth of 1872' with no commercial quantities of oil or gas being encountered in any zone. We now plan to plug and abandon this well in the following manner:**

1. Spot 30 sacks cement plug from 1816' to 1716'.
2. Spot 30 sacks cement plug from 700' to 600'.
3. Place 10 sacks cement cap in top of 7-5/8" CD casing and install 4" steel dry hole marker.
4. All intervals not cemented will be filled with heavy mud laden fluid.

**NOTE: Mr. A. R. Kendrick gave verbal approval on June 21, 1966, for the above plugging procedure.**

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <b>(ORIGINAL SIGNED) H. E. Aab</b>	TITLE <b>District Superintendent</b>	DATE <b>June 22, 1966</b>
APPROVED BY 	TITLE <b>PETROLEUM ENGINEER DIST. NO. 3</b>	DATE <b>JUN 23 1966</b>
CONDITIONS OF APPROVAL, IF ANY:		

