

NO. OF COPIES RECEIVED	3
DISTRIBUTION	
SANTA FE	1
FILE	1 ✓
U.S.G.S.	
LAND OFFICE	
OPERATOR	1

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65
30-031-20165

5a. Indicate Type of Lease	
State <input type="checkbox"/>	Fee <input checked="" type="checkbox"/>
5. State Oil & Gas Lease No.	
7. Unit Agreement Name	
8. Farm or Lease Name	
Lone Pine Dakota "D"	
9. Well No.	
22	
10. Field and Pool, or Wildcat	
Lone Pine Dakota "D"	
12. County	
McKinley	

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. Name of Operator
Tenneco Oil Company

3. Address of Operator
1860 Lincoln, Suite 1200, Denver, Colorado 80203

4. Location of Well
UNIT LETTER J, 1980 FEET FROM THE South LINE AND 1980 FEET FROM East THE LINE, SECTION 13 TOWNSHIP 17N RANGE 9W NMPM.


15. Elevation (Show whether DF, RT, GR, etc.)
6941 GR

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>
OTHER Reperforate <input checked="" type="checkbox"/>	OTHER <input type="checkbox"/>
PLUG AND ABANDON <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
CHANGE PLANS <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. MIRU Kill well, tag bottom and clean out to 2710.
2. Spot 250 gallons 15% HCl w/Fe & NE Agents. Perforate Dakota D main zone intervals 2692-2707 w/2JSPF. Displace acid. Soak for 1 hour.
3. Hang tbq @ 2630 and swab well in.
4. Put well on production.
5. Clean up area.

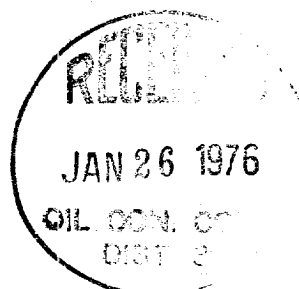

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <u>D.D. Myers</u>	TITLE <u>Div. Prod. Manager</u>	DATE <u>1-21-76</u>
APPROVED BY <u>AR Deudrich</u>	TITLE <u>SUPERVISOR DIST. #3</u>	DATE <u>JAN 26 1976</u>
CONDITIONS OF APPROVAL, IF ANY:		

